 




Russell Hobbs

Chest Freezer Instruction Manual

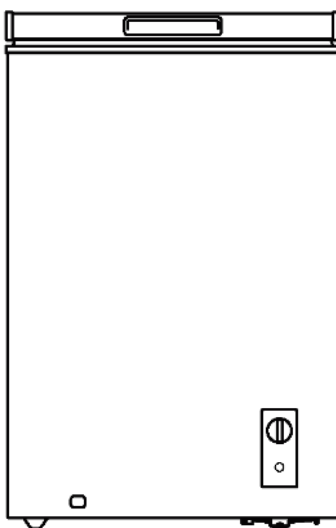

Model number(s):

RH99CF0E1 / RH142CF0E1 / RH198CF0E1

IMPORTANT:

RETAIN FOR FUTURE REFERENCE

Contents

Guarantee	3
Safety Instructions	4-6
Installing & Switch on your Appliance	7-8
Before Switching On	8
Product Overview	9
Levelling the Appliance	10
Usage	11
Energy Saving Advice	12
Freezer Storage Advice	12
Power Failure	13
Maintenance & Cleaning	14
Defrosting	15
Trouble Shooting	16-17
Connection to the Mains Supply	18
Product Fiche	19-21
Notes	22-23

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.
Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.


The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference

 Image for illustration purposes only

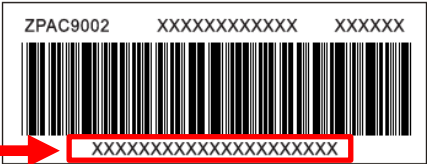

Safety Instructions

Important note: Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.



Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.



Warning: Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- This model uses natural refrigerant gas as part of its cooling system. This gas is known as R600a (Isobutene) and is environmentally friendly but can be combustible. Care should therefore be taken when handling or transporting the product to ensure that none of the refrigeration circuit components are damaged,
- Do not obstruct ventilation openings in the appliance
- The appliance must not be placed or rested on its power cord.
- Do not use mechanical devices or other artificial means to accelerate the defrosting process, such as a heater or a hair dryer.
- Do not use electrical appliances in the refrigerator compartment of the appliance.
- If this appliance is to replace an old refrigerator with a lock, the lock must be removed as a safety measure before storing it or disposing of it. This is to protect children from locking themselves inside the appliance.
- Old refrigerators and freezers contain insulation gases and refrigerant, they must be disposed of properly. Contact your local authority or your dealer if you have any questions. Please ensure that you do not damage the scrap unit prior to being picked-up by the relevant waste disposal service.
- Do not use adaptors or extension leads when connecting the appliance to the electrical power supply



Russell Hobbs

- Do not plug in damaged plugs.
- Do not pull, twist or damage the power cable.
- Do not plug-in or un-plug the appliance with wet hands to prevent electrical shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- This appliance is designed to be used by adults, do not allow children to play with the appliance or let them hang over the door.
- Do not place explosive or flammable material in your appliance for your own safety.
- Bottles containing a high percentage of alcohol must be sealed well and placed vertically in the refrigerator.
- Do not cover the body or the top of the appliance
- Fix down the accessories in the appliance during transportation to prevent damage to them.
- To avoid contamination of food, please respect the following instructions
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star frozen-food compartments(if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on AC220 – 240V; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted following the wiring instructions. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

Transportation and Handling

For safe lifting, tilt the appliance backwards by no more than 45 degrees, hold the base and rear corners of cabinet. Lift the refrigerator carefully. Never use the door handles for lifting. To move the refrigerator on a flat level surface, tilt it slightly backwards and push backwards.

This unit is heavy and could cause injury – ensure there are adequate people present to move the appliance.

Installing and Switching on Your Appliance

- Operating voltage for your appliance is AC220-240V; 50Hz.
- Before plugging in the power supply, ensure that the voltage on the rating label corresponds to the working voltage of your electrical system in your home.
- Insert the plug into an efficient Ground (Earth) connection. If the socket has no Ground (Earth) contact or the plug does not match, we suggest you call an authorised electrician for assistance.
- Place your appliance in an area that is not exposed to direct sunlight.
- Your appliance should be placed at least 10cm away from stoves, ovens and other heating cores.
- This appliance should never be used outdoors or left in the rain.
- When your appliance is placed next to a chest freezer or freezer, there should be at least 10cms between them to prevent humidity on the outer surface.
- Do not place anything on your appliance and install the unit in a suitable place so that there is at least 30cm clearance above the appliance.
- If placing your appliance next to kitchen cabinets, leave 5cm between them.
- The rear of the appliance should be at least 6cm away from the back wall.
- The appliance must be used in the vertical position and on a flat surface.
- To level the appliance, use the adjustable feet on the appliance.
- Do not place your appliance on a carpeted surface as this will prevent adequate ventilation.
- This appliance should only be placed on a flat, firm surface.
- Choose a dry and well-ventilated space.
- The appliance should be positioned so that the plug is easily accessible.
- Suitable for storage in a garage, outbuilding or shed (can operate in a ambient temperature up to -15°C).

 


! WARNING! During use, service and disposal of the appliance, please pay attention to symbol similar to the one shown, which is located on rear of the appliance (rear panel or compressor) and with a yellow or orange colour. It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor. Please be far away from fire source during use, service and disposal.

Before Switching On



- Before using your appliance, add a teaspoon of bicarbonate of soda to warm water and with a damp cloth wipe down all parts of the new appliance, then repeat the process with a clean damp cloth and dry. **(ensure the appliance is not connected to the power when performing this task).**
- Remove all transport tapes and foam protection pieces . Clean the interior of the freezer with a cloth dampened in lukewarm soap and water. Wipe with clean water and wipe dry.
- There may be an odour when you first switch on the appliance, it will disappear when the appliance starts to cool.
- When the appliance has been positioned, adjust the feet to ensure the unit is stable. This is essential to ensure quiet running and proper door opening /closing.
- Connect to the electrical socket but do not switch the power to the refrigerator on for at least 3 hours. The coolant within the product needs time to settle after it has been transported and put in to position, failure to do this will affect the cooling performance of your appliance..
- Once the appliance has settled, locate the thermostat dial on the outside of the product and set between setting "6" and "7" and switch on the power. The compressor will begin to work. Close the door.
- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out.
- To save energy, you should minimize the frequency and duration of door opening.

Product Overview

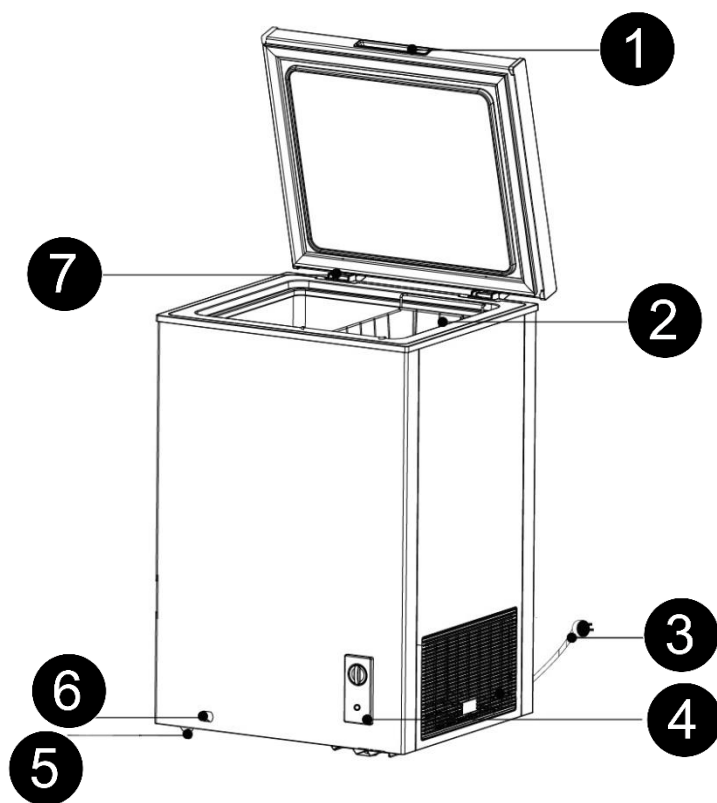

- | | |
|---|--------------------|
| 1. Handle | 5. Adjustable feet |
| 2. Wire basket | 6. Drainage hole |
| 3. Power cord | 7. Hinges |
| 4. Temperature control dial
& indicator lights | |

  INSTALLATION – LEVELLING THE FEET

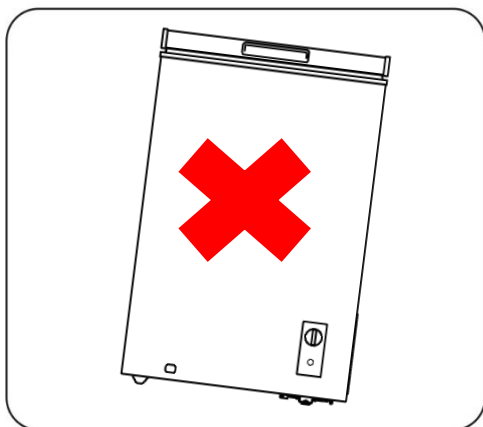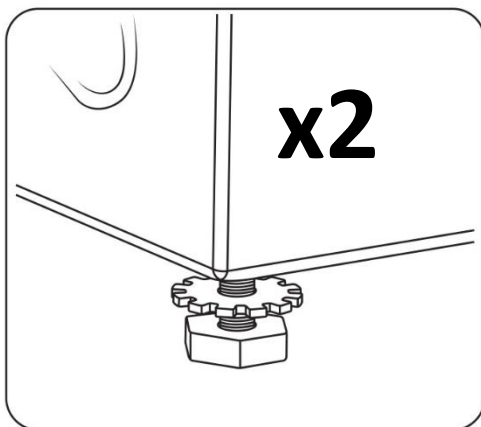

WARNING – we recommend a minimum of 2 people when moving or lifting the appliance.

WARNING – only level the appliance with the feet supplied. DO NOT use cardboard, wood or similar materials to level the appliance.

For optimal performance, your appliance must be levelled, which will prevent deterioration of performance, damage to the appliance, and reduce noise.

We recommend the use of a spirit level to gauge the surface before adjusting any feet, by placing the appliance in its location and checking both the Forward and Side elevations.

Once you know the level of the appliance, slightly tilt the appliance at the required corner and using a spanner, rotate the desired foot in an anti-clockwise motion. Ensure levels are checked regularly during this stage.

Usage

! Allow to stand for a minimum of 3 hours before plugging in to the mains

 
The temperature in the appliance is controlled by the temperature control knob located on the front face, at the bottom right hand side. Rotate the control knob left or right to regulate the temperature inside the freezer.

On the temperature control, 1 is the warmest setting and 8 is the coldest setting. **Under normal conditions the temperature control should be set between 6 and 7.** Once the temperature control has been set, close the door and plug in the appliance. We recommend that the door is not opened for a minimum of 4 hours to allow the appliance to reach the standard operating temperature. Settings 1 – 3 are cooling settings and this means the temperature inside the product will be between 1 °C and 10 °C. Settings 4 – 8 are freezing settings and this means the temperature inside the product will be between -12 °C and -26 °C.

Note: The standard operating temperature for the freezer compartment should be between -18°C and -26°C.

Indicator light

Power - Indicates the freezer is switched on.

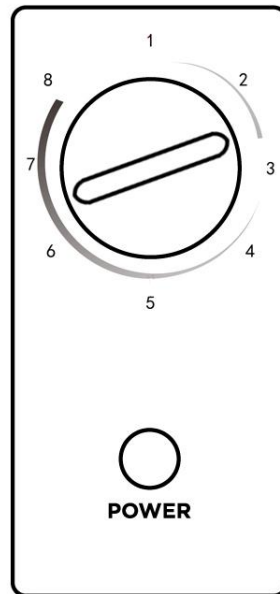

Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear.
- Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the doors from closing properly.
- Ensure that the door seals are clean and there are no tears or splits.
- Do not overload the appliance: the cooling air that circulates to keep the appliance cold gets blocked and pockets of warm air form.
- Do not put hot food into the fridge or freezer – let it cool down first.

Freezer Storage Advice

- Store fresh food in airtight boxes or wrap in bags or foil which is suitable for freezing.
- Do not allow frozen food into direct contact with food to be frozen.
- Pre-frozen food must be placed in the freezer as quickly as possible after purchasing.
- To prevent frost damage to fresh vegetables or fruits they must be processed appropriately before being placed into the freezer compartment.
- You must always follow the storage guidelines printed on all food packaging. However, below is some suggested maximum storage times at -18°C (4 star freezer rating) for a variety of foods:
 - Fresh meat & poultry – up to 12 months
 - Cooked meat – up to 2 months
 - Fresh fish – up to 6 months
 - Fruit & vegetables – up to 12 months
 - Bread & cakes – up to 6 months

Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise, do not refreeze the food without checking it's condition.

- **Ice Cream:** Once thawed should be discarded.
- **Fruit and Vegetables:** If soft should be cooked and used up.
- **Bread and Cakes:** Can be refrozen without danger.
- **Shellfish:** Should be refrigerated and used up quickly.
- **Cooked Dishes:** i.e. casseroles should be refrigerated and used up.
- **Large Pieces of Meat:** Should be refrigerated and used up quickly
- **Small Joints:** Should be refrigerated and used up quickly
- **Chicken:** Should be refrigerated and used up quickly

Maintenance & Cleaning

Disconnect the appliance from the power supply before cleaning.

Internal Cleaning

- Do not pour water over the appliance.
- The cavity should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water (5ml to 0.5 litre of water)
- Clean the accessories separately with soap and water. Do not put them in the dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing, rinse with clean water and dry carefully.
- When you have finished cleaning reconnect the plug with **dry hands**.

External Cleaning

- Wash the outer cabinet with warm soapy water. Do NOT use abrasive products.
- There are sharp edges on the underside of the product so care should be taken when cleaning.
- Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the inside. Leave the door open to prevent the build-up of odours.

Maintenance & Cleaning

Defrosting

Note: Care must be taken when performing the following procedure.

Defrost twice a year or when a frost layer of approximately 7 mm (1/4") has formed.

- 6 hours before the defrosting process, set the thermostat knob at the "8" position to make sure the food is at the lowest temperature before removing the frozen foods. All food should be wrapped in several layers of newspaper and stored in a cool place (e.g. fridge or larder).
- Switch off the appliance at the socket outlet and pull out the mains plug.
- Remove the freezer basket. Leave the lid open. Containers of warm water (not hot) may be placed carefully in the freezer to speed up the defrosting process.
- Never use hairdryers, electrical heaters or other such electrical appliances for defrosting.
- When the ice has melted, drain the water in the bottom of the freezer by removing the plastic stopper in the bottom of the appliance (this is inside the appliance)
- NOTES: PLEASE KEEP THE PLASTIC STOPPER SAFE DURING THE DEFROSTING PROCESS AND PUT IT BACK AFTER THE DEFROSTING PROCESS IS COMPLETE
- Situated at the front left bottom corner of the appliance (this is on the outside of the appliance), is a small plastic drain cap. Place a container under the drain cap to catch the defrosted water. Unscrew the cap slowly so the drips out at first, once the cap is completely unscrewed the water will flow in to the container. This may take several attempts to drain all the water. After the draining has been completed, replace the cap in the appliance and rotate the drainage cap on the outside of the appliance.
- Wipe up any spillages that may have occurred.



Never use sharp metal tools as it may damage the appliance.

Never use an electrical heater, this may cause an electric shock.



Russell Hobbs

Trouble Shooting

Problem	Solution
The freezer doesn't work	Check that the appliance is switched on.
	Check that there has not been a power cut.
	Check that the plug is not faulty.
	Check that the fuse has not blown.
	Check that the voltage is correct for the appliance.
	Are there any faults with the socket? For this purpose, try the plug of your appliance by connecting it to a socket which you are sure is working.
The temperature inside the appliance is not cold enough	Check that there is not too much food in the appliance.
	Check that the thermostat is set to a suitable temperature.
	Check that the appliance is not placed in direct sunlight, or too near to a heating source.
	Check that the ambient temperature is within the operation limits of the appliance.
The temperature within the appliance is too cold.	Are the doors of the appliance opened frequently? Once the door is opened, the humidity found in the air in the room enters the appliance, especially if the humidity levels in the room are very high. The more frequently the door is opened in humid conditions the more chance of the build up of moisture.
	Increase the working temperature by adjusting the thermostat to a lower setting.
The inner surfaces of the appliance are wet	Caused by condensation - dry the inside of the appliance.
The outer surfaces of the appliance are wet	Caused by condensation - dry the outer of the appliance carefully.
Excess ice or frost has built up inside the appliance	Check that the door has not been left open.
	Check that the door gasket is clean and undamaged.

Trouble Shooting

Problem	Solution
Smell/odour	Check all the food and drink that is in the freezer is in date and correctly packaged. If it isn't then it should be removed immediately or repackaged.
	Check for spillages on each shelf, rack and drawer. You may need to remove the drawers to check that no spillages have settle underneath them. As spillages that have not been cleaned and have been left can cause smells and unwanted odours.
The doors do not close properly	Ensure there are no obstructions preventing door closure.
	Check the door compartments and shelves are correctly in place.
	Check the door seal is not warped or torn.
	Check the appliance is level.
Unusual noises	Check that the appliance is on a flat, level surface and is stable.
	Check the spacing's around the appliance and ensure it is not touching other items.
	Bubbling and gurgling sound: • This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal.
	Water flowing sound: • This is the normal sound of water flowing into the drain trough during the defrosting process.
	If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit more noisily for a short period of time.

Connection to the Mains Supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC220V-240V; 50Hz. Check that the voltage marked on the product corresponds with your supply voltage.

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

 
The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

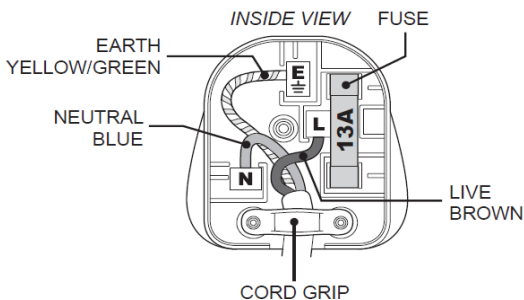

TECHNICAL SPECIFICATION

Supplier's name or Trade Mark:		Russell Hobbs			
Supplier's Address:		Unit 1, Green Bank Business Park, Wigan, WN2 4AY, UK / Product Care (Ireland) Ltd, Cork, T23 AT2P, Ireland			
Model Identifier:		RH99CF0E1 W/B			
Product Type		Chest Freezer			
		Value		Value	
Total Volume (L)	99	Dimensions (cm)	Height	85.0	
			Width	54.7	
			Depth	44.6	
		Net Weight (kg)	22.1		
Rated Voltage	AC220V-240V / 50Hz	Rated Current	0.5A		
EEI	100	Energy Efficiency Rating	E		
Airborne acoustical emissions (dB)	38	Airborne acoustical noise emission class	C		
Annual Energy Consumption (kWh/a)	169	Climate Class	N/SN/ST		
*Actual consumption may vary depending on how the appliance is used					
		Temperature Rise Time (H)	17		
Minimum ambient temperature (°C) for which the refrigerating appliance is suitable	10°C	Maximum ambient temperature (°C) for which the refrigerating appliance is suitable	38°C		
Winter Setting	No				
Compartment Type	Compartment Parameters and Values				
	Compartment Volume (L)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24 h)	Defrosting type (Automatic / Manual / Static)	
Pantry	No	N/A	+17	N/A	N/A
Wine Storage	No	N/A	+12	N/A	N/A
Cellar	No	N/A	+12	N/A	N/A
Fresh Food	No	N/A	+4	N/A	N/A
Chill	No	N/A	+2	N/A	N/A
0 Star or Ice Maker	No	N/A	0	N/A	N/A
1 Star	No	N/A	-6	N/A	N/A
2 Star	No	N/A	-12	N/A	N/A
3 Star	No	N/A	-18	N/A	N/A
4 Star	No	N/A	-18	N/A	N/A
2 Star Section	No	N/A	-12	N/A	N/A
Variable Temperature Compartment	Yes	99	-18	4.5	Manual
Light Source Parameters (for models with an LED lamp)					
Type of Light Source	N/A		For 4-Star Compartments		
Energy Efficiency Class	N/A		Fast Freeze	No	
Low Noise Appliance	No		Design Type	Freestanding	
Wine Storage Appliance	No		Other Refrigerating Appliance	Yes	
Minimum duration of the guarantee offered by the supplier:			12 months		
Weblink to the manufacturer's website, where the information in point 4(a) Annex of Commission Regulation (EU) 2019/2019 (1) (b) is found:			mda.russellhobbs.com		

TECHNICAL SPECIFICATION

Supplier's name or Trade Mark:		Russell Hobbs				
Supplier's Address:		Unit 1, Green Bank Business Park, Wigan, WN2 4AY, UK / Product Care (Ireland) Ltd, Cork, T23 AT2P, Ireland				
Model Identifier:		RH142CF0E1 W/B				
Product Type		Chest Freezer				
		Value		Value		
Total Volume (L)	143	Dimensions (cm)	Height	85.0		
			Width	60.0		
			Depth	56.0		
Net Weight (kg)		22.7				
Rated Voltage		AC220V-240V / 50Hz	Rated Current		1.0A	
EEI		100	Energy Efficiency Rating		E	
Airborne acoustical emissions (dB)		40	Airborne acoustical noise emission class		C	
Annual Energy Consumption (kWh/a)		182	Climate Class		N/SN/ST	
*Actual consumption may vary depending on how the appliance is used						
		Temperature Rise Time (H)		15		
Minimum ambient temperature (°C) for which the refrigerating appliance is suitable		10°C	Maximum ambient temperature (°C) for which the refrigerating appliance is suitable		38°C	
Winter Setting		No				
Compartment Type		Compartment Parameters and Values				
		Compartment Volume (L)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24 h)	Defrosting type (Automatic / Manual / Static)	
Pantry	No	N/A	+17	N/A	N/A	
Wine Storage	No	N/A	+12	N/A	N/A	
Cellar	No	N/A	+12	N/A	N/A	
Fresh Food	No	N/A	+4	N/A	N/A	
Chill	No	N/A	+2	N/A	N/A	
0 Star or Ice Maker	No	N/A	0	N/A	N/A	
1 Star	No	N/A	-6	N/A	N/A	
2 Star	No	N/A	-12	N/A	N/A	
3 Star	No	N/A	-18	N/A	N/A	
4 Star	No	N/A	-18	N/A	N/A	
2 Star Section	No	N/A	-12	N/A	N/A	
Variable Temperature Compartment	Yes	143	-18	6.5	Manual	
Light Source Parameters (for models with an LED lamp)						
Type of Light Source		N/A	For 4-Star Compartments			
Energy Efficiency Class		N/A	Fast Freeze	No		
Low Noise Appliance		No	Design Type	Freestanding		
Wine Storage Appliance		No	Other Refrigerating Appliance	Yes		
Minimum duration of the guarantee offered by the supplier:			12 months			
Weblink to the manufacturer's website, where the information in point 4(a) Annex of Commission Regulation (EU) 2019/2019 (1) (b) is found:			mda.russellhobbs.com			

TECHNICAL SPECIFICATION

Supplier's name or Trade Mark:		Russell Hobbs					
Supplier's Address:		Unit 1, Green Bank Business Park, Wigan, WN2 4AY, UK / Product Care (Ireland) Ltd, Cork, T23 AT2P, Ireland					
Model Identifier:		RH198CFOE1 W/B					
Product Type		Chest Freezer					
		Value		Value			
Total Volume (L)	198	Dimensions (cm)	Height	85.0			
			Width	77.0			
			Depth	56.0			
		Net Weight (kg)	25.3				
Rated Voltage		AC220V-240V / 50Hz	Rated Current		0.9A		
EEI		100	Energy Efficiency Rating		E		
Airborne acoustical emissions (dB)		41	Airborne acoustical noise emission class		C		
Annual Energy Consumption (kWh/a)		200	Climate Class	N/SN/ST			
*Actual consumption may vary depending on how the appliance is used							
			Temperature Rise Time (H)		20		
Minimum ambient temperature (°C) for which the refrigerating appliance is suitable		10°C	Maximum ambient temperature (°C) for which the refrigerating appliance is suitable		38°C		
Winter Setting		No					
Compartment Type		Compartment Parameters and Values					
		Compartment Volume (L)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24 h)	Defrosting type (Automatic / Manual / Static)		
Pantry	No	N/A	+17	N/A	N/A		
Wine Storage	No	N/A	+12	N/A	N/A		
Cellar	No	N/A	+12	N/A	N/A		
Fresh Food	No	N/A	+4	N/A	N/A		
Chill	No	N/A	+2	N/A	N/A		
0 Star or Ice Maker	No	N/A	0	N/A	N/A		
1 Star	No	N/A	-6	N/A	N/A		
2 Star	No	N/A	-12	N/A	N/A		
3 Star	No	N/A	-18	N/A	N/A		
4 Star	No	N/A	-18	N/A	N/A		
2 Star Section	No	N/A	-12	N/A	N/A		
Variable Temperature Compartment	Yes	198	-18	9.0	Manual		
Light Source Parameters (for models with an LED lamp)							
Type of Light Source		N/A	For 4-Star Compartments				
Energy Efficiency Class		N/A	Fast Freeze		No		
Low Noise Appliance		No	Design Type		Freestanding		
Wine Storage Appliance		No	Other Refrigerating Appliance		Yes		
Minimum duration of the guarantee offered by the supplier:			12 months				
Weblink to the manufacturer's website, where the information in point 4(a) Annex of Commission Regulation (EU) 2019/2019 (1) (b) is found:			mda.russellhobbs.com				

Notes



Notes





Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.



The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 2.5