


Line Tension Clip

Occasionally the line on your rotary ailer might sag, this can be due to a number of factors; weather conditions (lines are more prone to sagging in warmer weather), tangled lines, unevenly spaced lines and the rotary operation not being locked at its highest point. Before you use the line tension clip please ensure you have eliminated all the above factors.

Warning: the line tension clip is there to be used as a last resort to re-tension your rotary washing line.

- 1) Pinch where arrows indicate and open
- 2) Unwind the loose line end
(warning - do not untie the knotted line end)
- 3) Pull the loose line end until it is at your desired tension
- 4) Rewind the loose line end
- 5) Secure by looping end of line back into the clip
- 6) Close clip


Your line should now be re-tensioned

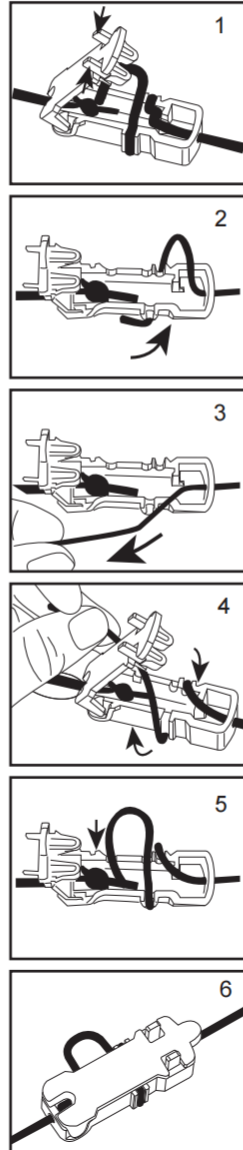

Assembly & Operation Instructions

HOME HOME 45M ROTARY ROTABRELLA SHOWER COVER (LYQ205-45S - 9583315)

Parts Included

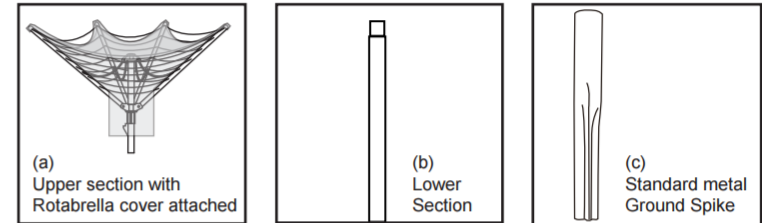

Directions for Use

1. Remove any protective paper / card packaging and recycle.
2. Please remove protective cap on upper section (a) before assembly. Lower section (b) is to be inserted into upper section (a).
3. Establish a suitable location for the ailer. Please ensure there is enough room for it to rotate freely when fully open (2.07 meters diameter.)
4. Install the ground spike. The spike included is for installation in a concrete mix place. We recommend to follow below steps:
 - a. Dig a hole 20cm square and 40cm deep.
 - b. Partly fill the hole with concrete and place the spike upright in the center.
 - c. Complete filling with concrete and ensure when installing the ground spike that it is firmly located in the vertical position.
 - d. Allow 48 hours for setting before use.


Operation

4 stage locking system - push progressively upwards for warm weather locking positions.

1. To open, remove Velcro strap and splay the arms away from the rotary. Slide the centre collar upwards until it engages in the first tension position.
2. To change the height of the rotary depress the button positioned on the central pole and locate at your desired height.
3. To close, depress the lift and click locking collar button and bring the arms down to its lowest position.

Note: you can open and close this item at your set / desired operational height.

4. If you are experiencing difficulties opening this product check to ensure lines are not tangled.
5. When both section are left together for long periods, separation may become difficult.

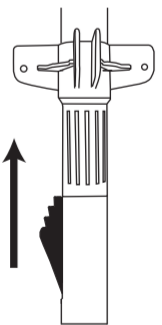

Operation

ROTABRELLA SHOWER COVER

We strongly recommend that you leave the shower cover attached to your rotary as it will not affect the operation of your product. It will help protect your laundry from showers, airborne dirt and dust, also bleaching from the sun.

Your rotary, with Rotabrella cover attached, will open and close as expected.

Remember to use the Velcro strap to hold it securely when closed and not in use.

We would also recommend that you purchase a separate large rotary cover if you wish to protect your product or remove it to store away.

Always store away from children and pets.






Shower cover removal

If you still want to remove the cover follow the below steps;

- Open your rotary and unzip the 4 zips found centrally to the product
- Close your rotary so that you can easily release the cover arm fixings from the end of the arms
- Open your rotary and gently pull and tease the cover off taking care of it catching on the upper most part of the centre pole.



Shower cover attachment

- Rotary needs to be in the closed position with arms splayed slightly.
- Place your cover flat on the ground with dark green side up.
- Pick up the 4 arm fixing tabs, located at the corners, 1 at a time and hold in 1 hand. Raise your arm and shake gently, pulling the sides neatly, using your free hand, until all the zips are nearest to the ground.
- Keeping hold of the 4 arm fixing tabs, place the cover over the closed rotary, you may need to use your other hand to guide over the lines. Align and attach 1 of the cover arm end fixing tabs over the arm end. Rotate your closed rotary, align and fix a 2nd arm end fixing tab. Repeat with the 3rd and 4th tabs.
- Once all 4 cover fixing tabs are attached, slowly open your rotary helping and freeing the cover if it catches or snags. Take care not to push up with speed or force as you may damage your cover. When the rotary is open fully, allow it to lock into position. Ensure all the zipped sections dangle down in the centre.

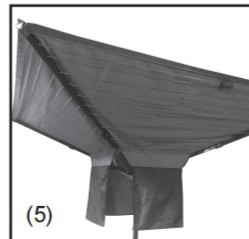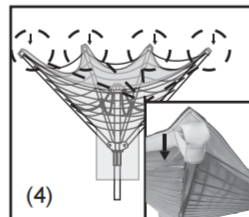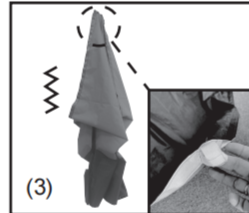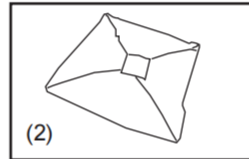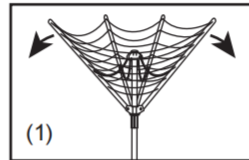

6. Engage and close each zip to create a central funnel.

7. The Rotabrella cover is now in place and ready to use.

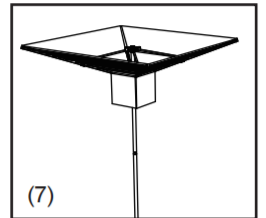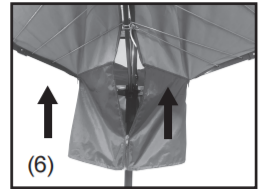

Care Instructions

When not in use we recommend that the ailer is covered and securely tied.

If removing from the ground socket for storage please ensure that the ailer is covered and kept out of the reach of children.

Wipe Clean with damp cloth.

Warning

Caution: Long cords present a risk of strangulation to children, ensure that the rotary ailer is removed from the ground socket and safely stored away from children when not in use.

Do not exceed maximum load (36kg).

Ensure locking mechanism is engaged before use.

Do not use this rotary ailer in adverse weather conditions

Please use the Spike or Socket which is provided with your rotary ailer.

This is not a children's toy. Do not allow children to play with the product.

Customer Support

0345 640 2020