

SHARP

Achtung
Advertencia
Avertissement
Importante
Belangrijk

Viktigt
Viktigt
Viktig
Tärkeä
Importante
Important



NE



RCA271TB-UK RCA271TG-UK

MICROWAVE OVEN WITH AIRFRY - OPERATION MANUAL

900 W (IEC 60705)

This operation manual contains important information which you should read carefully before using your microwave oven.

Important: There may be a serious risk to health if this operation manual is not followed or if the oven is modified so that it operates with the door open.



According to the Waste of Electrical and Electronic Equipment (WEEE) Directive, WEEE should be separately collected and treated. If at any time in the future you need to dispose of this product, please do NOT dispose of it with household waste. Please take this product to WEEE collection points where available.



Attention:
This product complies with the European CE directives 2014/30/EU (Electromagnetic Compatibility Directive) and 2014/35/EU (Low Voltage (LVD) directive).

A. Information on Disposal for Users (private households)

1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*.

In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal for Business Users

1. In the European Union

If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities. For Spain: Please contact the established collection system or your local authority for take-back of your used products.

2. In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.




Microwaves are energy waves, similar to those used for TV and radio signals.

Electrical energy is converted into microwave energy, which is directed into the middle bottom of the cavity via a waveguide. Then the microwave stirrer distribute the microwave energy to every corner of the cavity evenly.

Microwaves cannot pass through metal, because of this the oven cavity is made of metal and there is a fine metal mesh on the door.

During cooking the microwaves bounce off the sides of the oven cavity at random.

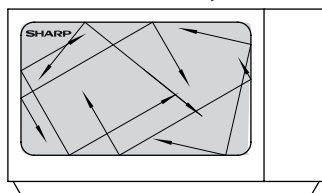

Microwaves will pass through certain materials, such as glass and plastic, to heat the food. (See 'Suitable Ovenware' on page EN-11-12).

Water, sugar and fat in food absorb microwaves which cause them to vibrate. This creates heat by friction, in the same way your hands get warm when you rub them together.

The outer areas of the food are heated by the microwave energy, then the heat moves to the centre by conduction, as it does in conventional cooking. It is important to turn, rearrange or stir food to ensure even heating.

Once cooking is complete, the oven automatically stops producing microwaves.

Standing time is necessary after cooking, as it enables the heat to disperse equally throughout the food.

NOTE:

This model uses a glass flat tray instead of turntable. The glass flat tray is fixed by glue at the bottom of the cavity, it won't rotate like a turntable. Simply place your dish on top of the glass flat tray.



CONTENTS

INFORMATION ON CORRECT DISPOSAL	1
HOW YOUR OVEN WORKS	2
CONTENTS	3
SPECIFICATIONS	3
OVEN AND ACCESSORIES	4 - 5
IMPORTANT SAFETY INSTRUCTIONS	6 - 10
SUITABLE OVENWARE	11 - 12
CARE AND CLEANING	12
INSTALLATION.....	13
CONTROL PANEL.....	14
OPERATION	15 - 21
TROUBLESHOOTING	22
CALLING FOR A SERVICE	I



SPECIFICATIONS

Model	RCA271TB-UK / RCA271TG-UK
AC Line Voltage	230 V~ 50 Hz
Microwave Input	1450 W
Microwave Output	900 W
Grill	1000 W
Convection	2100 W
Microwave Frequency	2450MHz*(Group 2/Class B)
Outside Dimensions (W) x (H) x (D)** mm	495 x 436 x 290
Cavity Dimensions (W) x (H) x (D)*** mm	330 x 322 x 251
Oven Capacity	27 litres***
Gross weight	17.8 kg
Weight	16.4 kg

* This product fulfils the requirement of the European standard EN55011.

In conformity with this standard, this product is classified as group 2 class B equipment.

Group 2 means that the equipment intentionally generates radio-frequency energy in the form of electromagnetic radiation for the heat treatment of food.

Class B equipment means that the equipment is suitable to be used in domestic establishments.

** The depth does not include the door opening handle.

*** Internal capacity is calculated by measuring maximum width, depth and height. Actual capacity for holding food is less.

AS PART OF A POLICY OF CONTINUOUS IMPROVEMENT, WE RESERVE THE RIGHT TO ALTER DESIGN AND SPECIFICATIONS WITHOUT NOTICE.

 


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)


Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:



Glass Tray



Turntable Ring Assembly

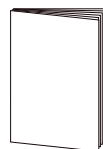 

Instruction Manual



Higher Grill Rack

(Cannot be used in microwave function and must be placed on the glass tray)




Lower Grill Rack

(Can not be used in microwave function and must be placed on the glass tray)



Bake Tray

(Cannot be used in conjunction with microwave function and can be placed on the grill rack)

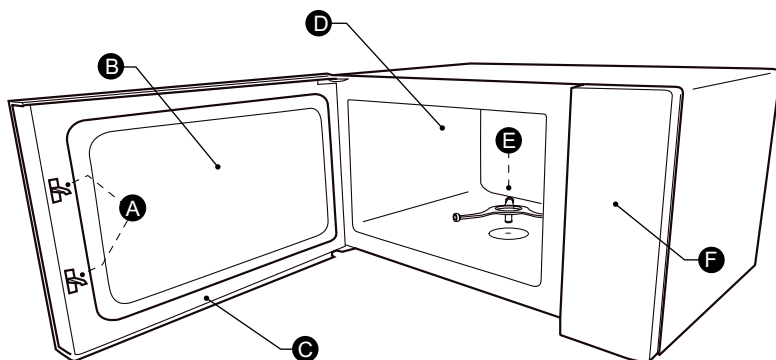


- A) Safety interlock system
- B) Observation window
- C) Door assembly

- D) Oven cavity
- E) Turntable Ring Assembly
- F) Control panel




NAMES OF OVEN PARTS AND ACCESSORIES

Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

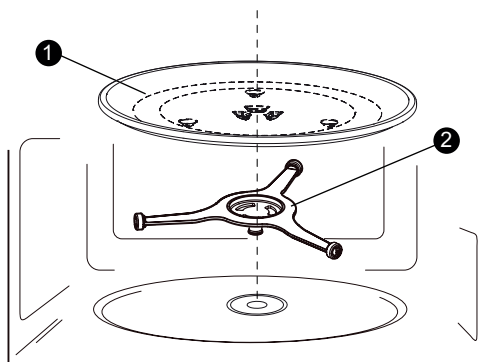

1) Glass Tray

2) Turntable Ring Assembly

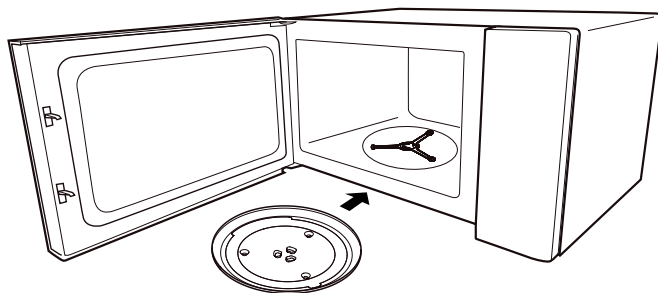

Notes:

1. Never use the appliance without the turntable. Make sure that it is properly engaged.
The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.



READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.



IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
6. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.



- 10.** If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- 11.** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 12.** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- 13.** Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- 14.** The oven should be cleaned regularly and any food deposits removed.
- 15.** Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 16.** The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
- 17.** Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
- 18.** The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- 19.** The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
- 20.** This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.



IMPORTANT SAFETY INSTRUCTIONS

21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
22. Metallic containers for food and beverages are not allowed during microwave cooking.
23. The appliance shall not be cleaned with a steam cleaner.
24. The appliance is intended to be used freestanding.
25. The rear surface of appliances shall be placed against a wall.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. The temperature of accessible surfaces may be high when the appliance is operating.
28. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

TO REDUCE THE RISK OF INJURY TO PERSONS USE THE GROUNDING INSTALLATION

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric



shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.



SUITABLE OVENWARE

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.

SUITABLE OVENWARE



Utensils	Remarks
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

CARE AND CLEANING



Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip - For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

Additional information to the user manual concerning the operation safety

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

Do not use steam assisted cleaners to clean the appliance.




INSTALLATION

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Installation requirements

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

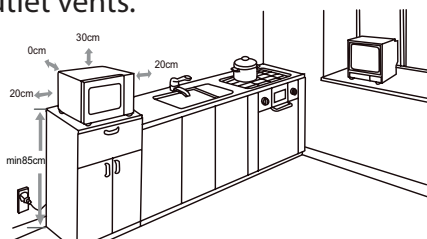


- (1) The minimum installation height is 85cm.
 - (2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
 - (3) Do not remove the legs from the bottom of the oven.
 - (4) Blocking the intake and/ or outlet openings can damage the oven.
 - (5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface
may be hot during
operation.



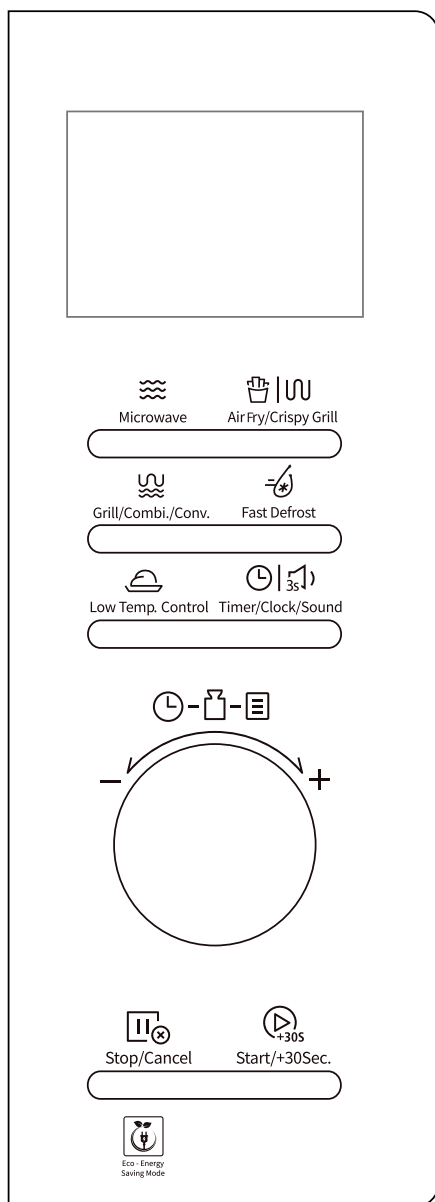



OPERATION

1. Setting the Clock

After connecting the oven to the power, "0:00" shows on the display. The buzzer sounds.

- 1) Press " " twice, the screen will display " 00:00 ".
Timer/Clock/Sound
- 2) Turn the knob to set the hour figures.
- 3) Press " " to confirm.
Timer/Clock/Sound
- 4) Turn the knob to set the minute figures.
- 5) Press " " to confirm. The clock is set.
Timer/Clock/Sound

Notes:

- 1) The clock is a 24-hour display.
- 2) After the step 4, if " " is not pressed or if there is no operation within 5 minutes, the setting is invalid.
Timer/Clock/Sound

2. Setting the Kitchen Timer

- 1) Press " " once, the screen will display " 00:00 ".
Timer/Clock/Sound
- 2) Turn the knob to set the desired time. The maximum time value is " 95:00 ".
- 3) Press " " to confirm. The timer starts counting down.
Start/+30Sec.

3. Microwave Cooking

6 power levels are available.

Power Level	100%	80%	50%	30%	10%	0%
Display	P100	P80	P50	P30	P10	P0

- 1) Press " " once, the screen will display " P100 ".
Microwave
- 2) Turn the knob to set the power level. 6 power levels are available.
- 3) Press " " to confirm the power level.
Start/+30Sec.
- 4) Turn the knob to set the cooking time. The maximum time value is " 95:00 ".
- 5) Press " " to start cooking.
Start/+30Sec.

Note: If "P0" is selected, the default time is 5 minutes, and it cannot be changed.

4. Grill Cooking

- 1) Press " " once and then "G-1" will display.
Grill/Combi./Conv.
 - 2) Press " " to confirm.
Start/+30Sec.
 - 3) Turn the knob to set the cooking time. The maximum time value is "95:00".
 - 4) Press " " to start cooking.
Start/+30Sec.
- Note:** The buzzer will sound to remind you to turn the food over during grill cooking. If no operation, the oven will continue working.



5. Combination Cooking

- 1) Press "Grill/Combi./Conv." twice to enter the combination mode and then "C-1" will display.
- 2) Turn the knob to choose the combination mode, then the "C-1", "C-2", "C-3", "C-4" will display in order.
- 3) Press "Start/+30Sec." to confirm.
- 4) Turn the knob to set the cooking time. The maximum time value is "95:00".
- 5) Press "Start/+30Sec." to start cooking.

Combination instructions

Instructions	Display	Microwave	Grill	Convection
1	C-1	●		●
2	C-2	●	●	
3	C-3		●	●
4	C-4	●	●	●

6. Speedy Cooking

- 1) In standby mode, press "Start/+30Sec." to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "95:00".
- 2) In standby mode, turn the knob left to set a cooking time at 100% power. Continue to turn the knob to adjust the cooking time. Then press "Start/+30Sec." to start cooking.

Note: In Microwave, Grill, Combination, Convection cooking state, each more press on "

"Start/+30Sec." can increase the cooking time by 30 seconds. (except the microwave cooking at P0)

7. Defrost by Weight

- 1) Press "Fast Defrost" once and then the screen will display "dEF1".
- 2) Turn the knob to set the weight of the food. The range of weight is 100 to 2000g.
- 3) Press "Start/+30Sec." to start defrosting.

Note: The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

8. Defrost by Time

- 1) Press "Fast Defrost" twice and then the screen will display "dEF2".
- 2) Turn the knob to set the desired defrost time. The maximum time value is "95:00".



OPERATION

- 3) Press  "Start/+30Sec." to start defrosting.

Notes: 1) The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

2) The defrost power is P30 and it cannot be changed.

9. Convection Cooking with Preheat Function



- 1) Press "Grill/Combi./Conv." three times and then "150°C" will display.
- 2) Turn the knob to set the temperature. 10 options are available, including 150, 160, 170, 180, 190, 200, 210, 220, 230, 240°C.



- 3) Press "Start/+30Sec." to confirm the temperature.



- 4) Press "Start/+30Sec." again to start preheating.
- 5) When preheating is completed, the oven will sound. Open the door and place food in the oven.
- 6) Close the oven door.
- 7) Turn the knob to set the cooking time. The maximum time value is "95:00".



- 8) Press "Start/+30Sec." to start cooking.

10. Convection Cooking without Preheat Function



- 1) Press "Grill/Combi./Conv." three times and then "150°C" will display.
- 2) Turn the knob to set the temperature. 10 options are available, including 150, 160, 170, 180, 190, 200, 210, 220, 230, 240°C.



- 3) Press "Start/+30Sec." to confirm the temperature.

- 4) Turn the knob to set the cooking time. The maximum time value is "95:00".



- 5) Press "Start/+30Sec." to start cooking.

11. Multi-Stage Cooking

Notes: 1) Two cooking stages can be set in multi-stage cooking.

2) If you set the defrost function, it will work automatically in the first stage.

3) The Kitchen Timer, Auto Menu, Preheat Function cannot be set as one of the multi-stage.

4) In the multi-stage cooking process (Except defrost by weight), each more press on



"Start/+30Sec." can increase the cooking time by 30 seconds.

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.



- 1) Press "Fast Defrost" twice and then the screen will display "dEF2".



- 2) Turn the knob to set the desired defrost time to 5 minutes.
- 3) Press "Microwave" once and then "P100" will display.
- 4) Turn the knob to set the power level to P80.
- 5) Press "Start/+30Sec." to confirm.
- 6) Turn the knob to set the cooking time to 7 minutes.
- 7) Press "Start/+30Sec." to start cooking.

12. Air Fry

For air fry cooking you will need to select & confirm the type of food, please refer to the chart below.

- 1) Press "Air Fry/Crispy Grill" once and then "Ar01" will display.
- 2) Turn the knob to select the menu from Ar01 to Ar09.
- 3) Press "Start/+30Sec." to confirm.
- 4) Press "Start/+30Sec." again to start cooking.

Note: For the menus "Ar02-Ar09", the buzzer will sound to remind you to turn the food over during cooking. If no operation, the oven will continue working.

Air Fry Menu

MENU	DISPLAY	Weight(g)	POWER
Frozen Chips	Ar01	300	Grill 100%+ Conv 240°C/ Grill 60% +Conv 240°C
Frozen Potato balls	Ar02	350	Grill 60%+ Conv 240°C
Frozen Squid Rings	Ar03	250	
Frozen Onion Rings	Ar04	250	Grill 60%+ Conv 240°C
Frozen Chicken Nuggets	Ar05	350	
Steak	Ar06	400	
Shrimps	Ar07	250	
Vegetable	Ar08	200	
Spring Rolls	Ar09	300	

13. Crispy Grill Cooking

- 1) Press "Air Fry/Crispy Grill" twice and then "C1" will display.
- 2) Turn the knob to select the menu from C1 to C4.
- 3) Press "Start/+30Sec." to confirm the crispy grill menu.
- 4) Turn the knob to set the weight of the food.



OPERATION

- 5) Press "  " to start cooking.

Note: For the menu " C1 ", when the cooking time remains 5 minutes , the buzzer will sound to remind you to place cheese on the surface of the food.

Crispy Grill Menu

MENU	DISPLAY	WEIGHT	POWER	RECOMMENDED SCENARIOS
Cordon bleu (Fresh Mini Pizza)	C1	1 (300g)	C-4	Put the food into the glass tray and place the glass tray on the lower grill rack.
		2 (600g)		
		3 (900g)		
lasagna	C2	200g	C-4	Put the food into the glass tray and place the glass tray on the lower grill rack.
		300g		
		400g		
		500g		
Bread	C3	100g	Grill 60%+ Conv 240°C	Put the food into the bake tray and place the bake tray on the higher grill rack.
Pie/Tart	C4	350g	Conv 220°C	Put the food into the bake tray and place the bake tray on the higher grill rack.

14. Deodoriser Function

- 1) Press "  " once the screen will display " P100 ".
 (2) Turn the knob to set the power level until " P0 " will display.

- (3) Press "  " to start working.

Note: In the deodoriser working process, the default time is 5 minutes, and it can not be changed.

15. Low Temp Control

- 1) Press "  " once and then " L1 " will display.
 (2) Turn the knob to select the menu from L1 to L5.

- (3) Press "  " to confirm.
 (4) Turn the knob to set the temperature.

- (5) Press "  " to confirm the temperature.
 (6) Turn the knob to set the cooking time.

- (7) Press "  " to start cooking.



Low Temp Control Menu

MENU	DISPLAY	TEMPERATURE RANGE	THE MAXIMUM TIME VALUE
Slow cook	L1	90°C/ 100°C/ 110°C	12 hours (12:0H)
Keep Warm	L2	60°C/ 70°C/ 80°C	95:00
Food dry, Dehydrate	L3	40°C- 90°C	12 hours (12:0H)
Yogurt, Ferment	L4	40°C	12 hours (12:0H)
Warming box	L5	40°C- 100°C	95:00

16. Mute mode

To activate the mute mode:



In standby mode, press and hold "Timer/Clock/Sound" for 3 seconds and then "oFF" will display.

When you press the keys, it does not make a sound. To deactivate the mute mode:

In mute mode, press and hold "Timer/Clock/Sound" for 3 seconds. The buzzer will sound and then "on" will display.

Timer/Clock/Sound

17. Auto Menu

- 1) Turn the knob and then "A-1" will display.
- 2) Turn the knob to choose the menu you need. 10 auto menus are available.
- 3) Press "Start/+30Sec." to confirm.
- 4) Turn the knob to set the weight of the food.
- 5) Press "Start/+30Sec." to start cooking.

Start/+30Sec.

Note: For the menu "A-10", the buzzer will sound to remind you to turn the food over during grill cooking. If no operation, the oven will continue working.

Auto Menu Chart

MENU	WEIGHT	DISPLAY	POWER
A-1 Auto Reheat	150g	150g	P100
	250g	250g	
	350g	350g	
	450g	450g	
	600g	600g	
A-2 Potato	1(about 230g)	1	P80
	2	2	
	3	3	
A-3 Meat	150g	150g	P80
	300g	300g	
	450g	450g	
	600g	600g	
A-4 Vegetable	150g	150g	P100
	350g	350g	
	500g	500g	



OPERATION

MENU	WEIGHT	DISPLAY	POWER
A-5 Fish	150g	150g	P80
	250g	250g	
	350g	350g	
	450g	450g	
	650g	650g	
A-6 Pasta	50g (with 450g cold water)	50g	P100
	100g (with 800g cold water)	100g	
	150g (with 1200g cold water)	150g	
A-7 soup	200g	200g	Conv160°C
	400g	400g	
	600g	600g	
A-8 Cake	475g	475g	C-4
A-9 Pizza	100g	100g	
	200g	200g	
	300g	300g	
A-10 Chicken	500g	500g	C-4/C-4
	750g	750g	
	1000g	1000g	
	1200g	1200g	

18. ECO Function

To enter ECO mode:



In standby mode, press "Eco - Energy Saving Mode" once and the screen will turn off. To cancel ECO mode:

In ECO mode, pressing any key, or opening and closing the door will cancel it.

Note: If there is no operation within 10 minutes, the screen will turn off.

19. Lock Function for Children

You can use this function to prevent children from accidentally turning the oven on. To activate the lock:



In standby mode, press and hold "Stop/Cancel" for three seconds. A long beep sounds and the locked icon will display. To deactivate the lock:



In the locked state, press and hold "Stop/Cancel" for three seconds. A long beep sounds.

20. Inquiring Function

(1) If the clock has been set, the current time will display for three seconds by pressing



Timer/Clock/Sound

(2) In the microwave cooking state, press "Microwave" to inquire about the power level. It will display for three seconds



TROUBLE	POSSIBLE CAUSE	REMEDY
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan.	It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim.	It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door.	It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside.	It is very dangerous. Cancel the process.
Oven cannot be started.	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed well.	Close door well.

GUARANTEE



Vestel Holland B.V. UK Branch guarantees that for a period of 12 months from the date of purchase the enclosed product will be free from defects in materials and workmanship. Vestel Holland B.V. UK Branch agrees to provide for the repair or, at its option, the replacement of a defective product. Vestel Holland B.V. UK Branch reserves the right to replace defective parts, or the product, with new or refurbished items. Items that are replaced become the property of Vestel Holland B.V. UK Branch.

To benefit from this guarantee, any fault that occurs must be notified to Vestel Holland B.V. UK Branch, or its appointed Service Facility, within one year from the date the product was purchased. Proof of purchase, such as a receipt or invoice, must be provided.

If the product is exchanged, the replacement shall be covered by the unexpired portion of the original guarantee. In the unlikely event of your microwave requiring repair, please contact your supplier for advice in the first instance. If this is not possible please contact the Sharp Microwave helpline on 0333 014 3055 for assistance.

This guarantee shall only apply to faults that are due to inferior workmanship or materials. It does not cover faults or damage caused by accident, misuse, fair wear and tear, neglect, tampering with the product, or repair other than by a Service Facility appointed by Vestel Holland B.V. UK Branch. The product is intended for private domestic use only. The guarantee will not apply if the product is used in the course of a business, trade or profession.

The guarantee does not cover:

- Glass/ceramic turntables, as they can be damaged by handling/cleaning methods.
- Faults resulting from inadequate cleaning. Regular cleaning is required to prevent a build up of food residue that can also affect the performance of the product.
- Carriage costs to or from the repair centre.

No person has any authority to vary the terms or conditions of this guarantee.

This guarantee is offered as an additional benefit to your statutory rights, and does not affect these rights in any way.

You may not transfer your rights or obligations under this warranty to anyone else.

If you have any difficulty operating the product, or would like information on other Sharp products, please telephone the Sharp Customer Information Centre on the number given below.

Sharp Microwave Helpline:

UK & Ireland: 0333 014 3055

Website: <https://sharphome.eu/pages/contact>

For replacement accessories, please contact the helpline detailed above

SHARP

Sharp Corporation 2-1-25, Kyutaromachi, Chuo-ku, Osaka city, Osaka 541-8522, Japan

Vestel Holland B.V. UK Branch, 1 Waterside Drive, Langley, Berkshire. SL3 6EZ

Vestel Holland B.V. Stationsplein 45, A2.191 3013 AK Rotterdam, The Netherlands

<https://sharphome.eu/contact>



[https://sharphome.eu/
contact/](https://sharphome.eu/contact/)



[https://sharphome.eu/
support/](https://sharphome.eu/support/)



[https://sharphome.eu/
documents-of-conformity/](https://sharphome.eu/documents-of-conformity/)



[https://sharphome.eu/
environment/](https://sharphome.eu/environment/)



UK
CA



Printed in China