

Hisense
Innovating A Brighter Life

H28S01UK

Quick Guide



**Confirm
Start
+ 30s**

7 Functions – 1 Appliance



MICROWAVE



AIR FRYER



SLOW COOKER



GRILL



TOASTER



 
OVEN



DEHYDRATOR




INSTALLATION

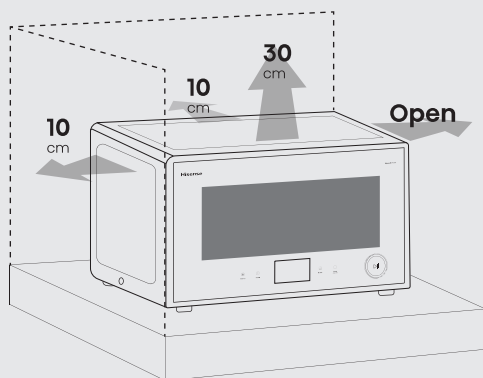


ACCESSORIES

 
SpeedHeat Tray: SpeedyCook · Air Fry · Grill · Bake



 
Air Fry Basket: Air Fry · Grill · Dehydrate

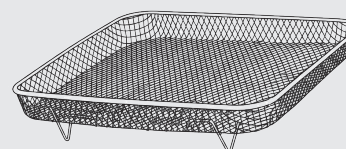


STEAM CLEANING

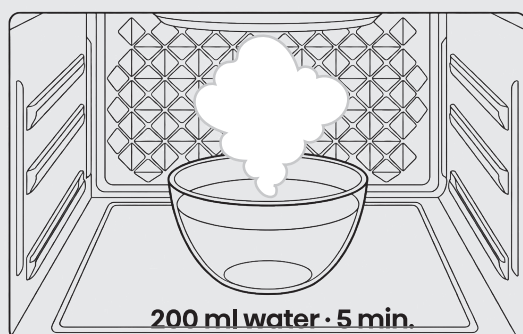 

DUAL GUARD MESH COVER

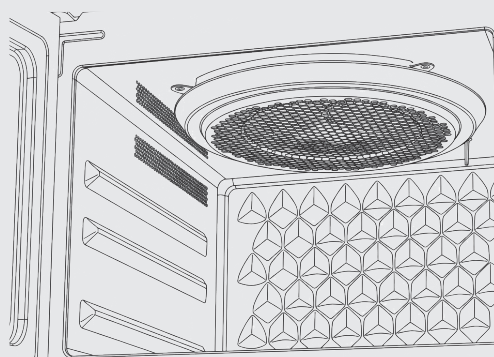 

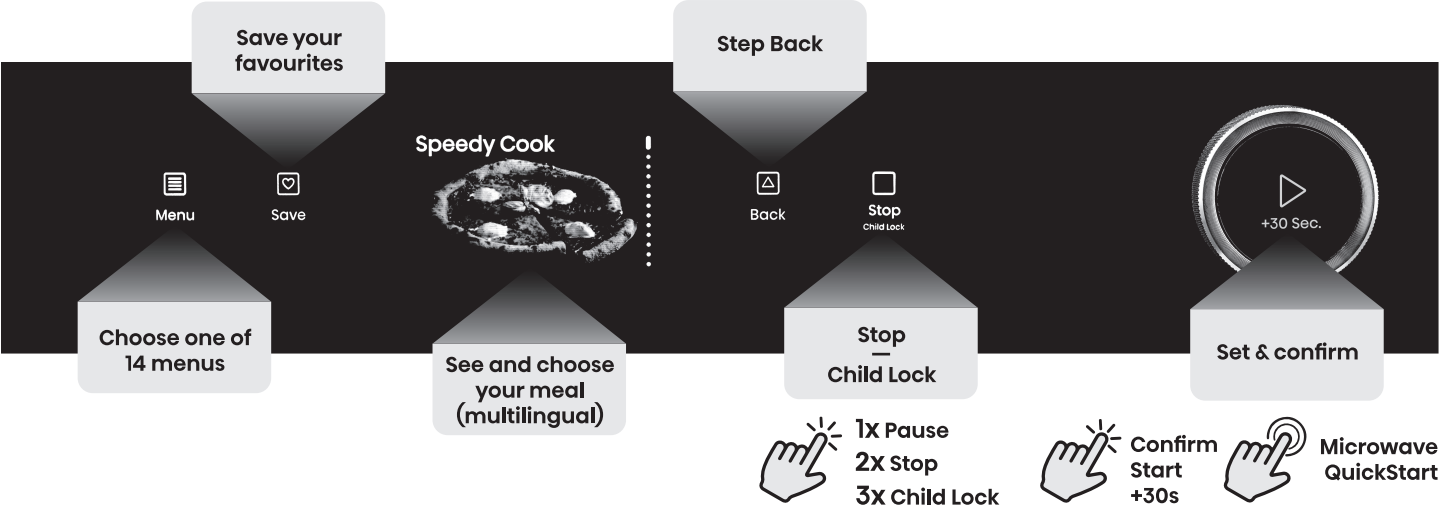 

Menu					9 COOKING MODES · 42+ PROGRAMMES				
SpeedyCook		Air Fry		Microwave		Reheat		Defrost	
Pizza		Chicken Drumsticks		Popcorn		Bread		Meat	
Chicken Nuggets		Sausages		Beverage		Pizza		Poultry	
Chicken Wings		Chicken Goujons		Potato		Curries		Seafood	
Whole Chicken		Mozzarella Sticks		Frozen Ready Meal		Casserole		Speed Defrost	
Popcorn Chicken		Manual Mode		Frozen Veggies		Manual Mode			
Chicken Fillet				Fresh Veggies					
Croissant				Soup					
Onion Ring				Pasta					
Frozen Chips				Beans & Lentils					
				Rice					
				Manual Mode					
Grill		Bake		Toast		Slow Cook			
Roasted Potatoes		Cookies		Toast		Manual Mode			
Roast Meats		Cake		Bagel		90–110°C			
Roasted Chicken		Brownies							
Roast Lamb									
Roast Pork									
Roasted Vegetables									

SpeedyCook								
25:00	8:00	8:00	11:00	13:00	1:50	7:00	12:00	4:50
Whole chicken	Chicken wings	Popcorn chicken	Chicken nuggets	Chicken fillet	Croissant	Onion rings	Frozen chips	Pizza

Combi – Cook 2 Dishes at Once

Upper zone 230°C
SpeedHeat Tray · Meat · Pizza · Gratins · Crispy results

Lower zone 44°C
Microwave · Dough proofing · Warming · Soups

Good To Know

My Favourites: Press and Save · Up to 10 recipes

Language: Menu » Settings

WARNING: Do NOT use SpeedHeat Tray for microwave-only mode