

Hisense



Instruction Manual


H28S01UK HSN



Technical Specifications

Product Model	Speed oven	Model No.	H28S01UK HSN
Rating voltage	220-240 V	Rated frequency	50 Hz
Capacity	28 L	Air fry power	1500-1700 W
Microwave input power	1300-1400 W	Microwave output power	700-800 W

PRODUCT STRUCTURE DIAGRAM

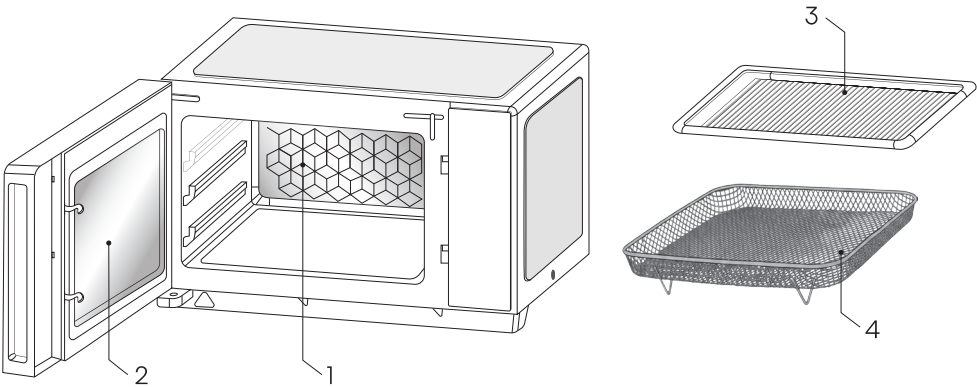

- ① **Stainless-steel cavity**
The stainless-steel material is easy to clean and reduces odor absorption.
- ② **Door**
The glass door has high transparency, allowing you to observe the cooking process inside.
- ③ **Air fry basket**
Use the Air fry basket for optimizing your cooking results during air frying, grilling or drying.
- ④ **SpeedHeat tray**
Use the SpeedHeat Tray for baking, grilling, air frying, toasting and microwave cooking.

BEFORE FIRST USE

- Remove all the packaging.
- Clean all the accessories with hot water, dish soap, and a non-abrasive sponge.
- Clean the exterior of the Speed Oven with a wet cloth.
- Place on a heat-resistant, stable, and level surface.
- Place the Speed Oven at least 30 cm from the wall or other flammable materials.
- The Speed Oven needs space for the air circulation.
- The combi air fryer uses hot air. Don't fill the pot with oil or frying fat.
- Don't place any items on the Speed Oven. It disrupts airflow and affects the end result.


FIRST USE

Placement and power connection

Placement – Choose a level surface and leave a gap of at least 30 cm above this device, and maintain a distance of at least 10 cm between the device and adjacent walls on all sides.

NOTE:

1. Blockage of the air intake or exhaust outlet can cause damage to the device.
2. Do not place any objects on top of this device as the outer casing becomes hot during use.
3. Please do not install this product on or near heat sources such as stoves or other appliances that generate heat. Improper installation near or above heat sources may result in damage to the device.

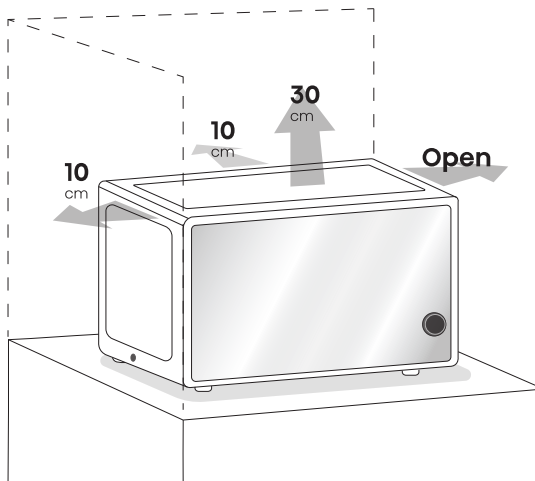

BASIC OPERATIONS

Control Panel



	Menu 1. Press "MENU" key to enter the primary menu selection page. 2. There are 14 primary menus: My favorite, speedy cook, air-fry, microwave, reheat, defrost, grill, bake, toast, dehydration, slow cook, combination, steam clean, setting. 3. If no menus are favorited, "SPEEDY COOK" is the first menu. If favorites exist, "MY FAVORITE" is the first primary menu.
	Save 1. In every cooking menu page, press "SAVE" key to save the menu. 2. In "MY FAVORITE", select the menu, and press "SAVE" key to delete the menu.
	Back On non-standby pages and the primary menu page, press the "BACK" button to return to the previous menu.
	Stop/Child lock 1. In standby mode, press "STOP/CHILD LOCK" for ECO mode. 2. In menu selection/setting pages, press "STOP/CHILD LOCK" for standby mode. 3. In cooking mode, press "STOP/CHILD LOCK" once to pause mode. Press "STOP/CHILD LOCK" twice for stop the cooking mode, and go back to to standby mode. 4. Long press "STOP/CHILD LOCK" for 3 sec to lock or unlock the device.
	Rotary knob 1. Turn the knob to select the menu or adjust the temperature, power and time. 2. Press the knob to confirm the setting. 3. Press the knob to start cooking. 4. In standby mode, press the knob once to start microwave cooking for 30S. Add 30S cooking time for each press. 5. During the cooking with manual menu, press the knob once to add 30 sec cooking time. And add 30 sec cooking time for each press. 6. During all menu cooking (except "DEFROST"), turn the knob to adjust the cooking time, the time step is 10S. And adjustable time range is $\pm 30\%$ of default cooking time.
	TFT display Color display without touch.

Language setting

1. After initial power-up, the display will show "HISENSE" for 3S, and the buzzer will sound once, then the product enters language setting page.
2. The default language is "ENGLISH". Turn the knob to select a language, then press the knob to confirm.
3. During initial setup, pressing the "STOP" key skips language settings, entering standby mode with default language as English.
4. If the language setting was skipped, the user can press the "MENU" button and turn the knob to "SETTING" menu, press the knob to enter into the "SETTING" to set the language.

Clock setting

1. After initial power-up, once the language is set up, it will proceed to the clock format selection page.
2. Turn the knob to choose between 12H or 24H format (default is 24H). Press the knob to confirm the format and proceed to the hour setting page. Press the "BACK" key to return to the language selection page.
3. Hour Setting page: The default time is the current time. Turn the knob to adjust: for 24 H format, range is 0~23; for 12 H format, range is 1~12. Press the knob to confirm the hour and proceed to the minute setting page (range 0~59). Turn the knob to select minutes. Press the knob to confirm the minute setting. The clock will run according to the set time, and the display enters standby mode. Press the "BACK" key to return to the hour setting page.
4. Skipping Setup: During initial setup, pressing the "STOP" key skips language and time settings, entering standby mode with default language as English, 24-hour clock format, and time set to "00:00". These defaults are not saved.

Quick Start / Add cooking time

1. In standby mode with the door closed, pressing the "START" key directly initiates a 30-second manual microwave heating at 100% power. The display shows a countdown timer and a time progress bar. Microwave operation cycling refers to the manual microwave menu settings.
2. During manual microwave, manual air fry, manual reheat, timed defrost, and combination menu operation, pressing the "START" key increases the working time by 30 seconds.

Favorite menus

1. Favorite Menus:

- After setting portion and cooking parameters for any cooking menu, the "SAVE" key indicator lights up. Press the "SAVE" key to save the menu. Saved menus are arranged in chronological order of saving.
- A maximum of 10 menus can be saved. If 10 are already saved, pressing "SAVE" again displays a "FAVORITE MENU FULL" prompt for 3 seconds, and the selected menu is not saved.

Favorite menus

2. Starting a Favorite Menu:

On the primary menu page, select the "MY FAVORITE" menu and press the knob to enter. turn the knob to select a saved menu. The display shows the menu name and parameters. Press the knob to select and start the menu.

3. Deleting a Favorite:

After entering "MY FAVORITE", turn the knob to select a saved menu, then press the "SAVE" key. The display shows a confirmation page for deletion. Turn the knob to select "YES" or "NO".

- Select "YES" and press knob to delete the selected favorite menu. The sequence numbers of favorites after the deleted one decrease by 1 to fill the gap. After deleting the favorite menu, it automatically returns to the favorite sub-menu page.
- Select "NO" and press knob or press "BACK" key to return to the favorite sub-menu page.
- Pressing "STOP" key returns to standby mode.

NOTE:

1. Savable menus include all sub-menus under primary menus from "SPEEDY COOK" to "TOAST" (48 sub-menus total).
2. Identical menus can be saved multiple times and they are sorted by the save order. E. g. , "POPCORN 100 g" saved twice appears as "POPCORN 01 100 g", "POPCORN 02 100 g".

Speedy Cook menus

1. On the primary menu page, select "SPEEDY COOK" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "SPEEDY COOK" has 9 preset menus (see table below).
3. If the menu has portion selection, like "PIZZA" and "CROISSANT", press the knob to enter the portion selection page. Turn the knob to select portion size. Other menus are without portion select. Just turn the knob to the desired menu page.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Pizza	15 cm	SpeedHeat Tray	Level 3	Initial Temp: - 18°C
		23 cm			
		30 cm			
2	Chicken Nuggets	500 g	SpeedHeat Tray	Level 3	Initial Temp: - 18°C
3	Chicken Wings	500 g	SpeedHeat Tray	Level 2	Initial Temp: Room temp.
4	Whole Chicken	1 kg	SpeedHeat Tray	Level 3	Initial Temp: Room temp.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
5	Popcorn Chicken	500 g	SpeedHeat Tray	Level 3	Initial Temp: -18°C
6	Chicken Fillet	400 g	SpeedHeat Tray	Level 3	Initial Temp: -18°C
7	Croissant	1 pc	SpeedHeat Tray	Level 3	Initial Temp: -18°C Max portion 2 pcs
		2 pcs			
8	Onion Rings	400 g	SpeedHeat Tray	Level 3	Initial Temp: -18°C
9	Frozen Chips	500 g	SpeedHeat Tray	Level 3	Initial Temp: -18°C Chip size: 1cm or 3/8 inch

Air Fry menus

1. On the primary menu page, select "AIR FRY" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "AIR FRY" has 4 preset menus (see table below).
3. Turn the knob to the desired menu page.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.
6. Air Fry manual function:
 1. On the secondary menu page, select "AIR FRY MANUAL". Press the knob to enter the temperature selection page (default temperature 180 °C / 350 °F, cooking time 30 minutes).
 2. Turn the knob to select the "AIR FRY" temperature. Press the knob to confirm and enter the cooking time setting page.
 3. Turn the knob to select the "AIR FRY" cooking time. Press the knob to confirm the time setting.
 4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
 5. After the countdown ends, the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Chicken Drumsticks	500 g	SpeedHeat Tray	Level 3	Initial Temp: Room temp.
2	Sausages	500 g	SpeedHeat Tray	Level 3	Initial Temp: Room temp.
3	Chicken Goujons	500 g	SpeedHeat Tray	Level 3	Initial Temp: -18°C
4	Mozzarella Sticks	300 g	SpeedHeat Tray	Level 2	Initial Temp: -18°C

Microwave Cooking menus

1. On the primary menu page, select "MICROWAVE" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "MICROWAVE" has 10 menus (see table below).
3. Press the knob to enter the portion selection page. Turn the knob to select portion size. For "POPCORN", just turn the knob to "POPCORN" page, no need to select the portion.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.
6. Microwave manual function:
 1. On the secondary menu page, select "MICROWAVE MANUAL". Press the knob to enter the microwave power level selection page (default power 100%, cooking time 3 minutes).
 2. Turn the knob to select microwave power level (range 10%~100%, 10 steps). Press the knob to confirm and enter the cooking time setting page.
 3. Turn the knob to select the microwave cooking time. Press the knob to confirm the time setting.
 4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
 5. After the countdown ends, the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Popcorn	100 g	/	Oven Center	Initial Temp. Room Temp.
2	Beverage	1 cup	Mug	Oven Center	240ml per cup Initial Temp: 5 °C Mug size: Dia 8 × 9 cm (H)
		2 cups			
		3 cups			
3	Potato	200 g	/	Oven Center	Initial Temp: Room Temp
		400 g			
		600 g			
4	Frozen Ready Meal	250 g	Microwave-safe container	Oven Center	1. Initial Temp: - 18°C 2. Cover with lid or pierced plastic wrap during cooking Container size: Dia 20 × 4 cm (H)
		350 g			
		450 g			
5	Frozen Vegetable	200g	Covered Pyrex container	Oven Center	Initial Temp: - 18°C Container capacity: 1-1. 5L
		300 g			
		400 g			
		500 g			

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
6	Fresh Vegetable	200 g	Covered Pyrex container	Oven Center	Initial Temp: Room Temp Container capacity: 1-1.5L Add 1 Tbsp (15g) water per 100g vegetable
		300 g			
		400 g			
		500 g			
7	Soup	1 bowl	Small bowl	Oven Center	Initial Temp: 5 200g per bowl Bowl size: Dia 11 × 5cm (H)
		2 bowls			
		3 bowls			
8	Pasta	50g	Microwave-safe pot with lid	Oven Center	Initial Temp: Room Temp. Pasta to water ratio: 1:8-10 Pot size: Dia 19 × 12 cm (H) Cook with 5g salt
		100g			
		150g			
9	Beans & Lentils	200g	Covered Pyrex container with SpeedHeat Tray	Oven Center	Initial Temp: Room Temp Container capacity: 1-1.5L Add 1Tbsp(15g) water per 100g beans
		300g			
		400g			
		500g			
10	Rice	150g	Microwave-safe pot with lid	Oven Center	Initial Temp: Room Temp Rice to water ratio: 1:1.8-2 Pot size: Dia 19 × 12 cm (H)
		300g			

Reheat menus

1. On the primary menu page, select "REHEAT" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "REHEAT" has 5 menus (see table below).
3. Press the knob to enter the portion selection page. Turn the knob to select portion size.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.
6. Reheat manual function:
 1. On the secondary menu page, select "REHEAT MANUAL". Press the knob to enter the cooking time setting page.
 2. Turn the knob to select cooking time. Press the knob to confirm the time setting.
 3. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
 4. After the countdown ends, the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Bread	100 g	Microwave-safe Bake tray	Oven Center	Initial Temp: 5°C Tray size: Dia 25 × 2 cm (H) Only bread slice
		200 g			
		300 g			
2	Pizza	1 slice	Multi- functional tray	Oven Center	Initial Temp: 5°C Tray size: Dia 25 × 2 cm (H) 1 slice = 100g
		2 slice			
		3 slices			
3	Curries	350 g	Covered Pyrex container	Oven Center	Initial Temp: 5°C
		500 g			
4	Casserole	350 g	Covered Pyrex container	Oven Center	Initial Temp: 5°C
		500 g			

Defrost menus

- On the primary menu page, select "DEFROST" and press the knob to enter its secondary menu selection page.
- Turn the knob to select a secondary menu. "DEFROST" has 4 menus (see table below).
- "TIME DEFROST" menu:
 - On the secondary menu page, select "TIME DEFROST". Press the knob to enter the cooking time setting page (default 0 min 0 sec). Turn the knob to select cooking time. Press the knob to confirm.
 - With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
 - After the countdown ends, the display enters the end state.
- Other defrost menus:
 - On the secondary menu page, select the desired defrost type. Press the knob to enter the weight selection page.
 - Turn the knob to select weight (range 100g-2000g). Press the knob to enter the defrost working page, showing countdown timer and time progress bar.
 - When half the total defrosting time has elapsed, the buzzer sounds a reminder tone prompting the user to turn the food over.
 - After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.

NOTE:

The defrosting time will automatically increase based on the selected weight.

Grill menus

1. On the primary menu page, select "GRILL" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "GRILL" has 6 menus (see table below).
3. Turn the knob to the desired menu page.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Roasted Potatoes	4 pcs	SpeedHeat Tray	Level 3	Initial Temp: Room Temp. 200g per pc
2	Roast Meats	500 g	SpeedHeat Tray	Level 3	1. Initial Temp: Room Temp. 2. Tomahawk Steak: 1.5-2cm
3	Roasted Chicken	1000 g	SpeedHeat Tray	Level 3	Initial Temp: Room Temp.
4	Roast Lamb	500 g	SpeedHeat Tray	Level 3	1. Initial Temp: Room Temp. 2. Lamb: 1.5-2cm
5	Roast Pork	500 g	SpeedHeat Tray	Level 3	1. Initial Temp: Room Temp. 2. Pork: 3-4cm
6	Roasted Vegetables	500 g	SpeedHeat Tray	Level 3	Initial Temp: Room Temp.

Bake menus

1. On the primary menu page, select "BAKE" and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. "BAKE" has 3 menus (see table below).
3. **"COOKIE" menu:**
 1. Turn the knob to "COOKIE" page.
 2. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
 3. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.
4. **"CAKE" menu:**
 1. Turn the knob to "CAKE" page.
 2. With the door closed, press the knob to begin the "CAKE" menu preheat stage. The display shows the "CAKE" preheat interface, including actual temperature, target temperature, and temperature progress bar.

3. Once the target temperature is reached, the buzzer sounds a prompt tone, and the display enters the keep warm stage. The display shows a page prompting the user to open the door and place the food.
4. If there is no operation within 20 minutes, the operation ends, the buzzer sounds, and the display returns to standby.
5. Opening the door during the keep warm stage pauses keep warm. The display shows the menu countdown time.
6. After closing the door, press the knob to start work. The display shows the countdown time.
7. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.

5. **“BROWNIE” menu:** Operation is the same as the “CAKE” menu.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Cookies	300g	SpeedHeat Tray	Level 3	Initial Temp: Room Temp.
2	Cake	500g	SpeedHeat Tray	Level 3	Initial Temp: Room Temp.
3	Brownies	500g	SpeedHeat Tray	Level 3	Initial Temp: Room Temp.

Toast menus

1. On the primary menu page, select “TOAST” and press the knob to enter its secondary menu selection page.
2. Turn the knob to select a secondary menu. “TOAST” has 2 menus (see table below).
3. For “TOAST” menu, just turn the knob to “TOAST” page.
4. For “BAGEL” menu, turn the knob to “BAGEL” page, press the knob to enter the portion selection page. Turn the knob to select portion size.
5. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
6. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.

No.	Menu Name	Portion	Accessory / Cookware	Position	Remarks
1	Toast	4 slices	Air fry basket + SpeedHeat Tray	Level 3	Initial Temp: Room Temp.
2	Bagel	1 pc 2 pcs	SpeedHeat Tray	Level 3	Initial Temp: - 18°C 1 pc Bagel split into 2 halves

Dehydration

1. On the primary menu page, select "DEHYDRATION" and press the knob to enter the temperature selection page (default temperature 60°C, cooking time 2 hours).
2. Turn the knob to select temperature (range 40~90°C). Press the knob to enter the cooking time setting page.
3. Turn the knob to set cooking time. Press the knob to confirm.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the display enters the end state.

Slow Cook

1. On the primary menu page, select "SLOW COOK" and press the knob to enter the temperature selection page (default temperature 90°C, cooking time 2 hours).
2. Turn the knob to select temperature (options 90°C, 110°C). Press the knob to enter the cooking time setting page.
3. Turn the knob to set cooking time (range 0~12h). Press the knob to confirm.
4. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
5. After the countdown ends, the display enters the end state.

Combi

The Combi function is suitable for cooking two dishes at the same time.

The SpeedHeat Tray must be used.

1. Place the SpeedHeat Tray on shelf level 2 of oven.
2. Place the food to be air fried/baked/roasted on top of the SpeedHeat Tray.
3. Place the food to be microwave-heated underneath the SpeedHeat Tray.
4. On the primary menu page, select "Combi" and press the knob to enter the temperature selection page (default 180°C, microwave 100%, cooking time 5:00).
5. Turn the knob to select temperature (range 100~230°C). Press the knob to confirm.
6. Turn the knob to select cooking time for the upper dish (range 0~95'59"). Press the knob to confirm.
7. Turn the knob to select microwave power (range 10%~100%, 10 steps). Press the knob to confirm.
8. Turn the knob to select microwave cooking time for the lower dish (range 0~95'59"). Press the knob to confirm.
9. With the door closed, press the knob to start the menu. The display shows the menu working page, countdown timer, and time progress bar.
10. After the countdown ends, the display enters the end state.

NOTE:

1. **This function is a manual setting menu. Users must adjust the cooking temperature, microwave power level, and cooking time according to the specific requirements of different food.**
2. **The container used for the food placed in the lower for microwave cooking must be microwave-safe.**

Steam Clean

1. On the primary menu page, select "STEAM CLEAN".
2. Use a microwave-safe container (with a diameter of no less than 15cm), fill it with 200ml of water, and place it in the center of the microwave cavity.
3. With the door closed, press the knob to start the cleaning cycle.
4. The total cleaning time is 5 minutes.
5. After the countdown ends, the buzzer sounds a completion prompt tone, and the display enters the end state.
6. The user should clean the steam with a soft dry cloth.

Setting

1. On the primary menu page, select "SETTING". Press the knob to enter the Setting secondary menu page. Select the "LANGUAGE" option.
2. Turn the knob to select a secondary menu. Setting has 7 menus: language, temperature unit, time, time format, mute setting, ECO setting, information.
- 3. Language:**
 1. Turn to select "LANGUAGE" and press the knob to enter the Language selection page.
 2. Turn to select the desired language. Press the knob to confirm and return to the "SETTING" secondary menu page.
 3. On the Language selection page, press "BACK" to return to the previous level; press "STOP" to return to standby.

NOTE: For Language options, refer to the table below.

العربية	English	Italiano	Srpski
Български	Français	Polski	Slovenščina
Hrvatski	Deutsch	Română	Español
Čeština	Magyar	Русский	Svenska

4. Temperature unit

1. Turn to select "TEMPERATURE UNIT" and press the knob to enter the selection page.
2. Turn to select the temperature unit (options: °C and °F).
3. Press the knob to confirm and return to the "SETTING" secondary menu page.
4. On the Temperature unit page, press "BACK" to return to the previous level; press "STOP" to return to standby.

5. Time:

Turn to select "TIME", press the knob to enter the clock setting page (default is current time).

6. Time format:

1. Turn to select "TIME FORMAT", press the knob to enter the time format selection page. Turn the knob to select 12H or 24H format.
2. On the Time format page, press "BACK" to return to the previous level; press "STOP" to return to standby.

1. Mute:

1. Turn to select "MUTE", press the knob to enter the "MUTE" selection page.
2. Turn to select "OFF" or "ON". Press the knob to confirm.
3. On the "MUTE" page, press "BACK" to return to the previous level; press "STOP" to return to standby.

NOTE: "MUTE" off: Buzzer sounds. "MUTE" ON: Buzzer is silent.

2. ECO:

1. Turn to select "ECO", press the knob to enter the ECO selection page.
2. Turn to select "OFF" or "ON". Press the knob to confirm.
3. On the ECO page, press "BACK" to return to the previous level; press "STOP" to return to standby.

NOTE:

ECO ON: Enables ECO power-saving mode. ECO OFF: Cannot enter power-saving mode.

3. Appliance Information:

1. Turn to select "APPLIANCE INFORMATION", press the knob. The display shows the appliance information.
2. On the information page, press "BACK" to return to the previous level; press "STOP" to return to standby.

Child-Lock

1. Locking: In standby mode, press and hold the "STOP" key for 3 seconds. The buzzer sounds, entering child lock state. The screen displays the child lock activation page for 3 seconds.
2. In child lock, the "STOP" key indicator is bright, other key lights are dim, and the screen shows the current time.
3. In child lock, pressing any key (except the unlock key) causes the buzzer to sound a lock tone, and the screen displays the child lock warning page for 3 seconds. Turning the knob displays the child lock warning page for 3 seconds.
4. Unlocking: In child lock state, press and hold the "STOP" key for 3 seconds. The buzzer sounds, entering standby mode, and the child lock is deactivated.

Pause, Restart and Cancel

1. During operation, opening the door or pressing the "STOP" key enters pause mode. The display countdown stops, and the appliance stops working. The "STOP" key indicator is bright; other key lights are dim.
2. In pause mode, close the door and press the knob to resume work. The display shows the remaining time.
3. In pause mode, press the "STOP" key to cancel the operation and return to standby.

NOTE:

In pause mode, closing the door alone does not restart work; the knob must be pressed.

Oven Light Protection

1. With the door open, the oven light is on. If there is no operation for 10 minutes, the oven light turns off.
2. Any key press or knob rotation turns the oven light back on, and the 10-minute timer resets.

TROUBLESHOOTING

Error code	Probable Cause	Probable Cause
E1	Sensor short circuit Sensor open circuit	1. Check if the temperature of the product is too high or too low. 2. Turn off the power and turn it on again after 1 minute to check if the error code is still displayed. 3. Pull out the power plug, open the product, check if the wiring is good, and reconnect it. 4. Search for after-sales service, replace sensors or power boards.
E2	Abnormal operation of hot air motor	1. Press the cancel button and it will no longer display and return to standby mode. 2. Automatically return to standby mode after 2. 30 seconds. 3. If E2 is still displayed after repeated restarts, it is necessary to seek after-sales service

CARE AND MAINTENANCE

Cleaning the interior of the appliance

1. Periodically wipe the interior of the appliance with a solution of baking soda and water to keep it clean.
2. Use a foamy cloth to remove greasy splatters and then wipe with a damp cloth. Do not use sharp cleaning tools (such as scouring pads or spatulas) to clean the appliance.
3. After closing the door, use a soft cloth dipped in mild, non-abrasive soap or detergent to clean the junction between the door and the appliance. Then, wipe with a damp cloth.
4. To remove stubborn stains, mix 1 cup of water with 2 tablespoons of lemon juice or baking soda, pour it into a cup, place it in the appliance, and heat it until it boils. Let it stand inside the cavity for 5 minutes to allow the softened cooking residue to evaporate. Then, use a clean paper towel, a damp clean cloth, or a damp microfiber cloth to wipe the inside of the cavity to remove softened cooking residue.

Cleaning the exterior of the appliance

1. Keep the seal between the door and the appliance clean at all times.
2. Use a soft cloth with soapy water to clean the outer shell of the product and wipe it clean with a soft dry cloth, avoiding water from entering the cavity. Do not use cleaning sprays, excessive cleaning agents, water, abrasive tools, or sharp objects, as these may damage the appliance. Note that certain tissues may also scratch the control panel, so use caution.

Cleaning accessories

1. After the appliance has cooled down, wash the accessories by hand in hot soapy water, use a nylon scrubber or nylon brush, then rinse thoroughly.
2. The accessories could be placed in a dishwasher for cleaning as well.

CAUTIONS



Please read the manual before using the Speed Oven.



Avoid touching the surface and inside the Speed Oven when used. It can be hot.



Too much oil in the Speed Oven can be a fire hazard.



Hot air will emerge from air outlet. Keep at a safe distance.



Do not cover the air outlet when in use.



Because of hot air from air outlet, please place the oven 10 cm away from the wall.

SECURITY WARNING



Keep the plug clean and undamaged.



Place the Speed Oven at least 10 cm from the wall or other flammable materials.



Avoid electric shock. Don't plug or unplug with wet hands.



Don't use the Speed Oven for other than its intended use.



Keep away from flammable materials.



Keep away from children.



Place Speed Oven on a heat-resistant and even surface.



Household use only.

Hisense

WISHES YOU A LOT OF PLEASURE IN USING YOUR APPLIANCE.

We reserve the right to make modifications.