 


ProBreeze®

Instruction Manual

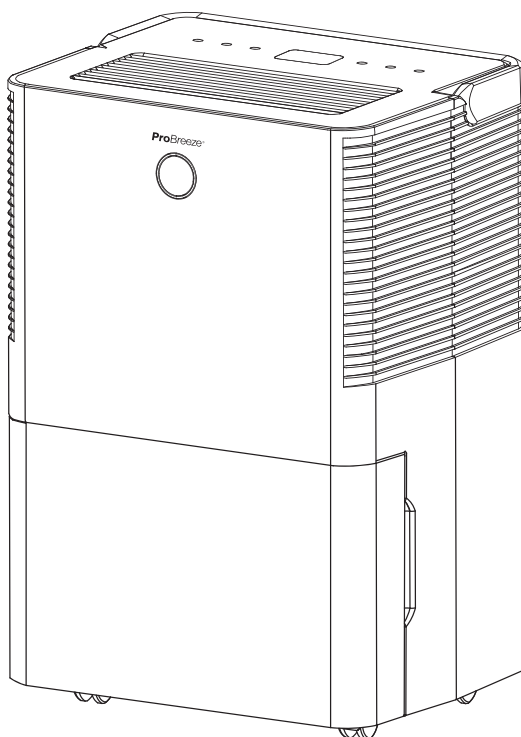

Model PB-D-32W-W
40L Smart Compressor Dehumidifier

IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE

CONTENTS

EN	Safety Instructions.....	Page 3
	Specific Information Regarding R290 Refrigerant Gas.....	Page 6
	Symbols Explained	Page 7
	Specification	Page 7
	Parts	Page 8
	Positioning Your Unit.....	Page 8
	Operating Instructions.....	Page 9
	Continuous Drainage	Page 12
	Pro Breeze App Setup	Page 12
	Error Codes.....	Page 13
	Cleaning and Storage.....	Page 14
	Declaration of Conformity.....	Page 15
	PSTI Statement of Compliance	Page 15
	Recycling and Disposal	Page 16

ProBreeze®

**40L SMART COMPRESSOR
DEHUMIDIFIER
MODEL PB-D-32W-W**

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual before first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

⚠ WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND EMPTY THE WATER TANK BEFORE HANDLING, CLEANING, OR SERVICING THE APPLIANCE.

- Use this dehumidifier only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Always unplug the dehumidifier when not in use.
- Keep the dehumidifier out of reach of children and pets.
- Do not leave children alone or unattended in the area where the dehumidifier is in use.
- Children shall not play with the dehumidifier.
- Cleaning and user maintenance shall not be made by children without supervision.
- Dispose of water held by the dehumidifier. This water is not drinkable.
- This dehumidifier can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Never leave the dehumidifier unattended while in use. Always turn the dehumidifier off and disconnect it from the power supply when not in use.
- Never place anything on top of the dehumidifier.
- Ensure that the mains supply (including voltage, frequency and power) complies with the rating label of the dehumidifier.
- Do not operate the dehumidifier with wet hands.
- Do not use this dehumidifier near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the dehumidifier where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the dehumidifier, as this could create a fire and/or electrical hazard.
- This dehumidifier is intended for indoor household use and similar applications. Do not use outdoors.
- The mains cable should not hang down from the surface on which the dehumidifier is placed in order to prevent the dehumidifier from being pulled down.
- To avoid a circuit overload when using this dehumidifier, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the dehumidifier directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this dehumidifier with an external programmer, timer switch or any other device which would switch the dehumidifier on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the dehumidifier by the power cord.
- Do not kink or wrap the power cord and plug around the dehumidifier, as this may cause the insulation to weaken or split, particularly where it enters the dehumidifier.
- Do not operate the dehumidifier with any safety guards removed.
- Do not operate the appliance if there are signs of

damage to the appliance, power cord, or any of the accessories supplied.

- Do not attempt to repair or adjust any electrical or mechanical elements in the dehumidifier. Doing so may be unsafe and will void your warranty.
- The appliance shall be installed in accordance with national wiring regulations.
- Do not cover the dehumidifier whilst in use.
- When moving the dehumidifier, ensure it is kept in an upright position.
- The dehumidifier must have a minimum 50 cm clearance around all sides.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- Place the dehumidifier on a flat, stable and dry surface and always keep the appliance in an upright position. Operating the appliance in any other position could cause a hazard.
- There may be a trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not place the dehumidifier against a wall or other appliances.
- Do not cover, obstruct or push objects into the vents and opening of the dehumidifier as this may cause an electric shock, fire or damage the dehumidifier.
- Do not operate the dehumidifier without the filter.
- Do not use mechanical devices to accelerate the appliances defrosting process.
- Do not place the continuous drainage hose outside when the temperature falls below 1°C.
- Do not use the dehumidifier near petrol, paints, flammable gases, ovens, or other heating sources.
- Do not operate the dehumidifier with the water tank removed.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the dehumidifier.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Never insert fingers or metal objects into the vents and openings of the appliance.
- The unit's circuit board (PCB) is designed with a fuse to provide overcurrent protection. The specifications of the fuse are printed on the circuit board.
- Do not expose the appliance to direct sunlight, heat sources or extreme cold.
- Do not cover the appliance or restrict the air flow of the inlet or exhaust grills whilst in use.

SPECIFIC INFORMATION REGARDING R290 REFRIGERANT GAS



⚠ WARNING: THE DEHUMIDIFIER MUST BE INSTALLED, OPERATED AND STORED IN A ROOM WITH A FLOOR AREA LARGER THAN 5 M².

- This appliance contains 0.1 kg (100 g) of R290 refrigerant gas.
- R290 is a refrigerant gas that complies with the European directive on the environment.
- Do not puncture any part of the refrigerant circuit.
- Be aware that R290 refrigerant is odourless and does not have the odour normally associated with natural gas and propane tanks.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The dehumidifier must be placed in an area without any

continuous sources of ignition such as open flames, gas, or electrical appliances in operation.

- Do not puncture and do not burn the refrigerant circuit.
- If the appliance is installed, operated or stored in a nonventilated area, the room must be designed to prevent the accumulation of refrigerant leaks resulting in a risk of fire or explosion due to ignition of the refrigerant caused by electric heaters, stoves, or other sources of ignition.
- The appliance must be stored in such a way as to prevent mechanical failure.
- Individuals who operate or work on the refrigerant circuit must have the appropriate certification issued by an accredited organisation that ensures competence in handling refrigerants according to a specific evaluation recognised by associations in the industry.
- Maintenance and repairs that require the assistance of other qualified personnel must be performed under the supervision of an individual specified in the use of flammable refrigerants.
- Do not install in a cupboard, recess, or other confined unventilated space.


SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.

SPECIFICATION

Model:	PB-D-32W-W-UK	Voltage:	220-240 V~
Frequency:	50 Hz	Max. Rated Input Power:	610 W
Product Dimensions:	355 x 275 x 522 mm	Net Weight:	15.5 kg
Frequency Band(s):	2400-2483.5 MHz	Maximum RF Power:	18.2 dBm

 PARTS

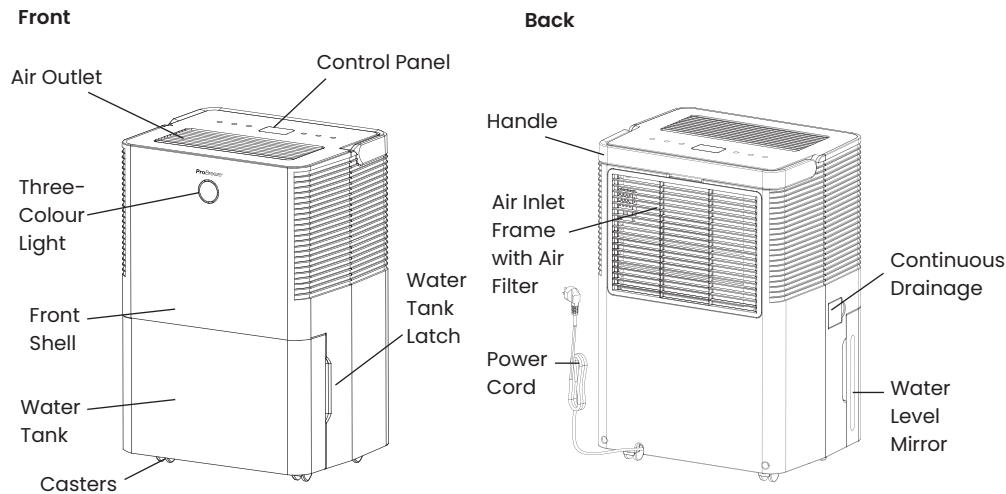


If you find you're missing any parts from your order, please contact our customer care team by emailing help@probreeze.com for fast and friendly help.

These images are for reference only, please refer to your product.


POSITIONING YOUR UNIT

 - For optimal performance, place the unit in an enclosed space and close all doors, windows and all outside openings.
- This unit is designed to operate in temperatures between 5°C and 35°C.
- Place the unit in an area where the temperature will not fall below 5°C, temperatures lower than this may cause the coils to freeze. This would lead to a reduction in performance.
- Place the unit on a smooth, level surface, strong enough to support the unit with a full water tank.
- Allow at least 50 cm of space behind the air outlet (at the top of the unit) and 20 cm of space on all other sides of the unit for good air circulation.
- If placed near an enclosed storage area (wardrobe, cupboard etc), ensure there is adequate circulation of air.
- There are four wheels attached to the unit for ease of transportation. Do not force the wheels to move over carpet or other uneven surfaces.

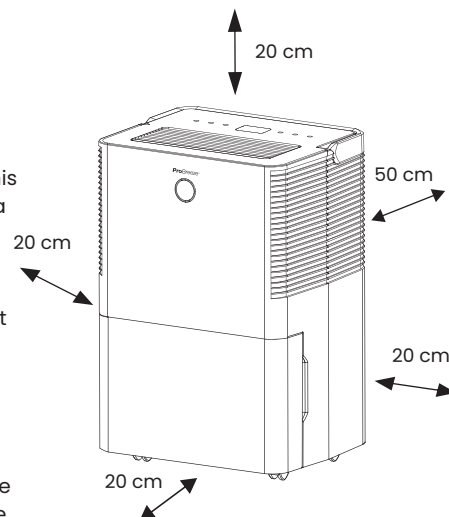

OPERATING INSTRUCTIONS

 1. Timer Indicator
2. Auto Mode Indicator
3. Laundry Mode Indicator
4. Night Mode Indicator
5. On/Off Indicator
6. Low Fan Speed Indicator
7. High Fan Speed Indicator
8. Wi-Fi Indicator
9. Target/Current Humidity
10. Tank Full Indicator
11. Lock Indicator

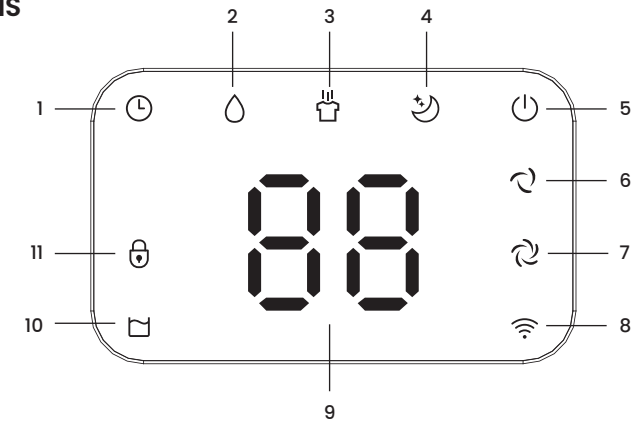

Quick Start Guide

Follow these 3 steps to get your Pro Breeze Dehumidifier up and running:

 
- 1. Turn Your Unit On:** Plug in your unit and press the Power Button to activate the dehumidifier. It will start in Auto Mode with high speed and a default humidity level of 50%.
- 2. Select A Mode:** Press the mode button to switch between Auto and Laundry Mode. Hold down the mode button to turn on or turn off Night Mode:
 - Auto Mode: This mode lowers your environment's humidity to your set level; the unit will turn off when this level is reached and reactivate if the room's humidity exceeds the set level.
 - Laundry Mode: Use this mode for continuous operation, ideal for efficient clothes drying.
 - Night Mode: Similar to Auto Mode, with dimmed lights and adjustable wind speed.
- 3. Choose Your Ideal Humidity:** In auto or Night Mode, use the humidity button to set your desired humidity level within the range of 30-80%. The chosen level becomes active after 5 seconds. We recommend a humidity of between 40% - 50% for a healthy home.

Your dehumidifier is now working to achieve your ideal environment! For more details, refer to the table below for advanced settings, and features.

Automatic Temperature Protection and Defrosting

The dehumidifier automatically stops operating when the ambient temperature falls outside its working range. When the ambient temperature is between 5°C and 16°C, the unit will periodically enter a defrosting mode to maintain optimal performance. During this process, the compressor temporarily shuts off while the fan continues to run.

Control Panel

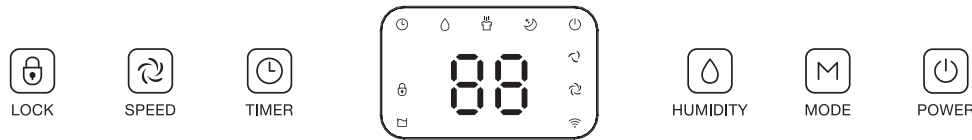

 POWER	Power Button	Turning On/Off: Plug the unit into power outlet and press the power button to turn on the appliance. In the initial start up the unit will default to Auto Mode, with high wind speed and humidity of 50%. Then the appliance will start up with the previous settings. Press the power button again to turn the unit off. The compressor will stop immediately, but the fan will run for 30 seconds and then stop.
 SPEED	Fan Speed Button – Change the Fan Speed	Press the fan speed button to switch between high and low fan speeds. The corresponding indicator will light up.
 TIMER	Timer Button – Set a Turn On/Off Timer	Press the timer button to activate the timer and press the humidity button to cycle between 1–24 hours, in increments of 1 hour. The hours set will be displayed on the LED display. When the LED display reads '00', the timer is turned off and the indicator light will turn off. (See the setting a timer section below for further instructions). Press and hold this button for 3 seconds to enter Wi-Fi pairing mode (see the Pro Breeze App Setup section for full instruction).
 HUMIDITY	Humidity Button – Set Your Humidity	In Auto or Night Mode, press the humidity button to select your preferred humidity level (between 30% and 80%), which will set after 5 seconds. Long press the humidity button to briefly view the room temperature; the display returns to showing the current humidity after 5 seconds.
 LOCK	Lock Button – Child Lock	Long press the lock button to activate child lock. All buttons on the appliance will be locked and the child lock indicator will be on. To remove child lock, press the lock button again. The indicator will turn off.

 MODE	Mode Button – Choose Between Auto, Laundry, and Night Mode	Press the mode button to switch between Auto and Laundry Mode. Long press mode button to turn on or turn off Night Mode:
		 Auto Mode: In this mode, the dehumidifier works to lower your environment's humidity to your set humidity (see humidity button section above). The dehumidifier will automatically turn off if the environment's humidity is lower than the set humidity. When the environment's humidity exceeds the set humidity the fan will automatically turn on and 3 seconds later the compressor will activate.
		 Laundry Mode: In this mode, the dehumidifier operates continuously to enhance clothes drying efficiency. The fan is automatically set to high fan speed for better air circulation and faster and more effective drying. This mode is ideal for drying laundry and combatting mould and damp with the continuous operation.  Night Mode: Long press the mode button to activate Night Mode. Operates the same as Auto Mode, fan speed is automatically low, and all lights will turn off after 10 seconds for a restful night without a dip in dehumidifying performance.
	Colour Display	The light will display different colours according to the ambient humidity of the environment: Blue – Below 45% Green – Between 45% and 65% Red – Above 65% Note: The light will also be red if any of the error codes are displayed on the LED display. See the 'error codes' section for more information.

Setting a Timer

Setting a Turn-On Timer: When the dehumidifier is off, press the timer button, then use the humidity button to set the number of hours before you want it to turn on. The timer light will illuminate when a timer is set.

Setting a Turn-Off Timer: When the dehumidifier is on, press the timer button, then use the humidity button to set the number of hours before you want it to turn off. The timer light will illuminate when a timer is set.

CONTINUOUS DRAINAGE

To Connect to the Drain Hose:

1. Open the continuous drainage cover.
2. Insert one end of the hose into the continuous drainage hole of the unit. Ensure it is connected securely.
3. Place the other end of the hose into a bucket or a drain.
4. Ensure the hose is not bent or blocked.

Note: Gravity will pull the water out of the unit into your chosen drainage area. Ensure the chosen area is not higher than the unit.

Emptying the Water Tank:

- When the water tank is full, the unit will beep 5 times, the tank full indicator will turn on and the display will show FL.
- Press the power button to turn off the unit.
- Slide the water tank out of the body of the dehumidifier.
- Empty the water tank into a sink/drain and wipe the inside and outside clean.
- Replace the empty tank in the unit.
- Press the power button to resume operating.
- If the Water Full light does not turn off, check that the water tank is correctly in place.

PRO BREEZE APP SETUP

Our **Pro Breeze app** is a centralized app for smart device management. Control your unit and set up schedules to turn your unit on and off from your smart device.

Note: Ensure your Wi-Fi network is set to **2.4 GHz** for successful pairing.

Pair Your Device in 4 Simple Steps:

1. **Register:** Download the **Pro Breeze app** from the Google Play or Apple App Store by scanning the QR code. Sign in or register for an account.
2. **Prepare your unit:** Once you're signed in, hold down the **Timer button** on the control panel for 3 seconds to turn on the unit's Wi-Fi pairing mode.
3. **Prepare the app:** Open the **Pro Breeze app**, press the "+" in the top right corner, then press **"Add Device"**.
4. **Pair your unit:** The app will scan for devices. Once your unit shows up, press **"Add"**. Enter the password for the Wi-Fi network your phone is connected to.

Your unit is now connected to the **Pro Breeze app** and ready for remote control and scheduling.

Voice Control Connection

Before You Start

Make sure:

- The Pro Breeze app is downloaded and your appliance is paired.
- The Amazon Alexa app or Google Home app is downloaded.
- Your Echo or Google Home device is already set up with its app.

Set-Up with Amazon Echo (Alexa)

Link Pro Breeze to Alexa:

- Open the Pro Breeze app.
- Open the Me tab and go to Service Center.
- Tap the Alexa icon, then tap "Link to Amazon Alexa".
- The system will redirect you to the Alexa app. Tap Link and follow the on-screen instructions to link your Pro Breeze account.
- If the device is already paired with the Pro Breeze app, it will automatically connect to Alexa.

Set-Up with Google Home

 
Link Pro Breeze to Google Home:

- Open the Pro Breeze app.
- Open the Me tab and go to Service Center.
- Tap the Google Assistant icon, then tap "Link to Google".
- The system will redirect you to the Google Home app. Tap Continue and follow the on-screen instructions to link your Pro Breeze account.
- If the device is already paired with the Pro Breeze app, it will automatically connect to Google Home.

Scan the QR Code
to Download the App



For a voice control
tutorial scan here

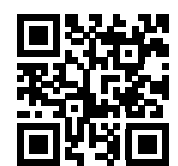

ERROR CODES

ERROR CODE	CAUSE	SOLUTION
E1	The defrosting sensor is faulty	Contact Pro Breeze Customer Care by sending an email to help@probreeze.com or via our website www.probreeze.com
E2	Ambient temperature and humidity sensor problem	
FL	Water full protection	Empty the water in the tank in time

CLEANING AND STORAGE

⚠ WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

 
⚠ CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

⚠ CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.

- Do not attempt to clean the dehumidifier in any other way than that detailed by the manufacturer.
- Never leave water in the water tank when the appliance is not in use.

Cleaning the body of the dehumidifier:

- Turn the dehumidifier off and unplug the power cord.
- Clean the exterior of the dehumidifier by wiping it with a soft, damp cloth.
- Dry the dehumidifier with a soft clean cloth.

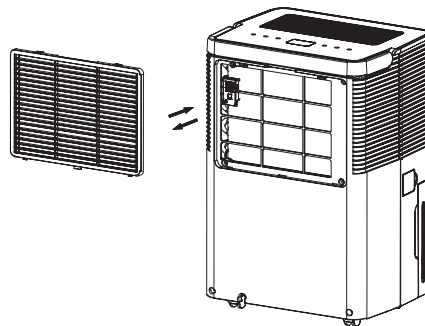

Cleaning the air filter:

Note: As the filter gets clogged the dehumidifying capacity of the unit is lowered. It is important to clean the rear air filter every 2 weeks.

- Remove the air filter by gently pulling on the handle at the top of the filter cover.
- To extend the lifespan of the filter, use a vacuum cleaner, using the brush attachment to remove dust from the surface of the filter.
- Return the clean filter to the dehumidifier.

Cleaning the water tank:

- Remove and empty the water tank as per the instructions in the “Emptying the water tank” section.
- Remove the water tank’s lid by removing the handle and lifting the water tank’s lid upwards.
- Clean the water tank with warm tap water and mild detergent (e.g. washing up liquid). **Note:** Do not use boiling water to clean the water tank.
- Ensure all scale or deposits inside the water tank are removed.
- Wipe all surfaces dry before placing the water tank’s lid handle.
- Then return the water tank to the unit.

Storage:

- To store your product, we recommend using the original or a similar-sized box. Store in a safe, clean and dry place, away from direct sunlight and out of reach of children when not in use.
- Always empty the water tank, and clean and dry the appliance when not in use to prevent mould.
- Empty and clean the dehumidifier before storage. Clean the appliance before the next use post-storage.

DECLARATION OF CONFORMITY

Hereby, One Retail Group Limited declares that the radio equipment type PB-D-32W-W-UK is in compliance with the Radio Equipment Regulations 2017. The full text of the UK Declaration of Conformity is available at the following internet address:
<https://probreeze.com/pages/ec-declaration-of-conformity/>

PSTI STATEMENT OF COMPLIANCE

Hereby, One Retail Group Limited declares that PB-D-32W-W-UK is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The full text of the UK PSTI Statement of Compliance is available at the following internet address: <https://probreeze.com/pages/psti-compliance/>

RECYCLING AND DISPOSAL

Waste electrical and electronic equipment (WEEE), and packaging must not be disposed of with general household waste. Proper collection and recycling help prevent potential harm to the environment and human health and support the conservation of natural resources. Most products containing a plug, or cable can be recycled. Please contact your local authority, recycling centre, or the retailer where the product was purchased for details on available collection and recycling schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product or packaging indicates that electrical and electronic equipment (EEE), as covered by Directive 2012/19/EU, must not be disposed of with general household waste. Instead, it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment.
	The Mobius Loop	This symbol indicates that the product or its packaging is recyclable. Please dispose of it responsibly through appropriate recycling facilities.

Take-Back Scheme

Waste electrical and electronic equipment (WEEE) can be returned for responsible recycling and disposal when you purchase a new equivalent product, on a like-for-like basis, in accordance with the applicable UK WEEE Regulations and EU Directive 2012/19/EU. Products returned under this scheme are treated and recycled to minimise environmental impact and to recover valuable materials.

For more information on how to recycle this product, please visit www.probreeze.com or contact your local retailer or municipal collection service for details of available take-back and recycling facilities. Before returning or disposing of waste electrical products, the end-user is responsible for removing and separating any batteries or light bulbs. Waste batteries can also be deposited

in collection bins available in most supermarkets and at local household waste recycling centres.

Personal Data Protection

Electrical and electronic products (WEEE) may contain personal user data, depending on the type of product. This may include app-linked products that connect to Wi-Fi. The end-user is responsible for deleting the data on the waste electrical and electronic products prior to disposal.



www.probreeze.com

One Retail Group, Ryland House,
24A Ryland Road, Kentish Town, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2025