 


schallen.

Handheld Ice Pad Fan

INSTRUCTION MANUAL

SKU: SCH1338-WH / SCH1340-GRY

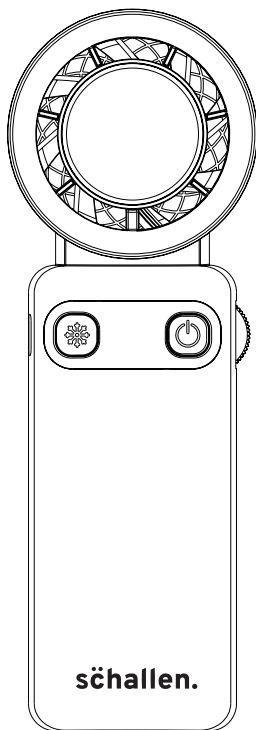

Please retain for
future reference

CE UK CA FC PS E RoHS 

Made in China

Thank you for choosing our Handheld Ice Pad Fan. This compact device combines powerful airflow with advanced cooling technology to keep you comfortable wherever you are. For best performance and safe operation, please read this manual carefully before use and retain it for future reference.


What's in the Box

1 × Handheld Ice Pad Fan

1 × USB Charging Cable

1 × User Manual

Model: FS28	Cooling gear: 1 gear
Input: 5V  2A	Operation time: About 1.5-11h
Max Power: 7.5W	Charging Time: About 4h
Battery capacity: 4000mAh	Product size: 160 x 55 x 54 mm
Fan gear: 100 settings	Product weight: 218g

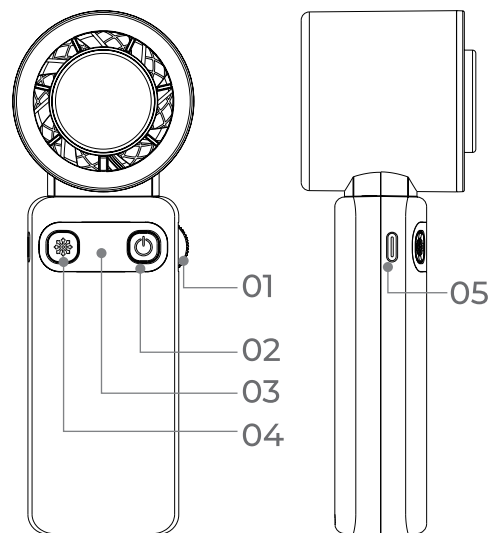 

Controls & Features:

01- Gear Control Button

02 - Power / Fan Button

03 - LED Display

04 - Cooling Button

05 - USB Charging Port

OPERATING INSTRUCTIONS

Power & Fan Control

- Press  once to switch the device on. The LED display will show the current fan speed.
- Adjust fan speed using the control :
 - Scroll up to increase airflow
 - Scroll down to decrease airflow
- Press  again to switch the device off.

Cooling Function

- While the device is switched on, press the Cooling Button  to activate cooling mode. A snowflake icon will appear on the display.
- Press  again to turn the cooling function off.

ADDITIONAL FEATURES

Memory Function

- The device remembers the last fan speed used before switching off and will return to this setting when powered back on.

Auto Display Reset

- If no buttons are pressed for approximately 5 seconds, the display will automatically return to showing the battery level.

Battery Status

- When the battery level falls below 9%, the percentage on the display will flash.
- The device will automatically switch off when the battery reaches 0%.

Use While Charging

- The device can be used whilst charging; however, only the fan function is available. The cooling function cannot be used while charging.

Charging Display

- During charging, the display shows the battery level (1-100%).
- The percentage symbol (%) will flash while charging.
- When fully charged, the display will show 100% continuously.



SAFETY INSTRUCTIONS

- This product should not be used by children or individuals who are unfamiliar with these instructions without appropriate supervision.
- **Do not** insert fingers or any objects into the fan grille, rear cover, or moving blades.
- Keep hair, loose clothing, and fabrics away from the fan at all times to prevent entanglement or injury.
- This product contains a rechargeable battery.
- When disposing of the product, follow local regulations for electronic waste and battery recycling.

WARNING:

Failure to follow these instructions may result in injury, damage to the product, or reduced performance:

- **Do not** use this product in humid environments such as bathrooms, or expose it to water or other liquids. Doing so may cause malfunction or damage.
- **Do not** drop, knock, or repeatedly tap the product, as this may cause internal damage.
- **Do not** attempt to disassemble, modify, or repair the product yourself.
- **Do not** dispose of the product in fire, as this may result in explosion or injury.
- If the product becomes unusually hot, deformed, or behaves abnormally during charging, stop using it immediately and contact customer support.

MAINTENANCE & CARE

- Clean the fan using a dry, soft cloth.
- **Do not** use water, solvents, or cleaning sprays.
- Store in a cool, dry place when not in use.

Disposing of the Packaging

Please dispose of all packaging materials responsibly and in accordance with local recycling guidelines.

 
- Separate the materials by type.
- Place paperboard and cardboard in the paper recycling bin.
- Dispose of plastic materials in the appropriate recycling container.

Whenever possible, recycle the packaging to help protect the environment.



Meaning of crossed-out wheeled dustbin:

- Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities.
- Contact your local government for information regarding available collection systems.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and enter the food chain, damaging health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at no charge.

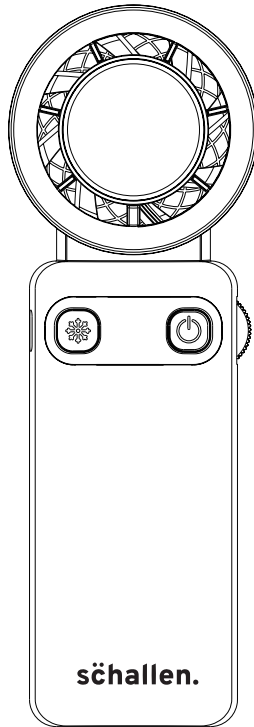

schallen.

Imported By:

NETAGON LTD

Unit 4, Chandlers Court, Picow Farm Road,
Runcorn, Cheshire, WA7 4UH