

schällen.

JUICER MACHINE

INSTRUCTION MANUAL

Model: SCH1336



Please retain for
future reference



LVD RoHS



Made in China

Thank you for choosing the **Schallen Juicer Machine**. We recommend that you spend some time reading these instructions in order to fully understand all the operational features it offers.



IMPORTANT SAFETY INFORMATION

General Safety

- Failure to follow these instructions may result in injury, electric shock, fire, or product damage.
- **Do not** use the appliance if any part is damaged or faulty.
- **Do not** attempt to disassemble, repair, or modify the appliance.
- Switch off and unplug before assembling, cleaning, or changing accessories.
- **Do not** move the appliance while in operation.
- Stop using immediately if you notice unusual noise, overheating, smoke, or burning smell.

Power Supply

- Use only with **220-240V~ 50Hz** mains supply.
- Insert the plug fully into the socket.
- Keep the plug clean and free from dust.
- **Do not** bend, pull, or place heavy objects on the power cord.
- Keep the cord away from heat sources.
- Unplug when not in use.
- If the power cord is damaged, it must be replaced by qualified personnel.

Use Environment

- Use on a flat, dry, stable surface.
- **Do not** use near water, steam, or in damp environments.
- Keep away from flammable substances.
- **Do not** expose to direct sunlight for extended periods.

Safe Operation

- Keep hands, hair, jewellery, and loose clothing away from the feed inlet.
- Only use the supplied pusher — never use fingers or utensils.
- **Do not** operate without all parts correctly assembled.
- **Do not** use for grinding grains or non-food items.
- **Do not** run the appliance empty.
- **Do not** operate continuously for more than 15 minutes; allow at least 5 minutes to cool.
- Children must not play with the appliance.
- To avoid hazards, **do not** connect the appliance to external timers or switching devices.


TECHNICAL SPECIFICATIONS

Rated voltage/frequency	220-240V/50Hz
Rated power	200W
Single running time	≤15mins
Product size	215x165x430mm
Product weight	3360g


PRODUCT COMPONENTS

Note: The illustrations in the user manual are for reference only.


Hopper Part

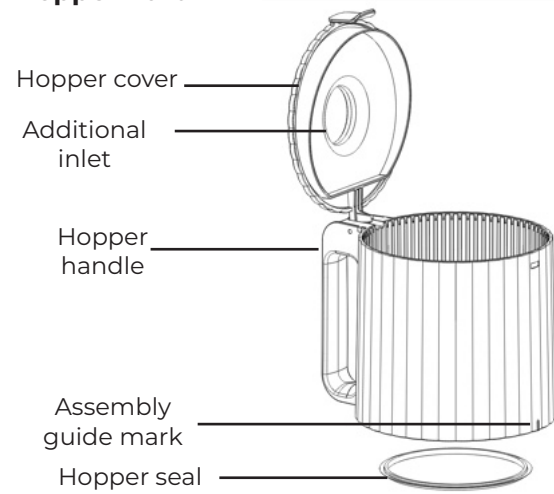


Chamber Part

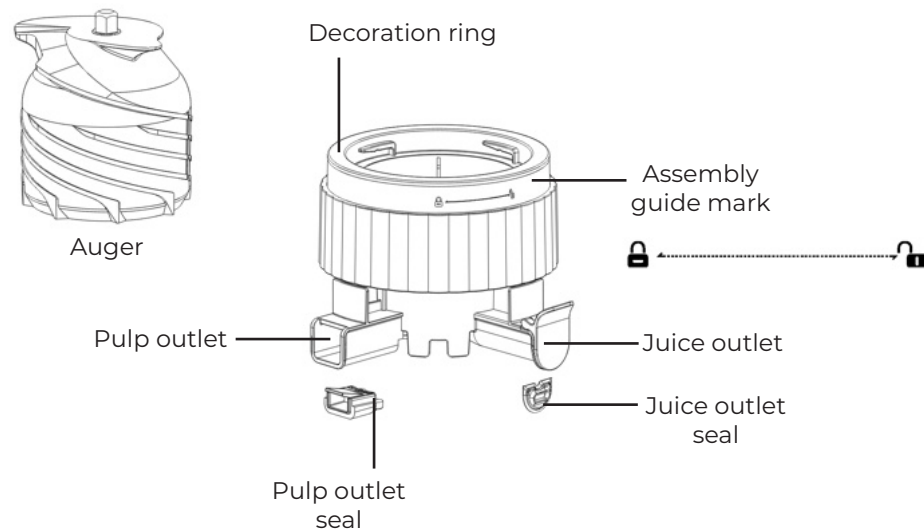


Body Part

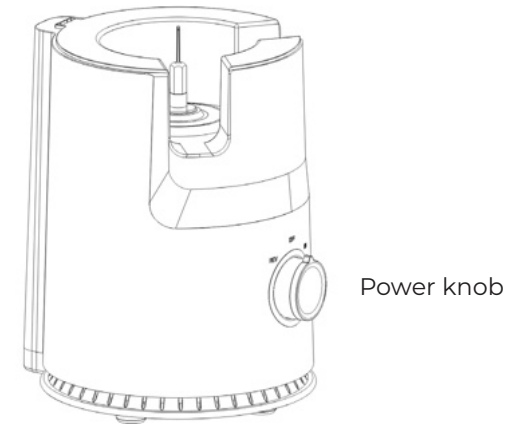

Accessory Part

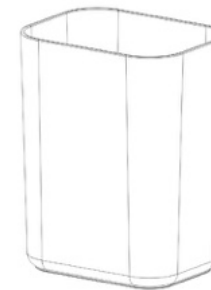

Pulp cup

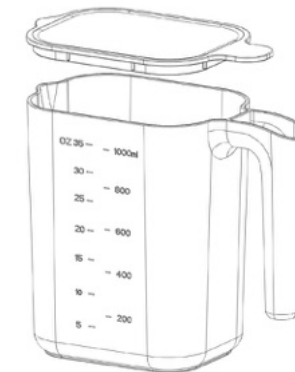

Juice cup




Pusher




Cleaning brush

ASSEMBLY


1. Insert the auger into the chamber and press down firmly.

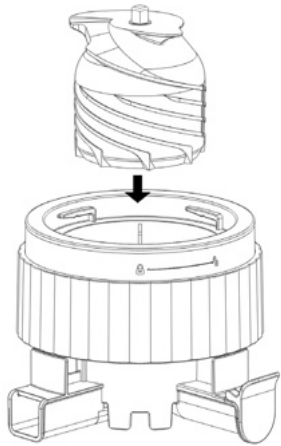


2. Align the hopper mark (H) with the chamber unlock mark (🔒) and rotate clockwise until locked.

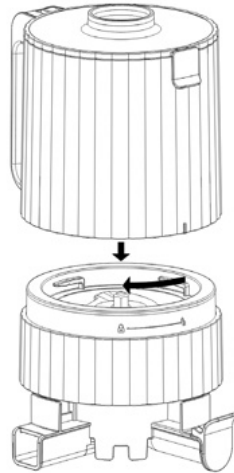

3. Place the assembled chamber onto the main body.

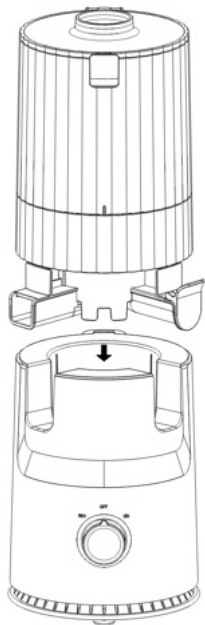


4. Position the juice cup and pulp cup under the respective outlets.

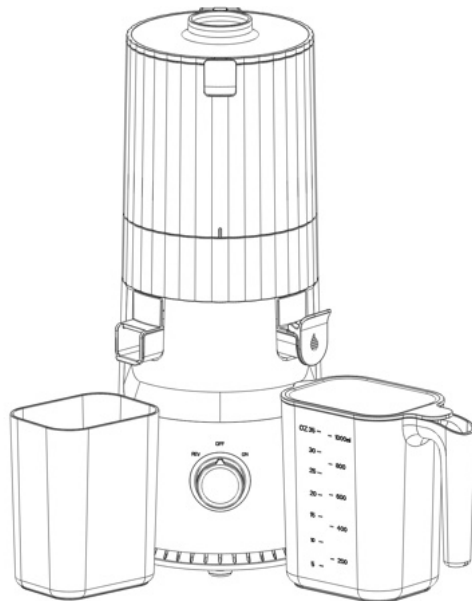

6

Ensure all parts are securely fitted before use.

CONTROLS

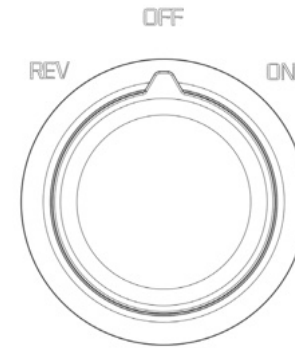


- ON — Start juicing
- OFF — Stop operation
- REV — Reverse rotation to clear blockages

BEFORE FIRST USE

- Wash all removable parts (except the main body) with warm water.
- Dry thoroughly before assembly.

BEFORE JUICING

- Plug the appliance into a household mains socket.
- Ensure any power cord tie or strap is removed and the cable is fully extended.
- Check that the control knob is set to **OFF** before switching on.
- Set the juice cap to the desired position. For normal operation, keep the juice cap **open** to allow juice to flow freely and ensure efficient extraction.

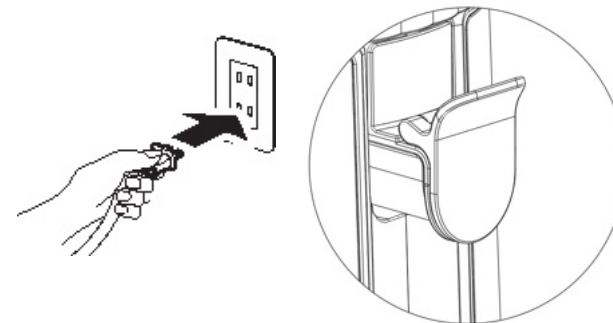

7


JUICING STEPS

1. Open the hopper cover and add the prepared ingredients.
2. Turn the control knob clockwise to the **ON** position to start juicing.
3. To add more ingredients during operation, use the additional inlet on the hopper cover. If you open the main cover, the machine will stop automatically.
4. Once all ingredients have passed through into the chamber, allow the juicer to run for approximately 1 minute to extract any remaining juice.
5. When juice and pulp are no longer being dispensed, turn the control knob counterclockwise to the **OFF** position to stop the appliance.

INGREDIENT PREPARATION GUIDELINES

- Remove hard seeds and pits.
- Peel thick skins (e.g. pineapple, citrus).
- Cut fibrous vegetables into small pieces.
- Mix soft fruits with harder produce for best results.
- Do not juice cooked foods, ice cubes, grains, coffee beans, seafood, or non-food items.

AFTER USE

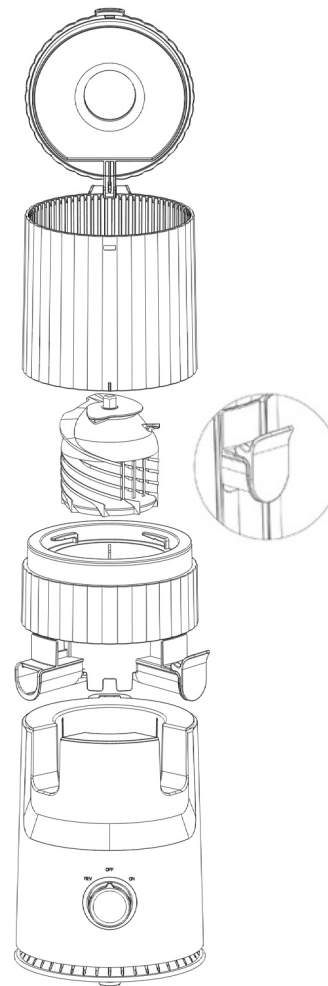

1. Turn the control knob counter clockwise to the **REV** position for 2–3 seconds to help release the auger and clear any remaining pulp.
2. Once the appliance has come to a complete stop, unplug it from the mains socket using dry hands.
3. Close the juice cap to prevent any remaining juice from dripping onto the appliance or work surface.
4. Open the hopper cover, then rotate the hopper counter clockwise until the indicator mark (I) aligns with the unlock symbol () on the chamber ring. Lift off and remove the hopper.
5. Remove the auger from the chamber, then lift the chamber off the main body.

CLEANING AND MAINTENANCE

Always unplug before cleaning.

- Wash removable parts under running water using the cleaning brush.
- **Do not** immerse the main body.
- **Do not** use abrasive cleaners or steel wool.
- **Do not** use dishwasher, dryer, microwave, or water above 80°C.
- Remove and clean seals to prevent residue build-up.
- Store in a dry, ventilated place.

TROUBLESHOOTING

Fault	Solution
Juicer does not start	Check power connection. / Ensure hopper is correctly closed. / Allow cooling if used over 15 minutes.
Stops during use	Ingredients may be too thick — use REV/ Check assembly.
Unusual noise	Normal during extraction unless excessive.
Juice leaking	Check seals are fitted correctly.

STORAGE

- Clean, dry, and store in a cool, dry place when not in use.

Disposing of the Packaging

Please dispose of all packaging materials responsibly and in accordance with local recycling guidelines.

- Separate the materials by type.
- Place paperboard and cardboard in the paper recycling bin.
- Dispose of plastic materials in the appropriate recycling container.

Whenever possible, recycle the packaging to help protect the environment.



Meaning of crossed-out wheeled dustbin:

- Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities.
- Contact your local government for information regarding available collection systems.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and enter the food chain, damaging health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal at no charge.



schallen.

Imported By:

NETAGON LTD

Unit 4, Chandlers Court, Picow Farm Road,
Runcorn, Cheshire, WA7 4UH