


ProBreeze[®]

Instruction Manual

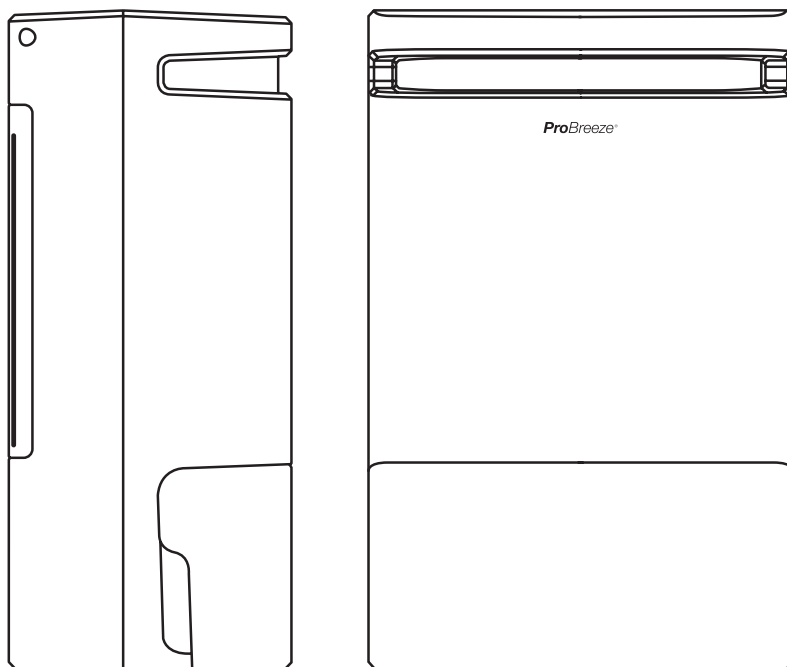

Model PB-10

10L Desiccant Dehumidifier

**IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE**

CONTENTS

EN	Safety Instructions.....	Page 3
	Symbols Explained	Page 6
	Specifications.....	Page 6
	Parts	Page 7
	Positioning Your Unit.....	Page 7
	Control Panel	Page 8
	Operating Instructions.....	Page 8
	Connecting the Water Hose	Page 9
	Removing and Emptying the Water Tank	Page 9
	Cleaning & Storage.....	Page 10
	Helpful Information	Page 11
	Recycling and Disposal	Page 12

ProBreeze®

**10L DESICCANT DEHUMIDIFIER
MODEL PB-10**

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

—

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

⚠ WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND EMPTY THE WATER TANK BEFORE HANDLING, CLEANING OR SERVICING THE APPLIANCE.

- Do not cover the appliance whilst in use.
- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always unplug the appliance when not in use.
- Do not expose the appliance to direct sunlight, heat sources or extreme cold.
- Keep the appliance out of reach of children and pets.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Dispose of water held by the appliance. This water is not drinkable.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- When moving the appliance, ensure it is kept in an upright position.
- The appliance must have a minimum 50cm clearance around all sides.
- Never leave the appliance unattended while in use. Always turn the appliance off and disconnect it from the power supply when not in use.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- Place the appliance on a flat, stable and dry surface and always keep the appliance in an upright position. Operating the appliance in any other position could cause a hazard.
- Never place anything on top of the appliance.
- Ensure that the mains supply (including voltage, frequency and power) complies with the rating label of the appliance.
- There may be a trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not place the appliance against a wall or other appliances.
- Do not cover the appliance or restrict the air flow of the inlet or exhaust grills whilst in use.
- Do not cover, obstruct or push objects into the vents and openings of the appliance as this may cause an electric shock, fire or damage the appliance.
- Do not operate the appliance with wet hands.
- Do not use this appliance near water or in the immediate

surroundings of a bath, shower or swimming pool. Never place the appliance where it could fall into a bathtub or any other water container.

- Do not allow water or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- Do not place the continuous drainage hose outside when the temperature falls below 1°C.
- This appliance is intended for indoor household use and similar applications. Do not use outdoors.
- Do not use the appliance near petrol, paints, flammable gases, ovens, or other heating sources.
- Ensure the mains cable does not hang over the surface edge on which the appliance is placed in order to prevent the appliance from being pulled down.
- To avoid a circuit overload when using this appliance, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry, or hang the appliance by the power cord.
- Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Do not operate the appliance with the water tank removed.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the appliance.
- Do not operate the appliance with any safety guards removed.

- Do not operate the appliance if there are signs of damage to the appliance, power cord, or any of the accessories supplied. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not operate the appliance if there are any signs of damage to the appliance or accessories supplied.
- Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.
- Never insert fingers or metal objects into the vents and openings of the appliance.
- Do not operate the appliance without the filter.


SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.

SPECIFICATIONS

- Model: PB-10-UK
 - Collection Capacity: Up to 10L a day at 20°C and 60% relative humidity
 - Size: 317 x 213 x 499mm
 - Voltage: 220-240V~
 - Frequency: 50Hz
- Power: 620W
 - Maximum Tank Capacity: 3L
 - Net Weight: 6.8kg
 - Operating Temperature Range: 1°C - 40°C
 - Gross Weight: 7.8kg


PARTS

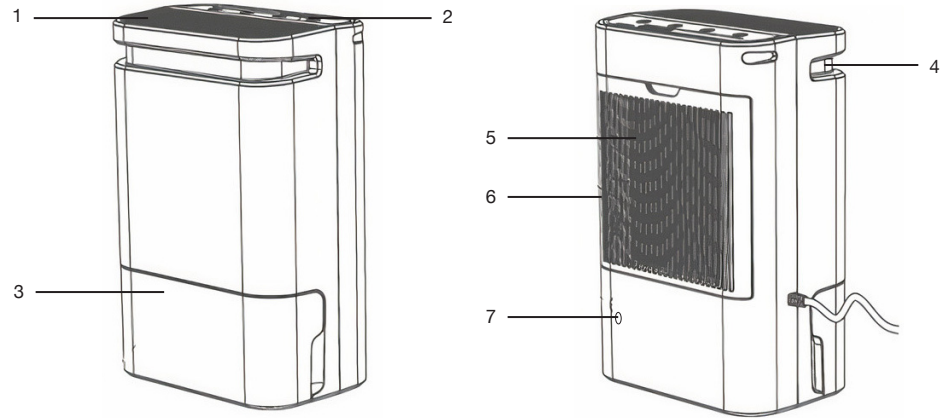


- | | |
|------------------|-------------------------|
| 1. Air Outlet | 5. Air Inlet |
| 2. Control Panel | 6. Filter |
| 3. Bucket | 7. Water Hose Connector |
| 4. Handle | |

POSITIONING YOUR UNIT

- Place your dehumidifier on a flat, stable, dry surface.
- Position it somewhere central and open like a landing or hallway, but not in front of a radiator or in direct sunlight.
- Ensure you leave a safe distance between your dehumidifier and any walls, furniture, or other appliances.

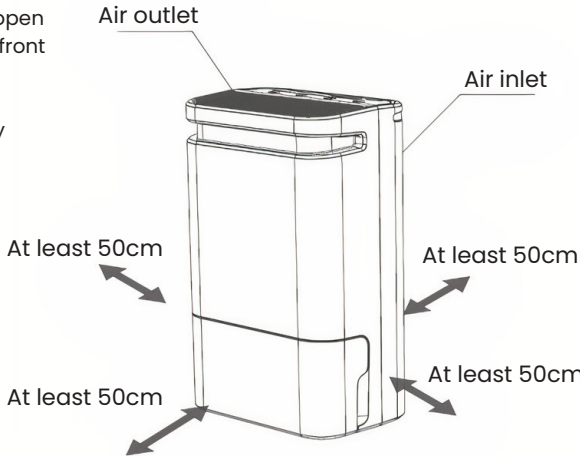

CONTROL PANEL

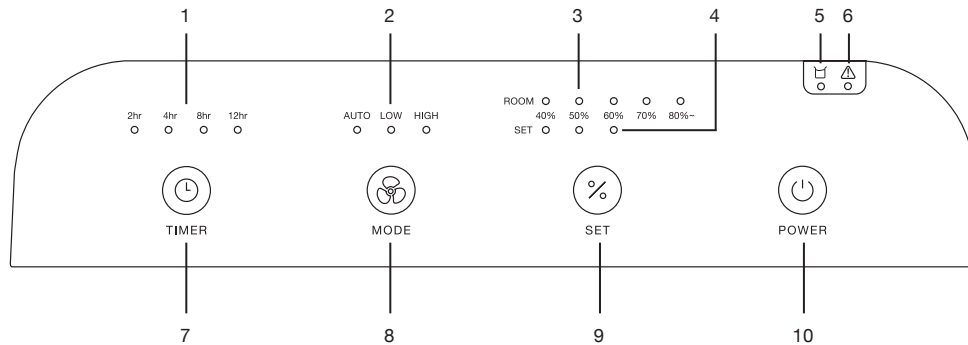

1. Timer Indicator Light
2. Mode Indicator Light
3. Room Humidity Indicator Light
4. Humidity Setting Indicator Light
5. Water Tank 'Full' Indicator Light
6. 'Check' Indicator Light
7. Timer Button
8. Mode Button
9. Humidity Setting Button
10. Power Button

OPERATING INSTRUCTIONS

Turning On and Off:

- Press the power button once to turn the appliance on or off.
- When turning on, the appliance will function with the last settings selected.
- When turned off the fan will continue to run for 2 minutes to help cool and protect the internal components.

Setting a Timer:

- Press the Timer button to cycle through the timer options of 2 hours, 4 hours, 8 hours, 12 hours, or no timer.
- The selected timer indicator light will turn on. As the remaining time decreases, the timer indicator lights indicating how much time is left will turn on.

Setting the Mode:

Press the Mode button to cycle through the mode options.

- **AUTO:** The dehumidifier automatically adjusts between high and low modes depending on the humidity of the room, and your desired humidity level.
- **LOW:** The dehumidifier runs with a low fan speed and a low heater setting.
- **HIGH:** The dehumidifier runs with a high fan speed and a high heater setting.

Note: The display will revert to showing the room's current humidity level 3 seconds after you select a setting.

Setting the Humidity:

Press the Humidity Setting Button to cycle through the humidity setting options.

- At 40% humidity, the 40% humidity indicator light will turn on.
- At 45% humidity, the 40% and 50% humidity indicator lights will turn on.
- At 50% humidity, the 50% humidity indicator light will turn on.
- At 55% humidity, the 50% and 60% humidity indicator lights will turn on.
- At 60% humidity, the 60% humidity indicator light will turn on.

When desired humidity is greater than actual room humidity, the Humidity Indicator Light will flash, and the dehumidifier will enter energy saving standby mode. When in standby mode, the heater will stop and the air outlet will stop. The fan will continue to operate for two minutes to cool the dehumidifier. After 30 minutes in standby mode, the fan will switch on for five minutes to check the humidity of the room. If the room humidity has not increased by more than 5% of desired humidity, the dehumidifier will return to standby mode. Once the room humidity increases by more than 5% of desired humidity, the dehumidifier will automatically restart and return to operation.


Current Room Humidity % RH is displayed by the Room Humidity Indicator Lights. E.g. if the room humidity is 40% RH one light will illuminate next to 40%. If the room humidity is 45% RH two lights will illuminate, one next to 40% and one next to 50%.

CONNECTING THE WATER HOSE FOR CONTINUOUS DRAINING

For long-term use, it is recommended to connect a hose for continuous drainage.

To attach the hose:

1. Use a screwdriver or similar tool to remove the plastic covering from the continuous drainage hole at the back of the dehumidifier.
2. Check that the water tank is securely in position.
3. Insert the hose into the water hose connector and check it is connected properly. (12mm)

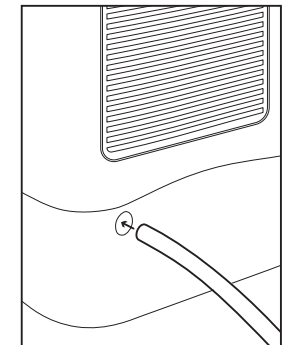


REMOVING AND EMPTYING THE WATER TANK

When the water tank is full three beeps will sound; the Water Tank Full Indicator Light will continuously flash and the dehumidifier will pause operation to prevent the water tank from overflowing. To remove and empty the water tank:

1. Turn off the dehumidifier, wait two minutes for the fan to stop, and unplug it from the wall socket.
2. Gently pull the water tank out from the front of the dehumidifier.
3. Use the handle to empty the water tank.
4. Once empty, slot the tank back in carefully.

DO NOT remove the float from the top of the water tank as this may cause damage and prevent the dehumidifier from functioning as intended.

NOTE: If the water tank is full or not inserted correctly, the Water Tank Full Indicator Light will flash and the appliance will turn off.

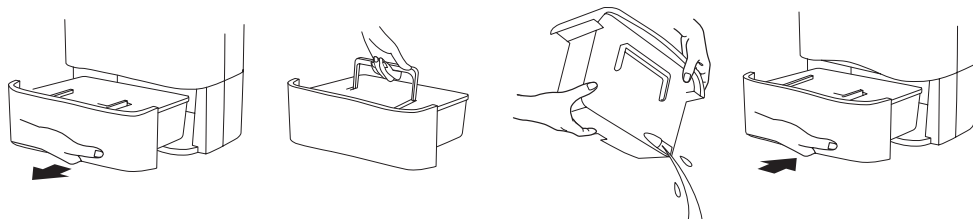

CLEANING & STORAGE

⚠ WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

⚠ CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

⚠ CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.
- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.
- The filter should be cleaned every two weeks using a damp cloth.
- Always empty, clean and dry the appliance when not in use to prevent mould.

Cleaning the water tank:

- Remove and empty the water tank as per the instructions above.
- Clean the water tank with warm tap water and mild

detergent (e.g. washing up liquid). **Note:** Do not use boiling water to clean the water tank.

- Make sure to remove any scale or deposits that have formed inside the water tank.
- Wipe all surfaces dry before placing the water tank back into the appliance.

Storage:

- To store your product, we recommend using the original or a similar-sized box.
- Store the appliance in a safe, clean and dry place, away from direct sunlight and out of reach of children when not in use.

HELPFUL INFORMATION

After turning the dehumidifier off using the Power Button, the fan will continue to run for two minutes. This is a normal operating mechanism and helps to cool down and protect the internal components of the dehumidifier. DO NOT unplug the unit while the fan is still running. Once the fan has stopped running it is safe to remove the plug from the socket.

When the dehumidifier is first turned on and intermittently thereafter a faint smell may be noticeable. This is NOT an indication that the dehumidifier is faulty or not harmful to those nearby; it is caused by the Zeolite desiccant material within the body. Zeolite absorbs odours from items such as cigarettes and cosmetics and, when heated, discharges these odours into the room. Ventilate the room if necessary to reduce the odour. The odour will reduce naturally as the dehumidifier operates.

The normal operating temperature range is 1°C – 40°C. Should the temperature fluctuate from this range the dehumidifier will stop operating. This is NOT an indication that the dehumidifier is broken. Once the temperature returns to within the normal operating range the dehumidifier will operate as normal.

If the Check Indicator Light is continuously flashing it is an indication of possible overheating. As a first resolution check the dehumidifier to ensure that it is not covered, the air inlet and air outlet are not blocked, and the filter is clean. If the Check Indicator Light continues to flash DO NOT attempt to repair the dehumidifier yourself, as doing so could lead to the risk of electric shock.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators, and packaging should not be thrown away with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/ EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product, please visit www.probreeze.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins found in most local supermarkets and household waste recycling centres.



www.probreeze.com

One Retail Group, Ryland House,
24a Ryland Road, Kentish Town, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria

Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2025