 


ProBreeze®

Instruction Manual

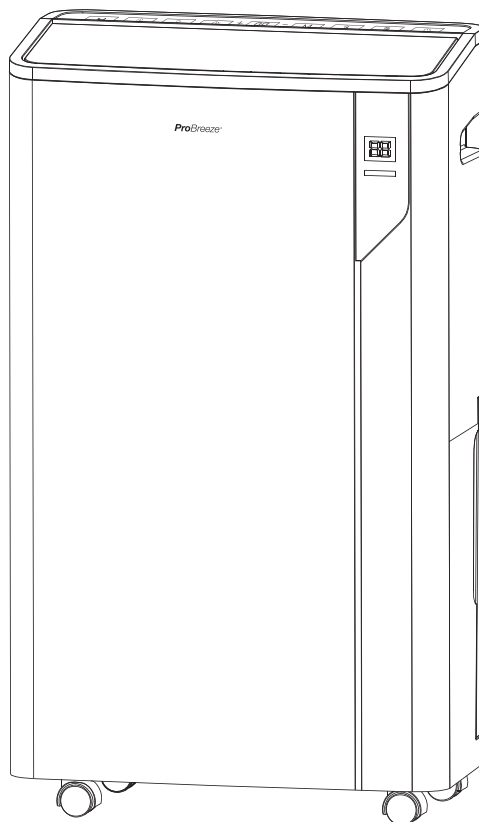

Model PB-D-23W-W 20L Smart Compressor Dehumidifier

**IMPORTANT INSTRUCTIONS
RETAIN FOR FUTURE USE**

CONTENTS

EN	Safety Instructions.....	Page 3
	Specific Information Regarding R290 Refrigerant Gas.....	Page 6
	Symbols Explained	Page 7
	Specifications.....	Page 7
	Parts	Page 8
	Positioning Your Unit.....	Page 8
	Operating Instructions.....	Page 9
	Smart App Instructions.....	Page 10
	Continuous Draining.....	Page 12
	Emptying the Water Tank.....	Page 12
	Cleaning and Storage.....	Page 13
	Recycling and Disposal.....	Page 15

ProBreeze®

**20L SMART COMPRESSOR
DEHUMIDIFIER
MODEL PB-D-23W-W**

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

 **WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND EMPTY THE WATER TANK BEFORE HANDLING, CLEANING OR SERVICING THE APPLIANCE.**

- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Do not cover this appliance whilst in use.
- Always unplug the appliance when not in use.
- Do not expose the appliance to direct sunlight, heat source or extreme cold.
- Keep the appliance out of reach of children.
- Do not leave children alone or unattended in the area where the appliance in use.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless continuously supervised.
- Dispose of water held by the appliance. This water is not drinkable.
- This appliance can be used by children aged from 8 years and above and person with reduced physical,

sensory or mental capabilities or lack of supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- When moving the appliance, ensure it is kept in an upright position.
- The appliance must have a minimum 50cm clearance on all sides.
- Never leave the appliance unattended while in use. Always turn the appliance off and disconnected from the power supply when not in use.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- Place the appliance on a flat, stable and dry surface and always keep the appliance in an upright position. Operating the appliance in any other position could cause a hazard.
- Never place anything on top of the appliance.
- Ensure that the mains supply (including voltage, frequency and power) complies with the rating label of the appliance.
- There may be a trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not place the appliance against a wall or other appliances.
- Do not cover the appliance or restrict the air flow of the inlet or exhaust grills whilst in use.
- Do not cover, obstruct or push objects into the vents and opening of the appliance as this may cause an electric shock, fire or damage the appliance.
- Do not operate the appliance with wet hands.
- Do not use this appliance near water or in the immediate surroundings of a bath, shower or a swimming pool. Never place the appliance where it may fall into a bathtub or other water container.
- Do not allow water or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- Do not use mechanical devices to accelerate the

appliance's defrosting function.

- Do not place the continuous draining hose when the temperature falls below 1°C.
- This appliance is intended for indoor household use and similar applications. Do not use outdoors.
- Do not use the appliance near petrol, paints, flammable gases, ovens, or other heating sources.
- The mains cable should not hang down from the surface on which the appliance is placed in order to prevent the appliance from being pulled down.
- To avoid a circuit overload when using this appliance, do not operate another high-wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord. Never move, carry or hang the appliance by the power cord.
- Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Do not operate the dehumidifier with the water tank removed.
- Ensure the mains cable is fully extended before use and arrange it so that it is not in contact with any part of the dehumidifier.
- Do not operate the dehumidifier if there are signs of damage to the dehumidifier, power cord, or any of the accessories supplied. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not operate the dehumidifier with any safety guards removed.
- Do not attempt to repair or adjust any electrical or mechanical elements in the dehumidifier. Doing so may be unsafe and will void your warranty.

- Never insert fingers or metal objects into the vents and openings of the dehumidifier.
- The appliance shall be installed in accordance with national wiring regulations.
- The unit's circuit board (PCB) is designed with a fuse to provide overcurrent protection. The specifications of the fuse are printed on the circuit board.
- Do not operate the appliance without the filter.

SAFETY INSTRUCTIONS – R290 REFRIGERANT GAS



WARNING: FIRE / EXPLOSION HAZARD

This appliance contains 0.06 kg (60 g) of refrigerant gas. R290 is classified as an A3 flammable refrigerant under international (EN/IEC) safety standards. Failure to follow these instructions could result in fire, explosion or injury.

- This appliance must only be installed and operated in a room with a minimum floor area of 4 m², and with sufficient natural or mechanical ventilation to prevent the accumulation of flammable gas in the event of a leak, in accordance with EN/IEC 60335-2-40 (Annex GG).
- Do not install, operate, or store the appliance in cupboards, cabinets, basements, or other confined or unventilated spaces.
- Do not use the appliance if it is damaged or shows signs of refrigerant leakage.
- Do not burn, puncture, open, or tamper with the refrigerant circuit.
- Do not place the appliance near sources of ignition such as open flames, gas appliances, or electrical devices in operation.
- Keep the appliance clear of combustible materials at all times.
- Be aware that R290 refrigerant is odourless; leaks may not be detectable by smell.

WARNING: HANDLING / STORAGE

- Do not use means to accelerate the defrosting process or cleaning, other than those recommended by the manufacturer.
- The refrigerant circuit must not be punctured, opened, or interfered with.
- Store the appliance in such a way as to prevent mechanical damage.
- If storing for an extended period, ensure the appliance is kept in a well-ventilated area, away from heat sources, sparks, or open flames.
- Do not store the appliance in cupboards, basements or other confined spaces where gas could accumulate.
- Only leak detection methods approved for use with flammable refrigerants may be used.
- Service and repair must only be carried out by qualified personnel holding appropriate certification for handling flammable refrigerants (e.g. EU F-Gas, UK equivalent, or accredited AE/Gulf certification).
- This appliance is marked with the flammable gas warning symbol (GHS02 flame pictogram). Ensure this label remains visible and legible at all times.

Disposal

At end of life, this appliance must not be disposed of with household waste. It must be taken to an authorised collection point for recycling and disposal in accordance with The Waste Electrical and Electronic Equipment Regulations 2013. The refrigerant must only be recovered by authorised service personnel.

SYMBOLS EXPLAINED

 
	For indoor use only. Do not expose the appliance to rain or moisture.		Please read instruction manual and retain for future use.
	UKCA Mark – Shows that the product meets UK safety, health, and environmental protection requirements and has undergone the required conformity assessment procedures.		CE Mark – Confirms that the product meets EU safety, health, and environmental protection requirements and has been assessed before being placed on the market.
	CAUTION: This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.		CAUTION: This symbol shows that information is available such as the operating manual or instruction manual.
	WARNING: The symbol shows that this appliance uses a flammable refrigerant. If the refrigerant leaks and is exposed to an external ignition source, there is a risk of fire.		

SPECIFICATIONS

Model:	PB-D-23W-W-UK	Voltage:	220-240V~
Frequency:	50Hz	Power:	440W
Product Dimensions:	350 x 200 x 608mm	Net Weight:	13kg
Fuse:	AC 250V~, 3.15A		


PARTS

Front

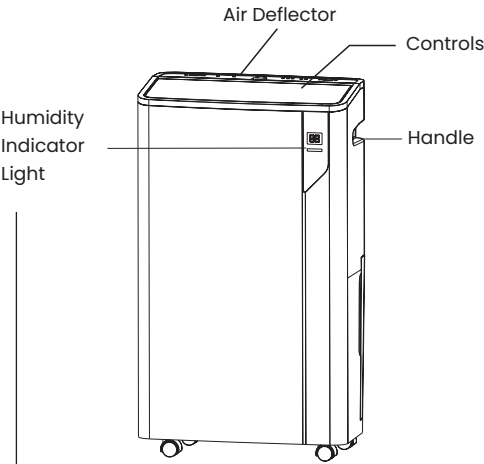

This is an indicator of the current air humidity.
Red: Humidity more than 70%
Green: Humidity between 50%-70%
Blue: Humidity below 50%

 
Back

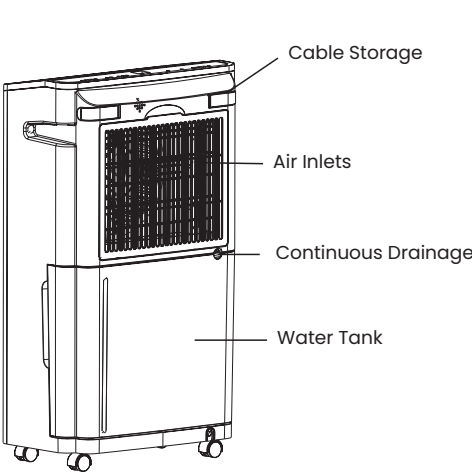

These images are for reference only,
please refer to your product.


POSITIONING YOUR UNIT

 - This unit is designed to operate in temperatures between 5°C and 35°C
- Place the unit in an area where the temperature will not fall below 5°C. In temperatures below 5°C, the coils may freeze, leading to a reduction in performance.
- Place the unit on a smooth, level surface, strong enough to support the unit with a full water tank.
- Allow at least 50cm of space behind the air inlet (at the back of the unit) for good air circulation. Allow at least 20cm of space on all other sides of the unit for good air circulation.
- Place the unit away from a clothes dryer, heaters or radiators.
- For best results, place the unit in an enclosed space and close all doors, windows and outside openings.
- If placed near an enclosed storage area (like a wardrobe or cupboard), ensure there is adequate circulation of air.
- There are four wheels attached to the unit for ease of transportation. Do not force the wheels to move over carpet.

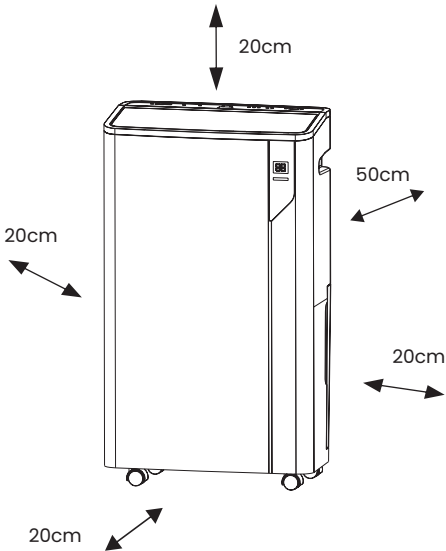

OPERATING INSTRUCTIONS

 CONTROL PANEL

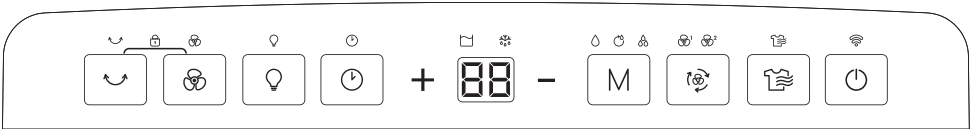

Indicator Lights

- | | | |
|------------------|--------------------------------|---------------------|
| 1. Auto swing | 6. Water tank full | 10. Max mode |
| 2. Child lock | 7. Defrost | 11. Low wind |
| 3. Ventilation | 8. Auto mode | 12. High wind |
| 4. Night display | 9. Continuous dehumidification | 13. Laundry mode |
| 5. Timer | | 14. Wi-Fi Indicator |

	Power Button	Press this button to turn the dehumidifier on or put it on standby. When you turn it on, the Auto mode indicator and room humidity will be displayed.
M	Mode Button	Press this button repeatedly to select the desired dehumidifying operation mode.

	Auto Mode	Set your target humidity using the + and - buttons and your fan speed with the fan speed button. The unit will automatically turn off once your target humidity level has been reached. If the room's humidity level goes above your target humidity level the unit will turn back on.
	Max Mode	The unit will automatically set the fan speed to high and have a target humidity level of 30%. Once this has been reached the unit will automatically turn off. If the room's humidity level goes above 30% humidity the unit will turn back on.
	Continuous Dehumidifying Mode	The dehumidifier constantly operates without stopping. The fan runs at low speed and cannot be adjusted.
	Laundry Mode	The dehumidifier constantly operates to help dry clothes. The fan runs at high speed and cannot be adjusted.
+ -	Humidity Setting Buttons	Use these buttons to adjust the desired humidity level between 30% and 80% in 5% increments. The LED light will flash while adjusting, and it will return to normal after 5 seconds. The dehumidifier will continue to operate until the room humidity is lower than the desired level or the water tank is full. Note: Humidity level adjustments can only be made in Auto mode.
	Fan Speed Button	Press this button to set the fan speed to high or low. The corresponding fan speed indicator will be displayed. Fan speed adjustments are only available in Auto and Ventilation modes.
	Timer Button	Press the timer "O" button to set a turn-on or turn-off timer, between 1-24 hours.
Setting a Turn-On Timer		When the dehumidifier is off, press the timer button, then use the + and - buttons to set the number of hours before you want it to turn on. The timer light will illuminate when a timer is set.
Setting a Turn-Off Timer		When the dehumidifier is on, press the timer button, then use the + and - buttons to set the number of hours before you want it to turn off. The timer light will illuminate when a timer is set.
	Ventilation Mode	Press this button to activate ventilation mode. The corresponding indicator will illuminate. In this mode, the fan operates without the compressor, circulating air in the room.
	Auto Swing	Press this button to activate the auto swing function. The air deflector will automatically start swinging and creating flows of air throughout.

	Night Display	Press the Night Display button to activate the sleep function while the machine is still operating in any mode. All lights except the sleep light, water full light, and child lock light will turn off. Press any key in sleep mode to perform functions and wake up the machine.
	Child Lock	Press and hold both the Auto Swing and Ventilation buttons for a few seconds to activate or deactivate the Child Lock function. When the child lock is activated, the LED displays "LC" and flashes for 5 seconds, then resumes normal display. Pressing other keys in the child lock state will display "LC" and flash for 5 seconds as a reminder. Pressing the power button in the child lock state can turn the machine on or off.
	Defrost Function	Frost may build up on the evaporator coils, which is normal. When this happens, the automatic defrost function starts. The compressor turns off, and the fan continues to run until the frost is removed. The defrosting duration depends on the room temperature.
	Water Tank Full	When the water tank is full, the water full indicator symbol will be displayed, the buzzer will beep 20 times, and both the compressor and fan will be automatically stopped after a few minutes.

SMART APP INSTRUCTIONS

Our Pro Breeze app is a centralised app for smart device management. Control your dehumidifier and set up schedules to turn your unit on and off from your phone.

Note: Ensure your Wi-Fi network is set to 2.4GHz for successful pairing.

Pair Your Device in 4 Simple Steps:

1. **Register:** Download the Pro Breeze app on the Google Play or Apple app store. Sign in/register for an account.
2. **Prepare your unit:** Once you're all signed in, hold down the fan speed button on the control panel for 5 seconds then the WiFi indicator will appear on the display.
3. **Prepare the app:** Open the Pro Breeze app press "+" in the top right corner and press "add device".

Pair Your Device in 4 Simple Steps:

1. **Register:** Download the Pro Breeze app on the Google Play or Apple app store. Sign in/register for an account.
2. **Prepare your unit:** Once you're all signed in, hold down the Mode button on the control panel for 5 seconds then the WiFi indicator will appear on the display.
3. **Prepare the app:** Open the Pro Breeze app press "+" in the top right corner and press "add device".
4. **Pair your device:** The app will scan for devices and your unit will show up. Press "add". Then type in the password for the Wi-Fi your

Scan the QR Code
to Download the App



phone is on.

Now your unit is connected to the Pro Breeze app.

Amazon Echo Set-Up

Before connecting, ensure:

- The Pro Breeze app is downloaded, and the appliance is paired.
- The Amazon Alexa app is downloaded, and an Echo device is paired with it.

Link Pro Breeze App to Alexa

1. Open Amazon Alexa > Skills.
2. Search Pro Breeze and tap Enable.
3. Follow on-screen instructions to link accounts.

Pair Alexa with the Appliance

1. Open Amazon Alexa > Devices.
2. Tap + > Add Device.
3. Select the appliance and follow on-screen instructions.
4. Control via voice: "Turn <device name> on/off" (Default name: 20 Litre Smart Compressor Dehumidifier).

Google Home Set-Up

Before connecting, ensure:

- The Pro Breeze app is downloaded, and the appliance is paired.
- The Google Home app is downloaded, and a Google Home device is paired with it.

Link Pro Breeze App to Google Home

1. Open Google Home > + > Set up device.
2. Tap Have something already set up?
3. Search Pro Breeze and follow on-screen instructions to link accounts.

Pair Google Home with the Appliance

1. Return to Google Home > select the assigned room > tap appliance name.
2. Control via voice: "Turn 20 Litre Smart Compressor Dehumidifier on/off".



CONTINUOUS DRAINING

 
To connect the drain hose to the unit:

1. Insert one end of the hose into the continuous drainage hole of the unit. Ensure it is connected securely.
2. Place the other end of the hose into a bucket or a drain.
3. Ensure the hose is not bent or blocked.

Note: Gravity will pull the water out of the unit into your chosen drainage area. Ensure the chosen area is not higher than the unit.

EMPTYING THE WATER TANK

- When the water tank is full, the unit will make a buzzing sound, and the Water Tank Full indicator will turn on.
- Press the power button to turn off the unit.
- Slide the water tank out of the body of the dehumidifier.
- Replace the empty tank back into the unit.
- Press the power button to resume operating.
- If the Water Full light does not turn off, check that the water tank is correctly in place.

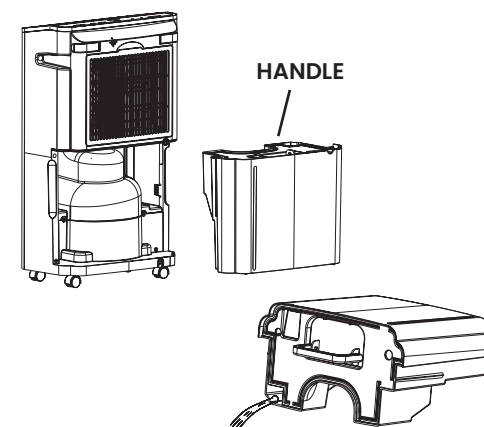

CLEANING AND STORAGE

WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS CAN DAMAGE THE APPLIANCE.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.

- The unit may need defrosting in temperatures less than 23°C – This will happen automatically and last up to 5 minutes. During this time, the dehumidifying function will stop and the defrost indicator will light up. Do not switch off while the unit is defrosting.

Cleaning the body of the dehumidifier:

- Turn the dehumidifier off and unplug the power cord.
- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.

 
Cleaning the air filter:

Note: As the filter gets clogged the dehumidifying capacity of the unit is lowered. It is important to clean the rear air filter every 2 weeks.


- Remove the inlet frame from the unit by gently pulling on the handle at the top of the filter cover.
- Remove the active carbon filter holder from the inlet frame cover.
- Remove the active carbon filter from the filter cover.
- To extend the lifespan of both filters, use a vacuum cleaner, using the brush attachment to remove dust from the surface of the filters.
- Put the filters back together (shown below) and put the filter cover back.




Inlet frame
washable pre-filter

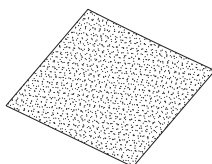

Active carbon
filter

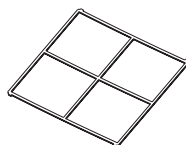 

Active carbon
filter holder

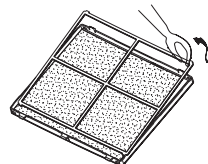 

We recommend to replace your active carbon filter every 6 months. Scan the QR code to purchase replacement filters. Follow the instructions above to remove the older carbon filter and replace it with the new active carbon filter.

Cleaning the water tank:

- Remove and empty the water tank as per the instructions in the “Emptying the water tank” section.
- Remove the water tank’s lid by removing the handle and lifting the water tank’s lid upwards.
- Clean the water tank with warm tap water and mild detergent (e.g. washing up liquid). **Note:** Do not use boiling water to clean the water tank.
- Ensure to remove any scale or deposits that have formed inside the water tank.
- Wipe all surfaces dry before placing the water tank’s lid handle.
- Then return the water tank to the unit.

Storage:

- To store your product, we recommend using the original or a similar-sized box. Store the appliance in a safe, clean and dry place, away from direct sunlight and out of reach of children when not in use.
- Always empty the water tank, clean and dry the appliance when not in use to prevent mould.
- Empty and clean the appliance before storage. Clean the appliance before next use.
- Pull out the two clips at the back of the unit and wrap the cable around the two for proper storage.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators, and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.probreeze.com

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.



www.probreeze.com

One Retail Group, Ryland House,
24a Ryland Road, Kentish Town, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria

Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2026