

London Clock


COMPANY

Thank you for your purchase of this radio controlled alarm clock. Please note that this clock may take up to 24 hours to receive a signal. Please read these instructions carefully and keep the manual for future reference.

INSTALLATION

1. Place your clock face down on a flat and soft surface.
2. Remove the battery cover at the back of the clock.
3. Insert 2 x new AAA batteries into the battery compartment by observing the correct "+" and "-" polarity.
4. Replace the battery cover.

FUNCTIONS

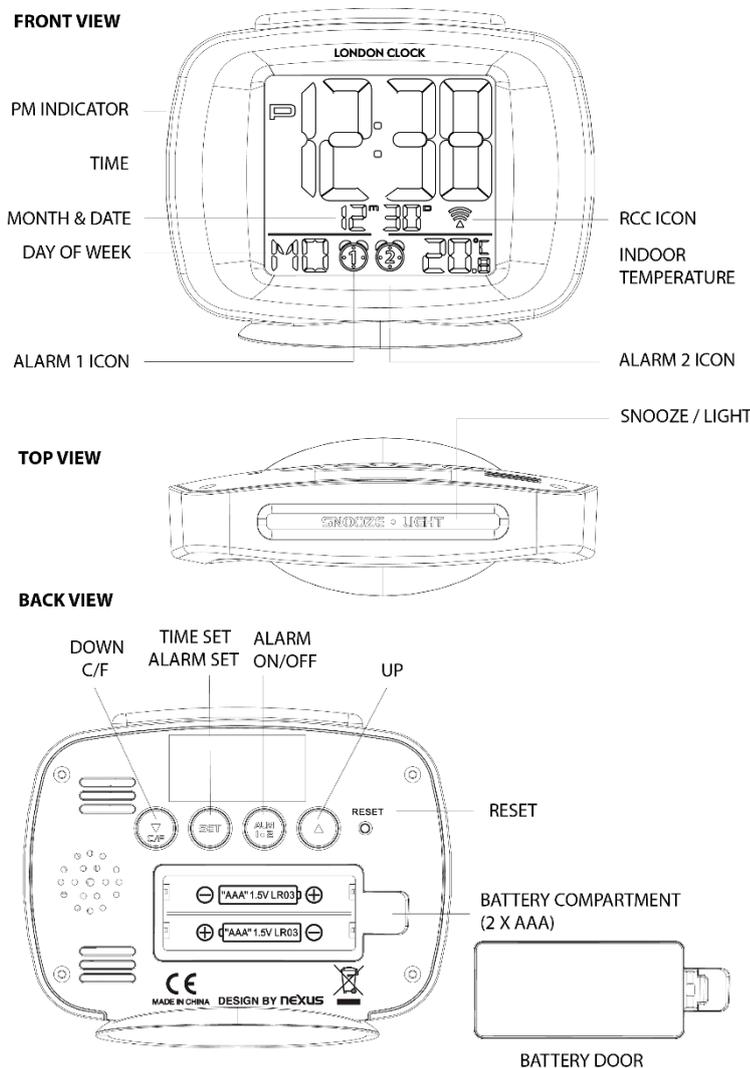

RADIO CONTROL FUNCTION

Your new clock is designed to set the time automatically in the United Kingdom only, via a transmitted radio signal.

As with all wireless devices, the ability to receive the signal may be affected by, but not limited to, the following circumstances:

- Long transmitting distance
- Nearby mountains and valleys
- Among tall buildings

London Clock

COMPANY

- Near railways, high voltage cables etc
- Near motorways, airports etc
- Near construction site
- Inside concrete buildings
- Near electrical appliances
- Near computers and TVs
- Inside moving vehicles
- Near metallic structures

Place your clock at a location with optimal signal, ie close to a window and away from metal surfaces or electrical appliances. If the clock does not pick up signal within 24 hours, try the clock in a different location.

AUTOMATIC TIME SETTING

1. Once you have inserted the batteries, the alarm clock will beep and will show default settings (12:00 as the time and 1/1 as the date and month). The radio control icon () will begin to flash, which indicates that the clock is receiving signal.
2. Please see the below indications for help with understanding if the time has been set successfully.
If there is a weak or no signal - the  icon will flash
If the clock is receiving a strong signal – the  icon will flash
If the clock has successful reception - the  icon will become static
If the clock has failed reception – the  icon will disappear
3. Your clock will start automatic reception everyday at 1:00, 2:00 and 3:00. If it fails to receive the time signal at 3:00, it will start reception at 4:00. If it fails again, it will start reception at 5:00. If it fails again, it will start automatic reception at 1:00 again the next day.

MANUAL RECEPTION: Press and hold the **C/F/ ▼** button on the back of the clock for 3 seconds to start manual reception. To stop manual reception, press and hold the **C/F/ ▼** button on the back of the clock for 3 seconds.

Please note that when your clock is receiving the radio controlled signal, all buttons except the “Snooze.Light” button on the top of the clock will not function.

TO SET THE TIME, 12/24HR TIME AND CALENDAR

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to the normal time display mode.

1. The setting will occur in the following sequence: Hour→ Minute→ 12HR/24HR→ Year→ Month→ Date→ Snooze Duration.
2. Press and hold the “SET” button on the back of the clock for 5 seconds, until the hour digit begins to flash. Use the  or **C/F/ ▼** buttons on the back of the clock to select the correct hour. (Press and hold the  or **C/F/ ▼** buttons to accelerate setting). The hour only needs to be set if no radio control signal can be received. Press the “SET” button on the back of the clock to confirm.
3. The minute digit will now flash. Use the  or **C/F/ ▼** buttons on the back of the clock to select the correct minute. (Press and hold the  or **C/F/ ▼** buttons to accelerate setting). The minute only needs to be set if no radio control signal can be received. Press the “SET” button on the back of the clock to confirm.
4. The time digits will now flash 12Hr. Use the  or **C/F/ ▼** buttons on the back of the clock to select 12Hr or 24Hr. If you select 12Hr format, “P” will appear to the left of the time digits to indicate the afternoon time. There is no AM icon to indicate the time before noon. Once you have chosen 12Hr or 24Hr, press the “SET” button on the back of the clock to confirm.
5. The year will now flash. Use the  or **C/F/ ▼** buttons on the back of the clock to select the correct year. (Press and hold the  or **C/F/ ▼** buttons to accelerate setting). Press the “SET” button on the back of the clock to confirm.

London Clock

COMPANY

6. The month digit will now flash. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the correct month. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm.
7. The date digit will now flash. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the correct date. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). The day will change automatically according to the date. Press the "SET" button on the back of the clock to confirm.
8. The LCD display will now change to "05". Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the desired snooze duration – please note snooze duration can be selected from 5 to 60 minutes. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm and return to normal time display.

TO SET ALARM 1

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to the normal time display mode.

1. With the clock in normal time display, press the "SET" button on the back of the clock once, **6:00 (AM)** and **Ⓜ 1** will appear.
2. Press and hold the "SET" button on the back of the clock for 5 seconds, until the hour digit flashes. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the desired hour for Alarm 1. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm.
3. The minute digit will now flash. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the desired minute for Alarm 1. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm and return to normal time display.

TO SET ALARM 2

Please note that during the below process, if the clock is left untouched for 10 seconds, the clock will return to the normal time display mode.

1. With the clock in normal time display, press the "SET" button on the back of the clock twice, **6:00 (AM)** and **Ⓜ 2** will appear.
2. Press and hold the "SET" button on the back of the clock for 5 seconds, until the hour digit flashes. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the desired hour for Alarm 2. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm.
3. The minute digit will now flash. Use the ▲ or **C/F/** ▼ buttons on the back of the clock to select the desired minute for Alarm 2. (Press and hold the ▲ or **C/F/** ▼ buttons to accelerate setting). Press the "SET" button on the back of the clock to confirm and return to normal time display.

Please note the duration of the alarm is 2 minutes.

TO TURN ALARM 1 AND 2 ON AND OFF

With the clock in normal time display:

1. Press the "ALM 1.2" button on the back of the clock once to activate Alarm 1. **①** will appear to indicate Alarm 1 has been activated.
2. Press the "ALM 1.2" button on the back of the clock twice to activate Alarm 2. **②** will appear to indicate Alarm 2 has been activated.
3. Press the "ALM 1.2" button on the back of the clock three times to activate both Alarm 1 and 2. Both **①** and **②** will appear to indicate Alarm 1 and Alarm 2 have been activated.
4. Press the "ALM 1.2" button on the back of the clock four times to deactivate both alarms. Both **①** and **②** will disappear to indicate that both alarms have been deactivated.

London Clock

COMPANY

TO USE THE BACKLIGHT

At normal time display, press the "SNOOZE/LIGHT" button on the top of the clock. The backlight will activate and will last for around 5 seconds and then go off.

TO STOP AND RESET THE ALARM TO COME ON THE NEXT DAY

When alarm 1 or 2 is sounding, the related alarm icon will flash. Press the "ALM 1.2" button on the back of the clock once to stop the alarm and reset it to come on the following day. After that both ① and/or ② will remain on the display.

TO ACTIVATE THE SNOOZE FUNCTION

When alarm 1 or 2 is sounding, press the "SNOOZE.LIGHT" button on the top of the clock once to silence the alarm. The default snooze duration is 5 minutes.

Note: If Alarm 2 activates while Alarm 1 is sounding or is in snooze mode, Alarm 2 will override Alarm 1 and Alarm 1 will be reset to come on the following day.

TEMPERATURE

1. There is a temperature display function on this clock.
2. When the clock is in normal display, press the C/F/ ▼ button on the back of the clock to switch the temperature between Celsius (°C) and Fahrenheit (°F).

TROUBLE SHOOTING

If your clock displays irrelevant time or does not function properly, press the **RESET** button on the back of your clock. Your clock will be reset to default settings and it will start to receive the radio controlled time signal again. PLEASE NOTE THAT THIS CLOCK MAY TAKE UP TO 24HRS TO RECEIVE RC SIGNAL.

Please note that constant use of the backlight will significantly reduce battery life.

SPECIFICATIONS

Indoor Temperature Range	0°C to +50°C (+32°F to +122°F)
Temperature Resolution	0.1C
Alarm Duration	2 minutes
Min Snooze Duration	5 minutes

Care instructions

- Wipe clock with a soft dry cloth only. Stronger agents such as Benzene, thinner or similar materials can damage the surface of the unit.
- Place your clock on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
- Protect your furniture when placing your clock on a natural wood and lacquered finish by using a cloth or protective material between the clock and the furniture.
- Alkaline batteries are recommended for optimal usage of this clock. Replace battery every 12 months or when the clock stops.
- If the clock is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

Battery safety & disposal

- Dispose of batteries and electrical products responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode or leak.**
- Never use rechargeable batteries.
- Replace all batteries at the same time; NEVER mix new and used batteries, different types or brands.



London Clock

COMPANY

- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.



This symbol  indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centres, where available. Never throw batteries in a fire or attempt to open outer casing.