

**IGNORE.
FAIL.
READ.
SUCCEED.**

INSTRUCTION MANUAL

14.4V LI-ION CORDLESS HAMMER DRILL


INSTRUCTION MANUAL

CDI114G4



ORIGINAL INSTRUCTIONS

GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING! Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. WORK AREA SAFETY

- a) Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. ELECTRICAL SAFETY

- a) Power tool plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3. PERSONAL SAFETY

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

4. POWER TOOL USE AND CARE

- a) Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar**

ORIGINAL INSTRUCTIONS

with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5. BATTERY TOOL USE AND CARE

a) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

b) Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

6. SERVICE

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

DRILL SAFETY WARNINGS

1. Wear ear protectors when impact drilling. Exposure to noise can cause hearing loss.

2. Use auxiliary handle(s), if supplied with the tool. Loss of control can cause personal injury.

3. Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

ADDITIONAL SAFETY RULES FOR DRILL

1. Remove the battery pack from the drill before carrying out adjustments.

2. Do not expose to rain or water.

3. Do not store the battery pack in temperatures over 40°C.

4. Always charge the battery pack between temperatures 0°C to 30 °C. Ideal charging temperature is 18 °C to 24 °C.

5. Only use the charger and the battery pack provided no others.

6. Avoid short circuit of the battery pack connections (screws & nails).

7. Do not incinerate or burn the battery pack, it may explode.

8. Do not charge a damaged battery pack.

9. Replace any damaged supply cords on your charger.

10. Always disconnect the charger power supply before making or breaking the connections to the battery pack.

11. Battery pack and charger will be warm during charging this is normal.

12. When not in use, remove a charged battery pack from the charger.

13. Always remove the battery pack from the charger immediately after re-charging is completed.

14. Your drill and battery pack will be warm when working, this is normal.

15. Do not dispose of batteries in fire, or with household waste. Return exhausted batteries to your local collection or recycling point.

16. Always check walls, floors and ceilings for hidden power cables and pipes.

17. Accessories and metal parts can become very hot.



WARNING: If a small amount of electrolyte should leak from the battery

ORIGINAL INSTRUCTIONS

pack under extremes of temperature or after heavy use, then wash off immediately from your skin and hands using clean water. For eye contact, rinse thoroughly with clean water and seek medical treatment immediately.

SAFETY WARNINGS FOR BATTERY PACK

- a) Do not dismantle, open or shred cells or battery pack.
- b) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.
- d) Do not subject battery pack to mechanical shock.
- e) In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- f) Seek medical advice immediately if a cell or battery pack has been swallowed.
- g) Keep battery pack clean and dry.
- h) Wipe the battery pack terminals with a clean dry cloth if they become dirty.
- i) Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.
- j) Do not maintain battery pack on charge when not in use.
- k) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- l) Battery pack gives its best performance when it is operated at normal room temperature ($20^{\circ}\text{C} \pm 5^{\circ}\text{C}$).
- m) When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.
- n) Recharge only with the charger specified

by ARGOS. Do not use any charger other than that specifically provided for use with the equipment. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- o) Do not use any battery pack which is not designed for use with the equipment.
- p) Keep battery pack out of the reach of children.
- q) Retain the original product literature for future reference.
- r) Remove the battery from the equipment when not in use.
- s) Dispose of properly.

GENERAL SAFETY WARNINGS



WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. as they can overheat and break.

ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. After charging, disconnect the battery charger from the supply mains. Then remove the chassis connection and then the battery connection.
3. Do not charge a leaking battery.
4. Do not use chargers for works other than those for which they are designed.
5. Before charging, ensure your charger is

ORIGINAL INSTRUCTIONS

matching the local AC supply.

6. For indoor use, or do not expose to rain.

7. The charging device must be protected from moisture.

8. Do not use the charging device in the open.

9. Do not short out the contacts of battery or charger.

10. Respect the polarity "+/-" when charging.

11. Do not open the unit and keep out of the reach of children.

12. Do not charge the batteries of other manufactures or ill-suited models .

13. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.

14. Keep battery charger's slots are free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.

15. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.

16. Do not recharge non-rechargeable batteries, as they can overheat and break.

17. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 4.5°C, or above 40.5°C. This is important as it can prevent serious damage to the battery pack.

18. Charge only battery pack of the same model provided by ARGOS and of models recommended by ARGOS.



Wear ear protection



Wear eye protection



Wear dust mask



Do not expose to rain or water



Do not burn



Fuse



Li-Ion



Li-Ion

Li-Ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

SYMBOLS



To reduce the risk of injury, user must read instruction manual



Warning



Indoor use only



Positive terminal



Negative terminal

xINR18/65-y: Cylindrical lithium ion battery cells with max diameter of 18mm and max height of 65mm; "x" represents a number cells serial connected, blank if 1; "-y" represents a number of cells paralleled connected, blank if 1.





COMPONENT LIST

1. Keyless chuck
2. Torque adjustment ring
3. Forward/Reverse rotation control
4. On/off switch
5. Soft grip handle
6. Battery pack
7. Battery pack release button
8. Sight light

Not all the accessories illustrated or described are included in standard delivery.

TECHNICAL DATA

Type **CDI114G4** (CDI -designation of machinery, representative of Cordless impact Drill)

| | |
|----------------------------|---|
| Voltage | 14.4V  |
| No load speed | 0-700/min |
| Impact rate | 0-10500bpm |
| Number of clutch positions | 21+1+1+1 |
| Max torque | 15N.m |
| Chuck capacity | 10mm |
| Charging time | 3-5hr |
| Charger Input | 100-240V~50/60Hz,0.2A |
| Charger output | 18V  370mA |
| Max. drilling capacity | |
| Steel | 8mm |
| Wood | 18mm |
| Masonry | 8mm |
| Machine weight | 1.22kg |
| Battery capacity | 1.3Ah Li-ion battery |

For the technical data of the types, the number of cells and the rated capacity of the batteries that can be charged, please refer the nameplate of the battery pack supplied by ARGOS.

NOISE INFORMATION

A weighted sound pressure

$L_{pA} = 71.6\text{dB(A)}$

A weighted sound power

$L_{wA} = 82.6\text{dB(A)}$

K_{pA} & K_{wA}

3.0dB(A)

Wear ear protection.

VIBRATION INFORMATION

| Vibration total values (triax vector sum) determined according to EN 60745: | |
|---|--|
| Impact drilling into concrete | Vibration emission value $a_{h,D} = 18.04\text{m/s}^2$ |
| | Uncertainty $K = 1.5\text{m/s}^2$ |
| Drilling into metal | Vibration emission value $a_{h,D} = 2.16\text{m/s}^2$ |
| | Uncertainty $K = 1.5\text{m/s}^2$ |

The declared vibration total value may be used for comparing one tool with another, and may also be used in a preliminary assessment of exposure.



WARNING: The vibration emission value during actual use of the power tool can differ from the declared value depending on the ways in which the tool is used dependant on the following

ORIGINAL INSTRUCTIONS

examples and other variations on how the tool is used:

How the tool is used and the materials being cut or drilled.


The tool being in good condition and well maintained.

The use the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti vibration accessories are used.

And the tool is being used as intended by its design and these instructions.

This tool may cause hand-arm vibration syndrome if its use is not adequately managed.

 **WARNING:** To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle but not actually doing the job. This may significantly reduce the exposure level over the total working period.

Helping to minimize your vibration exposure risk.

ALWAYS use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti vibration accessories.

Avoid using tools in temperatures of 10°C or less.

Plan your work schedule to spread any high vibration tool use across a number of days.

ACCESSORIES

| | |
|--------------------------|---|
| Li-ion battery pack | 1 |
| 3-5hr Charger | 1 |
| masonry drills (6/7/8mm) | 3 |

We recommend that you purchase your accessories from the same store that sold you the tool. Use good quality accessories marked with a well-known brand name. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

INTENDED USE

The machine is intended for driving in and loosening screws as well as for drilling in wood, metal and plastic.

BEFORE PUTTING INTO OPERATION

NOTE:

- a) Do not use any charger other than that specifically provided for use with the equipment.
- b) If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.
- c) The battery in your new tool is not charged when it leaves the plant. Therefore it must be full charged before using the first time.
- d) Please charge the battery to reach full or no less than half charge before storage. If the tool will not be used for long periods of time, charge the battery every 3-6 months.

CHARGING PROCEDURE (See Fig. A)

Plug charger plug into a suitable power outlet and afterwards plug the DC plug into socket of your battery, the charging indicator (red) will illuminate at this time.

The charger indicator (red) will go out and the charging indicator (green) will illuminate when charging is complete, then unplug the charging plug from the wall socket and then remove the battery charger from the battery, the battery is ready to use.



Fig.A

IMPORTANT: When battery charge runs out after continuously use or exposure to direct sunlight or heat, allow time for the tool to cool down before re-charging to achieve the full

charge.



WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the battery to cool down before re-charging to achieve the full charge.



WARNING: Only use the provided charger for use with the equipment! Do not use any charger! Otherwise the machine will be damaged by the wrong charger!

TO REMOVE THE BATTERY PACK (See Fig. B1, B2)

Depress the battery pack release button (7) to release and slide the battery pack out from your tool. After recharge, slide it back into your tool. A simple push and slight pressure will be sufficient.

NOTE: Please make sure every half year recharger battery pack one time if the battery pack stock long time.

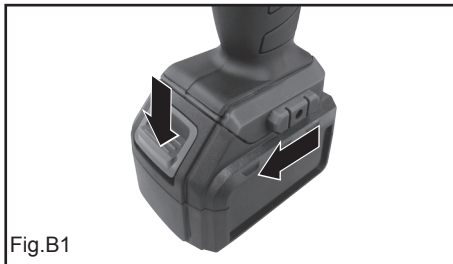


Fig.B1



Fig.B2

OPERATION

1. ON / OFF SWITCH (See Fig. C)

Depress the On/Off switch (4) to start and release it to stop your drill. The on/off switch is fitted with a brake function which stops your chuck immediately when you quickly release the switch. It is also a variable speed switch that delivers higher speed and torque with increased trigger

ORIGINAL INSTRUCTIONS

pressure. Speed is controlled by the amount of switch trigger depression.

WARNING: Do not operate for long periods at low speed because excess heat will be produced internally.



Fig.C

2. SWITCH LOCK (See Fig. D)

The switch trigger can be locked in the OFF position. This helps to reduce the possibility of accidental starting when not in use. To lock the switch trigger, place the rotation control in the center position.



Fig.D

3. REVERSIBLE (See Fig.E1, E2)

For drilling and screw driving use forward rotation marked "◀◀" (lever is moved to the left). Only use reverse rotation marked "▶▶" (lever is moved to the right) to remove screws or release a jammed drill bit.

WARNING: Never change the direction of rotation when the chuck is rotating, wait until it has stopped!



Fig.E1



Fig.E2

4. CHUCK ADJUSTMENT (See Fig. F)

To open the chuck jaws rotate the front section of the chuck. Insert the drill bit between the chuck jaws and rotate the front section in the opposite direction. Ensure the drill bit is in the center of the chuck jaws. Finally, firmly rotate the front chuck section in the opposite directions. Your drill bit is now clamped in the chuck.

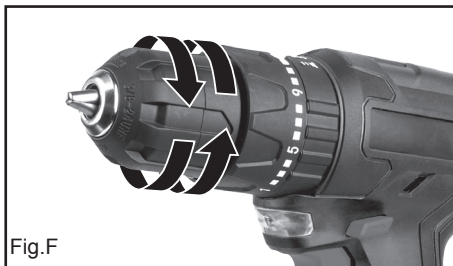


Fig.F

5. TORQUE ADJUSTMENT (See Fig. G)

(Screw driving force of your drill driver)

The torque is adjusted by rotating the torque adjustment ring (2). The torque is greater when the torque adjustment ring is set on a higher setting. The torque is less when the torque adjustment ring is set on a lower setting.

Make the setting as follows:

| | |
|---------|--|
| 1 - 4 | for driving small screws |
| 5 - 9 | for driving screws into soft material |
| 10 - 14 | for driving screws into soft and hard material |
| 15 - 20 | for driving screws into hard wood |
| 21 | for driving larger screws |
| | for screwdriving |
| | for heavy drilling |
| | for drilling in masonry and concrete |

ORIGINAL INSTRUCTIONS

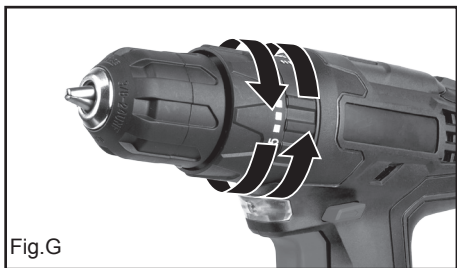


Fig.G

6. USING THE SIGHT LIGHT

The sight light(8) allows you to keep a clear view under less illuminated circumstances. To turn on the light simply press the on/off switch. When you release the on/off switch, the light will go out.

7. DRILLING

When drilling into a hard smooth surface, use a center punch to mark the desired hole location. This will prevent the drill bit from slipping off center as the hole is started. Hold the tool firmly and place the tip of the bit at the point to be drilled. Depress the switch trigger to start the tool. Move the drill bit into the workpiece, applying only enough pressure to keep the bit cutting. Do not force or apply side pressure to elongate a hole. If you want to activate the drill function (For drilling metal wood or plastic), turn the torque adjustment ring on the drill position. If you want to activate the impact function(For masonry or concrete), turn the torque adjustment ring on the hammer position.



Tungsten carbide drill bits should always be used for concrete and masonry. When drilling in metal, only use HSS drill bits in good condition. Always use a magnetic bit holder (not included) when using short screwdriver bits. When screw-driving, apply a small quantity of liquid soap or similar to the screw threads to ease insertion.

8. DISPOSAL OF AN EXHAUSTED BATTERY PACK



To preserve natural resources, please recycle or dispose of the battery pack Li-Ion properly. This battery pack contains Lithium batteries. Consult your local waste authority for information regarding available

recycling and/or disposal options. Discharge your battery pack by operating your drill, then remove the battery pack from the drill housing and cover the battery pack connections with heavy-duty adhesive tape to prevent short circuit and energy discharge. Do not attempt to open or remove any of the components.

9. OVERLOAD PROTECTION

When overloaded, the motor comes to a stop. Relieve the load on the machine immediately and allow cooling for approx. 30 seconds at the highest no-load speed.

10. TEMPERATURE DEPENDENT OVERLOAD PROTECTION

When using as intended for the power tool cannot be subject to overload. When the load is too high or the allowable battery temperature of 75°C is exceeded, the electronic control switches off the power tool until the temperature is in the optimum temperature range again.

11. PROTECTION AGAINST DEEP DISCHARGING


The Li-ion battery is protected against deep discharging by the "Discharging Protection System". When the battery is empty, the machine is switched off by means of a protective circuit: The inserted tool no longer rotates.

PROBLEM SOLUTION

1. WHY DOES THE DRILL NOT TURN ON WHEN YOU PRESS THE SWITCH?

The forward/reverse rotation control, which is on top of the trigger, is positioned in the lock function. Unlock the forward/reverse rotation control by putting it into the required rotation position. Push the trigger and the drill will start to rotate.

2. THE DRILL STOPS BEFORE THE SCREW IS COMPLETELY TIGHTENED. WHY?

Verify the torque position of the torque adjusting ring, you can find the torque-adjusting ring between the chuck and the drill body. Position 1 is the lowest torque (screw driving force) and position 21 is the highest torque (screw driving force). Position  is for drill operation. Regulate the torque adjusting ring to a higher position to reach the best result.

3. REASONS FOR DIFFERENT BATTERY PACK WORKING TIMES

Charging time problems, as above, and having not used a battery pack for a prolonged time will reduce the battery pack working time. This can be corrected after several charge and discharge operations by charging & working with your drill. Heavy working conditions such as large screws into hard wood will use up the battery pack energy faster than lighter working conditions. Do not re-charge your battery pack below 0 °C and above 45 °C as this will affect performance.


MAINTENANCE

Your tool requires no additional lubrication or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place. Keep the motor ventilation slots clean. Keep all working controls free of dust. Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

ENVIRONMENTAL PROTECTION



Waste electrical products must not be disposed of with household waste. Please  recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

*If faults can not be remedied, contact the **Helpline** on **03448012949***

GUARANTEE

This product is selected for DOMESTIC USE ONLY and not for business use.

This product is guaranteed against manufacturing defects for a period of 12 months. This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use. In the event of a problem with the product within the guarantee period please return it to your nearest Argos store. If the item is shown to have an inherent defect present at the time of sale, the store will provide you with a replacement. Your statutory rights remain unaffected.

Guarantor: Argos Ltd, MK9 2NW

Issue1 10/2016

Produced for Argos Ltd.
489-499 Avebury Boulevard,
Milton Keynes, MK9 2NW

argos.co.uk



BY ARGOS