INSTRUCTION MANUAL

INTRODUCTION

Congratulations on your purchase of **ASW01** watch, which has all features of a multi-function watch:

. Real-time with Month, Date and Weekday

. Stopwatch with split time function

. Daily alarm and hourly chime
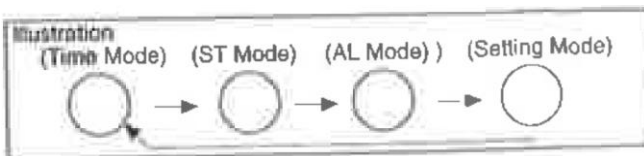
CONTROL BUTTONS

A: START/STOP

B: LAP/RESET

C: MODE

A beep will sound to register successful entry when the A or B button is pressed on stopwatch.

DISPLAY MODES

The watch has four display modes: Real time, Stopwatch, Daily alarm and Time Setting.

- To change one display mode in the sequence of : Real time, Stopwatch, Daily alarm and Time Setting, press the C button once.

- If no button is operated for a few minutes in Alarm Mode, the watch goes back to the real time automatically.

- After setting in Daily Alarm mode or operated in Stopwatch mode, Press the C button once to enter to Real time mode.

TO SET THE TIME, DATE AND HOUR FORMAT

From Real time mode

1. Press button 'C' 3 times.
2. Press button 'A' to '00' seconds.
3. Press button 'B' to select hour, Press 'A' to advance hour(s).

4. Repeat sequence for minutes – month – date – day of week. When all are set, press 'C' to confirm and return to real time.

   . If no button is operated for a few minutes while a selection is blinking, the watch goes back to the real time automatically.

TO SELECT 12/24 HOUR FORMAT

While hour digits are selected, press the A button to select 12/24 hour format.

Day of the week abbreviations as below:

MO: Monday   TU: Tuesday   WE: Wednesday

TH: Thursday   FR: Friday   SA: Saturday

SU: Sunday

TO USE THE STOPWATCH

For a straight forward count-up:

1. Press the C button to select Stopwatch mode, if the last recorded time of the stopwatch will be displayed, press the B button to clear.
2. Press the A button once to start the stopwatch. The watch will start counting from 00'00''00 if the watch is cleared, otherwise it will pick up from where it last left off.
3. To stop counting, press the A button once, press the button again to resume from where it left off.
4. To clear the stopwatch, press the A button to stop counting and then press the B button.

The stopwatch is equipped with a split function for you to keep track of individual lap times. To use the function:

1. While the stopwatch is running, press the B button once whenever you want to register a lap. The stopwatch is still running in the background. To display the currently accumulated time, press the B button.
2. Repeat the last step until you have registered all the laps desired.
3. Press A to stop counting. Press the button again to resume or press the B button to clear.

The range of the stopwatch is 23 hours, 59 minutes and 59,99 seconds.

TO SET THE DAILY ALARM

1. Press the C button to select Daily Alarm mode.

2. Press the B button once, the hour digits will blink.

3. Use the A button to set the hours. Press the button once to increase the digits by one unit or speed up the process by holding down the button. The alarm indicator will appear once pressed.

Hour format of alarm time is dictated by the one selected for Real time.

4. Press the B button, the minute digits will blink.

5. Use the A button to set the minutes, press the button once to increase the digits by one unit or speed up the process by holding down the button.

6. Press the B button to return to the Alarm Mode.

7. Press the C button to return to real time.

If no button is operated for a few minutes while a selection is blinking, the watch goes back to the real time automatically.

TO SET THE DAILY ALARM AND HOURLY CHIME ON/OFF

1. Use the C button to select Daily Alarm mode.

2. Use the A button to set the status of the alarm and chime functions of the alarm.

3. Press the button once to activate the daily alarm, ALM indicator appears.

4. Press the button again to activate the hourly chime, Chime indicator appears.

5. Press the button a third time to activate both functions, ALM indicator and Chime indicator appear.

6. To deactivate both, press the button a fourth time, both indicators disappear.

WHEN AN ALARM OR HOURLY CHIME GOES OFF

A tune will sound each hour for 20 seconds if the hourly chime function is activated and the alarm indicator will blink at the designated time when the alarm is active. To stop either tune, press the A, B or C button.

BATTERY INFORMATION

The watch uses a 3.0V button cell battery, which in normal circumstances will last for 1.5 years, however, the battery life will vary due to the amount and the manner the watch is used.

BATTERY PRECAUTIONS

• Use only fresh batteries of the required size and recommended type.
• Never leave dead or weak batteries in the unit.
• If the unit does not respond to your commands replace the batteries.
• If you do not plan to use the unit for several weeks, remove the batteries.
Batteries can leak chemicals that can destroy electronic parts.
• Dispose of batteries promptly and properly. Do not burn or bury them.
• Non rechargeable batteries are not to be recharged. Rechargeable batteries
are to be removed from the unit before being charged. Rechargeable
batteries are only to be charged under adult supervision.
• The supply terminals are not to be short circuited. The batteries are to be
inserted with the correct polarity.
• Batteries are harmful if swallowed so keep away from young children. Do
not remove outer casings.

WEEE

• The wheelie bin symbol indicates that waste and electrical equipment should
not be treated as normal household waste. It should be segregated and
recycled when it has reached the end of its life, which can be done free of
charge at civic amenity sites.
• For your nearest facilities see www.recycle-more.co.uk

This item complies with all the required European standards.

HOW SHOULD I CARE FOR MY CLOCK

• Keep the clock clean and dry. A soft cloth should be used regularly to keep the product dust-free.
• Do not use any corrosive cleaner or chemicals on the clock.
• Always store the clock without a battery whenever it is not in use.

CUSTOMER SERVICES

0121 524 1400 (Monday - Friday 9:00am-5:00pm)

Precision House

Starley Way

Birmingham International Business Park

Bickenhill Lane

Solihull

B37 7GN