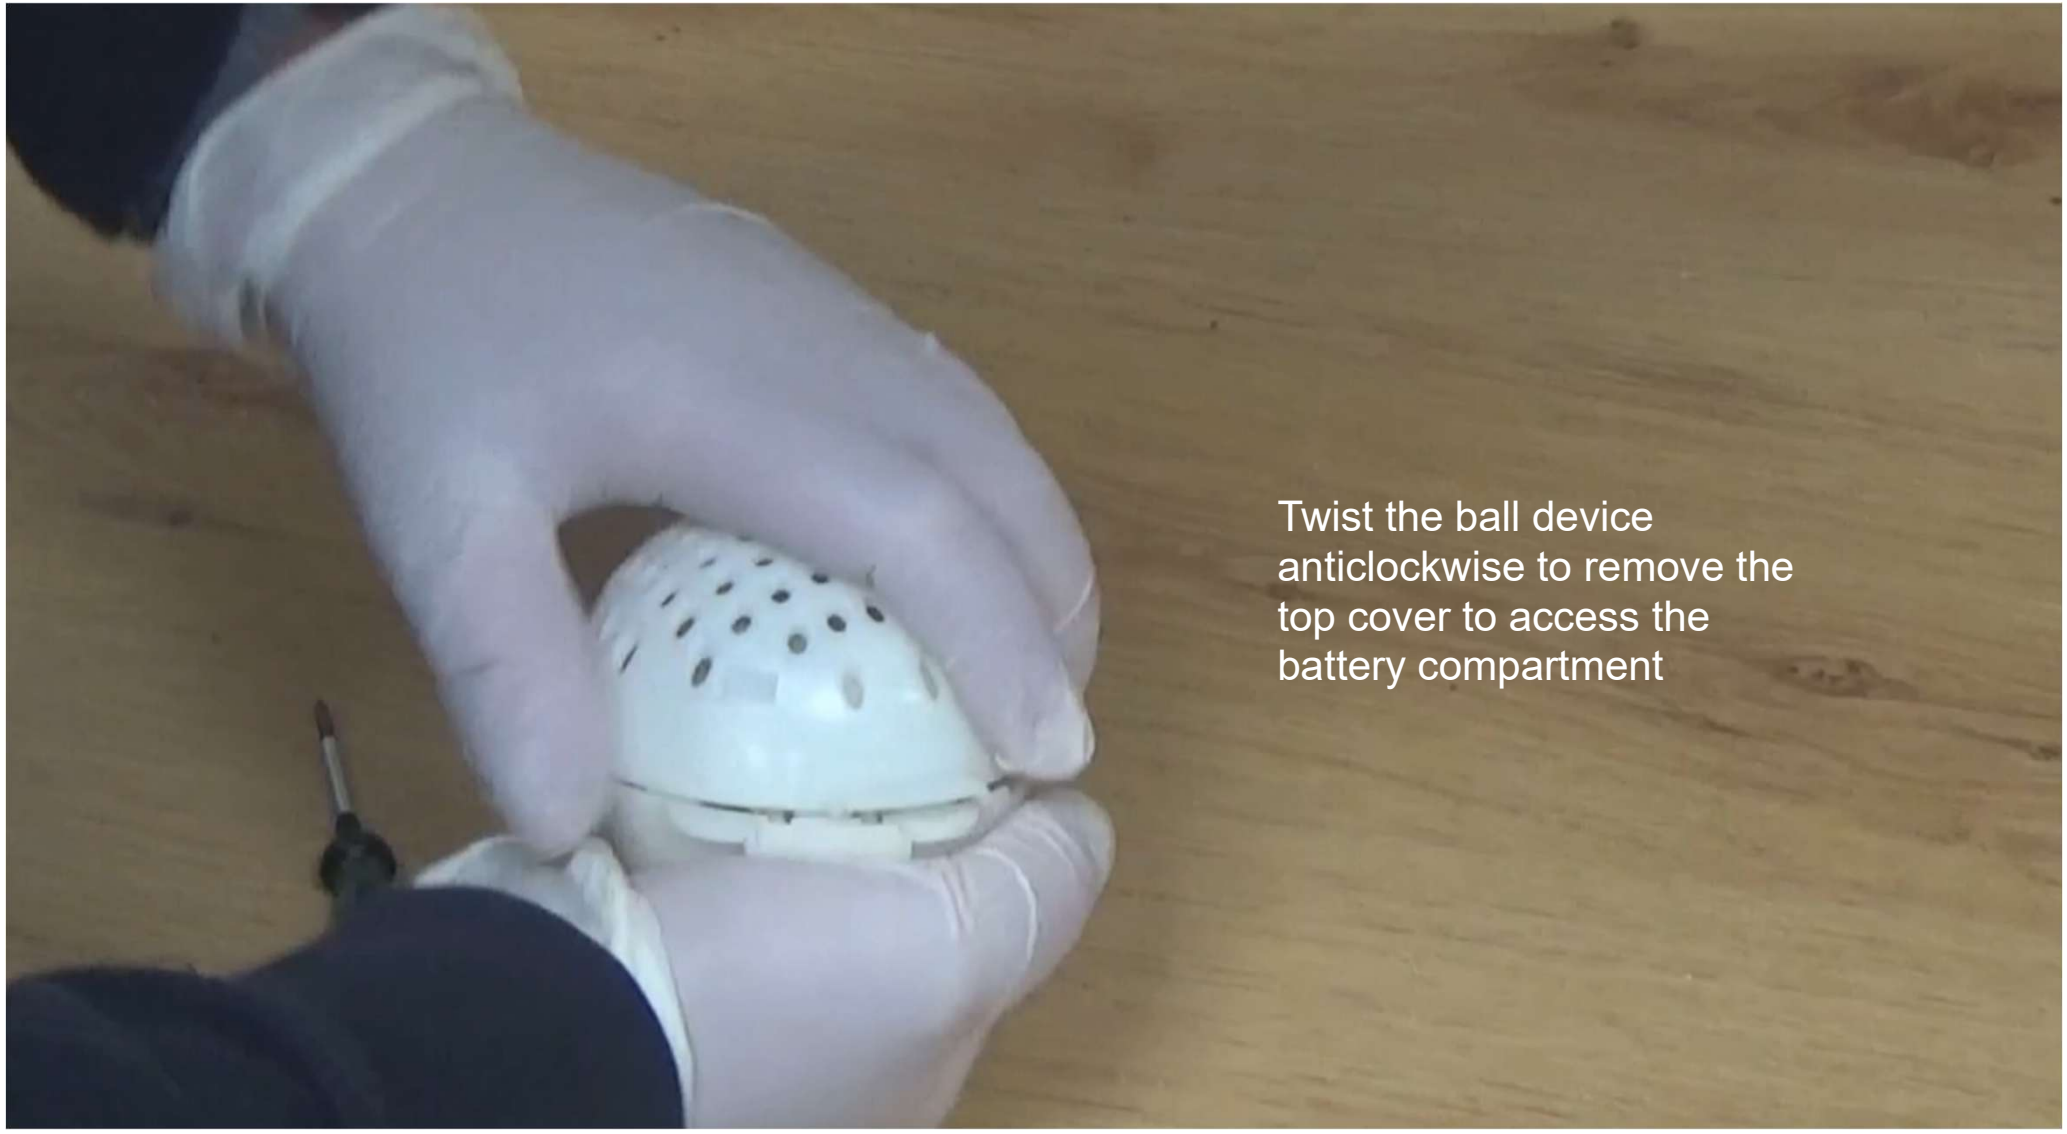
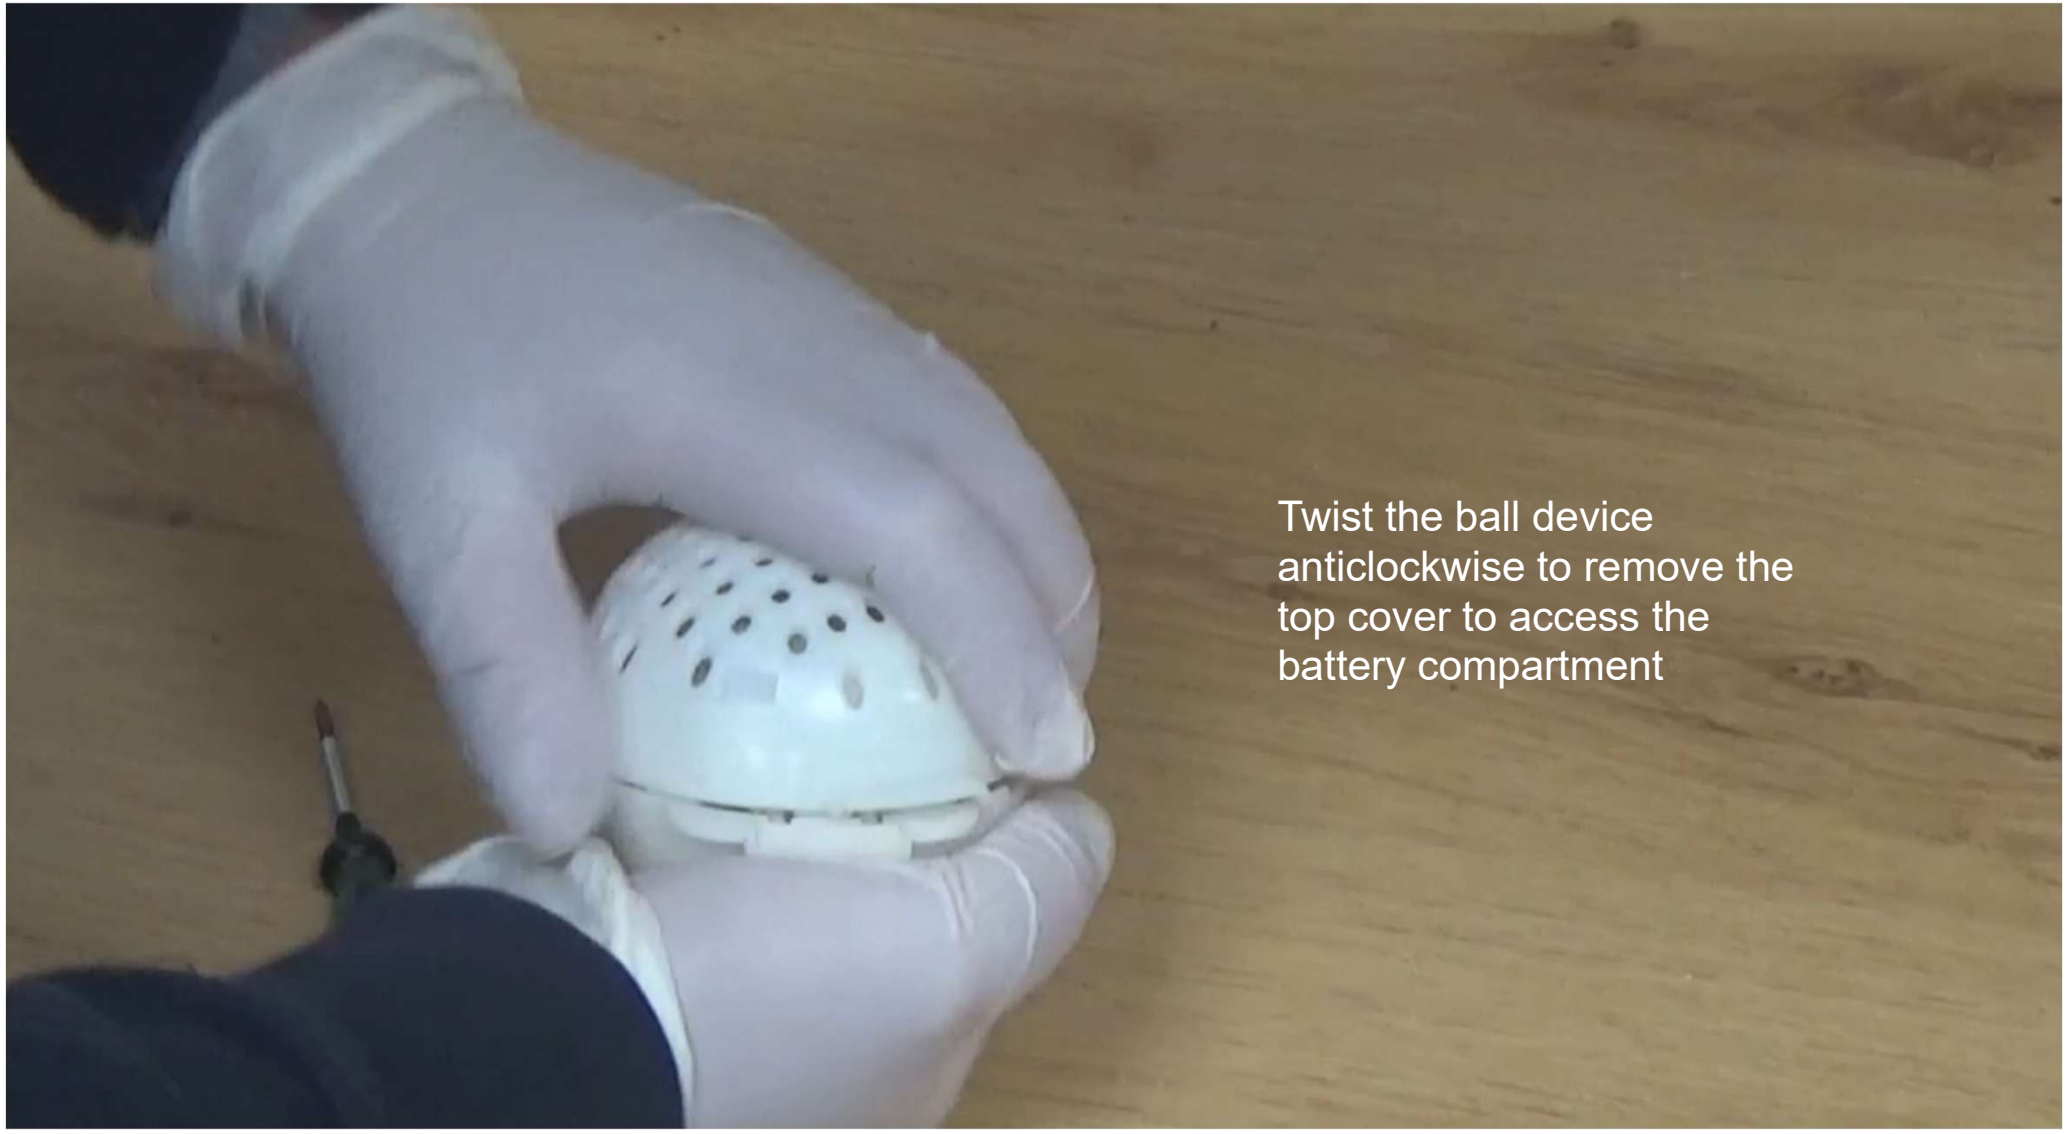
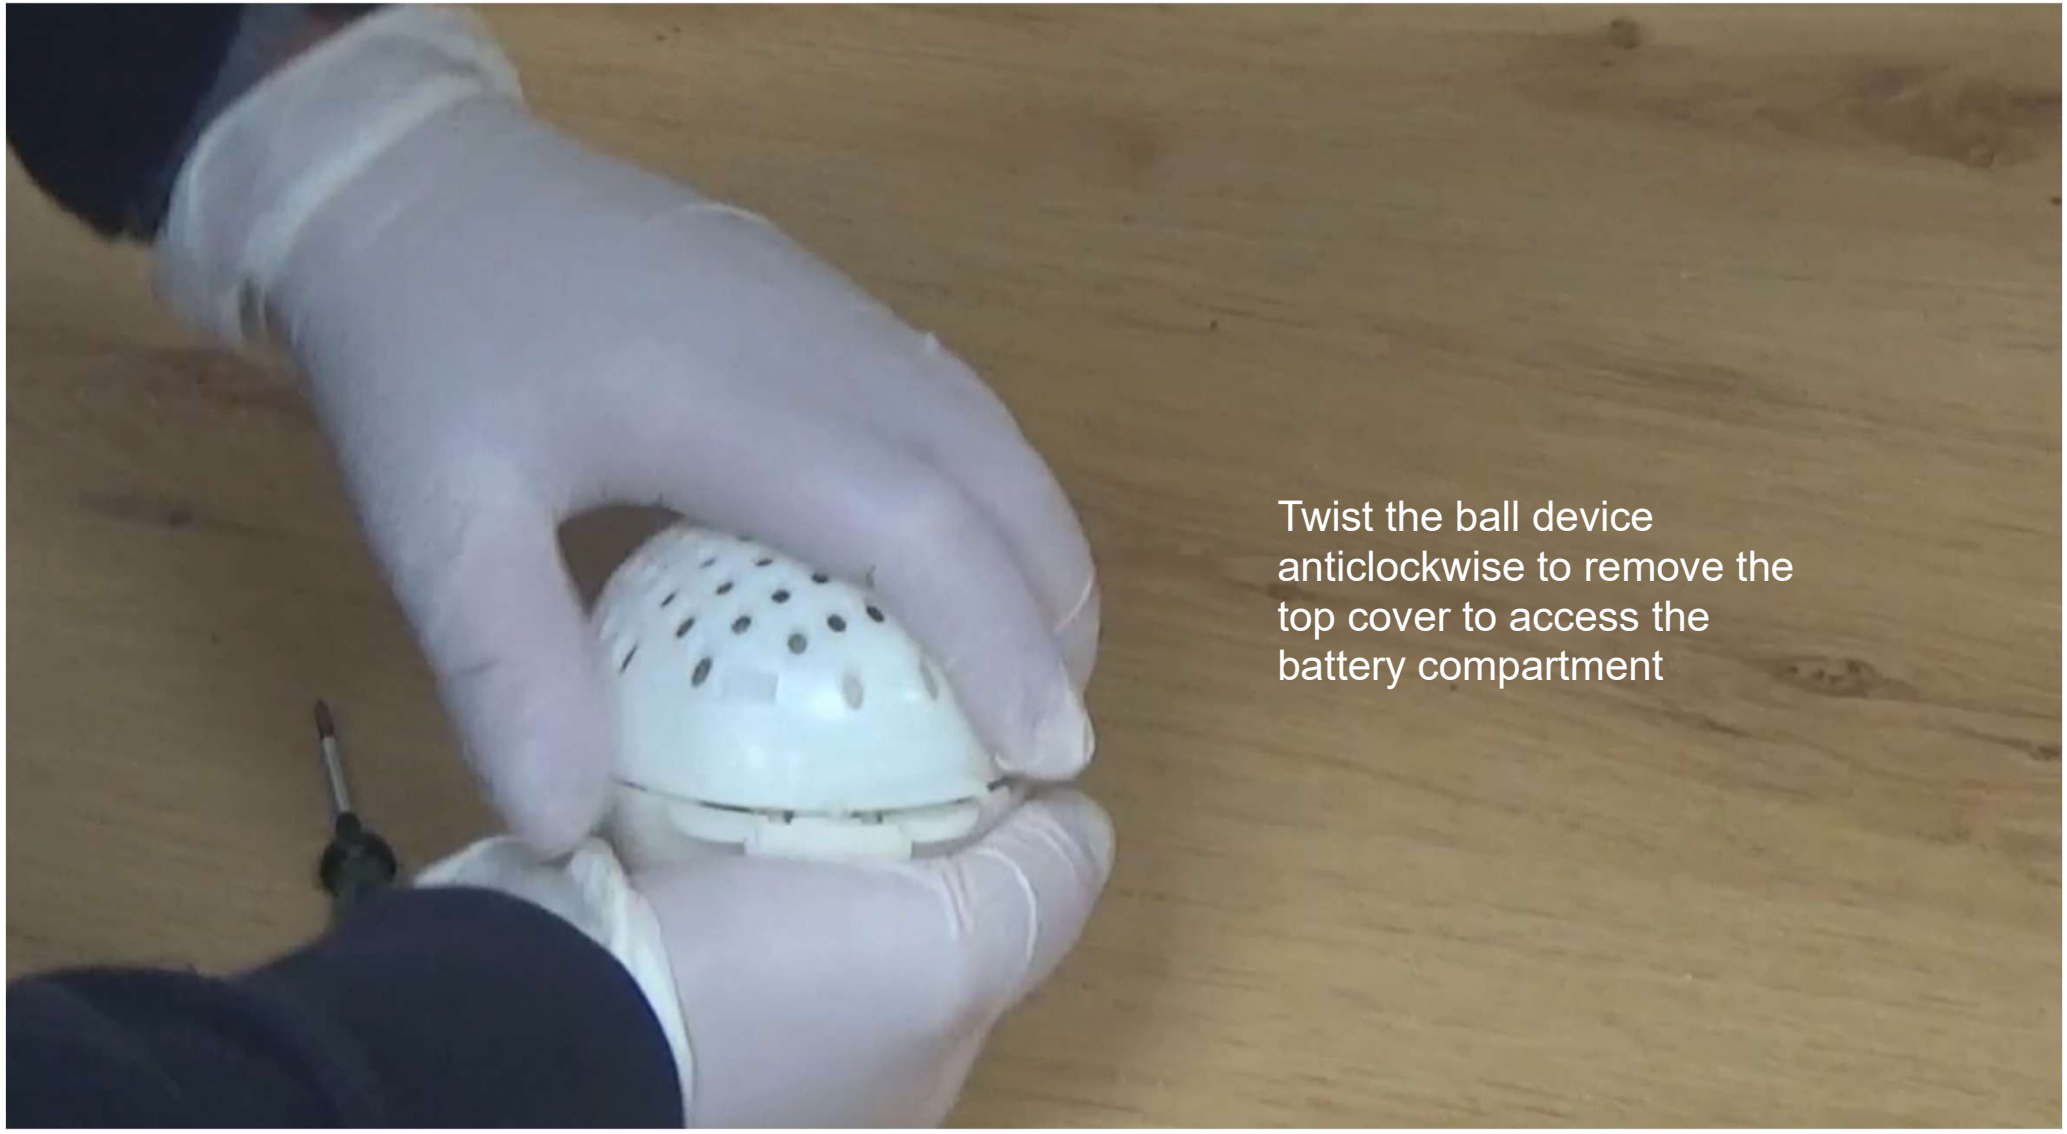

Using a PH00 or PH01 screwdriver,
loosen the outer screw.

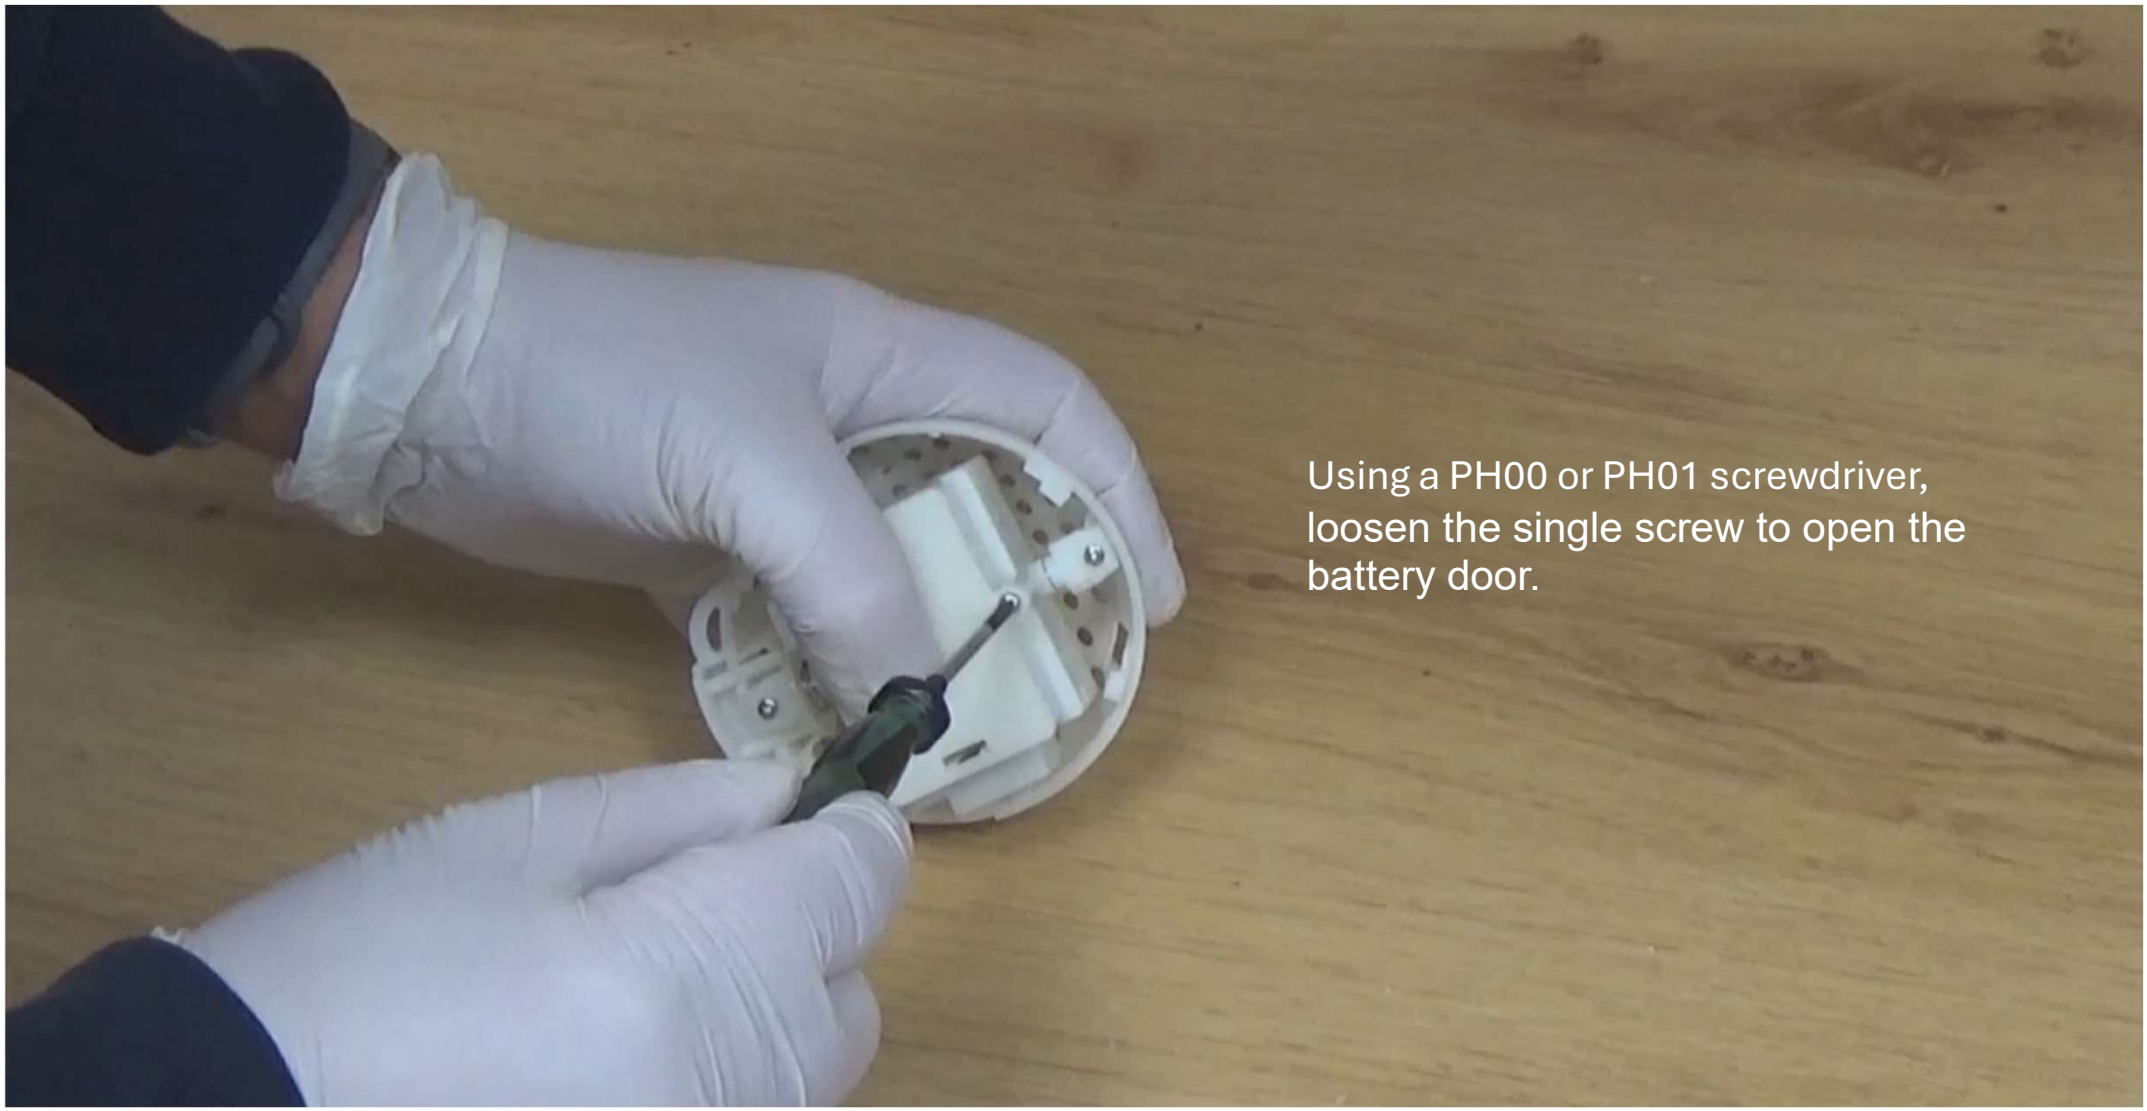

Twist the ball device anticlockwise to remove the top cover to access the battery compartment


The outer case screw does not need to be fully removed.
Loosen the screw until you find you can twist open the case.


The outer case screw does not need to be fully removed.
Loosen the screw until you find you can twist open the case.


Twist the ball device anticlockwise to remove the top cover to access the battery compartment


Twist the ball device anticlockwise to remove the top cover to access the battery compartment


Using a PH00 or PH01 screwdriver,
loosen the single screw to open the
battery door.


The screw does not need to be fully
removed from the battery
door. Loosen the screw until you find
you can remove the battery door.