

# Panasonic

## Basic Operating Instructions Grundläggande bruksanvisning Grundlæggende betjeningsvejledning Peruskäyttöohjeet CD Stereo System CD-stereoanlægning CD-stereoanlæg CD-stereojärjestelmä Model No. **SC-UX102** **SC-UX100**

Thank you for purchasing this product.  
For optimum performance and safety,  
please read these instructions carefully.  
Please keep this manual for future reference.

Tack för valet av denna apparat.  
Läs igenom bruksanvisningen nogga för bästa  
resultat och för säkerhets skull.  
Spara denna bruksanvisning.

Tak fordi du har valgt dette produkt.  
Læs venligst denne betjeningsvejledning omhyggeligt,  
således at optimal ydelse og sikkerhed opnås.  
Gem vejledningen til senere brug.

Kiitos, että hankit tämän tuotteen.  
Lue nämä ohjeet huolellisesti parhaan suorituskyvyn  
ja turvallisuuden takaamiseksi.  
Säilytä ohje tulevaa tarvetta varten.

**REGISTER NOW**

UPDATES TIPS NEWS OFFERS

[www.panasonic.eu/register](http://www.panasonic.eu/register)

This manual contains basic information. Visit website below for detailed instructions.  
Denna manual innehåller grundläggande information. På webbsidan finns mer  
detaljerade instruktioner.  
Denne vejledning indeholder grundlæggende oplysninger. Besøg nedenstående  
hjemmeside for detaljerede instruktioner.  
Tämä opas sisältää perustiedot. Tarkemmat ohjeet saat jäljempänä mainitulta  
verkkosivulta.

[https://panasonic.jp/support/global/cs/audio/oi/sc\\_ux100/](https://panasonic.jp/support/global/cs/audio/oi/sc_ux100/)

Manufactured by: Panasonic Entertainment & Communication Co., Ltd.  
1-10-12 Yagumo-higashi-machi, Moriguchi City,  
Osaka 570-0021, Japan  
Authorized Representative in Europe: Panasonic Marketing Europe GmbH  
Panasonic Testing Centre  
Winsbergring 15, 22525 Hamburg, Germany

Panasonic Entertainment & Communication Co., Ltd.  
Web Site: <https://www.panasonic.com>  
© Panasonic Entertainment & Communication Co., Ltd. 2020-2022

**CLASS 1 LASER PRODUCT**

CLASS 1 LASER APPARAT  
Back of product

**B**


1. Connect the DAB antenna.  
2. Connect the FM indoor antenna.

**C**

1. DIMMER CD 7  
2. USB CD MP3/AUX 8  
3. MUTE 9  
4. SETUP 10  
5. DISPLAY SOUND PLAY MENU 11  
6. ALBUM 12  
7. VOLUME 13  
8. PAUSE 14  
9. STOP 15  
10. REPEAT 16  
11. EJECT 17

English		
System	SC-UX102	SC-UX100
Main unit	SA-UX102	SA-UX100
Speakers	SB-UX100	SB-UX100

**SC-UX102** Indicate features applicable to SC-UX102.  
**SC-UX100** Indicate features applicable to SC-UX100.  
The symbols on this product (including the accessories)  
represent the following:

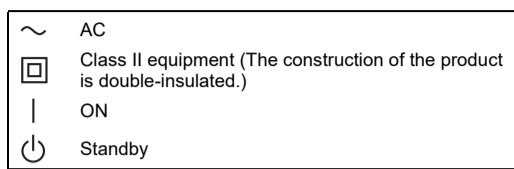

### Safety precautions

#### WARNING!

- To reduce the risk of fire, electric shock or product damage,
  - Do not expose this unit to rain, moisture, dripping or splashing.
  - Do not place objects filled with liquids, such as vases, on this unit.
  - Use only the recommended accessories.
  - Do not remove covers.
  - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

#### CAUTION!

- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit is intended for use in moderate climates.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**AC mains lead**  
• The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.

**Declaration of Conformity (DoC)**  
Hereby, "Panasonic Entertainment & Communication Co., Ltd." declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Customers can download a copy of the original DoC to our RE products from our DoC Server:  
<https://www.ptc.panasonic.eu/compliance-documents>  
Contact to Authorised Representative:  
Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany

Type of wireless	Frequency band	Maximum power (dBm E.I.R.P.)
Bluetooth®	2402 – 2480 MHz	10 dBm

### Caution for AC mains lead

(For the AC mains plug of three pins)  
For your safety, please read the following text carefully.  
This appliance is supplied with a moulded three pin mains plug for your safety and convenience.  
A 5-ampere fuse is fitted in this plug.  
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark or the BSI mark on the body of the fuse.  
If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.  
If you lose the fuse cover the plug must not be used until a replacement cover is obtained.  
A replacement fuse cover can be purchased from your local dealer.

**Before use**  
Remove the connector cover.  
**How to replace the fuse**  
The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.  
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

2. Replace the fuse and close or attach the fuse cover.

Figure A: Fuse (5 ampere)  
Figure B: Fuse (5 ampere)

### Sales and Support Information

**For the United Kingdom and Ireland**  
**Customer Communications Centre**  
• For customers within the UK: 0344 844 3899  
• For customers within Ireland: 01 289 8333  
• Monday – Friday 9:00am – 5:00pm (Excluding public holidays).  
• For further support on your product, please visit our website: [www.panasonic.co.uk](http://www.panasonic.co.uk)

**Direct Sales at Panasonic UK**  
• Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre  
Monday – Friday 9:00am – 5:00pm (Excluding public holidays).  
• Or go on line through our Internet Accessory ordering application at [www.pas-europe.com](http://www.pas-europe.com).  
• Most major credit and debit cards accepted.  
• All enquiries transactions and distribution facilities are provided directly by Panasonic UK.  
• It couldn't be simpler!  
• Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

### Supplied accessories

Check and identify the supplied accessories.  
**For the United Kingdom and Ireland**  
Use numbers indicated in parentheses when asking for replacement parts. (Product numbers correct as of July 2016. These may be subject to change.)

- 2 AC mains leads
- **SC-UX100** 1 FM indoor antenna (RSAX0002)
- **SC-UX102** 1 DAB antenna (RFA3664)
- 1 Remote control (N2QAYB001093)
- 1 Remote control battery
- **SC-UX100** 2 Ferrite cores (JKG0000071)
- **For the United Kingdom and Ireland** 1 Antenna plug adaptor (K1YZ02000013)

**CAUTION!**  
Keep the antenna plug adaptor out of reach of children to prevent swallowing.

### Preparing the remote control

Use alkaline or manganese battery.  
Install the battery so that the poles (+ and –) align with those in the remote control.

### Making the connections

Connect the AC mains lead only after all the other connections have been made.

1. **SC-UX102** Connect the DAB antenna.  
Be sure to tighten fully the nut.  
Rotate the antenna at **A** to improve reception.

2. **SC-UX100** Connect the FM indoor antenna.  
Put the antenna where reception is best.

### Caution for AC mains lead

(For the AC mains plug of three pins)  
For your safety, please read the following text carefully.  
This appliance is supplied with a moulded three pin mains plug for your safety and convenience.  
A 5-ampere fuse is fitted in this plug.  
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark or the BSI mark on the body of the fuse.  
If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.  
If you lose the fuse cover the plug must not be used until a replacement cover is obtained.  
A replacement fuse cover can be purchased from your local dealer.

**Before use**  
Remove the connector cover.  
**How to replace the fuse**  
The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.  
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

2. Replace the fuse and close or attach the fuse cover.

Figure A: Fuse (5 ampere)  
Figure B: Fuse (5 ampere)

### Overview of controls

- 1 **Standby/on switch** [⏻], [⏻/⏻] Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- 2 **Select the audio source**
- 3 **Basic playback control**

Play	Press [▶/▶].
Stop	Press [■].
Pause	Press [⏸/⏸]. Press again to continue playback.
Skip	Press [◀◀◀] or [▶▶▶].
Search	Press and hold [◀◀◀] or [▶▶▶].

- 4 View the setup menu
- 5 View the content information
- 6 Select and confirm an option  
Skip MP3 albums
- 7 Open or close the disc tray
- 8 Decrease the brightness of the display panel  
The illumination is also switched off. To cancel, press the button again.
- 9 Adjust the volume level
- 10 Mute the sound  
To cancel, press the button again. "MUTE" is also cancelled when you adjust the volume or when you switch off the system.
- 11 View the play menu
- 12 Select the sound effects
- 13 Select the jukebox
- 14 Display panel
- 15 USB port (+/-)
- 16 Disc tray  
Put in a disc with the label facing up.
- 17 Remote control sensor  
Distance: Within approximately 7 m  
Angle: Approximately 20° up and down, 30° left and right

### Basic operations

#### Bluetooth®

**Preparation**  
Switch on the Bluetooth® feature of the device and put the device near the system.

#### Pairing a device

- 1 Press and hold [Ⓜ] on the main unit until "PAIRING" is shown.
- 2 Select "SC-UX102" or "SC-UX100" from the Bluetooth® menu of the device.

#### Connecting a device

- 1 Press [Ⓜ].
- 2 Select "SC-UX102" or "SC-UX100" from the Bluetooth® menu of the device.
- 3 Start playback on the device.

**Using the "Panasonic MAX Juke" app**  
You can download and install the free Android™ app "Panasonic MAX Juke" on Google Play™ for additional features, such as to request song playback from multiple devices simultaneously. You can also call up the tracks you want to play through the app. For details on the app, refer to the site below.  
<http://av.jp.n.support.panasonic.com/support/global/cs/audio/app/>  
(This site is in English only.)

#### Radio

- 1 Press [RADIO/AUX] to select "FM".
- 2 Press [PLAY MENU] repeatedly to select "TUNE MODE".
- 3 Press [▲, ▼] to select "MANUAL" and then press [OK].
- 4 Press [◀◀◀] or [▶▶▶] to tune in to the station.  
To tune automatically, press and hold the button until the frequency starts changing quickly.

#### DAB+

- SC-UX102**
- 1 Press [RADIO/AUX] to select "DAB+".  
If you select "DAB+" for the first time, the system will tune automatically.
  - 2 Press [PLAY MENU] repeatedly to select "MANUAL SCAN".
  - 3 Press [▲, ▼] to select the frequency block and then press [OK].  
If no station is detected, "SCAN FAILED" is shown. Adjust the antenna and try again.

### External equipment


You can connect a VCR, DVD player etc., and listen to the audio through this system.

DVD player (not supplied)

Rear panel of this main unit

Auxiliary cable (not supplied)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.  
Android and Google Play are trademarks of Google LLC.

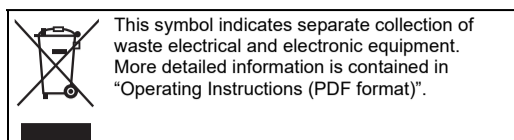


### Svenska

Ditt system och bilderna kan se olika ut.

System	SC-UX102	SC-UX100
Huvudenhet	SA-UX102	SA-UX100
Högtalare	SB-UX100	SB-UX100

**SC-UX102** Indikerar funktioner som är tillämpbara för SC-UX102.  
**SC-UX100** Indikerar funktioner som är tillämpbara för SC-UX100.  
Symbolerna på denna produkt (inklusive tillbehören) representerar följande:

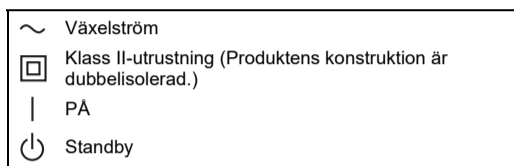

### Säkerhetsföreskrifter

#### VARNING!

- För att reducera risken för brand, elektrisk stöt eller produktskada:
  - Utsätt inte den här apparaten för regn, fukt, droppar eller skvätt.
  - Placera inga föremål fyllda med vätska, som t.ex. vaser, på denna enhet.
  - Använd endast rekommenderade tillbehör.
  - Avlägsna inte höljen.
  - Försök inte reparera denna enhet på egen hand. Låt utbildad servicepersonal utföra service och reparationer.

#### FÖRSIKTIGHET!

- För att reducera risken för brand, elektrisk stöt eller produktskada:
  - För att apparaten ska få god ventilation, installera eller placera den inte i en bokhylla, ett inbyggt skåp eller i andra begränsade utrymmen.
  - Se till att enhetens ventilationsöppningar inte är förtäppta av tidningar, bordsdukar, gardiner eller liknande föremål.
  - Ställ inga föremål med öppen låga, så som ett tätt stearinljus, ovanpå enheten.
- Denna enhet är avsedd för användning på platser med tempererat klimat.
- Det kan inträffa att den här enheten under användningen tar emot radiostörningar, orsakade av mobiltelefoner. Öka avståndet mellan enheten och mobiltelefonen om störningarna är uppenbara.
- I denna produkt används laser. Om apparaten och dess funktioner används eller justeras på annat sätt än vad som specificeras i denna bruksanvisning kan den avge farlig strålning.  
Våglängd: 790 nm (CD)  
Laserstyrka: Ingen farlig strålning

**AC-strömsladd**  
• Strömkontakten är urkopplingsenheten. Installera denna enhet så att strömkontakten kan kopplas ur från uttaget direkt.

- Explosionsrisk förekommer om batteriet inte sätts i korrekt. Ersätt endast med sort som rekommenderas av tillverkaren.
- När du gör dig av med batterierna, var god kontakta dina lokala myndigheter eller din lokala återförsäljare och fråga efter rätt metod för avfallshantering.
- Värm inte upp och utsätt inte batteriet för öppen eld.
- Lämna inte batteriet(erna) i en bil som utsätts för direkt solljus under en längre period med dörrar och fönster stängda.

**Försäkringen om överensstämmelse (DoC)**  
Härmed deklarerar "Panasonic Entertainment & Communication Co., Ltd." att denna produkt överensstämmer med grundläggande krav och andra relevanta bestämmelser i Direktiv 2014/53/EU.

Kunderna kan ladda ner en kopia av originalförsäkringen (DoC) gällande våra RE-produkter från vår DoC-server:  
<https://www.ptc.panasonic.eu/compliance-documents>  
Kontakt till Auktoriserad Representant:  
Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Tyskland  
Tillverkad av:  
Panasonic Entertainment & Communication Co., Ltd.  
1-10-12, Yagumohigashi-machi, Moriguchi, Osaka, Japan

Typ av trådlös anslutning	Frekvensområde	Maximal effekt (dBm EIRP)
Bluetooth®	2402 – 2480 MHz	10 dBm

### Medföljande tillbehör

Var god kontrollera och pricka av de medföljande tillbehören.

- 2 AC-strömsladdar
- **SC-UX100** 1 FM-inomhusantenn
- **SC-UX102** 1-antennen
- 1 Fjärrkontroll (N2QAYB001093)
- 1 Batteri till fjärrkontrollen
- **SC-UX100** 2 Ferritkärnor
- **SC-UX102** 1 Antennkontaktadaptor

**FÖRSIKTIGHET!**  
Håll antennkontaktadaptern utom räckhåll för barn för att undvika att de stoppar den i munnen och sväljer den.


### Förbereda fjärrkontrollen

Använd alkaliska batteri eller brunnstsbatterier.  
Sätt i batteriet så att polerna (+ och –) är riktade med dem i fjärrkontrollen.


### Koppla anslutningarna

Anslut inte AC-strömsladden innan alla andra kopplingar utförts.

- 1 **SC-UX102** Anslut DAB-antennen.  
Se till att dra åt muttern helt.  
Rotera antennen vid **A** för att förbättra mottagningen.

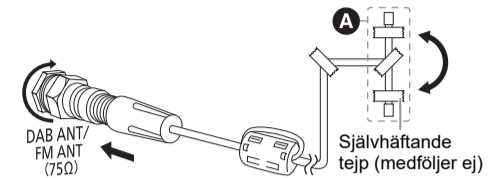

**SC-UX100** Anslut FM-inomhusantennen.  
Placera antennen på en plats där du får bäst mottagning.

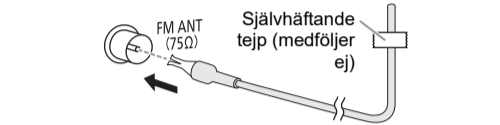

#### 2 Anslut högtalarna.

- 1 **SC-UX102** Fästa ferritkärnan  
Dra i fikarna (kåda sidor) för att öppna.
- 2 Placera högtalarkablarna på en av de konkava ytorna. Se till så att ferritkärnan är ca 7 cm bort från högtalarkablarnas ände.
- 3 Rulla högtalarkablarna två gånger runt ferritkärnan och på den andra konkava ytan.
- 4 Stäng ferritkärnan så att det klickar.

**Observera:**  
Om ferritkärnan inte fästs på högtalarkablarna kan det resultera i dålig radiomottagning.

Anslut högtalarkablarna till uttagen med samma färg.

Röd  
Svart

Var försiktig så att du inte korsar (kortslater) eller kastar om polariteten på högtalarkablarna eftersom detta kan skada högtalarna.

#### 3 Anslut AC-strömsladden.

### Beskrivning av kontrollerna

- 1 **Strömställare standbyläge** på [⏻], [⏻/⏻] Tryck på knappen för att ställa apparaten i standbyläge då den är på, eller tvärtom. Apparaten förbrukar en aning ström även när den står i standbyläge.
- 2 **Välj ljudkälla**
- 3 **Grundläggande uppspelningskontroll**

Spela	Tryck på [▶/▶].
Stopp	Tryck på [■].
Pausa	Tryck på [⏸/⏸]. Tryck en gång till för att fortsätta uppspelning.
Hoppa över	Tryck på [◀◀◀] eller [▶▶▶].
Sök	Tryck och håll nere [◀◀◀] eller [▶▶▶].
- 4 Visa inställningsmeny
- 5 Visa information om innehåll
- 6 Väj eller bekräfta ett alternativ  
Hoppa över MP3-album
- 7 Öppna eller stäng skivluckan
- 8 Sänk ljudstyrkan på displaypanelen  
Belysningen stängs av också.  
För att avbryta, tryck en gång till på knappen.
- 9 Justera volymnivån
- 10 Stäng av ljudet  
För att avbryta, tryck en gång till på knappen. "MUTE" avbryts även då du justerar volymen eller då du stänger av systemet.
- 11 Visa uppspelnings-meny
- 12 Välj ljudeffekter
- 13 Välj jukeboxen
- 14 Displaypanel
- 15 USB-port (+/-)
- 16 Skivfack  
Sätt i en skiva med etiketten vänd uppåt.
- 17 Fjärrkontrollsensor  
Avstånd: Inom ungefär 7 m  
Vinkel: Ungefär 20° uppåt och nedåt, 30° till vänster och till höger

### Grundläggande operationer

#### Bluetooth®

**Förberedelser**  
Sätt på Bluetooth®-funktionen på enheten och placera enheten nära systemet.

#### Koppla ihop en enhet

- 1 Tryck och håll nere [Ⓜ] på huvudenheten tills "PAIRING" visas.
- 2 Välj "SC-UX102" eller "SC-UX100" från enhetens Bluetooth®-meny.

#### Ansluta en enhet

- 1 Tryck på [Ⓜ].
- 2 Välj "SC-UX102" eller "SC-UX100" från enhetens Bluetooth®-meny.
- 3 Starta uppspelning på enheten.

**Använda appen "Panasonic MAX Juke"**  
Du kan ladda ner och installera Android™-gratisappen "Panasonic MAX Juke" på Google Play™ för ytterligare funktioner, som att önska låt uppspelning från flera enheter samtidigt. Du kan kalla på spåren vill spela upp genom appen. För mer information om appen, se webbplatsen nedan.  
<http://av.jp.n.support.panasonic.com/support/global/cs/audio/app/>  
(Denna webbplats finns endast på engelska.)

#### Radio

- 1 Tryck på [RADIO/AUX] för att välja "FM".
- 2 Tryck på [PLAY MENU] upprepat för att välja "TUNE MODE".
- 3 Tryck på [▲, ▼] för att välja "MANUAL" och sedan på [OK].
- 4 Tryck på [◀◀◀] eller [▶▶▶] för att söka upp stationen.  
För att söka upp automatiskt, tryck och håll nere knappen tills frekvensen börjar ändras snabbt.

#### DAB+

- SC-UX102**
- 1 Tryck på [RADIO/AUX] för att välja "DAB+".  
Om du väljer "DAB+" för första gången ställer systemet in automatiskt.
  - 2 Tryck på [PLAY MENU] för att välja "MANUAL SCAN".
  - 3 Tryck på [▲, ▼] för att välja frekvensblock och tryck sedan på [OK].  
Om ingen station hittas, visas "SCAN FAILED".  
Justera antennen och försök igen.

### Extern utrustning

Du kan ansluta en VCR, DVD-spelare etc., och lyssna på ljudet genom detta system.

DVD-spelare (medföljer ej)

Bakre panelen på denna huvudenhet

AUX IN

Ljudkabel (medföljer ej)

AUDIO OUT

Bluetooth®-ordmärket och logotyperna är registrerade varumärken som tillhör Bluetooth SIG, Inc. och all användning som Panasonic Holdings Corporation gör av sådana märken sker under licens. Andra varumärken och varumamn tillhör sina respektive ägare.  
Android och Google Play är varumärken som tillhör Google LLC.

