COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

Thank you for purchasing the COOPER STORAGE RADIATOR COVER.
Please read the instructions carefully to ensure safe operation of the product.

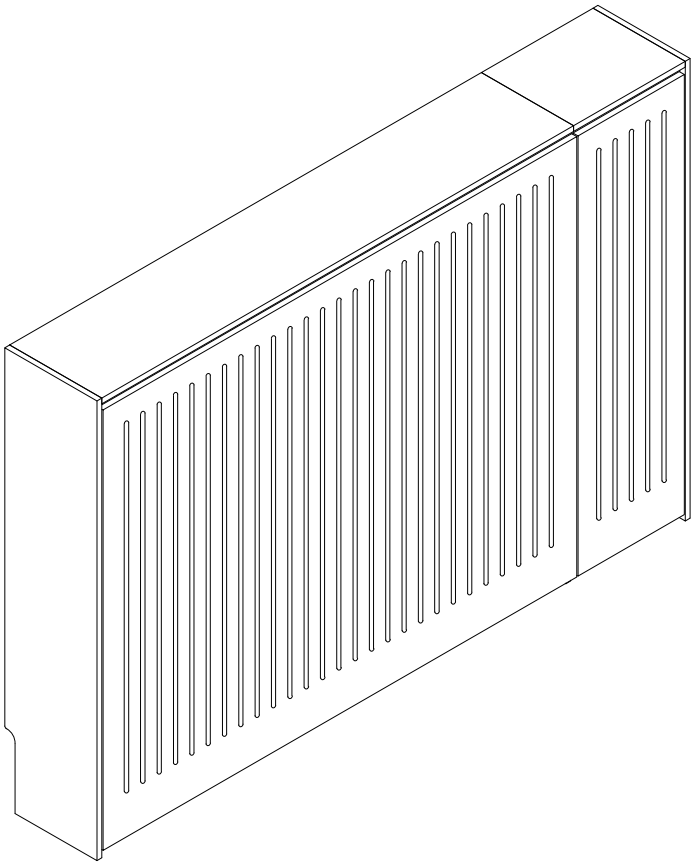

Size: L141.6xW22xH95cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessar y parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tool Required

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

Refer the dimension image for your selected radiator cover to check that it will fit.

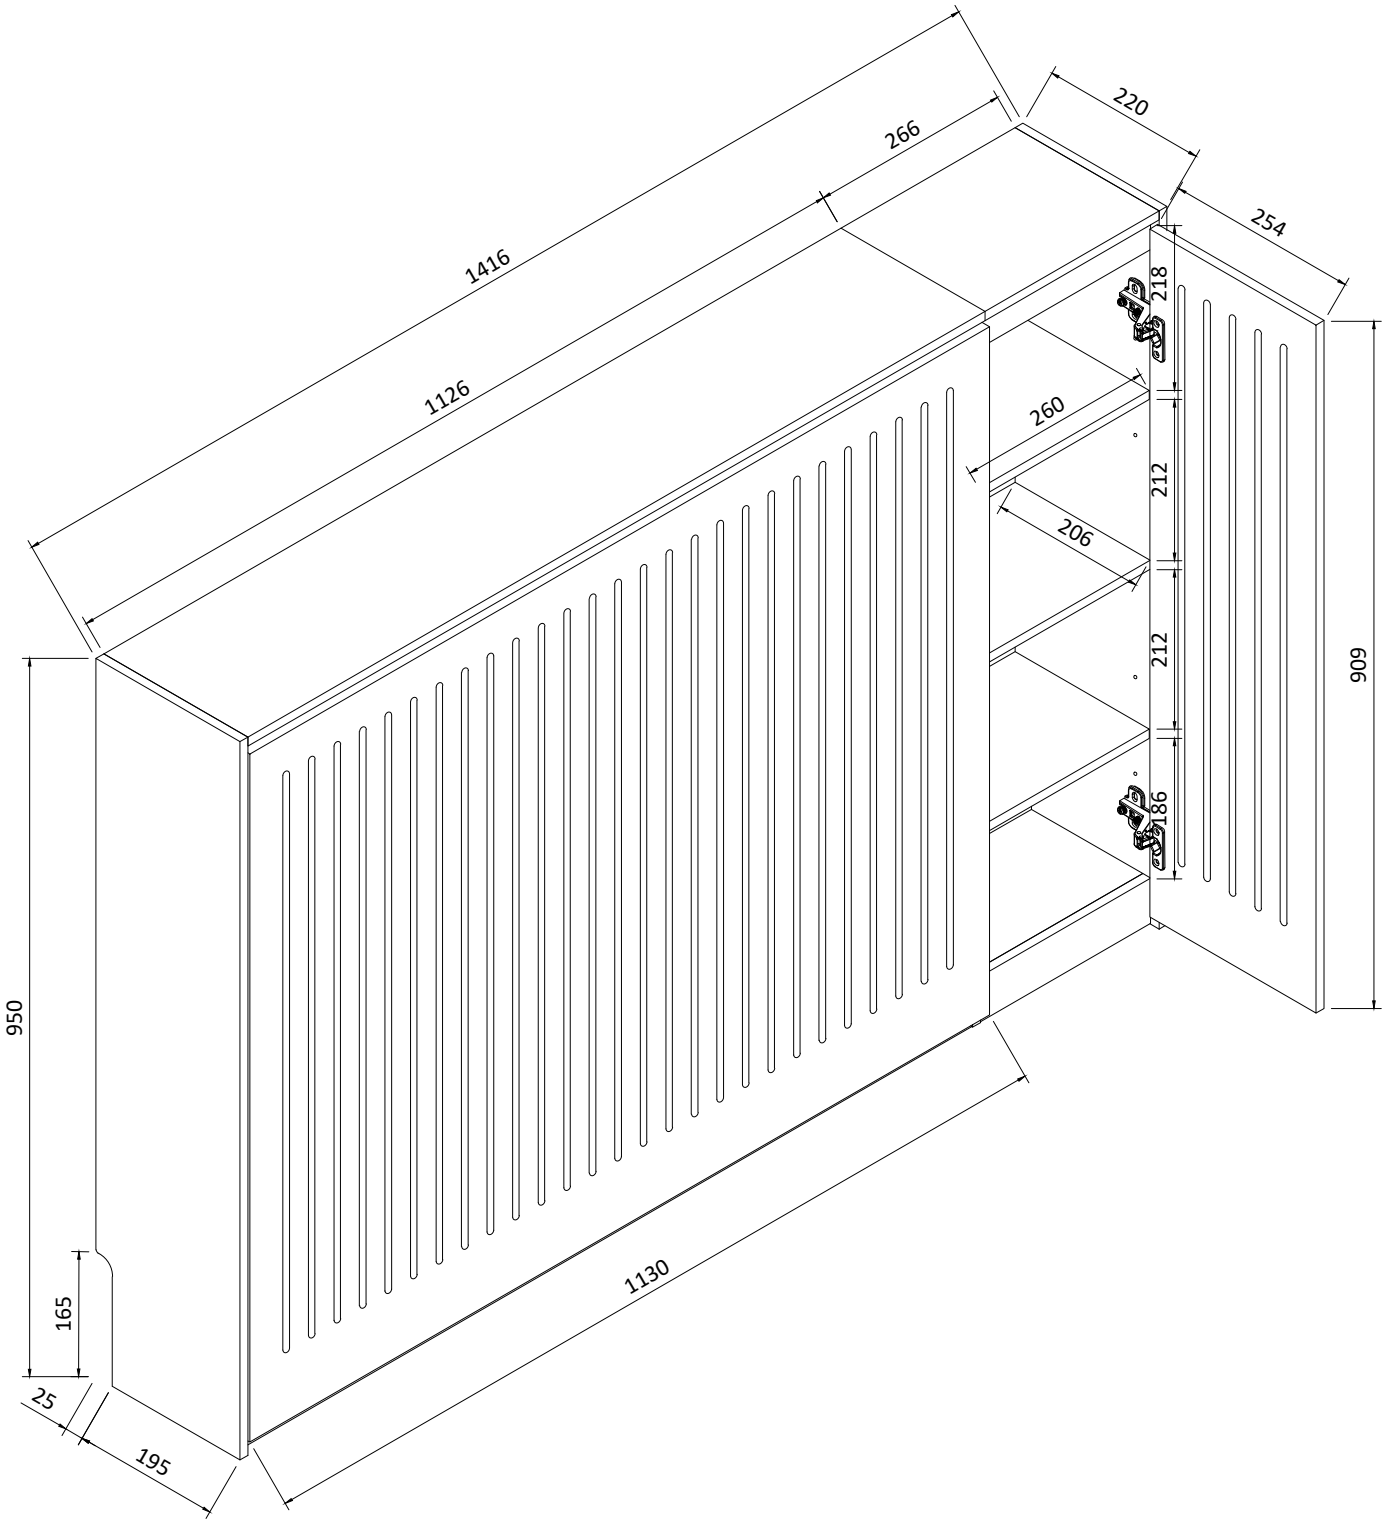

V1 6/25

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed .
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly.
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS

DO NOT use power tools to construct this product.
DO NOT over tighten screws or bolts.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT stand on the product.
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are use to prevet such items damaging your table top.
We recommend the use of wall safety bracket provided for safety reasons.
N.B. Wall fixings suitable for a solid wall are included although the wall plug provided may not be suitable for another type of walls such as hollow walls.
Fixings suitable for your wall types must be obtained separately.
If in doubt please consult a qualified trade person.
Always ensure the area to be drilled is free from hidden electrical wires,water and gas pipe.
It is essential that this unit is fixed to a wall with the fixing provided.

CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.

To clean wipe with a sponge and warm soapy water. Do not use solvent based cleanersor detergents as they can bleach or damage the product.

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

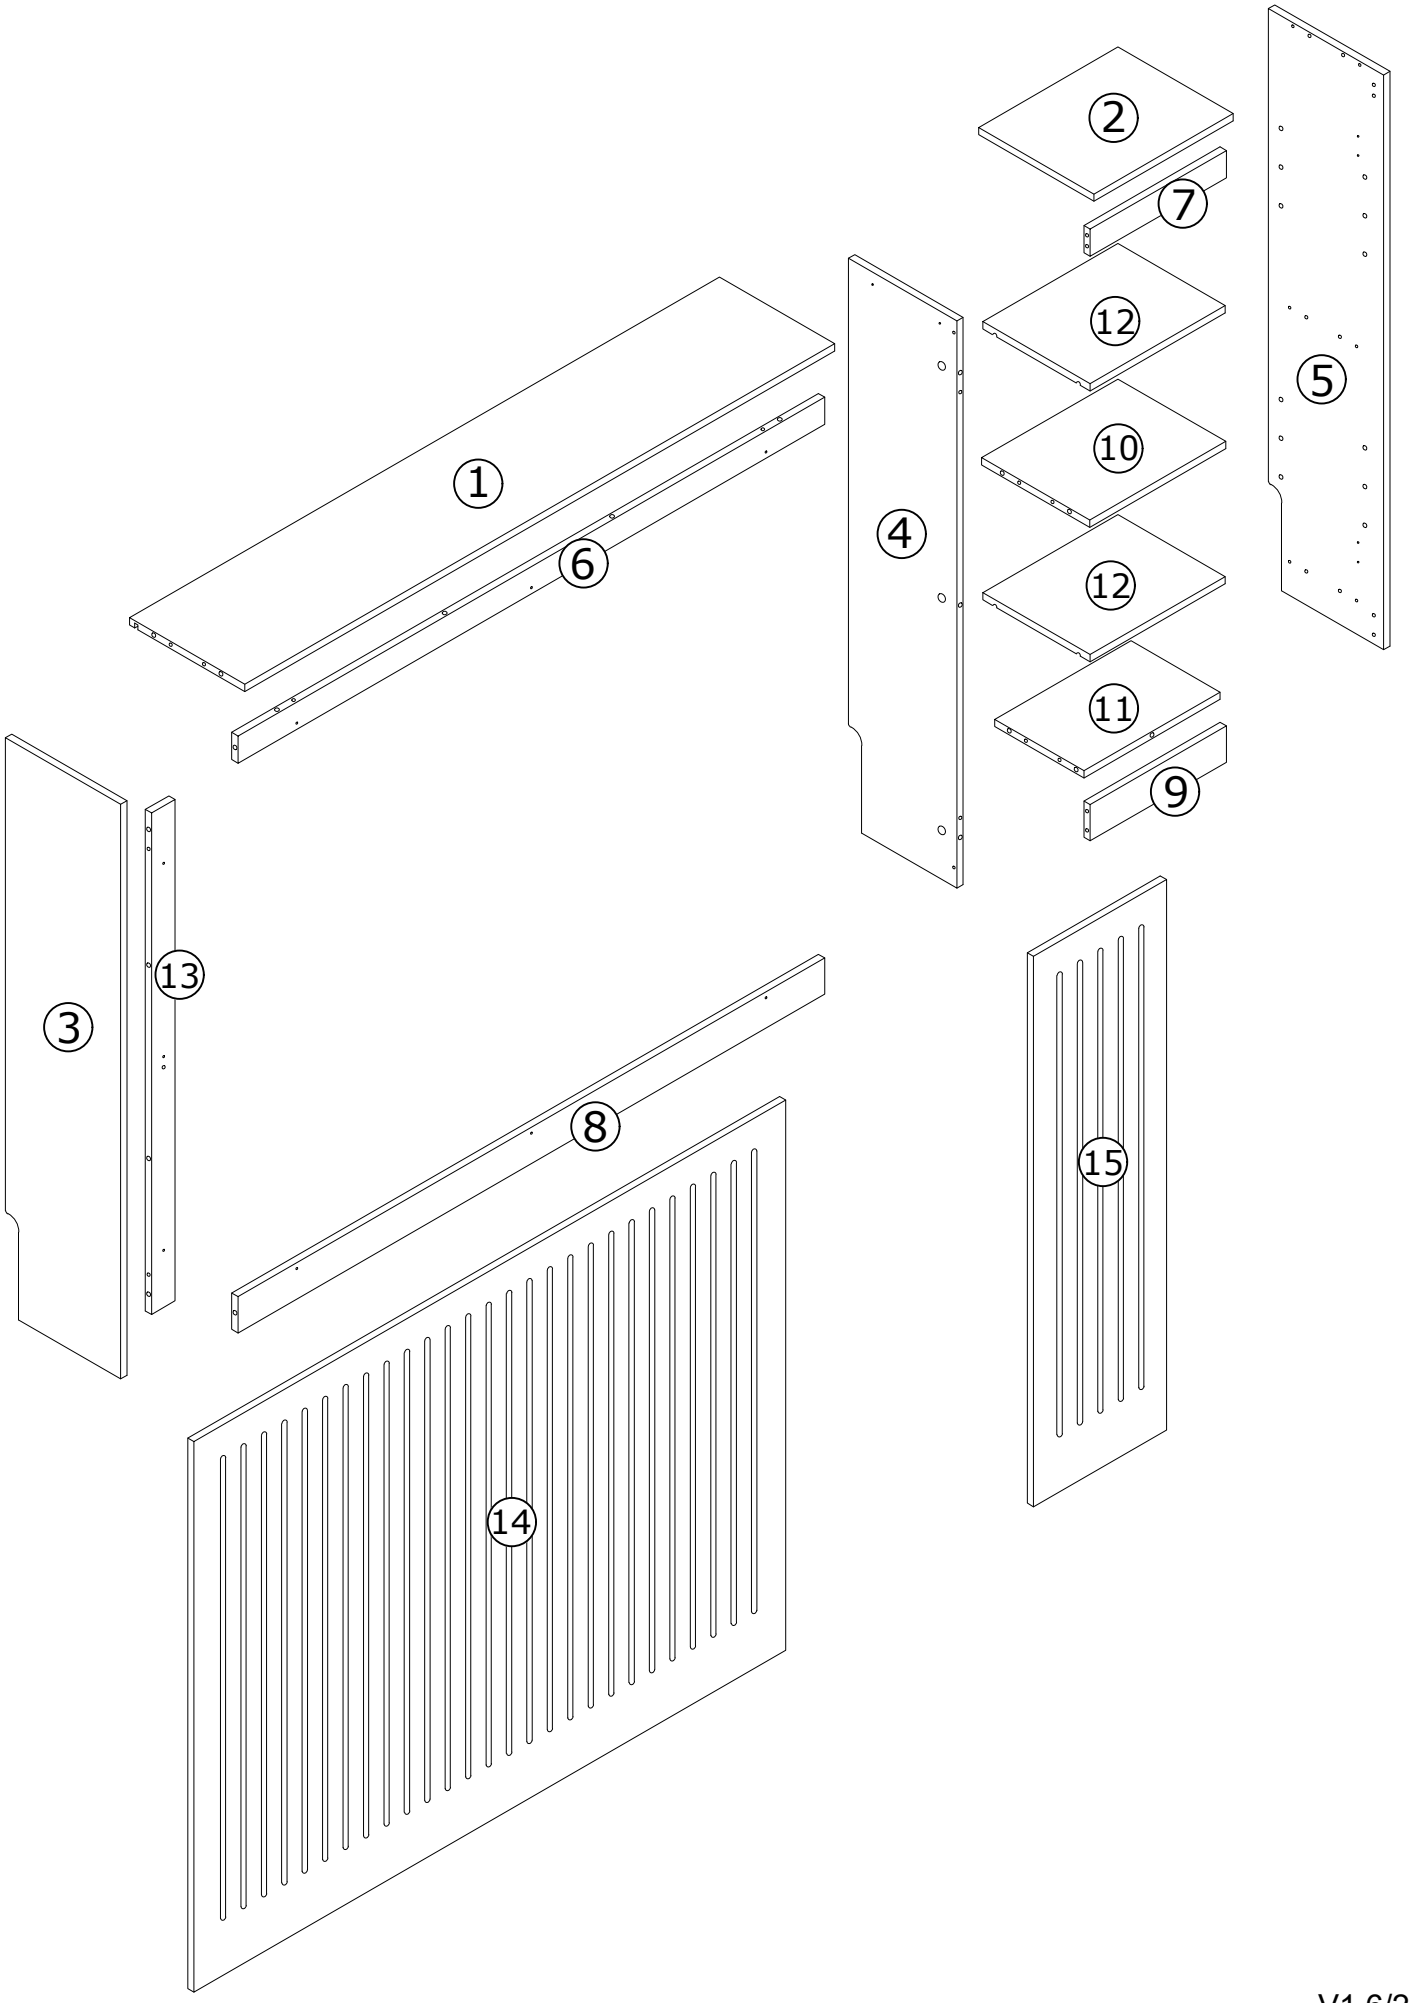

V1 6/25

Parts

① 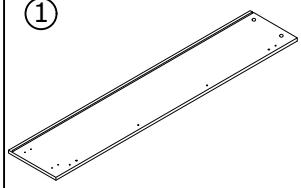	② 	③ 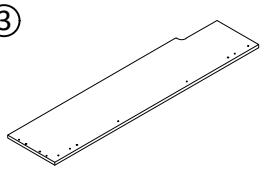	④ 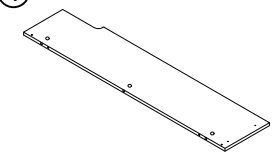
Long Top panel Qty: 1PC	Short Top panel Qty: 1PC	Left Side panel Qty: 1PC	Middle panel Qty: 1PC
⑤ 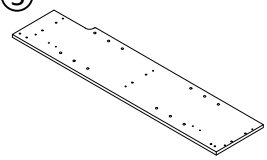	⑥ 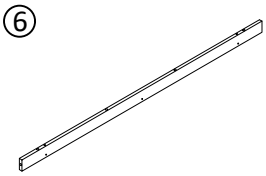	⑦	⑧ 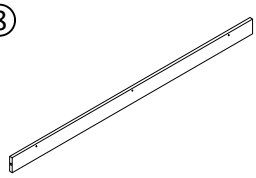
Right Side panel Qty: 1PC	Top Long Support Bar Qty: 1PC	Top Short Support Bar Qty: 1PC	Bottom Long Support Bar Qty: 1PC
⑨ 	⑩ 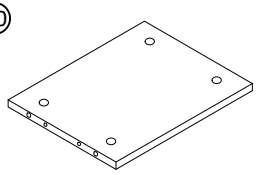	⑪ 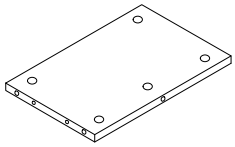	⑫ 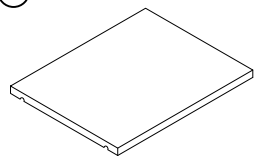
Bottom Short Support Bar Qty: 1PC	Middle Shelf Qty: 1PC	Bottom panel Qty: 1PC	Adjustable shelf Qty:2PCS
⑬ 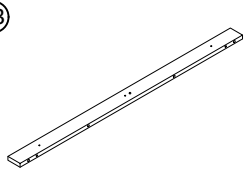	⑭ 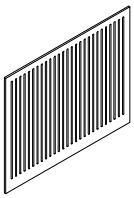	⑮ 	
Left hand Vertical panel Qty: 1PC	Front panel Qty: 1PC	Door Qty:1PC	

Fittings(to scale)

Ref	Dimensions	Qty
A	Cam bolt（6x35mm）	28
B	Wood dowel（6x30mm）	26
C	Cam（15x10mm）	28
D	Wood dowel（6x15mm）	1
E	Screw（4x20mm）	9
F	Screw（4x40mm）	4
K	Screw（4x12 mm）	8
L	Screw（4x10 mm）	12

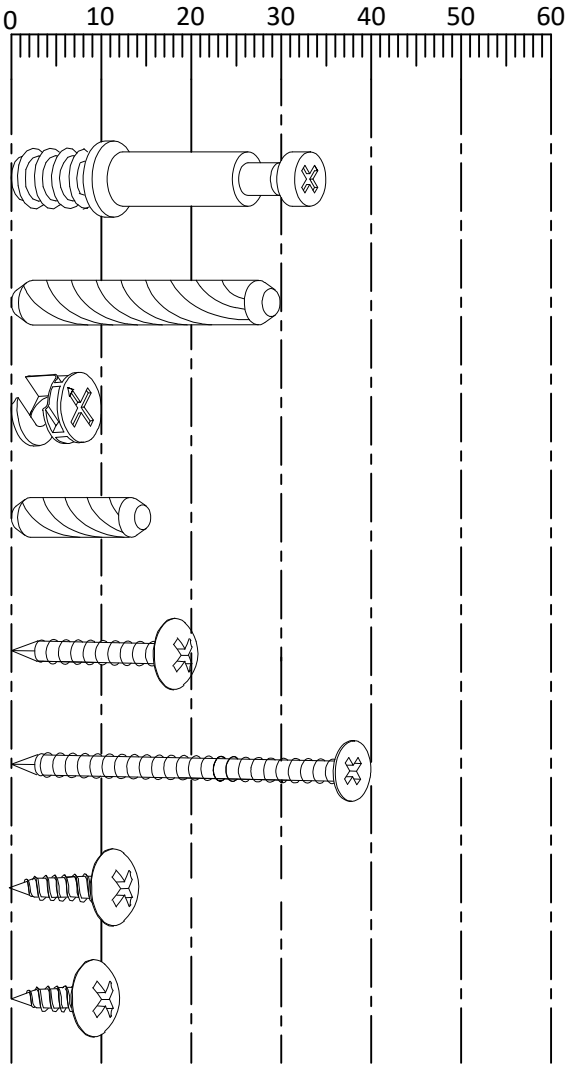

(Not to scale)

G	Wall plug	4
H	Wall Bracket	2
I	Shelf bracket	8
J	Hinge	2
M	Bracket	4
N	Washer	4

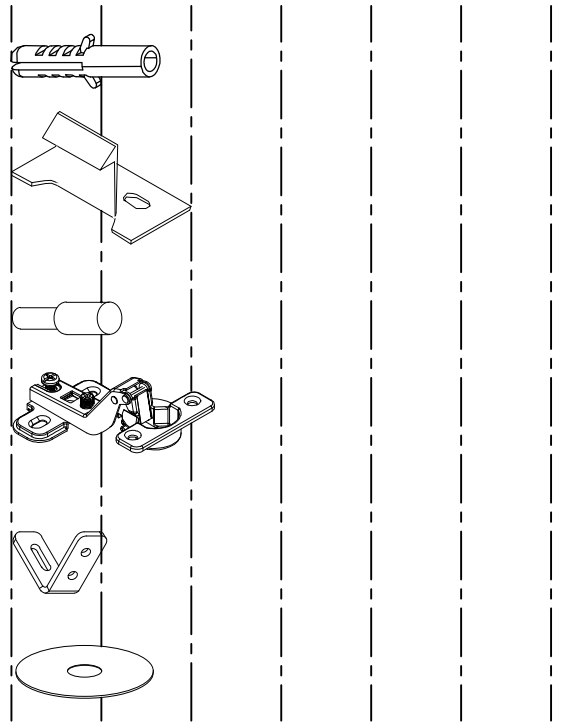

Layout Parts on Soft Surface

Lay out all parts on a soft surface i.e. Rug, Carpet or Packaging Carton

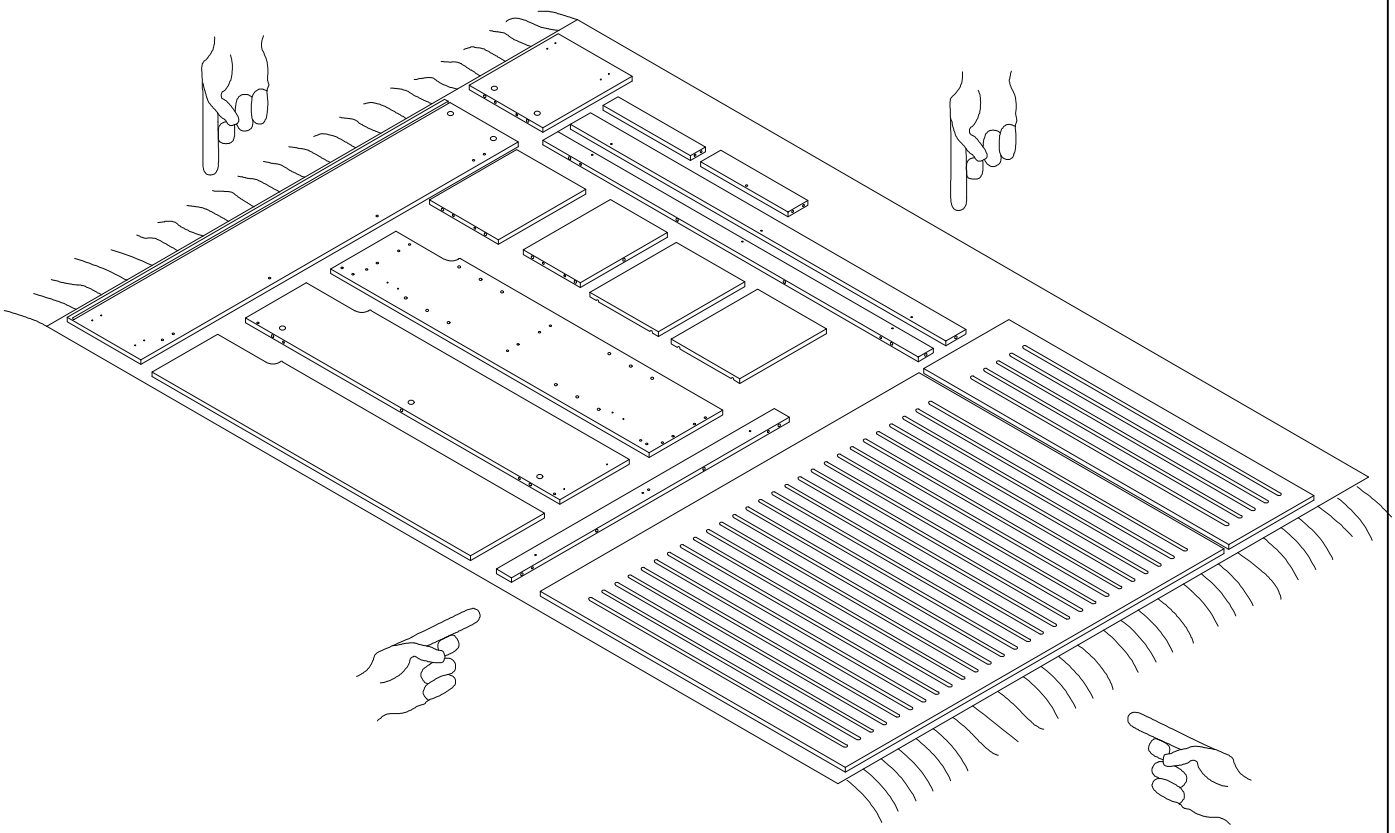

CAUTION:There are many small components used in the construction of this product.
Please keep these components away from young children whilst assembling this product.
If you keep the fittings in a bowl during assembly you will be less likely to lose them!

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 1	Parts Required
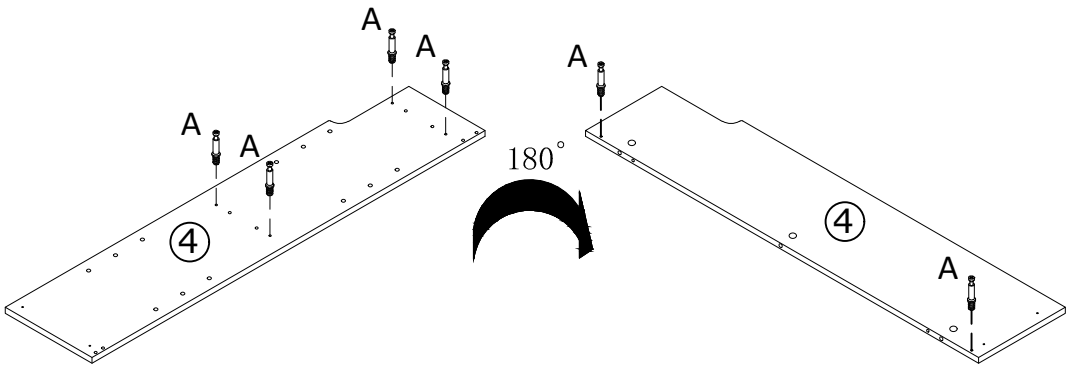	④ ×1 A Cam bolt（6x35mm）×6

STEP 2	Parts Required
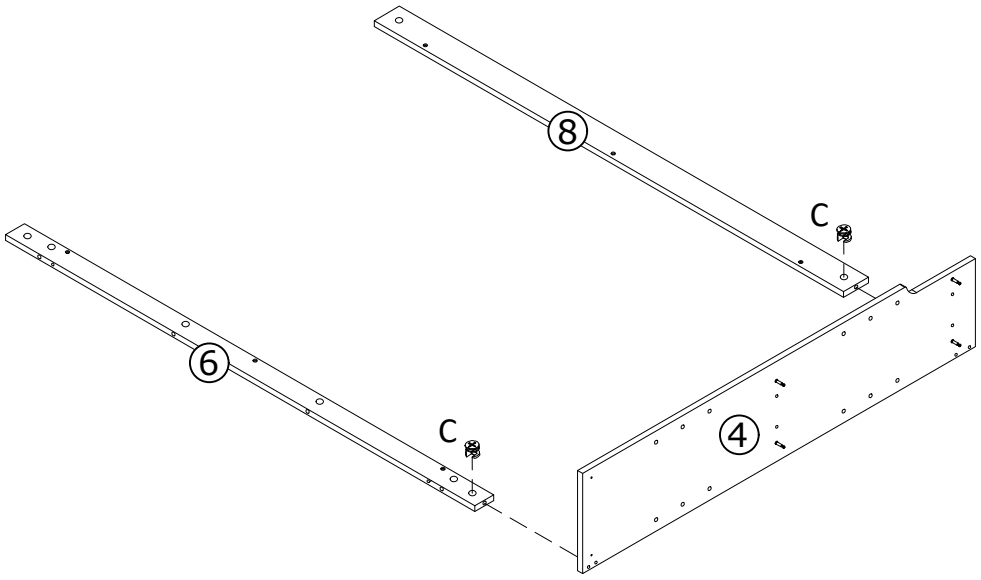	⑥ ×1 ⑧ ×1 C Cam（15x10mm）×2

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 3	Parts Required
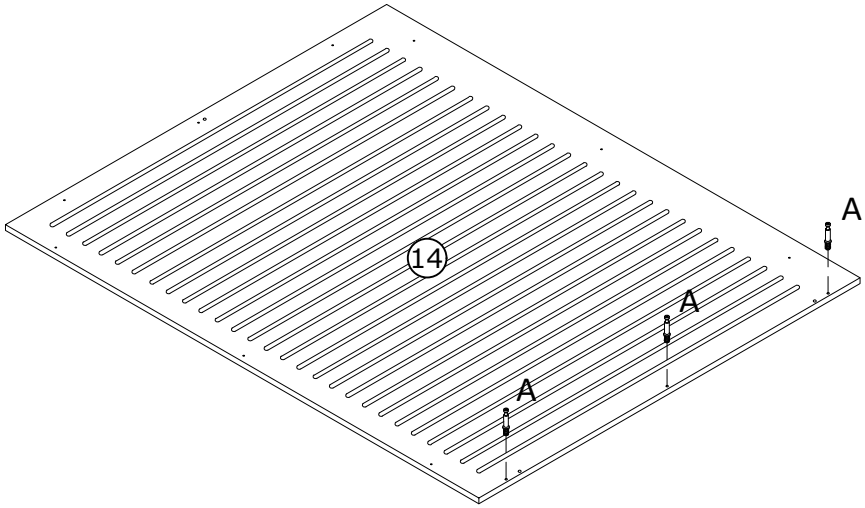	⑭ ×1 A Cam bolt（6x35mm）×3

STEP 4	Parts Required
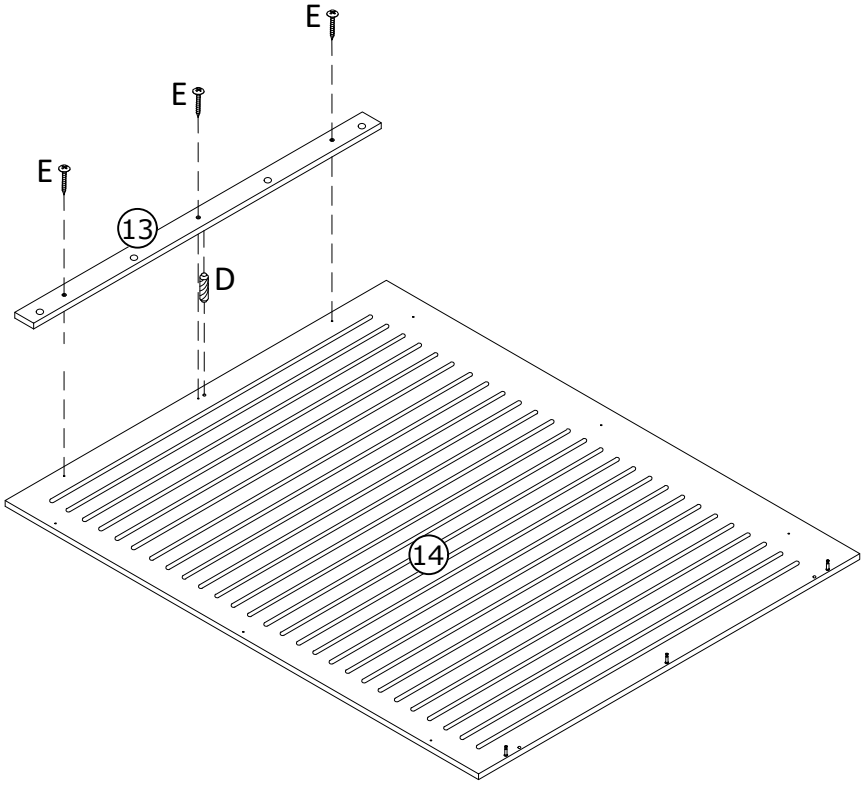	⑬ ×1 D Wood dowel（6x15mm）×1 E Screw (4x20 mm） x 3

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 5	Parts Required
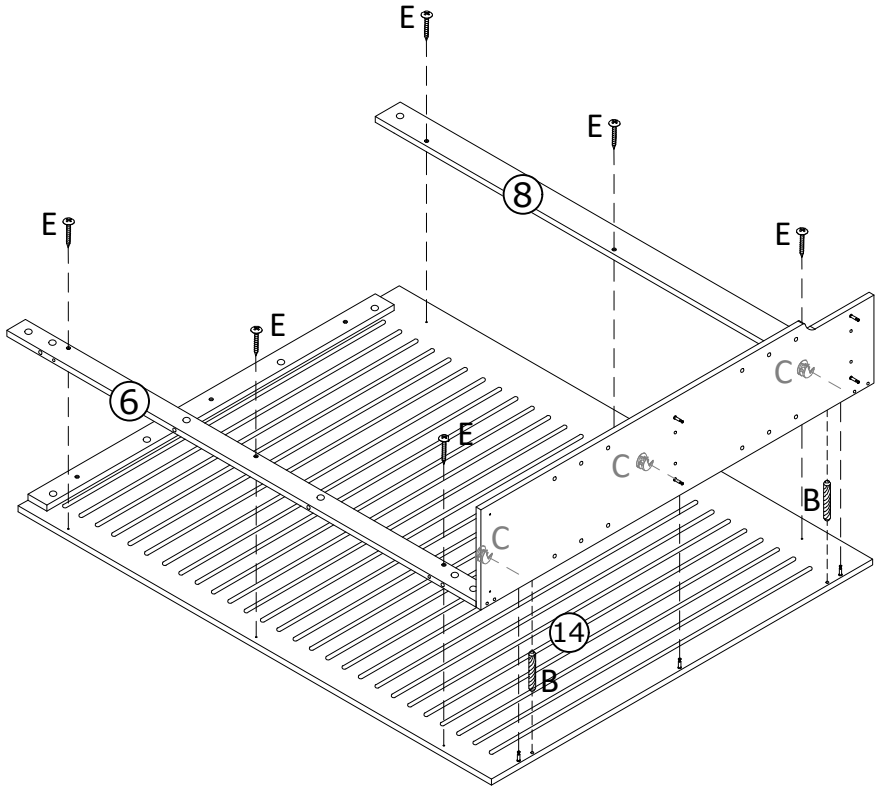	B Wood dowel（6x30mm）×2 C Cam（15x10mm）×3 E Screw (4x20 mm） x 6

STEP 6	Parts Required
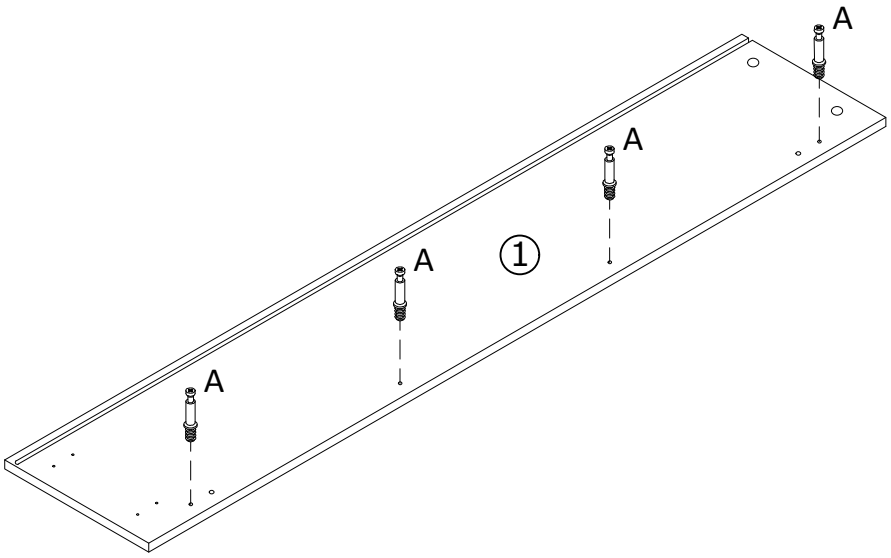	① ×1 A Cam bolt（6x35mm）×4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 7	Parts Required
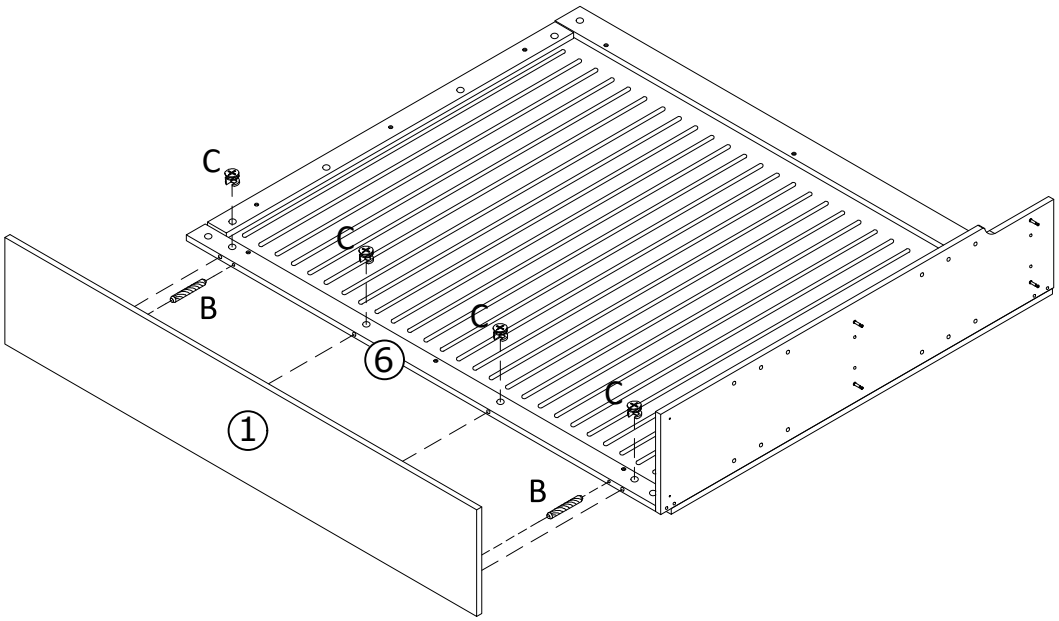	B Wood dowel（6x30mm）×2 C Cam（15x10mm）×4

STEP 8	Parts Required
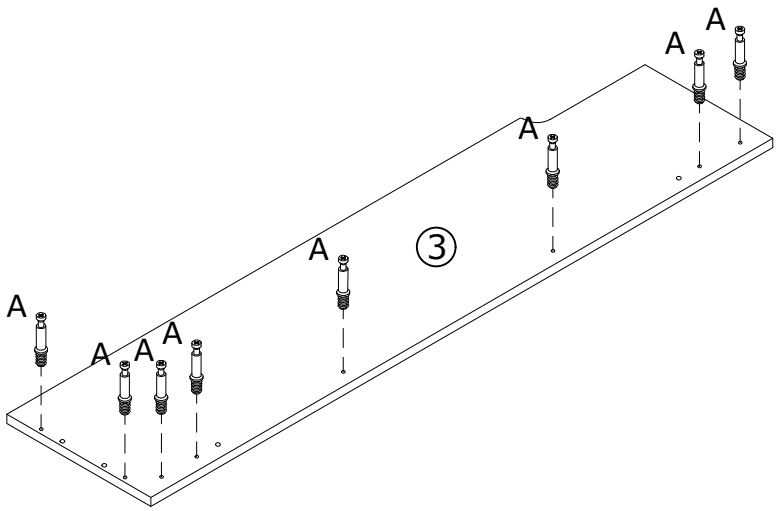	③ ×1 A Cam bolt（6x35mm）×8

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 9	Parts Required
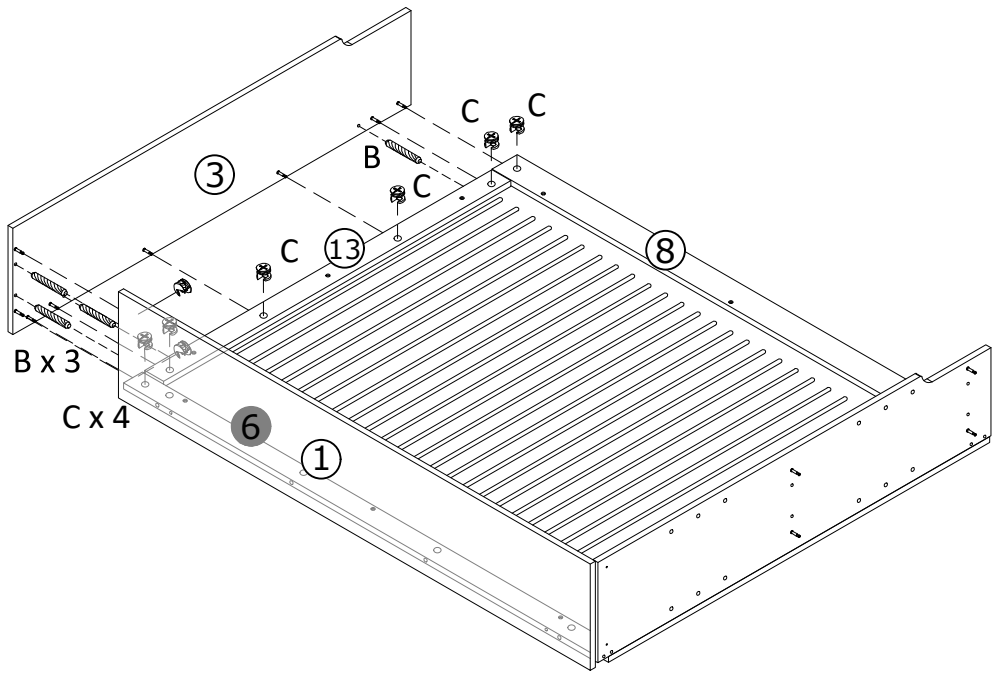	B Wood dowel（6x30mm）×4 C Cam（15x10mm）×8

STEP 10	Parts Required
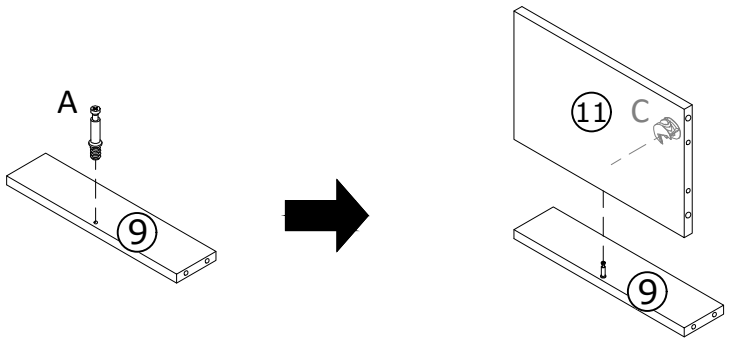	⑨ ×1 ⑪ ×1 A Cam bolt（6x35mm）×1 C Cam（15x10mm）×1

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 11

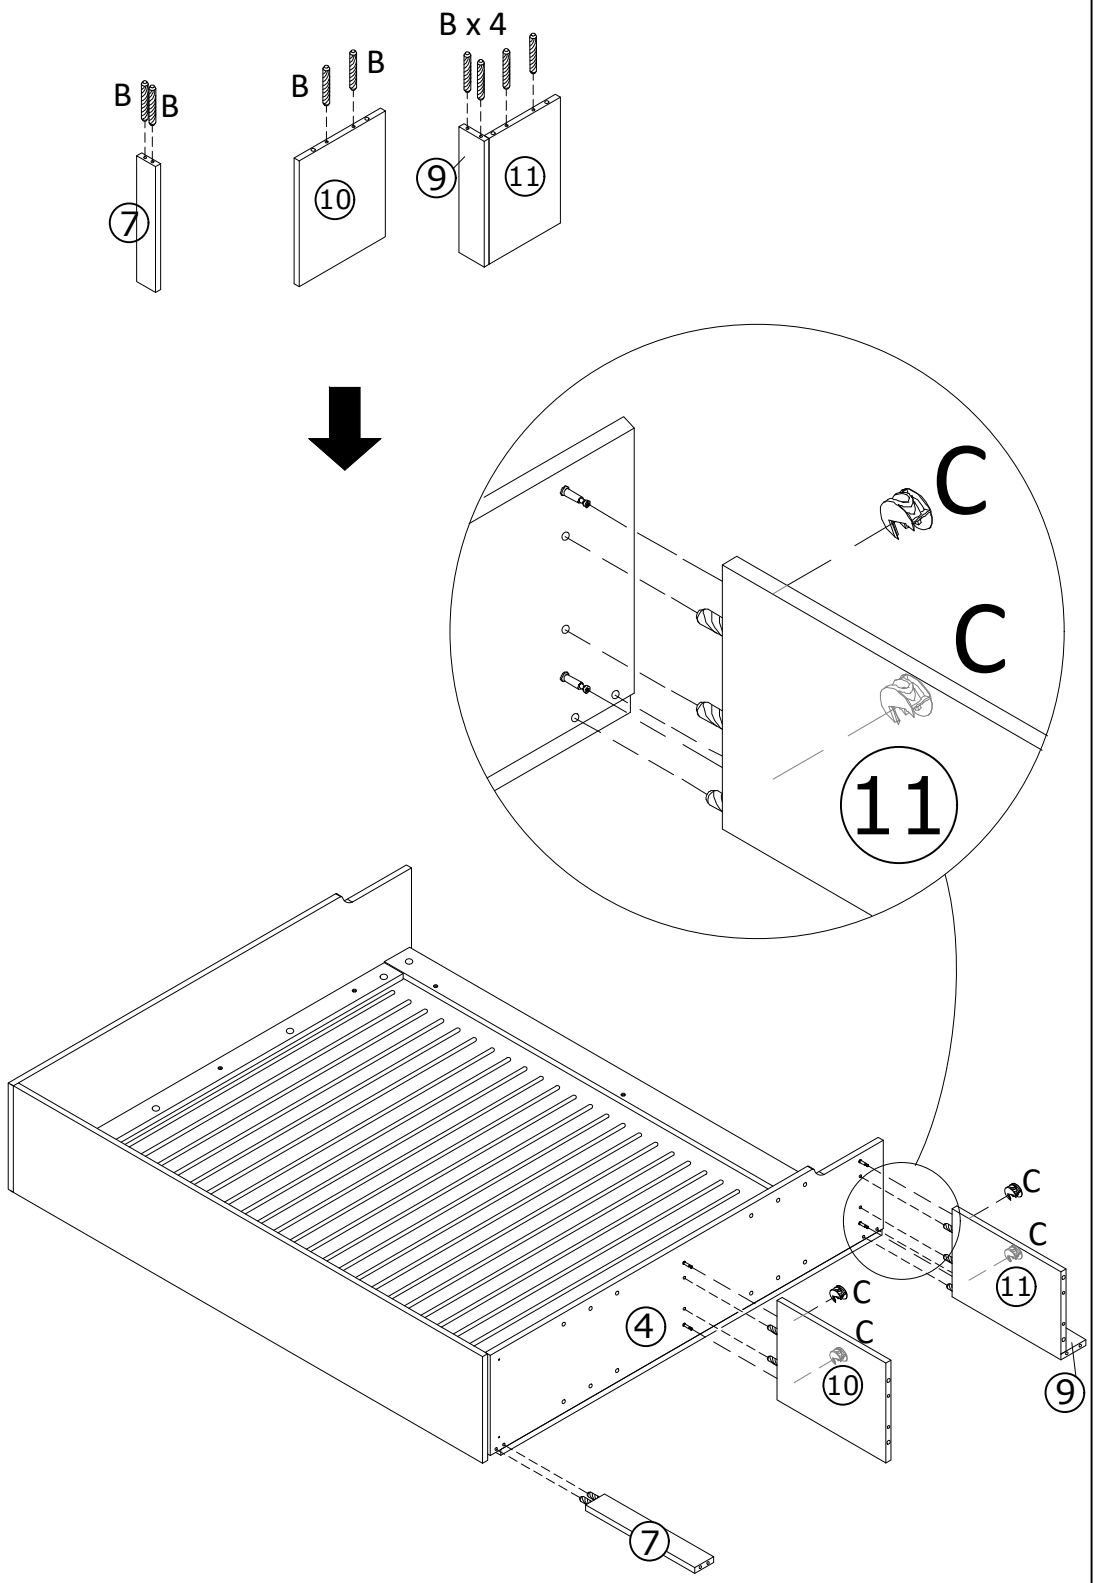

Parts Required

⑦ ×1
⑩ ×1

B Wood dowel（6x30mm）×8
C Cam（15x10mm）×4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 12	Parts Required
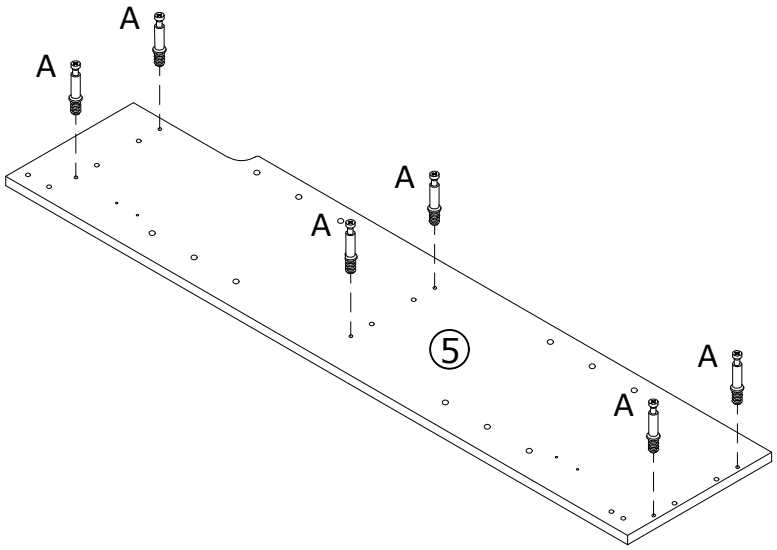	⑤ ×1 A Cam bolt（6x35mm）×6

STEP 13	Parts Required
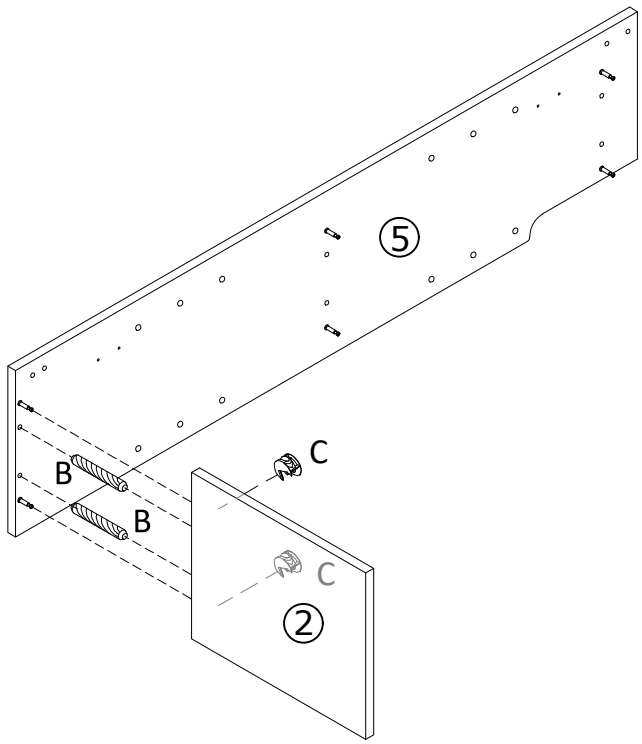	② ×1 B Wood dowel（6x30mm）×2 C Cam（15x10mm）×2

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 14	Parts Required
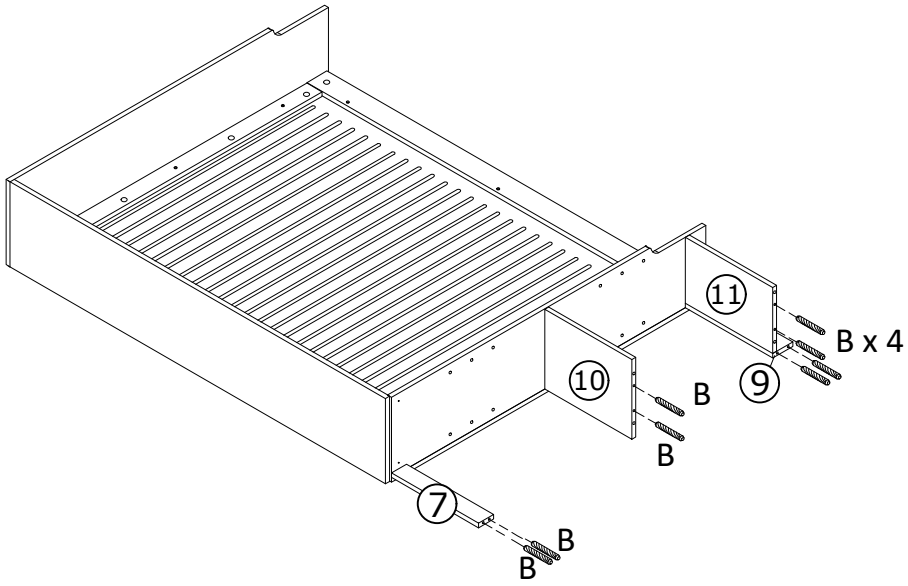 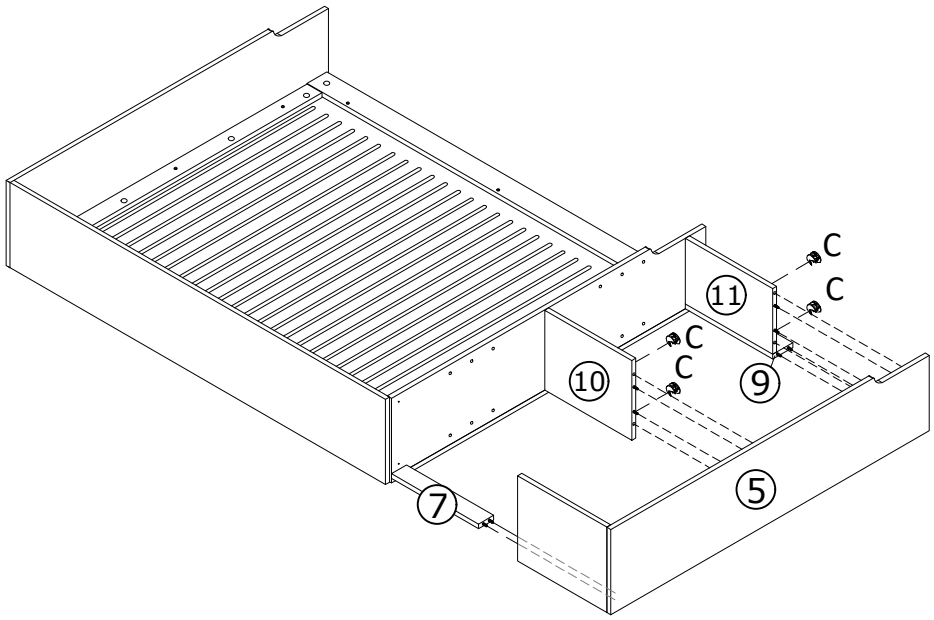	B Wood dowel（6x30mm）×8 C Cam（15x10mm）×4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 15	Parts Required
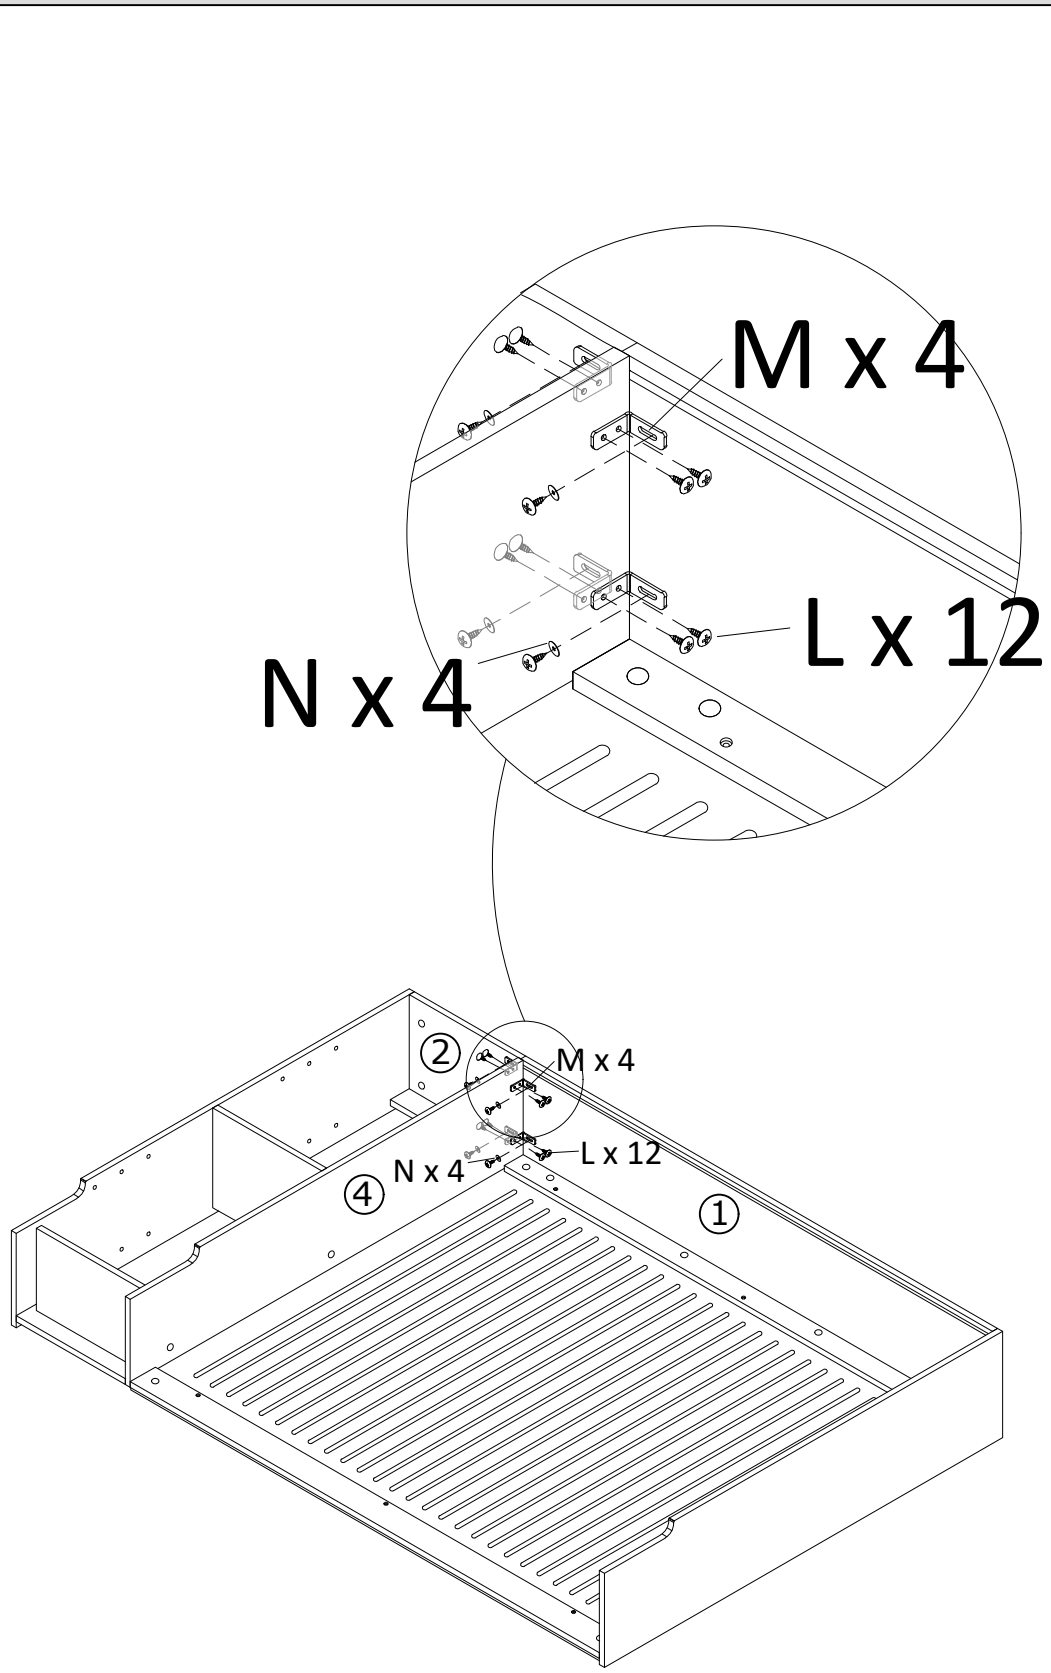	L Screw (4x10 mm) x 12 M Bracket x 4 N Washer x 4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 16	Parts Required
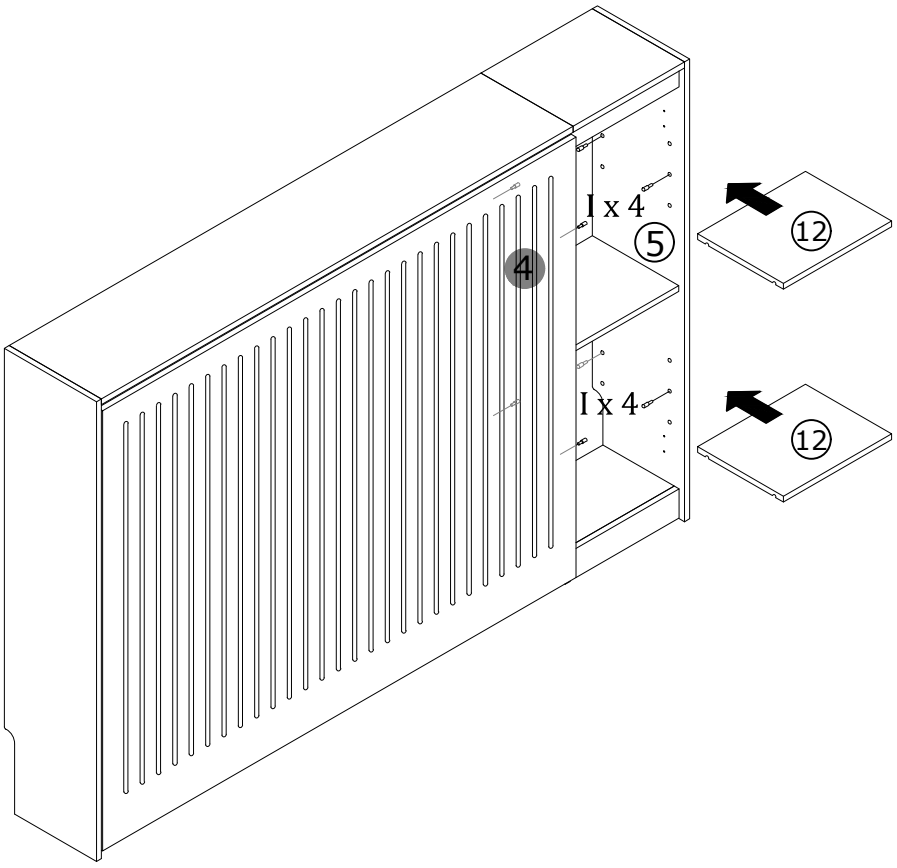	⑫ ×2 I Shelf bracket ×8

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 17	Parts Required
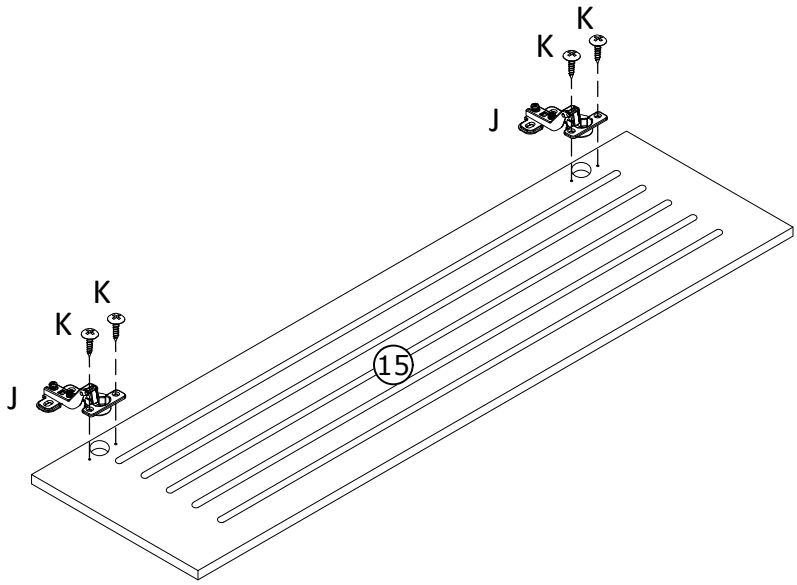	⑮ ×1 J Hinge × 2 K Screw（4x12mm）× 4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 18	Parts Required
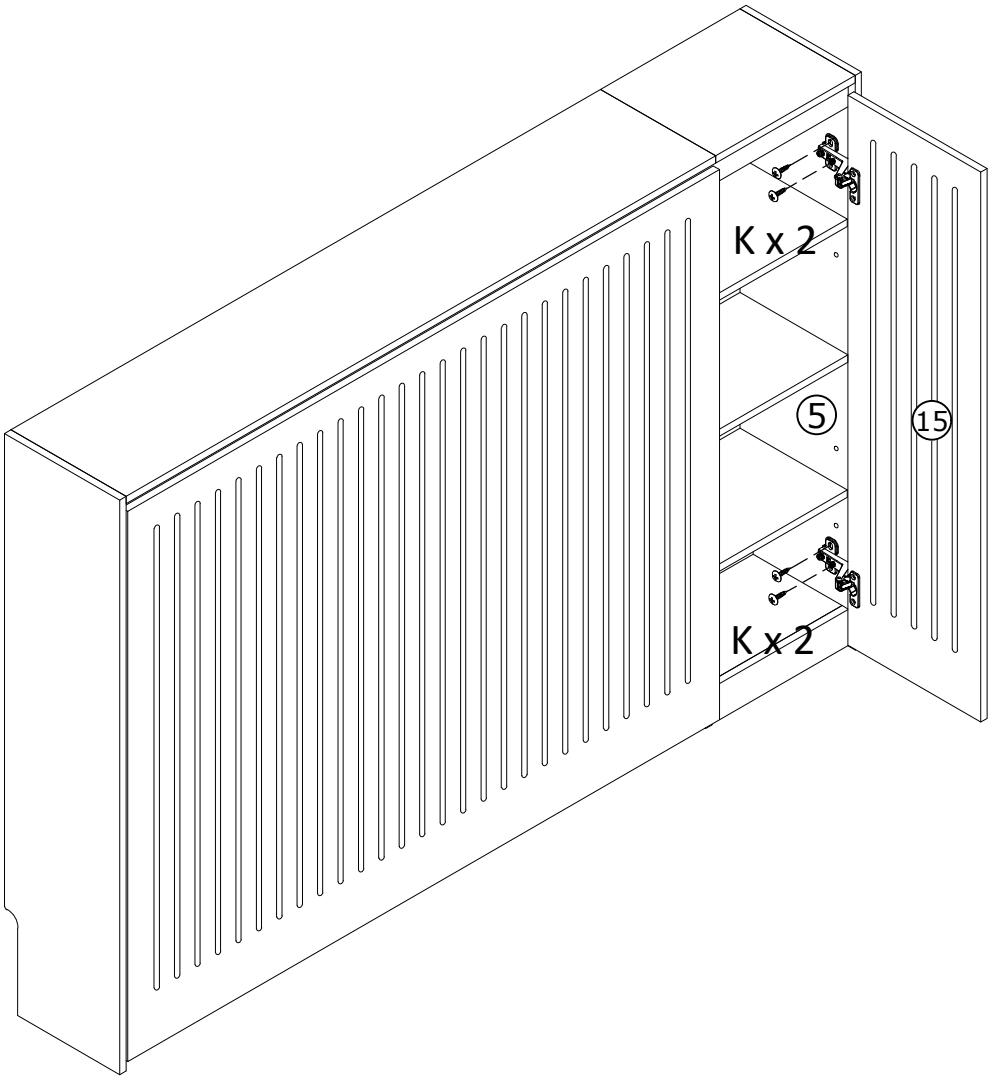	K Screw（4x12mm）× 4

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 19	Parts Required

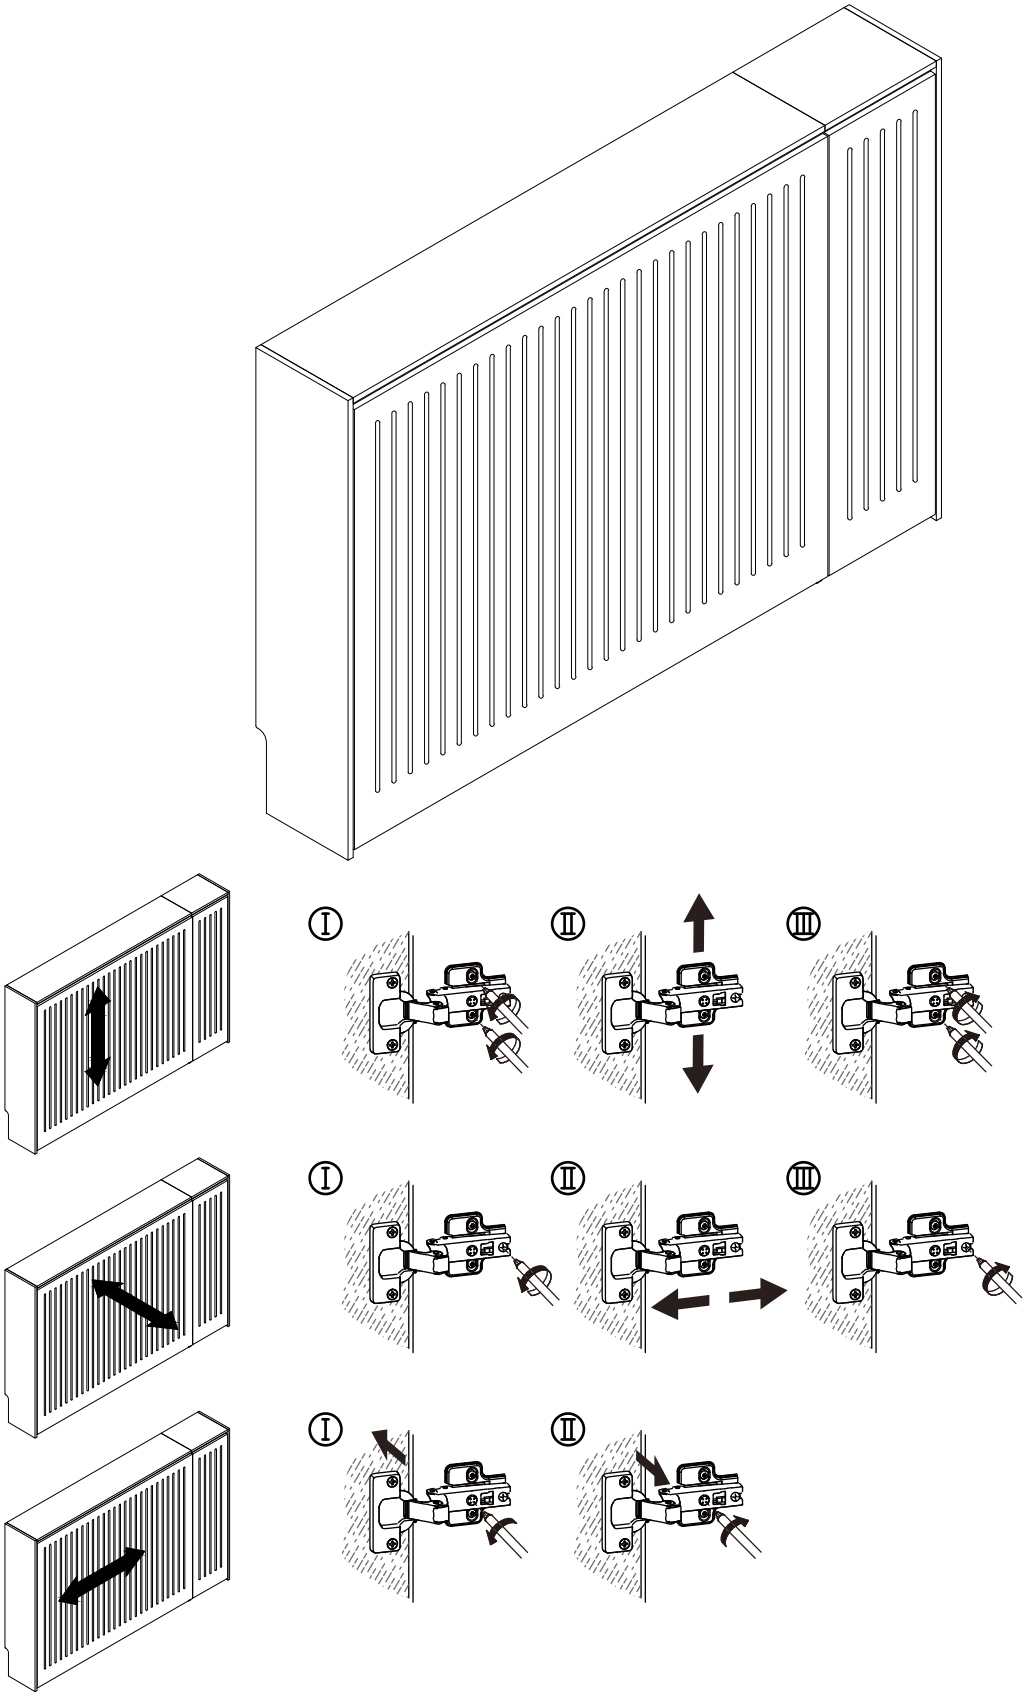

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 20

Parts Required

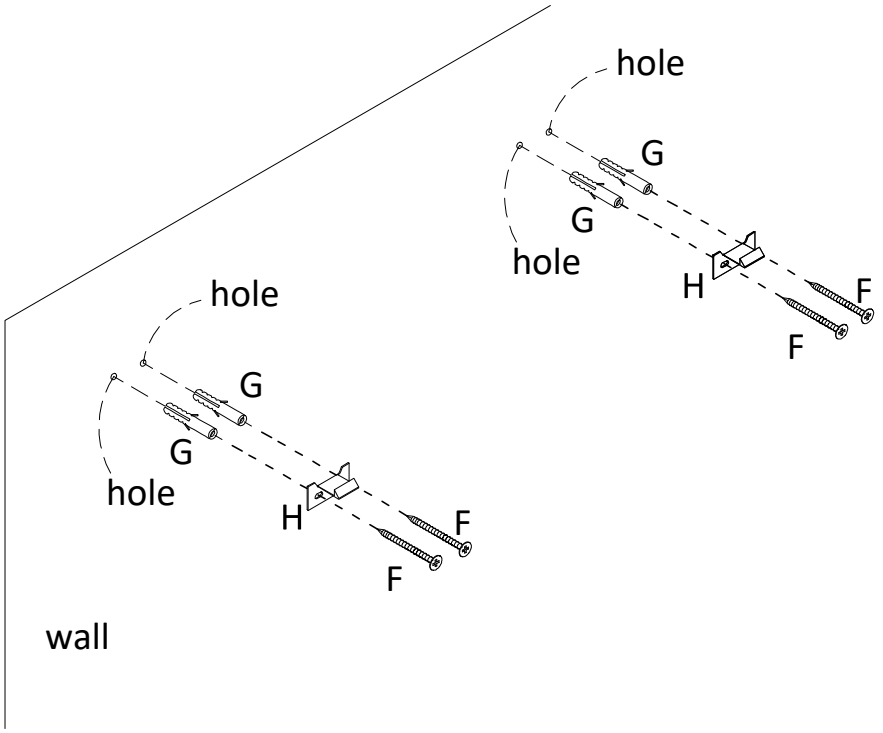

F Screw (4x40 mm) x 4
G Wall plug ×4
H Wall Bracket ×2

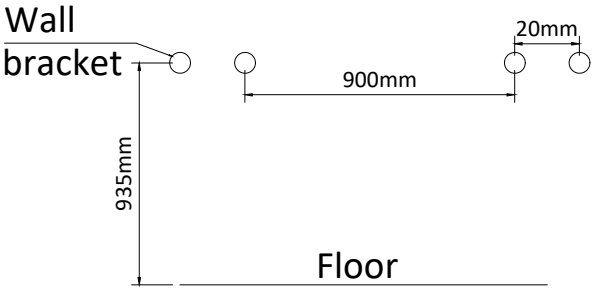

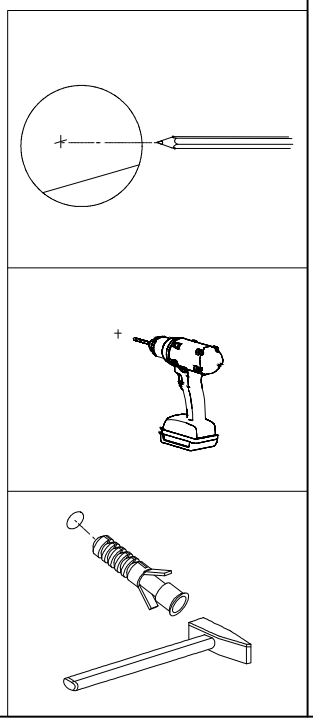

Position the radiator cover against the wall that it will be fastened to and using a pencil,mark the position of the screw holes onto the wall.

Drill where the holes have been marked and insert the wall plugs,ensuring the the edge is flush with the surface of the wall.

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

STEP 21	Parts Required

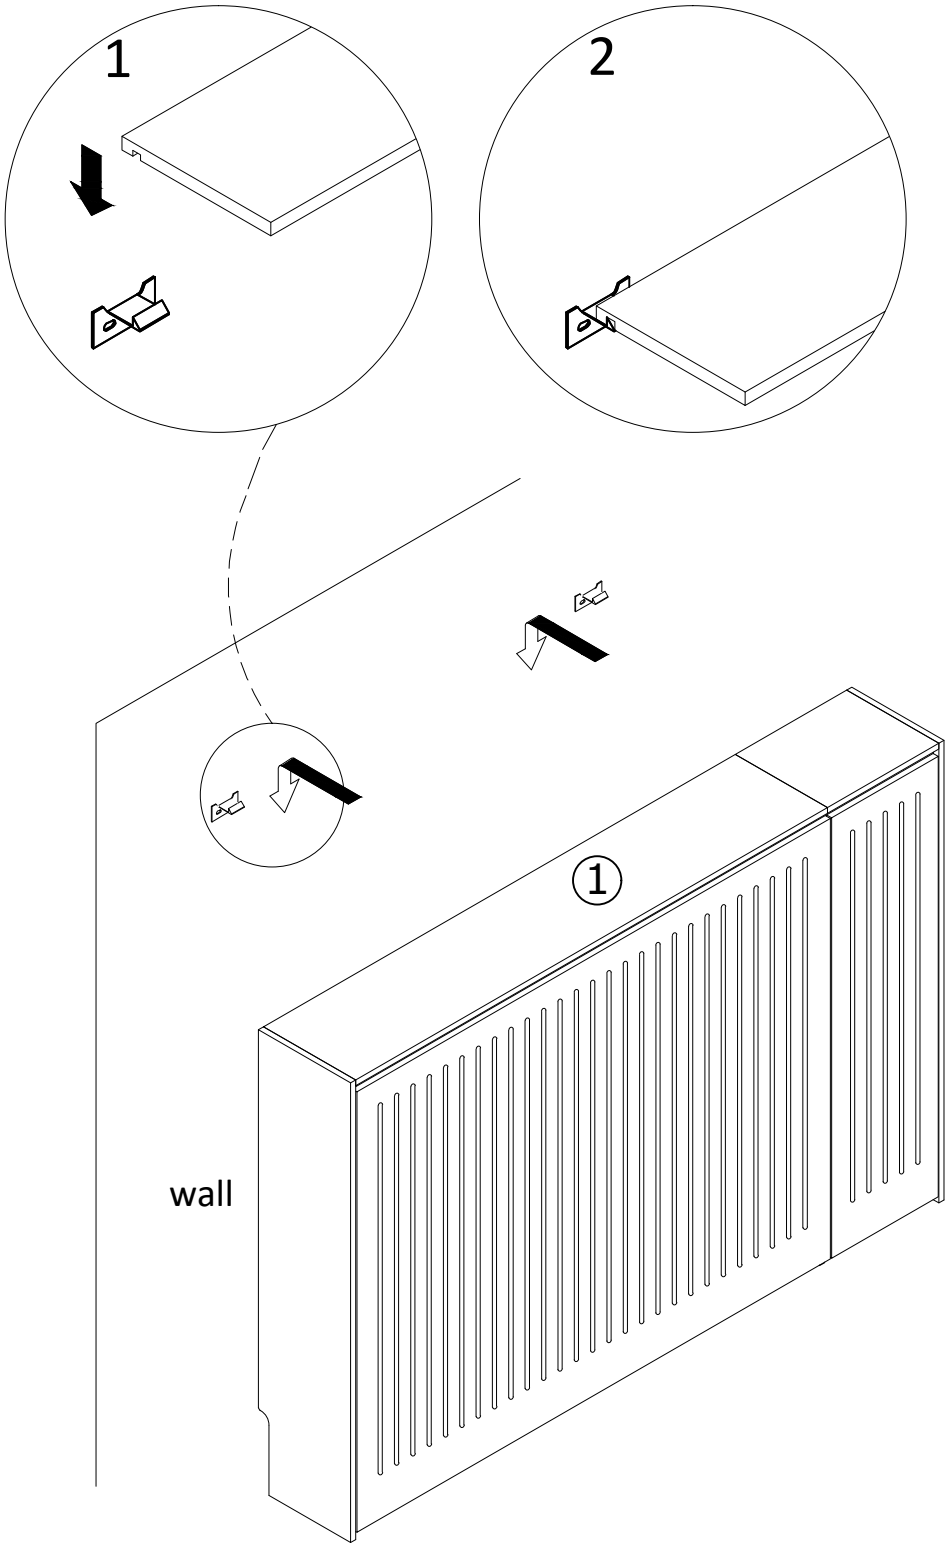

COOPER STORAGE RADIATOR COVER ASSEMBLY INSTRUCTIONS

Your COOPER STORAGE RADIATOR is now completely assembled.
Periodically check that the components are in the correct position and free from damage.
Also make sure the connectors are tight and secure.

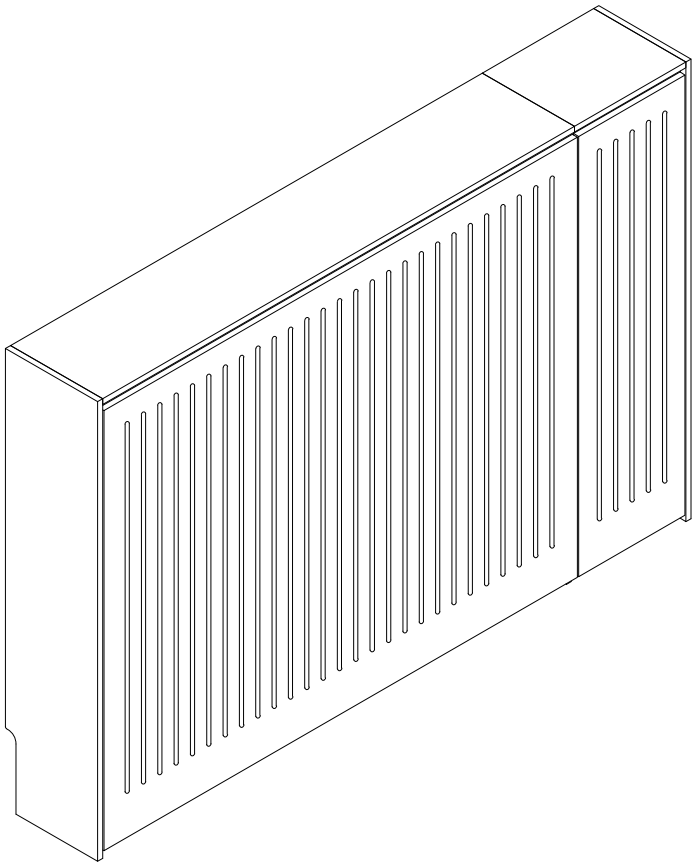

Keep instructions for future reference.

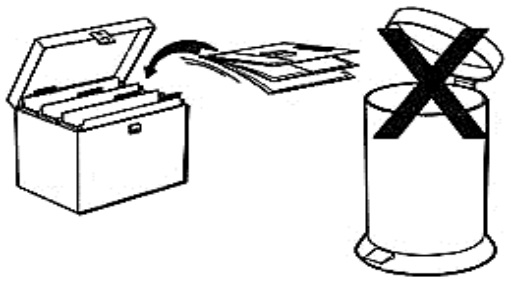

Supplied by : GFW THE FURNITURE WAREHOUSE
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Lancashire
BB3 3RT
www.gfwlimited.co.uk
Represented by:
Authorised Rep Compliance Ltd 71
Lower Baggot Street
Dublin
D02 P593
Ireland
www.arccompliance.com