

Instruction Manual

FS-XSH-011

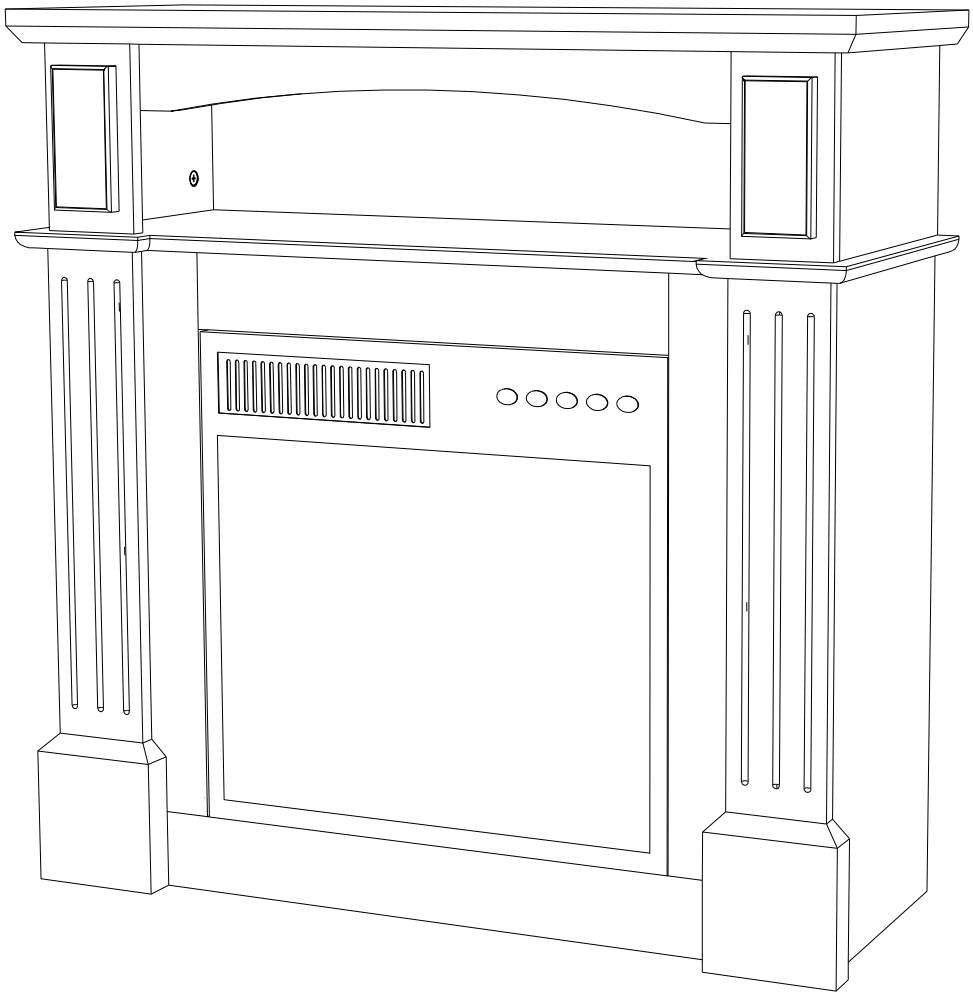


General Assembly Guidelines

Ⅰ. Ensure that all parts and hardware are available before beginning assembly.
Ⅱ. Follow each step carefully to ensure the proper assembly of this product.
Ⅲ. Two people are recommended for ease in the assembly of this product.
Ⅳ. A Phillips head screwdriver is required for the assembly of this product.

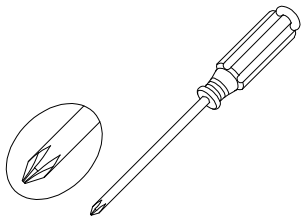

Partes List

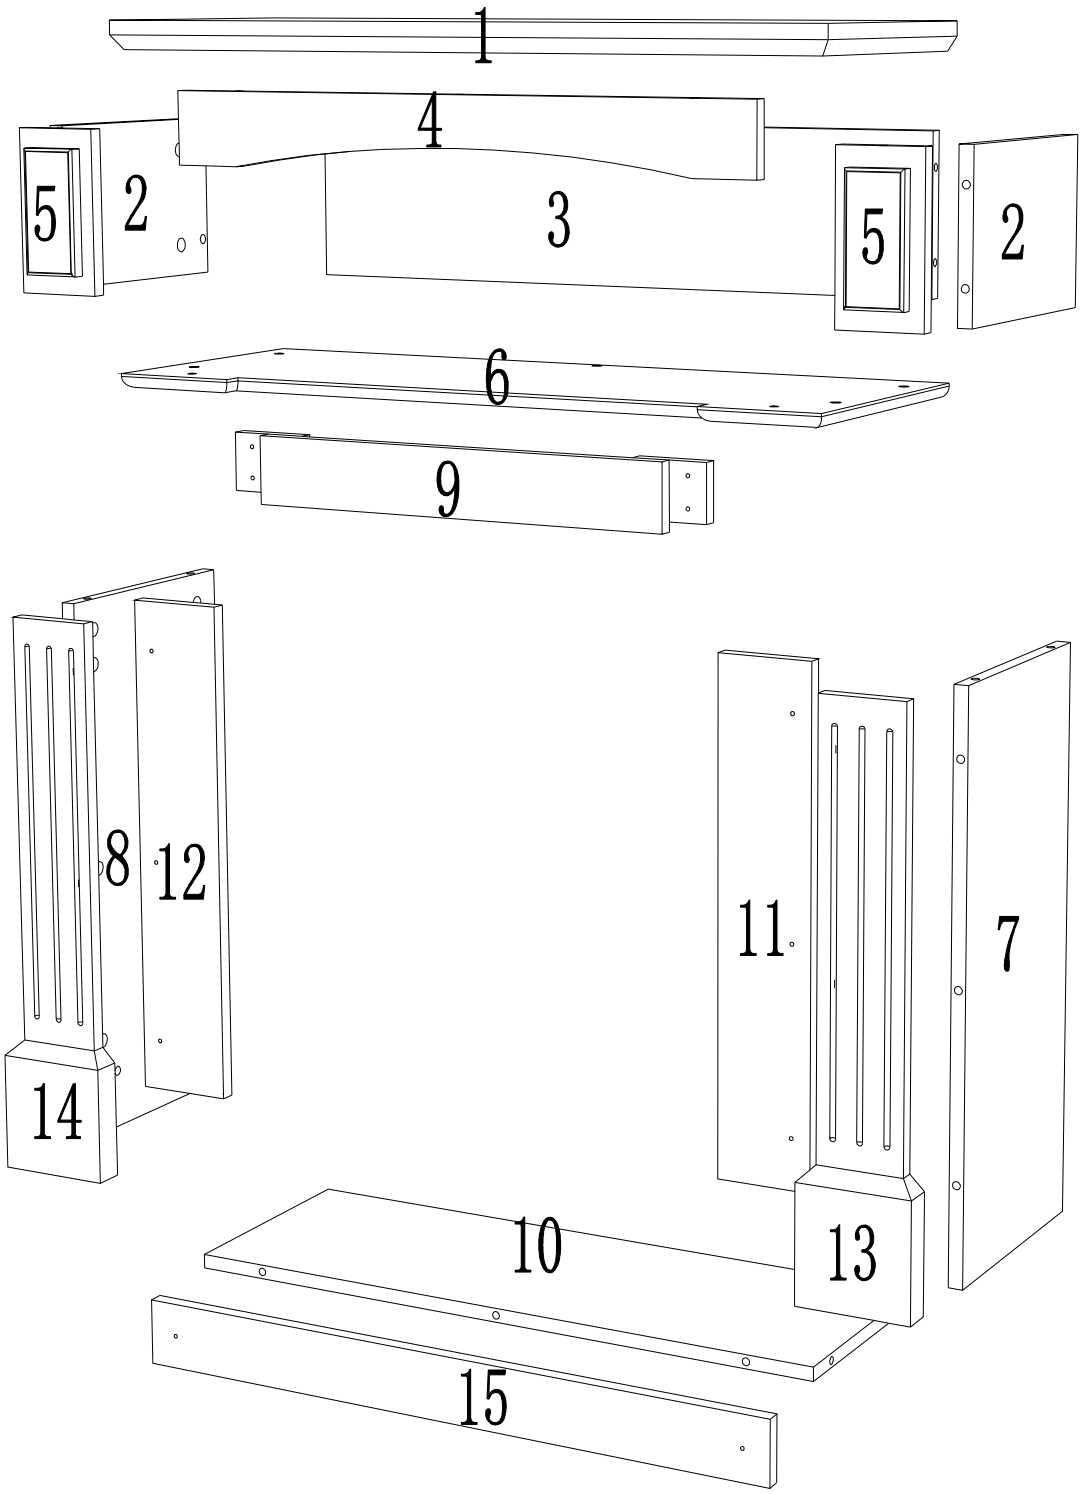

Hardware List


A			CAM LOCK	40 PCS
B			CAM LOCK	40 PCS
C		Ø6*25	BOLT	14 PCS
D			SHIM	14 PCS
E		Ø4*12	SCREW	6 PCS
F		Ø8*40	DOWEL	6 PCS

Fig 1

A  ✖3

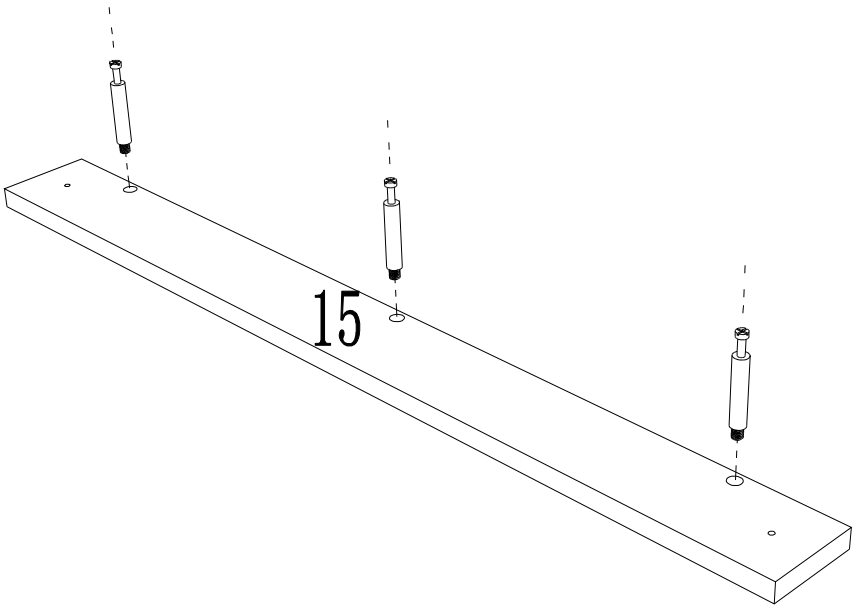


Fig 2

B  ✖3

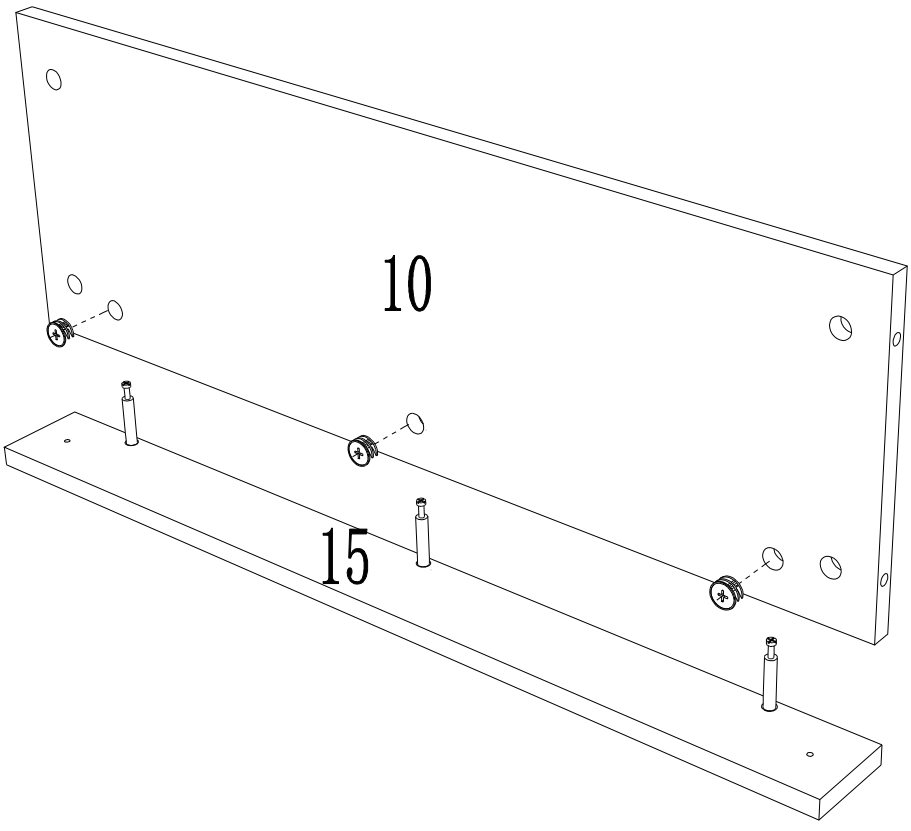


Fig 3

A  ✖4

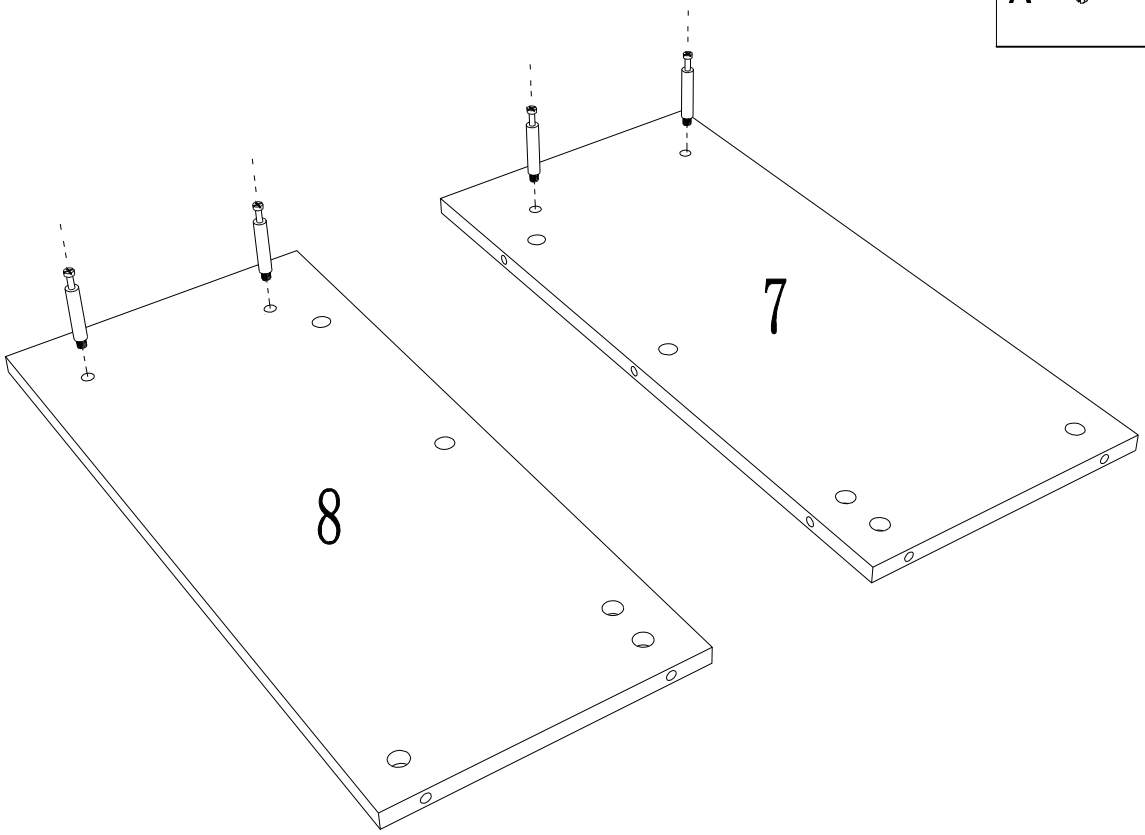


Fig 4

B  ✖2

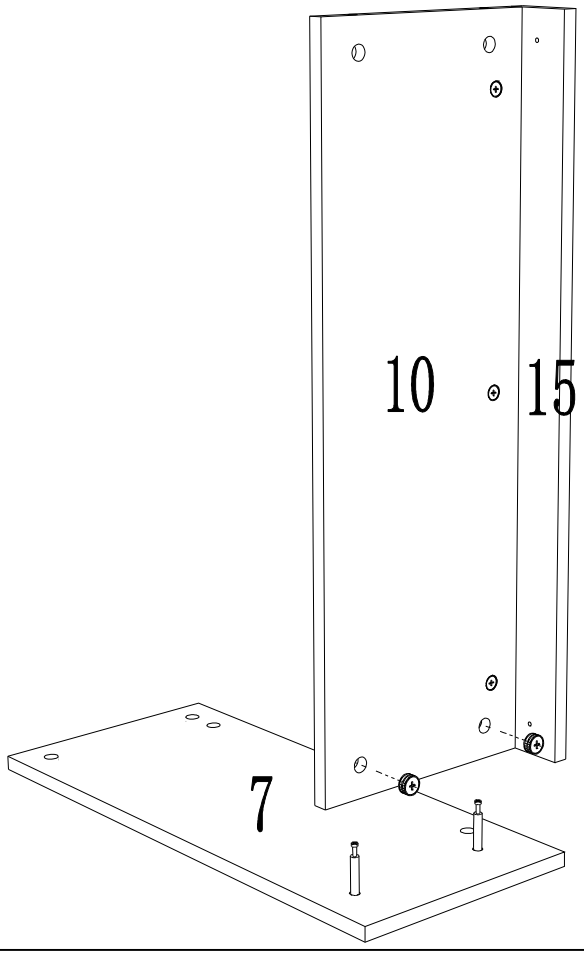


Fig 5

B  ✖2

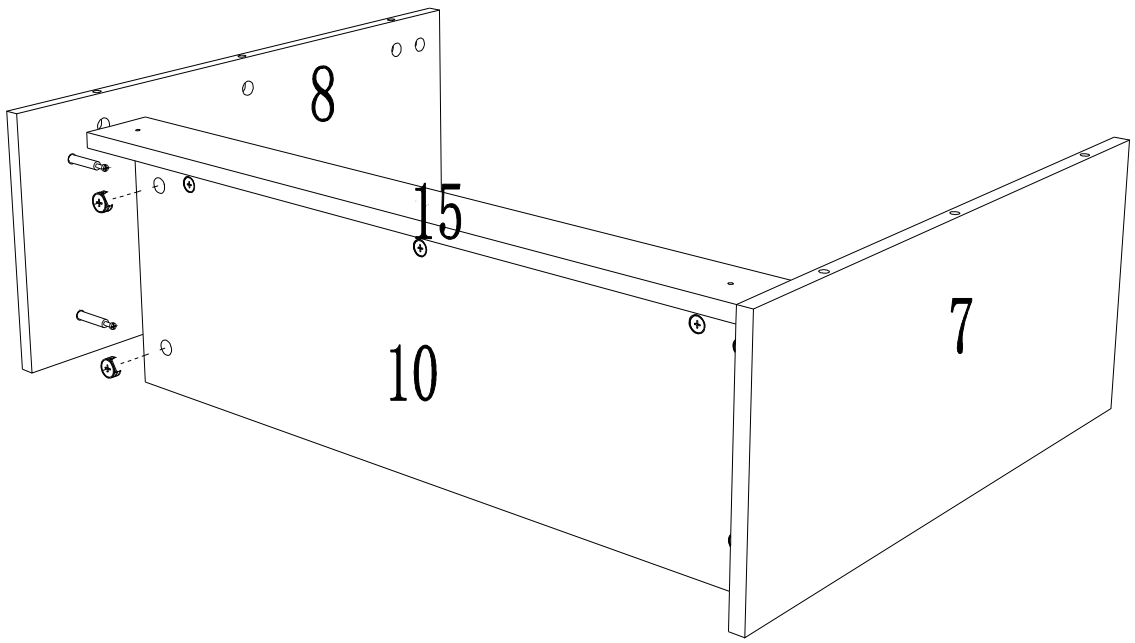


Fig 6

A  ✖9

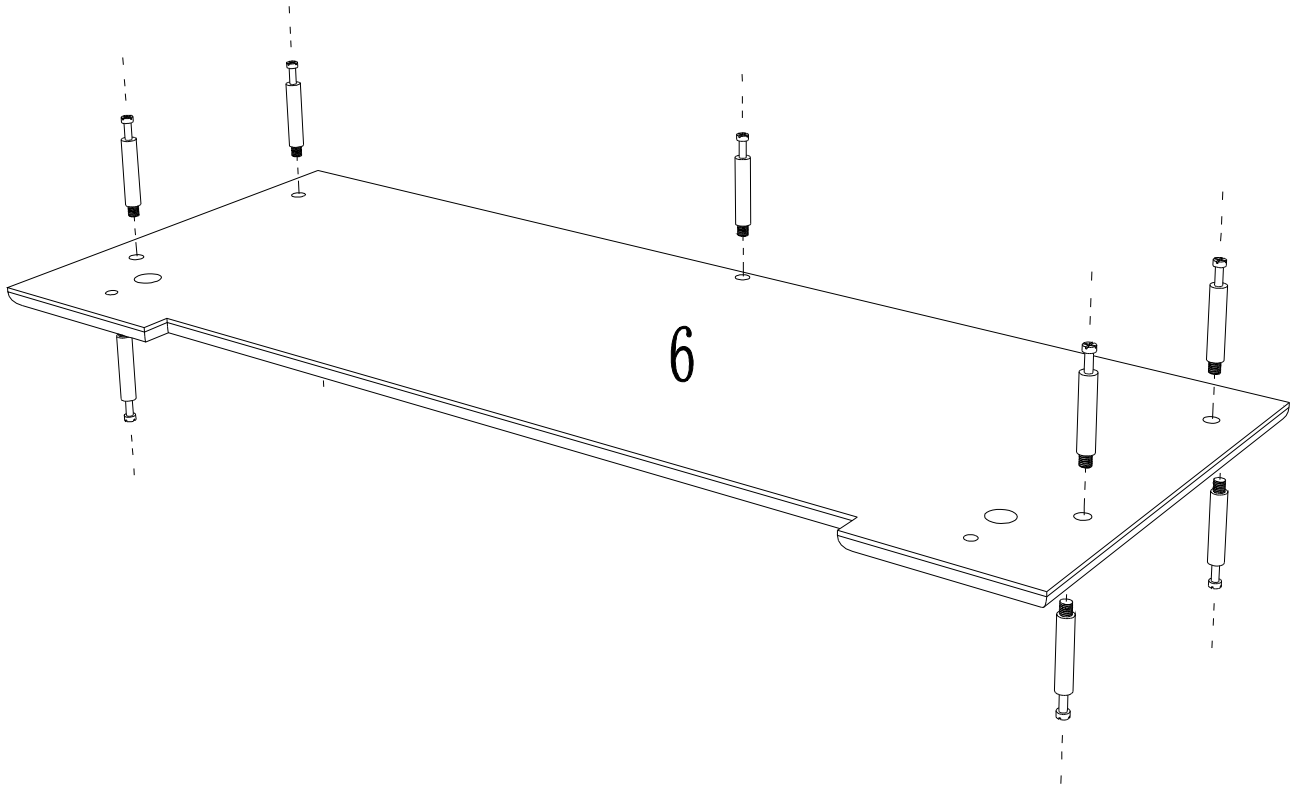


Fig 7

B  ✖4

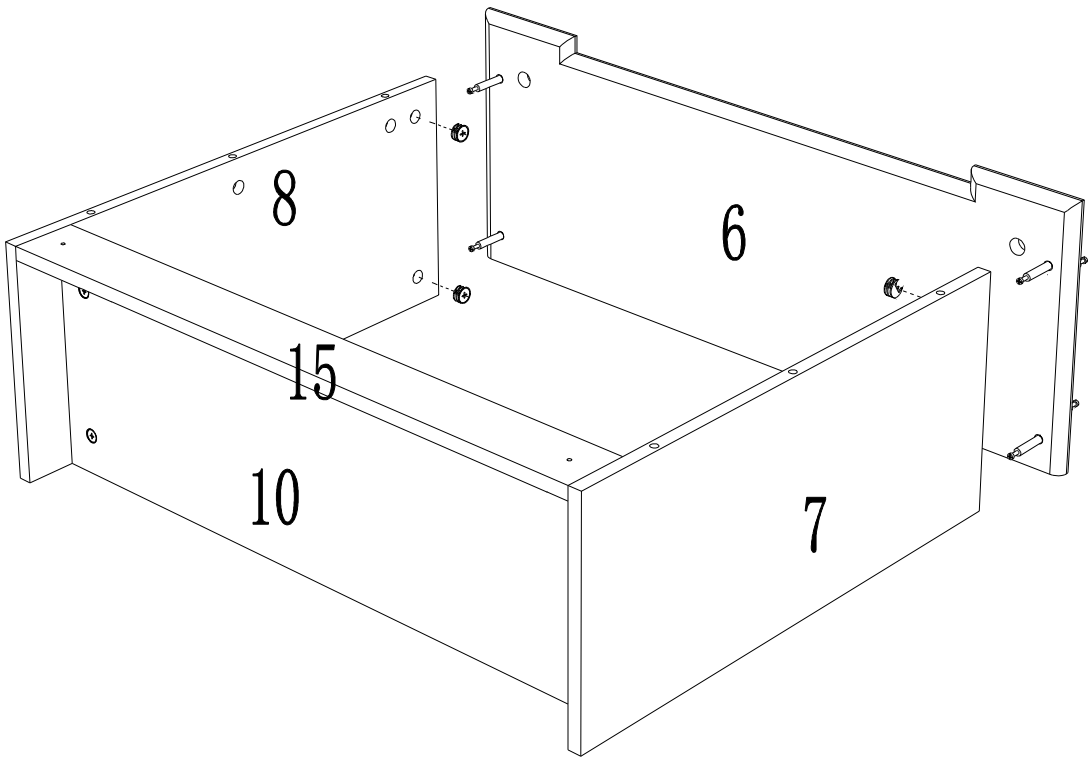


Fig 8

A  ✖4

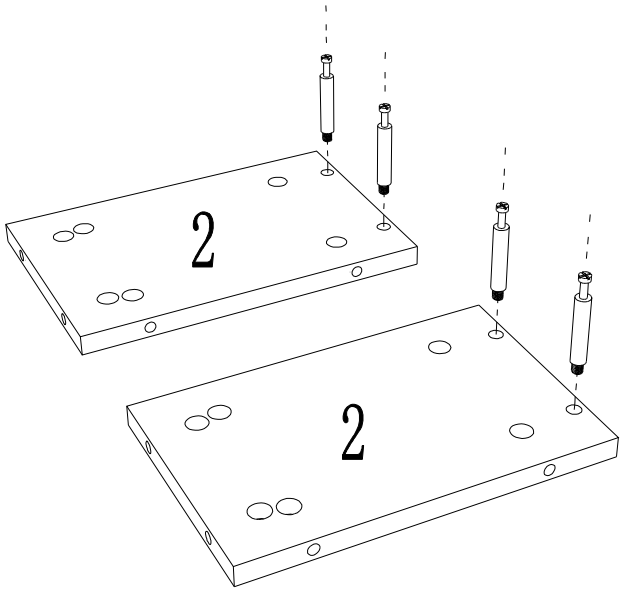


Fig 9

A ✖4

F ✖4

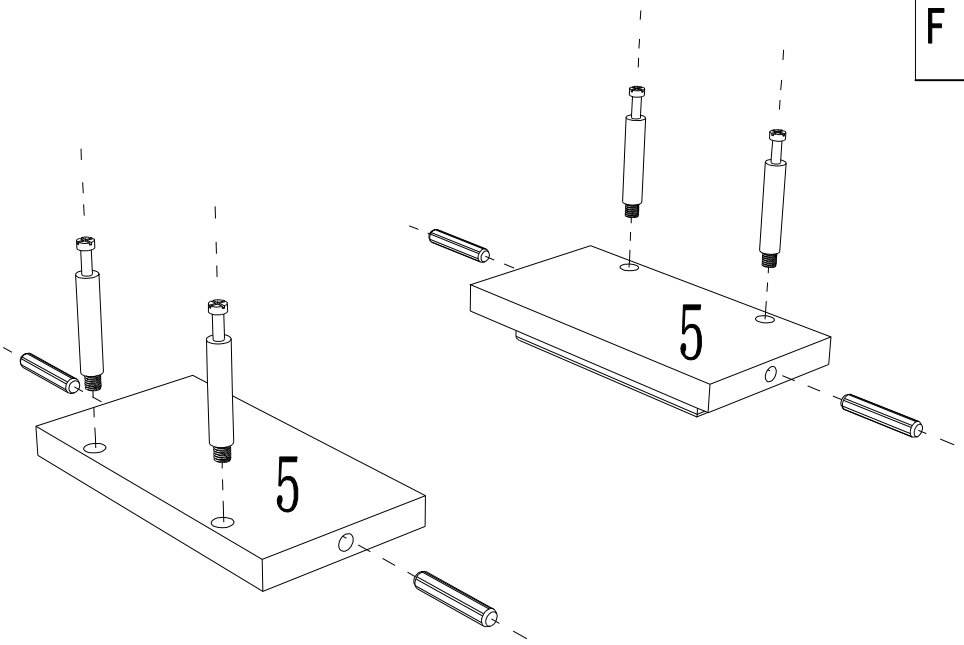


Fig 10

A ✖8

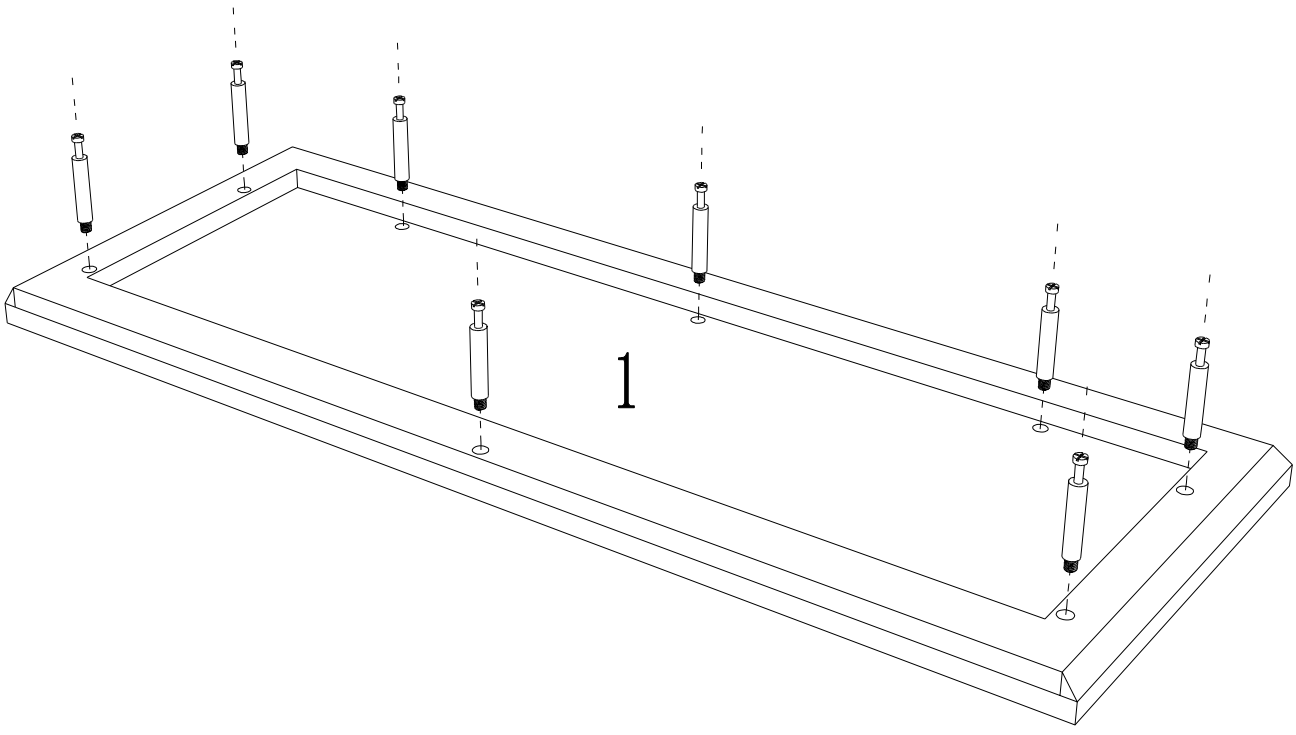


Fig 11

B ✖4

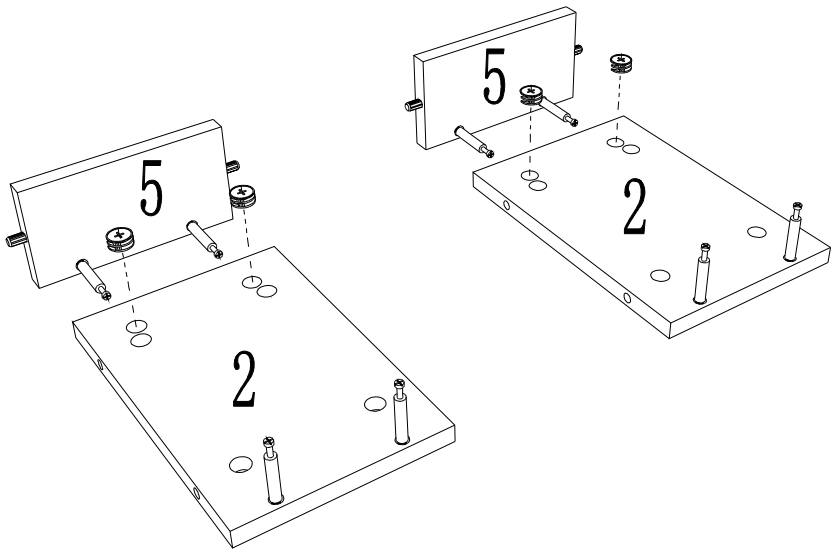


Fig 12

B ✖2

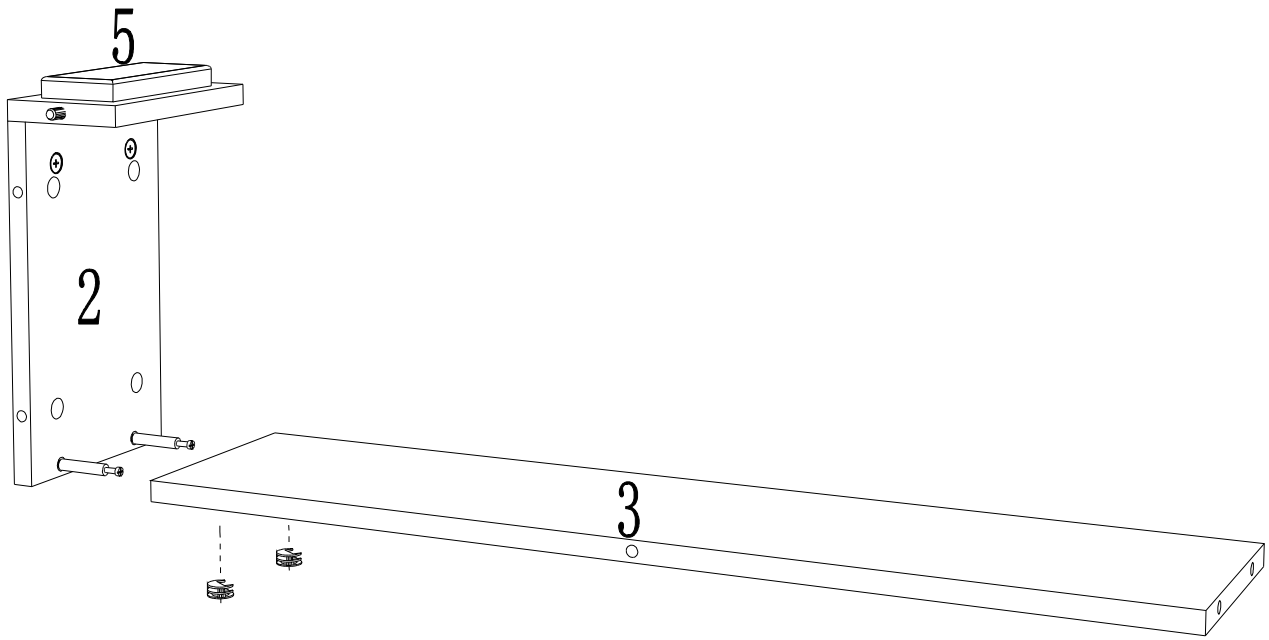


Fig 13

B ✖2

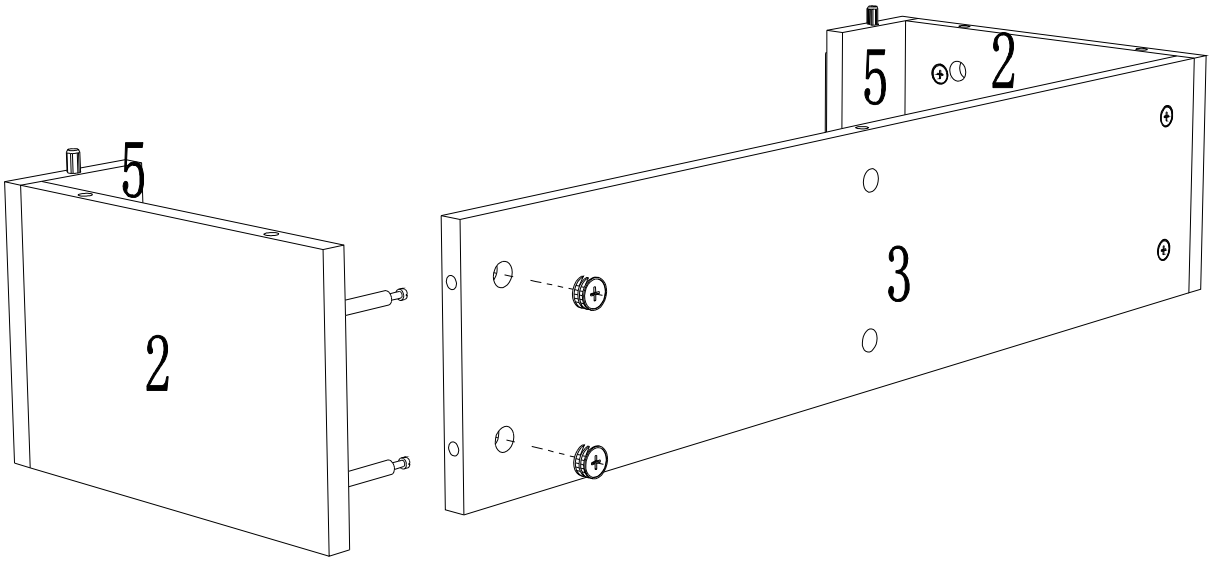


Fig 14

B ✖5

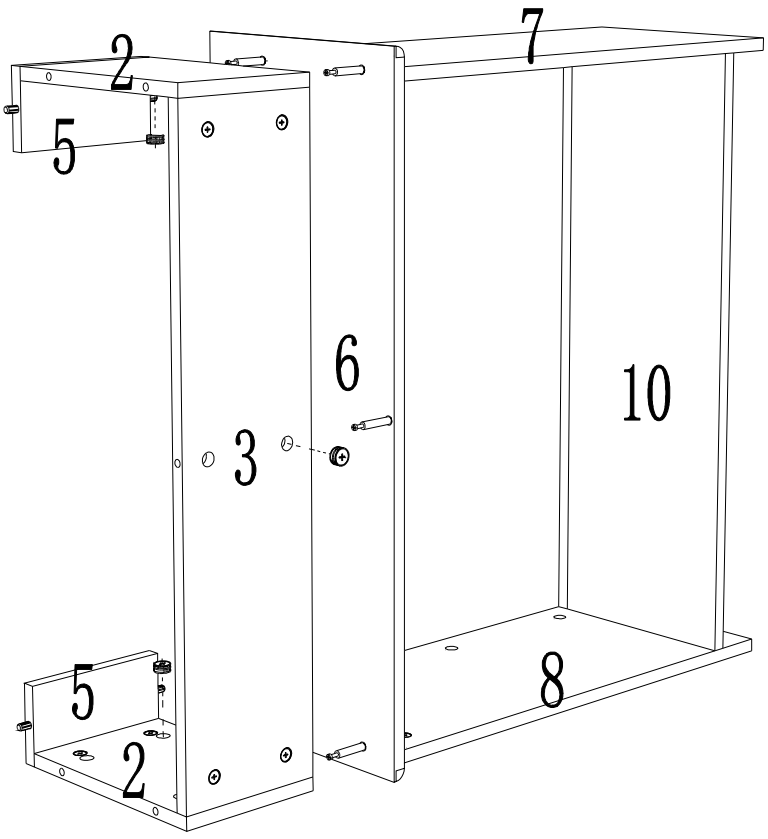


Fig 15

B ✖3

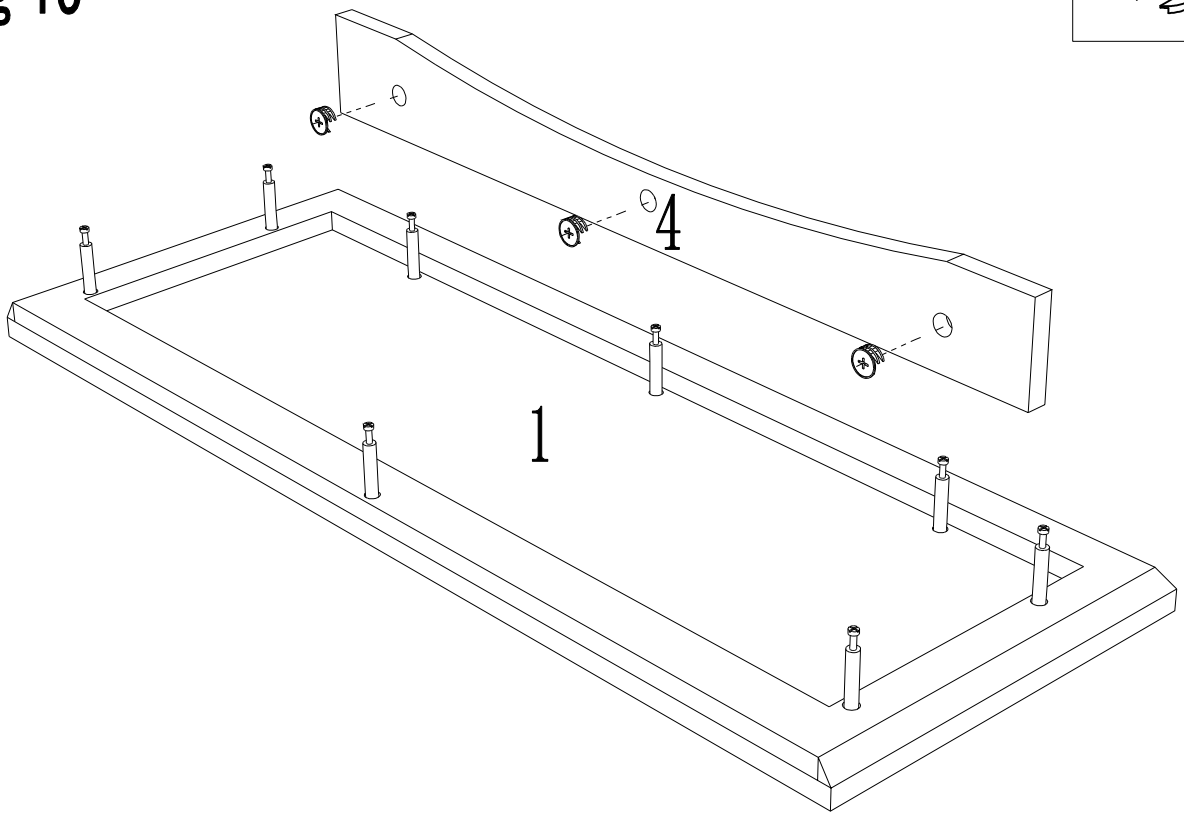


Fig 16



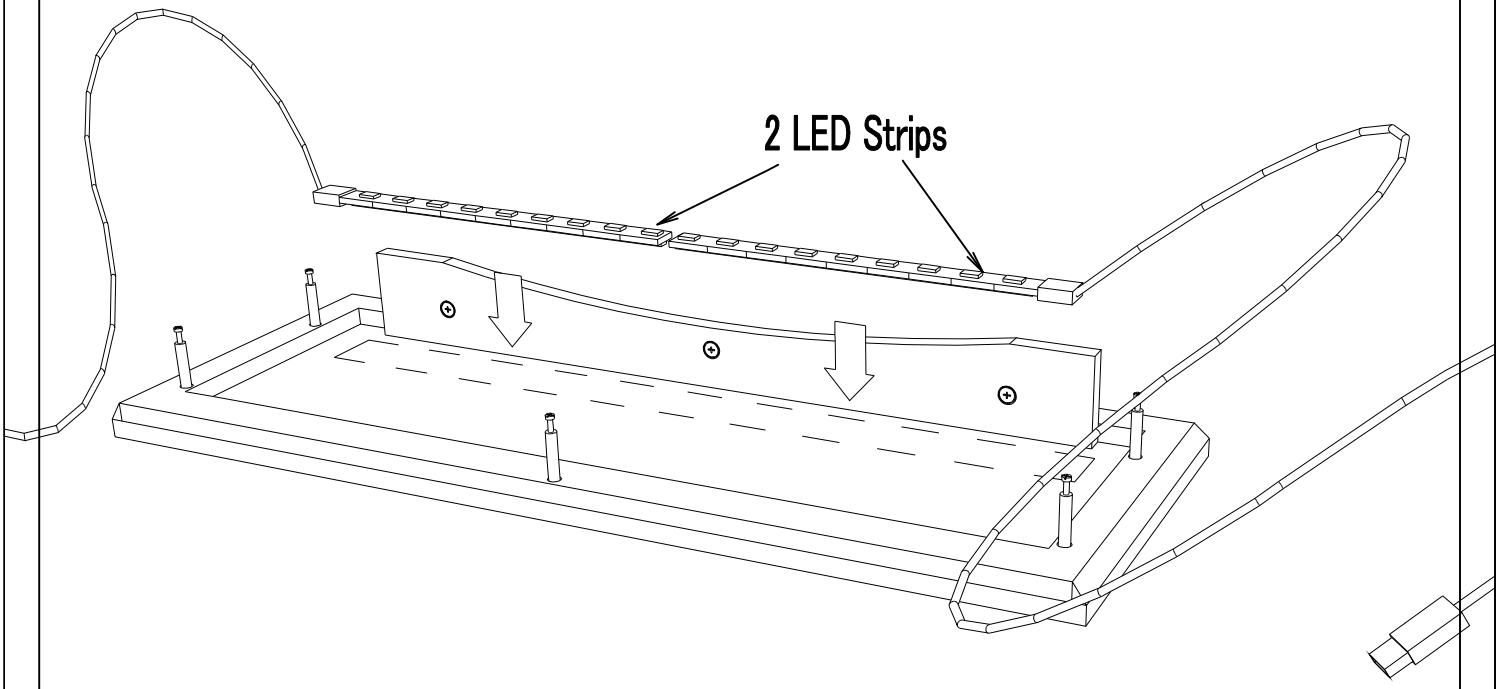



Fig 17

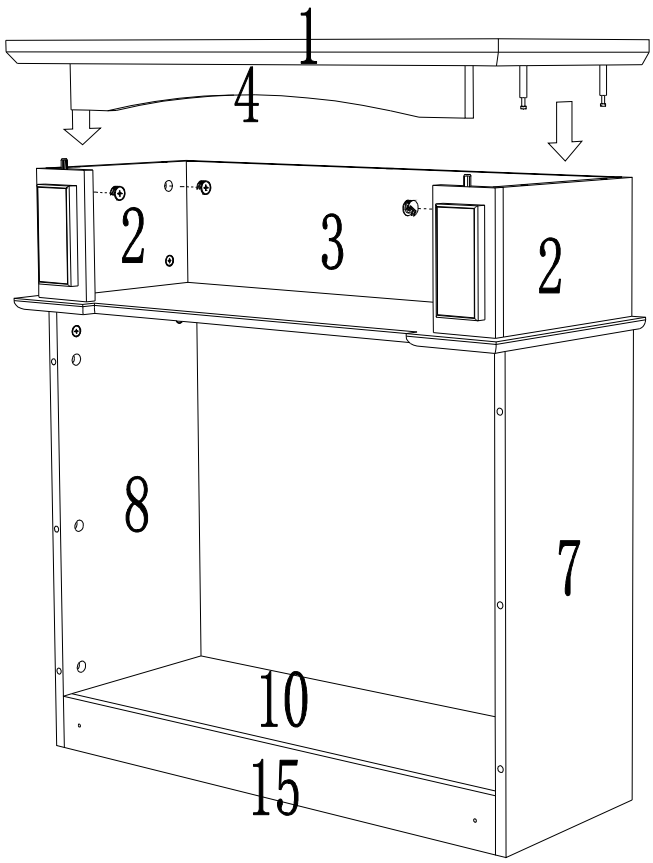

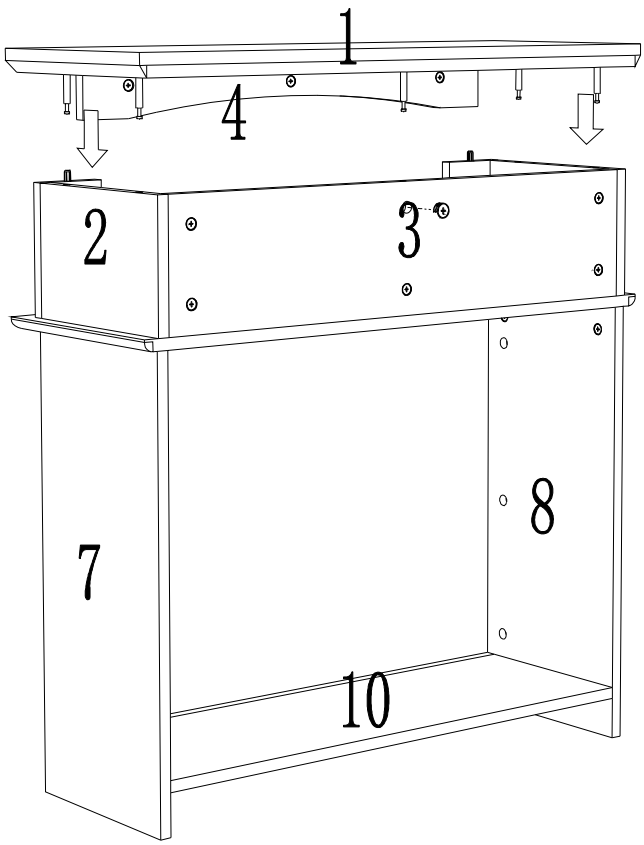


B ✖5

Fig 18

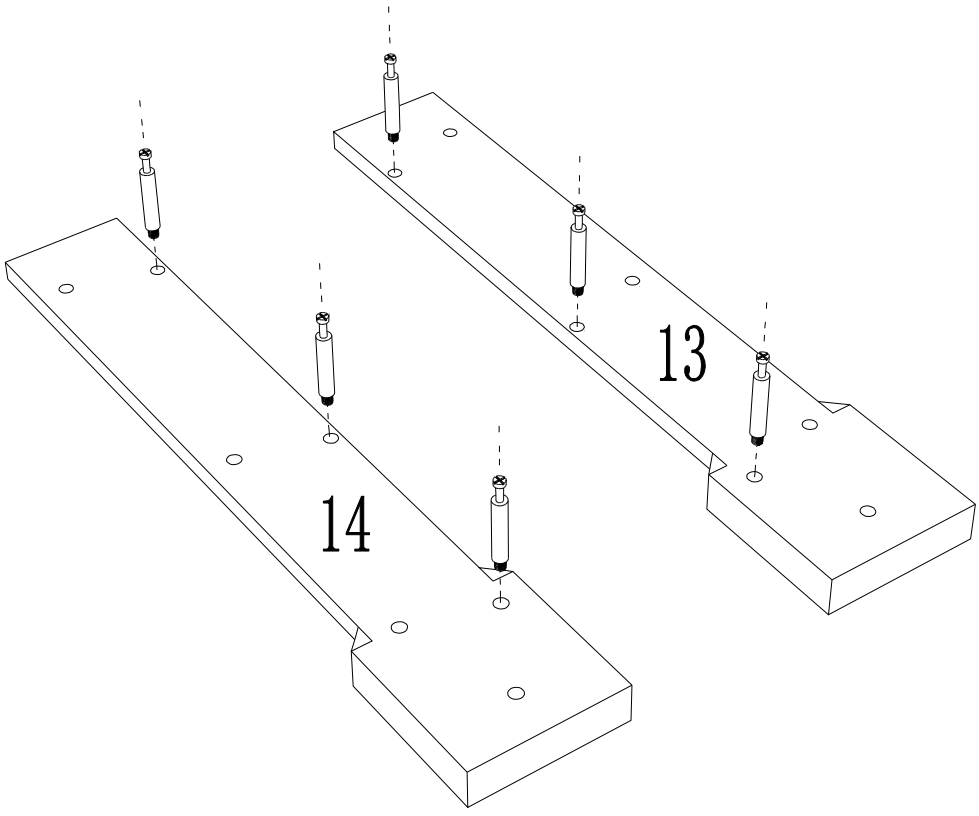


A ✖6

Fig 19

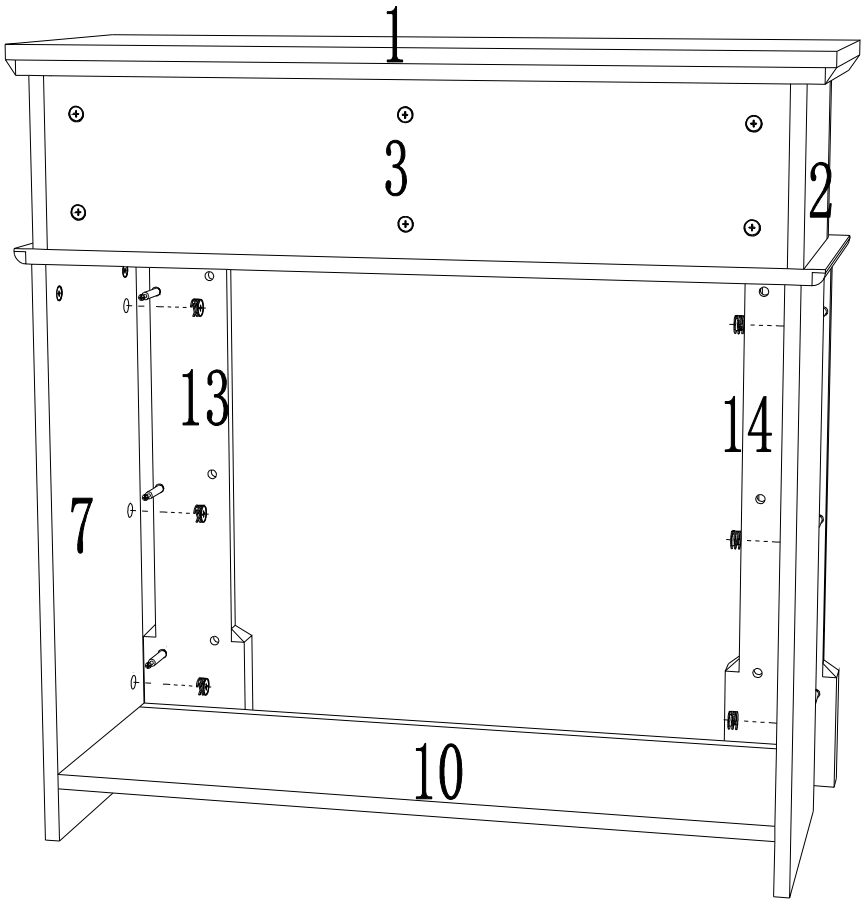

B ✖6


Fig 20

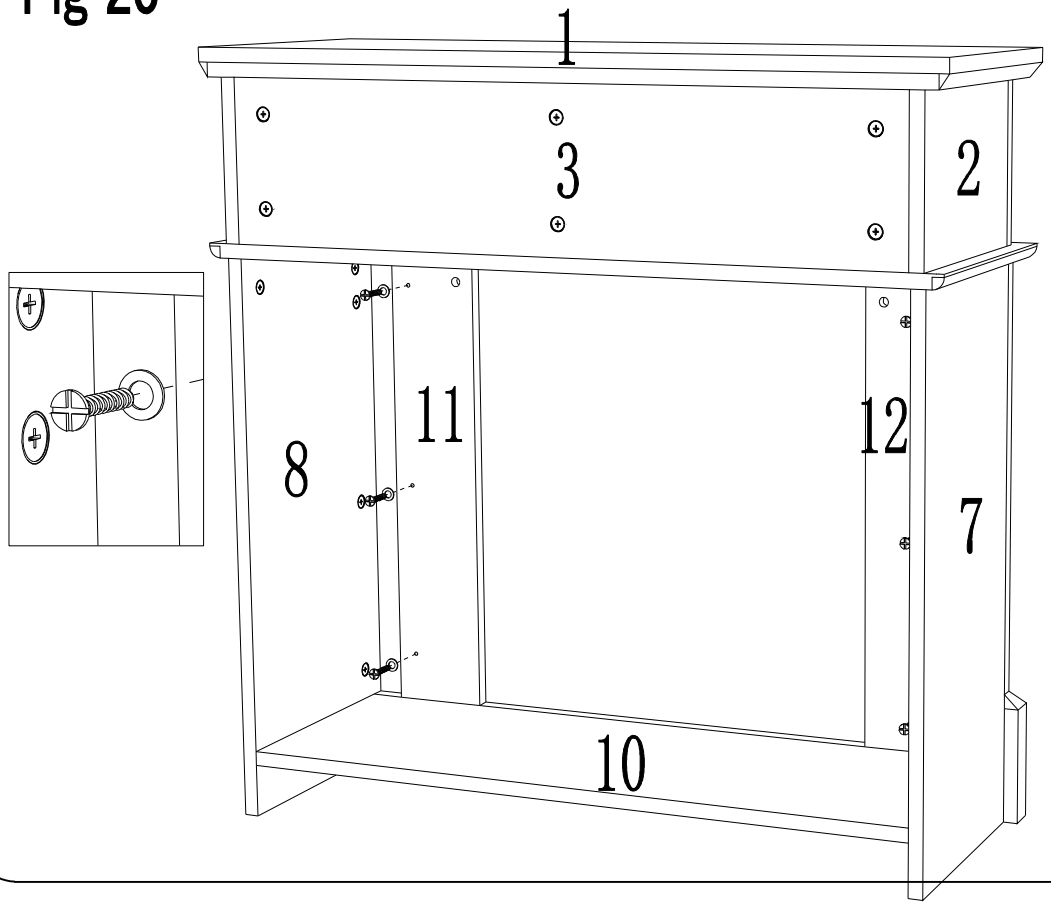

C ✖6

D ✖6

Fig 21

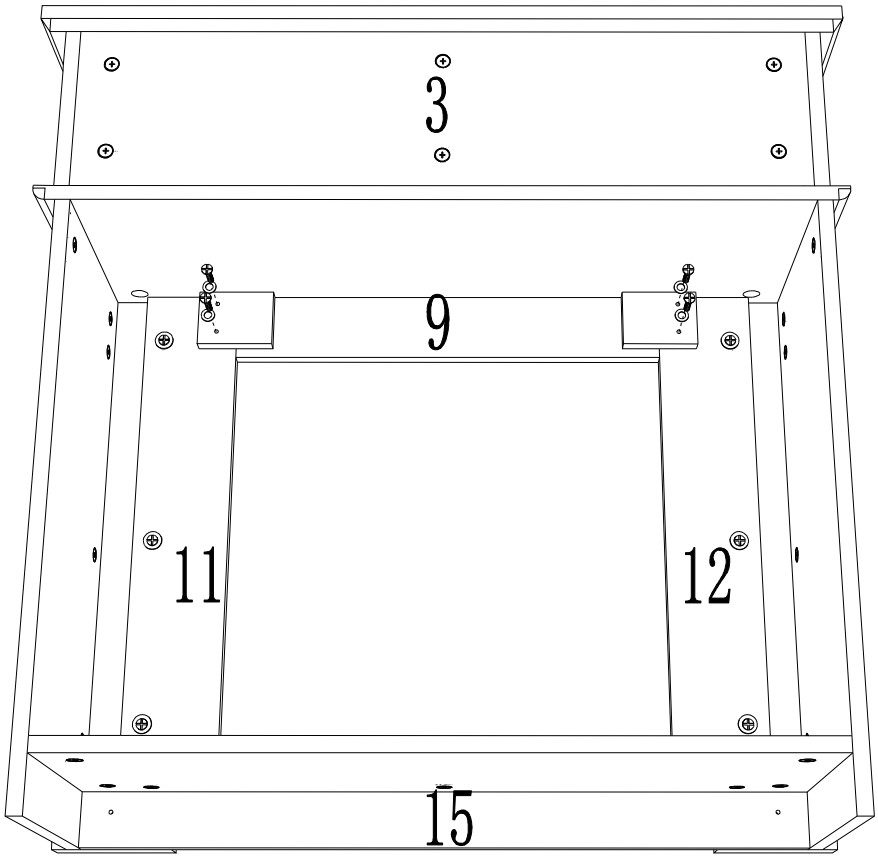

C ✖4

D ✖4


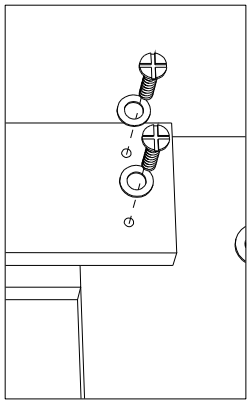


Fig 22

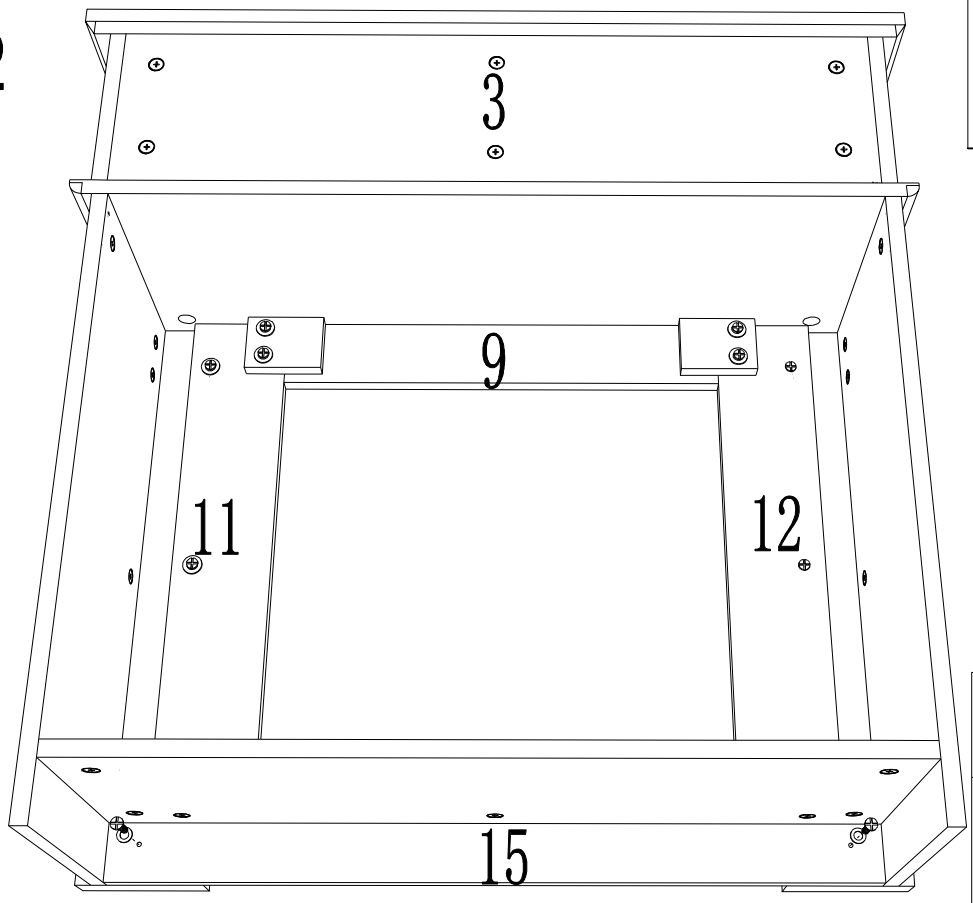

C ✖2

D ✖2

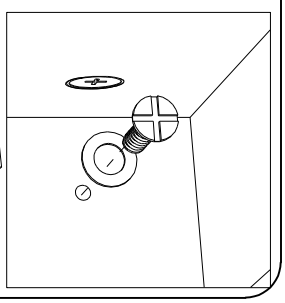


Fig 23

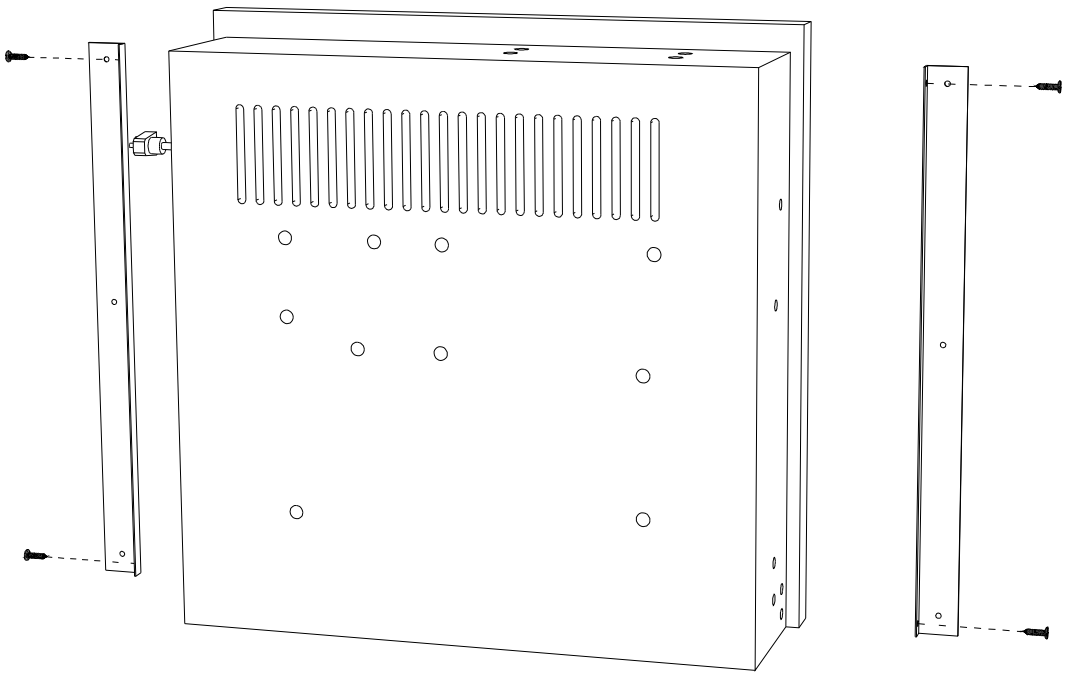


Fig 24

E ✖6



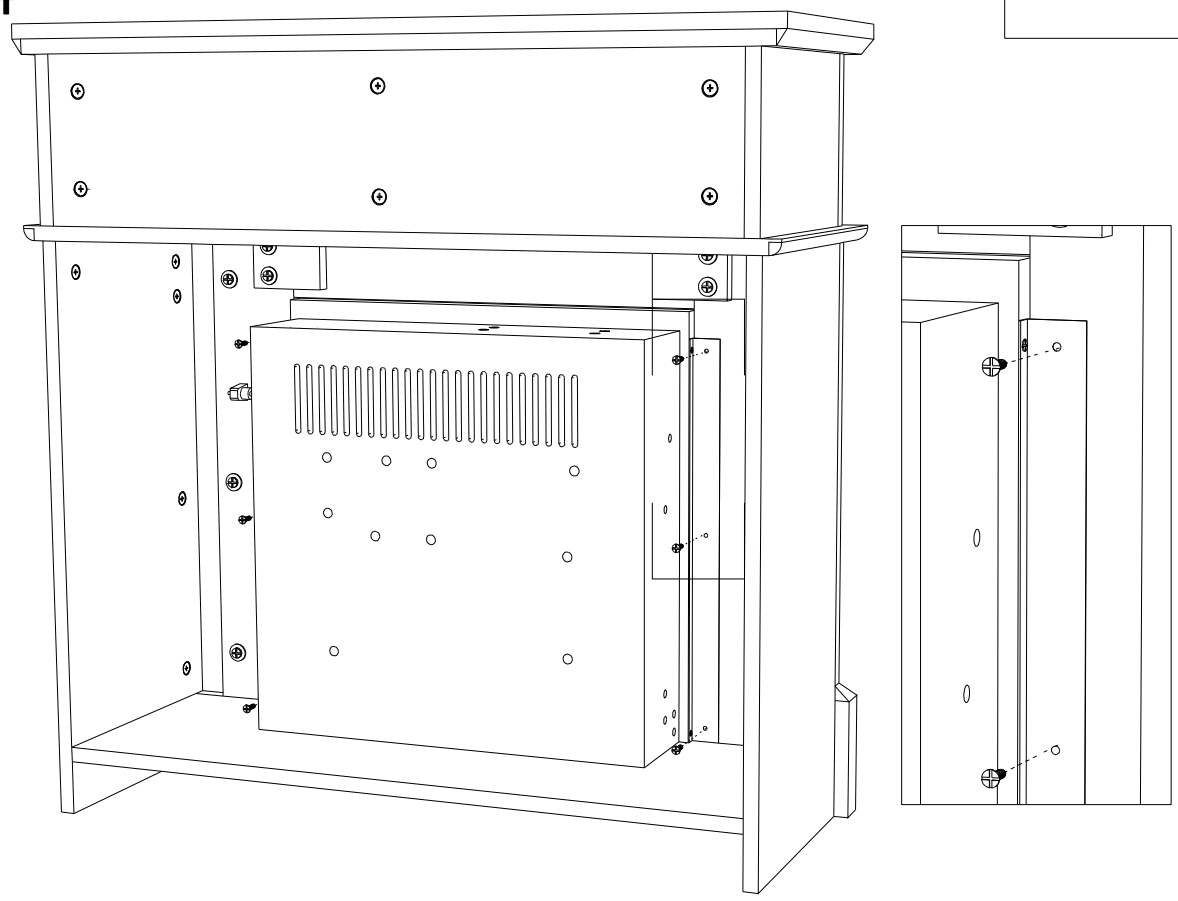



Fig 25

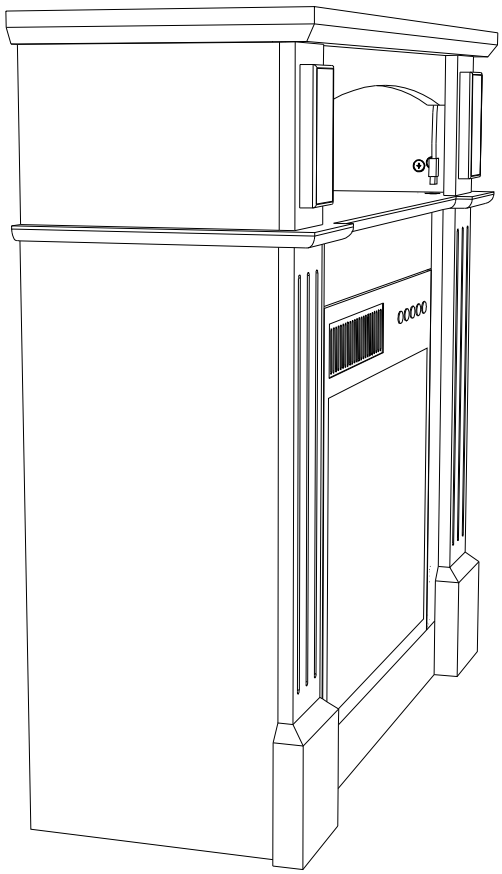

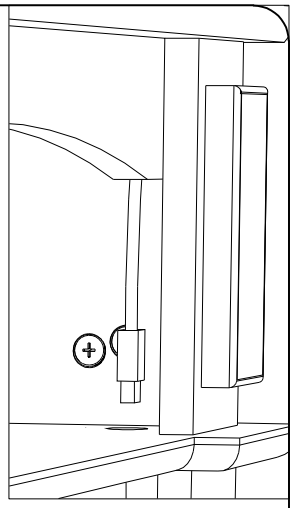


Put the USB through the hole

Fig 26

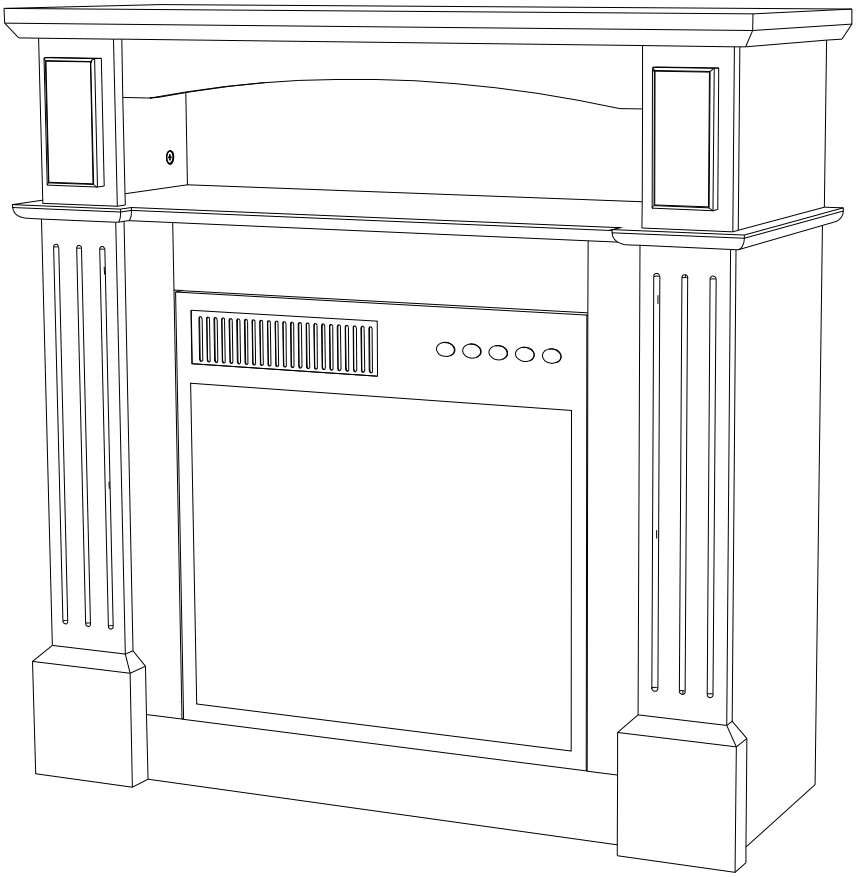

Assembly

Anchoring the media console

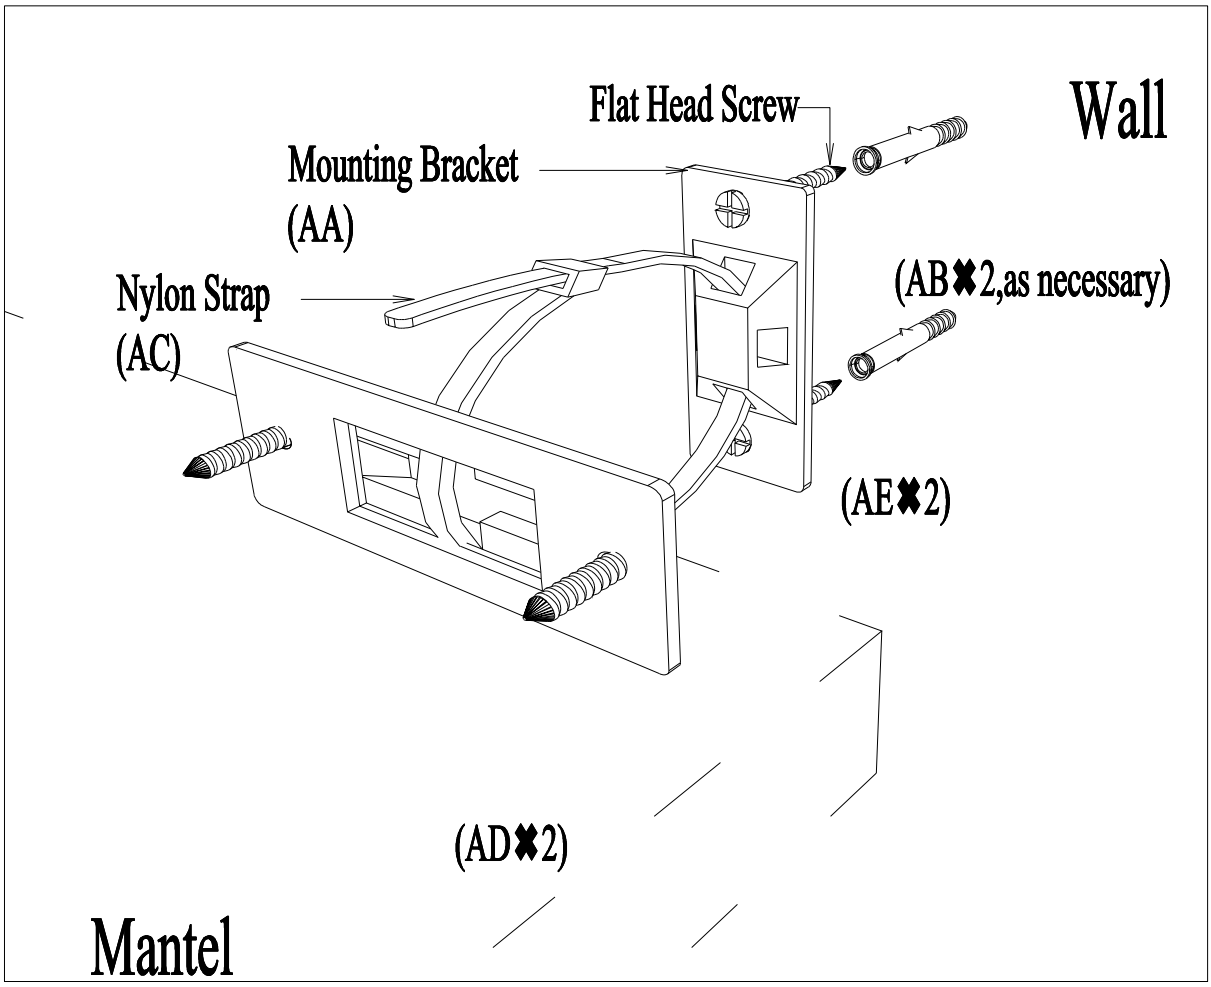

Care and maintenance

Do not use abrasive or chemical cleaners. Discolouring or damage to finish may result.
Clean media console with a non-abrasive cloth. Clean as often as necessary.

NOTE:
Excessive sun exposure may cause discolouring or fading of media console finish.