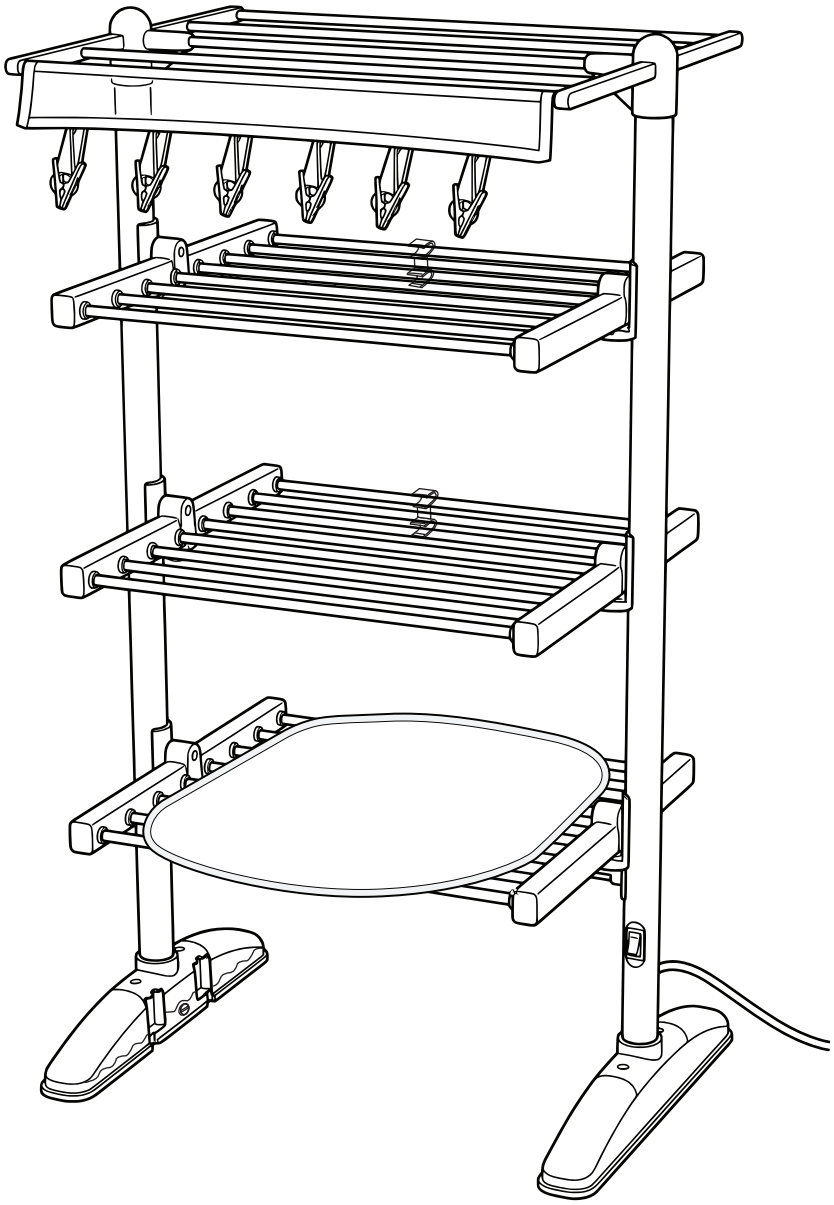

HEATED STANDING AIRER - MEDIUM

Product Instructions

Product No. 2000338

vonhaus

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Components

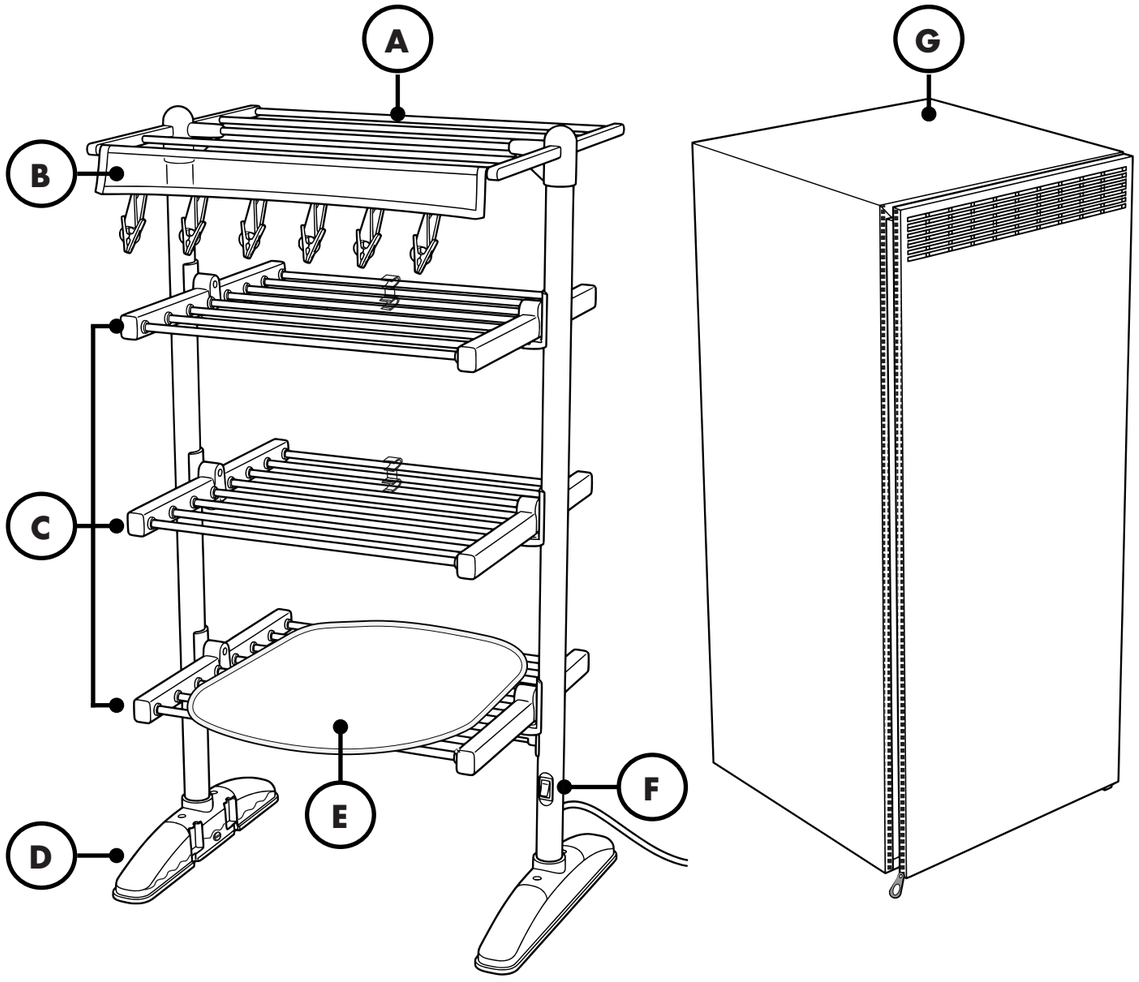

A. Top racks x2
B. Peg hanger x1
C. Heating rack x6
D. Feet x2
E. Mesh shelf x1
F. On/Off switch x1
G. Cover x1

Assembly

1

Attach the feet

Fit the feet to the base of the unit, then tighten the screws provided on both sides of the base.

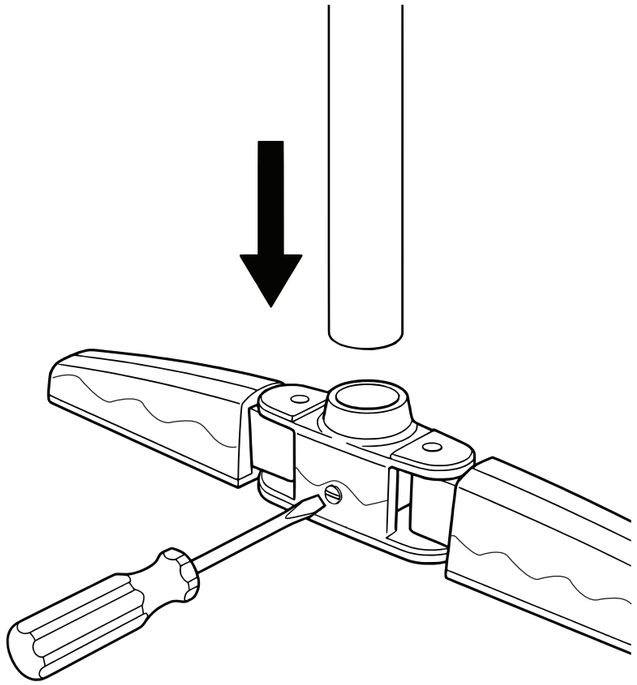

2

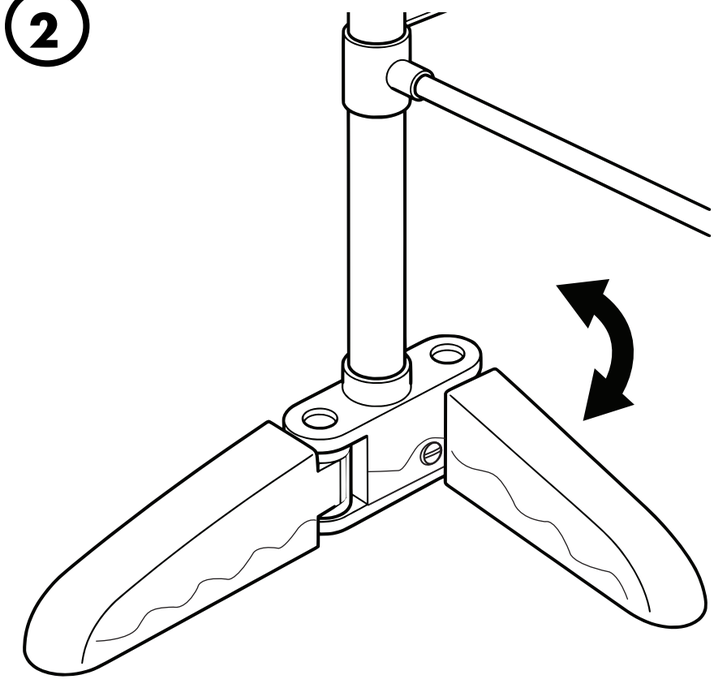

Open the support legs

Spread the support legs outward into the open position before use.

Assembly

3

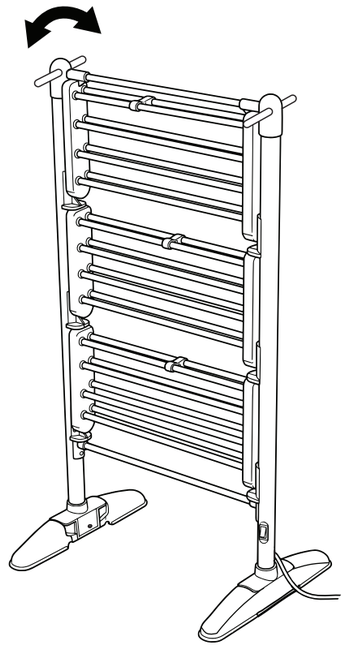

Set up the shelves

Release the hook latches and fold each heating rack down until it is horizontal (90°).

4

Set up the drying bars

- Line up the two drying bars with the sockets on each side column.
- Push each bar horizontally into its socket, then join the two bars together until they click into place.
- Press the On/Off switch to turn the airer on.

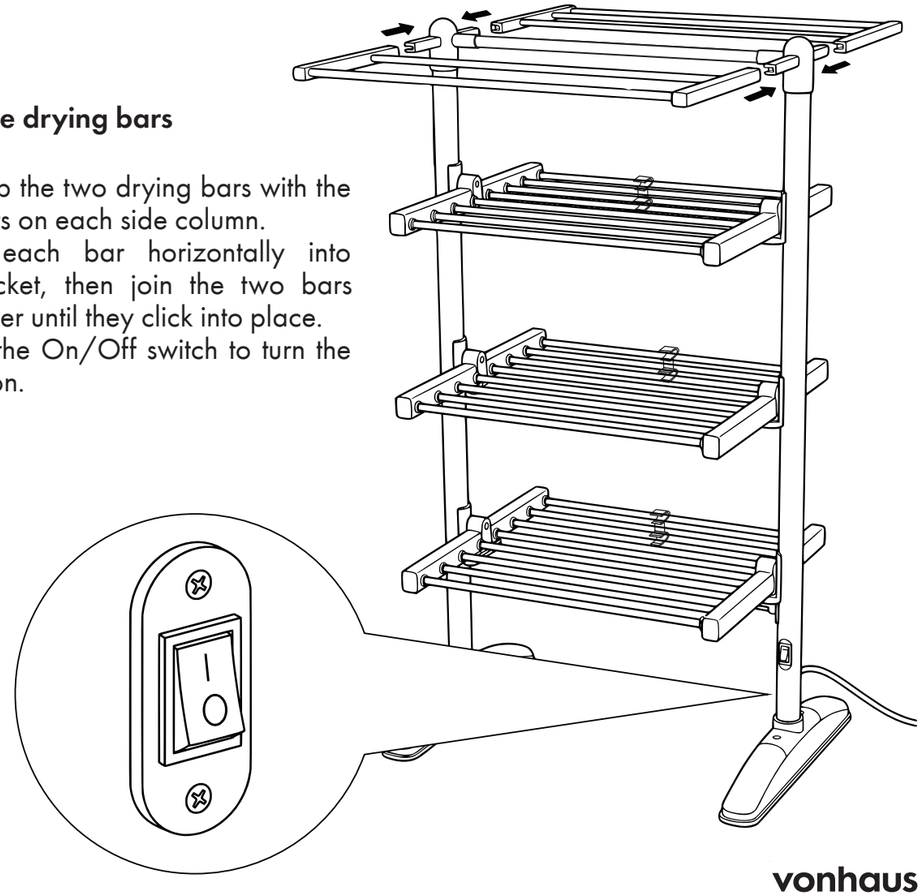

Accessories

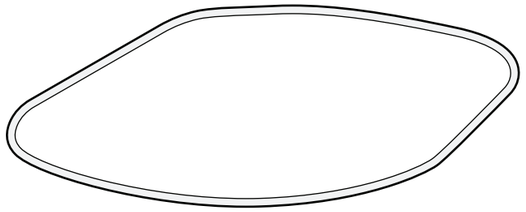

Mesh shelf

Place the mesh shelf over the airer to create a flat drying surface, ideal for delicate items that should not hang.

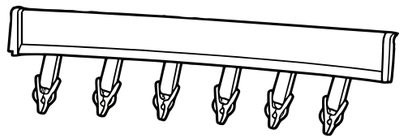

Peg hanger

Clip the pegs onto the airer bars to hold clothes securely in place and prevent them from slipping off during use.

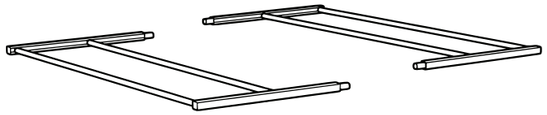

Top racks (Not Heated)

The top racks attach to the top of the airer to provide additional drying space for more clothes.

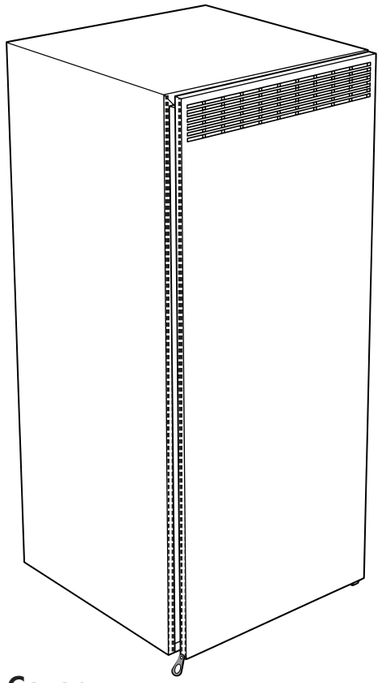

Cover

For faster drying, place the cover over the airer before switching it on. The mesh panel at the top allows heat to circulate while keeping warmth trapped inside.

Information

Important Safety Notice

This product is **not suitable for use by children** or by individuals with **physical, sensory, or mental impairments** that may limit their ability to operate the equipment safely, **unless** they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Warning

Keep this product away from children and vulnerable persons during use.
Always unplug the power cord when the appliance is not in use.
If the supply cord is damaged, it must be replaced by the manufacturer, an authorised service agent, or a similarly qualified person in order to avoid a hazard.
For household use only. Do not use outdoors.
Never place the product in water, in the bath, or near other water containers.
Do not run the power cord under floor mats, rugs, or carpets, as this presents a tripping hazard.
Do not unplug the appliance by pulling the cord — always hold the plug.
Do not use in areas where petrol, paint, or other flammable liquids are present or stored.
Use this product strictly as described in this manual to avoid the risk of fire, electric shock, or personal injury.
This appliance may be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they have been given appropriate supervision or instruction regarding safe use of the appliance and understand the hazards involved.
Children must not play with this appliance.
Cleaning and user maintenance must not be carried out by children without supervision.
Always spin your laundry fully before loading, ensuring no water drips from the garments.
Always fold all arms down fully before switching the airer on.

Do not completely cover the airer with garments or bedding.
Not suitable for drying silk, down jackets, or quilts.

After approximately 5–10 minutes, the heating surface temperature will reach around 40–55°C when uncovered. This may vary depending on ambient temperature.

This appliance is intended solely for drying textiles that have been washed in water.

KG

Maximum load:
4kg per wing
8kg per tier
1kg per top rack
2kg for top tier

Cleaning

1. Before cleaning, unplug the appliance and allow it to cool completely.
2. Do not immerse the appliance, power cord, or plug in water. Keep the cord dry at all times.
3. Do not clean with alcohol or solvent-based products.
4. Wipe the surface with a damp cloth, then dry thoroughly with a soft cotton cloth. Do not use metal scourers or abrasive cloths, as these will scratch the surface.

If you are missing any components, contact our customer services department at support@vonhaus.com

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/ appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

Product No. 2000338

vonhaus