
ProBreeze®

Instruction Manual

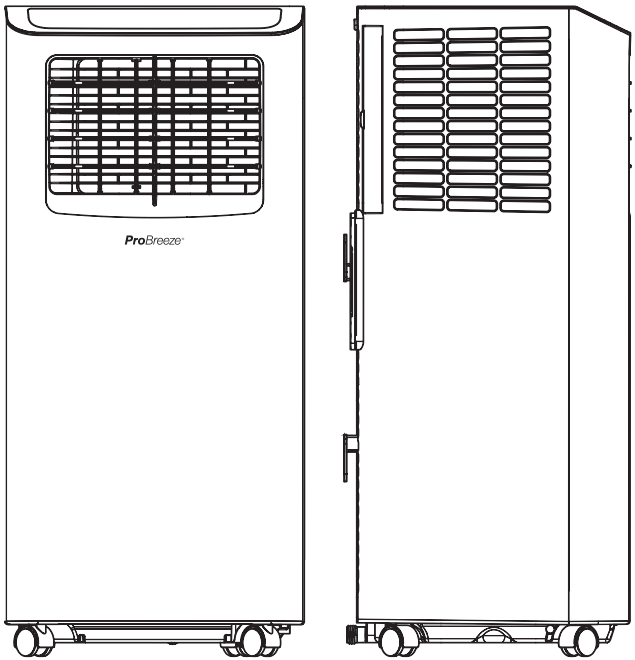

Model PB-AC01

9000BTU Smart Portable Air Conditioner

IMPORTANT INSTRUCTIONS
- RETAIN FOR FUTURE USE

CONTENTS

EN

Safety Instructions....Page 3
Specific Information Regarding R290 Refrigerant Gas....Page 7
Symbols Explained....Page 9
Batteries....Page 10
Specification....Page 10
Parts....Page 11
Control Panel....Page 12
Installation....Page 13
Operating Instructions....Page 15
Pro Breeze App Setup....Page 17
Voice Control Connection....Page 18
Emptying the Water Tank and Continuous Drainage....Page 18
Cleaning....Page 19
Storage....Page 21
Safety Features....Page 21
Troubleshooting....Page 23
Recycling and Disposal....Page 23
Declaration of Conformity....Page 24
PSTI Statement of Compliance....Page 24

ProBreeze®

9000BTU SMART PORTABLE AIR CONDITIONER | MODEL PB-AC01

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

⚠ **WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE, OR INJURY TO PEOPLE, ALWAYS TURN THE APPLIANCE OFF, UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET AND EMPTY THE WATER TANK BEFORE HANDLING, CLEANING OR SERVICING THE APPLIANCE.**

⚠ **WARNING: SERVICING SHOULD ONLY BE CARRIED OUT BY THE MANUFACTURER, ITS SERVICE AGENT OR A QUALIFIED TECHNICIAN.**

⚠ **CAUTION: THIS APPLIANCE IS HEAVY. TAKE EXTRA CARE WHEN HANDLING.**

- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Installation must be performed according to the installation instructions. Improper installation can cause water leakage, electrical shock, or fire.
- Use only the included accessories, parts, and specified tools for installation. Otherwise, it may cause water leakage, electrical shock, fire, injury, or property damage.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children must be supervised not to play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not leave children alone or unattended in the area where the appliance is in use. Cleaning and user maintenance shall not be made by children unless continuously supervised.
- Always place the appliance in an upright position on a flat, stable surface. Operating the product in any other position could cause a hazard and leakages.
- The appliance must have a minimum 50cm/19.7inch clearance around all sides. In case of a blocked air exchange, never stack any items around the appliance. This appliance is for indoor household use only; please place the appliance in a dry environment. Do not use outdoors. Do not cover, obstruct, or push objects into the vents and opening of the appliances as this may cause an electric shock, fire or damage the appliance. Do not cover the appliance whilst in use. Do not operate this appliance without the air filter installed.
- Dispose of water collected from this appliance. This water is not drinkable.
- Do not use this appliance near water or in the immediate surroundings of a bath, a shower or a swimming pool
- Do not allow water or other liquids to run into the appliance, as this could create a fire and/or electrical hazard.
- Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
- To avoid a circuit overload when using this appliance, do not operate another high wattage appliance on the same electrical circuit.
- Always plug the appliance directly into a wall socket. Do not use extension leads. Do not use this appliance with an external programmer, timer switch or any other device which would switch the device on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the mains cable. Never move, carry or hang the appliance by the mains cable.
- Do not remove the water tank when the appliance is in use, this may cause water to leak.
- Do not operate the appliance with the water tank removed.
- Do not operate the appliance if there are signs of damage to the appliance, power cord, or any of the accessories.
- To avoid damage, never place any items on top of the appliance or the power cord. Do not operate the appliance with any safety guards removed.
- Never damage the power cord or use an unlicensed power cord.
- Do not repair or modify the power cord. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- Your appliance must be used in a properly grounded wall receptacle. If the receptacle you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the required receptacle for this appliance. Ensure the receptacle is accessible after the appliance has been installed.
- Do not use if the electrical socket is loose or damaged.
- Do not under any circumstances, cut or remove the ground prong.
- This appliance must be installed in accordance with the national wiring codes.

- Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.
- Ensure that the mains supply (including voltage, frequency, and power) complies with the rating label of the appliance. The rating label is located on the side of your appliance.
- Do not use the appliance near petrol, paints, flammable gases, ovens, or other heat sources.
- Keep the appliance away from direct sunlight exposure.
- Do not operate the appliance with wet hands or in a humid environment. Never control the on/off status of the appliance by directly plugging/unplugging the appliance from the power supply. Always turn the appliance OFF from the appliance controls before disconnecting from the power supply.
- Always grasp the plug when plugging or unplugging the appliance. Never unplug the appliance by pulling on the cord. This can result in the risk of electrical shock or damage to the appliance,
- If the appliance is making unusual sounds or is emitting smoke or an unusual odour, unplug it immediately. It can result in the risk of electrical shock or fire.
- The appliance is heavy. Use two or more people when lifting and installing the unit. Failure to do this can cause back injury and other injuries.
- Read all instructions before using this appliance.
- Do not cover the appliance whilst in use. Always unplug the appliance when not in use.
- Keep the appliance out of reach of children and pets.
- Never leave the appliance unattended while in use.
- Always turn the appliance off and disconnected from the power supply when not in use.
- There may be a trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
- Do not cover, obstructs, or push objects into the vents and opening of the appliance as this may cause an electric shock, fire, or damage to the appliance.
- Do not place the continuous drainage hose outside when the temperature falls below 1°C.
- The mains cable should not hang down from the surface on which the appliance is placed in order to prevent the appliance from being pulled down.
- Do not pull on the power cord. Never move, carry, or hang the appliance by the power cord.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, or fire, or damage to the appliance. Do not move the appliance whilst it is in use.
- Do not cover the appliance or restrict the air flow of the inlet or exhaust grills whilst in use.
- Do not use mechanical devices to accelerate the appliances defrosting process.

SAFETY INSTRUCTIONS – R290 REFRIGERANT GAS

–



⚠ **WARNING – FIRE / EXPLOSION HAZARD.**

This appliance contains 0.195 kg (195 g) of R290 refrigerant gas. R290 is classified as an A3 flammable refrigerant under international (EN/IEC) safety standards. Failure to follow these instructions could result in fire, explosion, or injury.

- This appliance must only be installed and operated in a room with a minimum floor area of 10 m², and with sufficient natural or mechanical ventilation to prevent the

accumulation of flammable gas in the event of a leak, in accordance with EN/IEC 60335-2-40 (Annex GG).
- Do not install, operate, or store the appliance in cupboards, cabinets, basements, or other confined or unventilated spaces.
- Do not use the appliance if it is damaged or shows signs of refrigerant leakage.
- Do not puncture, burn, open, or tamper with the refrigerant circuit.
- Do not place the appliance near sources of ignition such as open flames, gas appliances, or electrical devices in operation.
- Keep the appliance clear of combustible materials at all times.
- Be aware that R290 refrigerant is odourless; leaks may not be detectable by smell.

⚠ CAUTION – HANDLING / STORAGE

- Do not use means to accelerate the defrosting process or cleaning, other than those recommended by the manufacturer.
- The refrigerant circuit must not be punctured, opened, or interfered with.
- Store the appliance in such a way as to prevent mechanical damage.
- If storing for an extended period, ensure the appliance is kept in a well-ventilated area, away from heat sources, sparks, or open flames.
- Do not store the appliance in cupboards, cabinets, basements, or other confined spaces where gas could accumulate.
- Only leak detection methods approved for use with flammable refrigerants may be used.
- Service and repair must only be carried out by qualified personnel holding appropriate certification for handling flammable refrigerants (e.g. EU F-Gas, UK equivalent, or accredited AE/Gulf certification).
- This appliance is marked with the flammable gas warning symbol (GHS02 flame pictogram). Ensure this label remains visible and legible at all times.

Disposal

At end of life, this appliance must not be disposed of with household waste. It must be taken to an authorised collection point for recycling and disposal in accordance with:

- UK: The Waste Electrical and Electronic Equipment Regulations 2013,
- EU: WEEE Directive 2012/19/EU.

The refrigerant must only be recovered by authorised service personnel.

SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.
	**CAUTION:** This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.		**CAUTION:** This symbol shows that information is available such as the operating manual or instruction manual.
	**WARNING:** The symbol shows that this appliance uses a flammable refrigerant. If the refrigerant leaks and is exposed to an external ignition source, there is a risk of fire.		

BATTERIES

Each remote control supplied with this product includes 2 x AAA disposable batteries..

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

⚠ **WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN. CHOKING HAZARD. DO NOT SWALLOW. HARMFUL IF SWALLOWED. SWALLOWING CAN LEAD TO CHEMICAL BURNS, PERFORATION OF SOFT TISSUE, AND DEATH. SEVERE BURNS CAN OCCUR WITHIN 2 HOURS OF INGESTION. IF YOU THINK BATTERIES MAY HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.**

- This product is only compatible with AAA batteries. Only use the specified battery type. Do not use rechargeable, mixed, or other non-compatible battery types.
- Do not allow children to handle batteries.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Install batteries with the correct polarity (+ and –).
- Do not mix old and new batteries or different brands or types of batteries.
- Remove exhausted batteries promptly.
- Always inspect new batteries before use. Do not use if they show any signs of leakage, damage, or weakness.
- Do not expose batteries to excessive heat, direct sunlight, fire, or water.
- Ensure the battery compartment is correctly and securely closed after installing the batteries.
- Wash hands after handling batteries.
- Disposable batteries are not rechargeable and must be recycled or disposed of separately from household waste. Dispose of used batteries at an official collection point displaying the crossed-out wheeled bin symbol, in accordance with local environmental laws and guidelines.


SPECIFICATIONS

- **Model:** PB-AC01-UK, PB-AC-01-B-UK
- **Voltage:** 220-240 V~
- **Frequency:** 50 Hz
- **Frequency Band(s):** 2400-2483.5 MHz
- **Power:** 960 W
- **Product Dimensions:** 325 x 702 x 295 mm
- **Cooling Capacity:** 9000 BTU/H
- **Refrigerant:** R290/195g
- **Energy Efficiency Class:** A
- **Rated Capacity For Cooling:** 2600 W
- **Rated Input | Cooling:** 960 W
- **Rated Current | Cooling:** 5.5 A
- **Noise Level:** 65 dBA
- **EER For Cooling:** 8.9 BTU/H
- **EER For Cooling:** 2.6 W/W
- **Moisture Removal:** 0.9 L/H
- **Air Flow Volume:** 370 m^3/H
- **Applicable Area:** 18-22 m^2
- **Operating Temperature Range:** 5-32°C
- **Available Temperature Setting:** 16-30°C
- **Global Wrming Potential:** 3kg CO^2 eq
- **Maximum RF Power:** 18.3 dBm

PARTS


Front View

1. Control panel
2. Horizontal louvre
3. Vertical louvre
4. Body
5. Casters

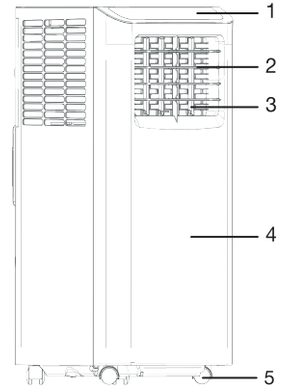

Rear View


6. Holder
7. Handle
8. Air inlet grille (up)
9. Air outlet grille
10. Continuous drainage cap/continuous water outlet
11. Bottom drainage cap/bottom water outlet
12. Air inlet grille (down)
13. Power cord tidy
14. Condenser filter
15. Evaporative filter

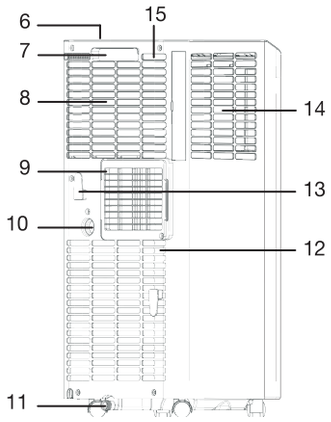


Accessories

16. Remote control*
17. Square connector
18. Heat exhaust hose
19. Heat exhaust hose short connector
20. Window sealing board kit (Panel A&B + Clip)
21. 600mm water hose
22. Hinged window fabric sealing assembly
23. Sealing Velcro

**Model PB-AC-01-B-UK (bundle version) includes 2 remote controls.*

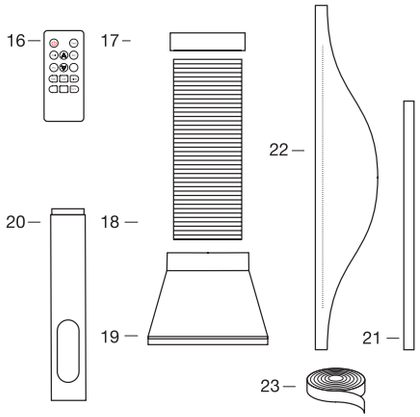

CONTROL PANEL

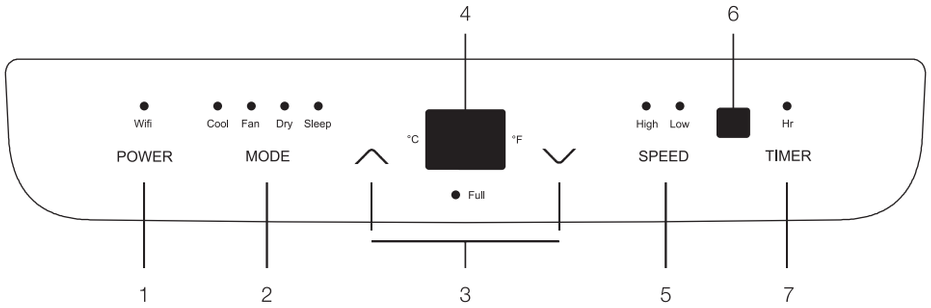

1. Power button
2. Change mode button
3. Up/Down buttons
4. Display
5. Fan speed button
6. Remote Sensor
7. Timer button

Indicator light symbols moving from left to right


- Wi-Fi indicator: Download the "Pro Breeze" app, then follow the instructions below to connect to Wi-Fi and to manage the Wi-Fi settings.
- Cooling mode indicator light.
- Fan-only mode indicator light.
- Dry (Dehumidifying) mode indicator light. Sleep mode indicator light.

Digital display panel moving from right to left

- Degrees fahrenheit indicator light
- Degrees celsius indicator light
- Water tank full indicator light

Fan speed Indicator lights

- High fan speed indicator light
- Low fan speed indicator light
- Timer mode indicator light

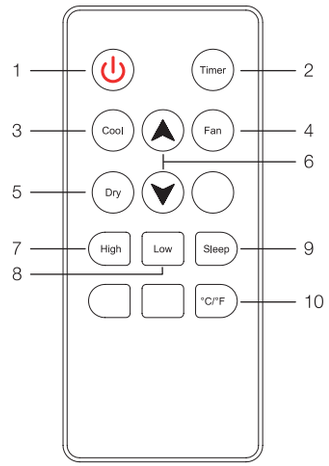


Remote Control

1. Power button
2. Timer button
3. Cooling mode button
4. Fan-only mode button
5. Dry (Dehumidifying) mode button
6. Up/Down buttons
7. High fan speed button
8. Low fan speed button
9. Sleep mode button
10. Temperature unit button

INSTALLATION

Prior to and after installation adhere to the below

1. When moving the appliance to the chosen location, ensure it is kept in an upright position.
2. Do not place or use the appliance, power cord, or any accessories in a bathroom, wet, or damp place.
3. Place the appliance on a flat and dry surface.
4. Keep it at least 50cm away from surrounding walls and/or objects.
5. Leave the appliance in an upright position for at least two hours before first use.
6. Keep the heat exhaust hose at least 90cm away from the floor.

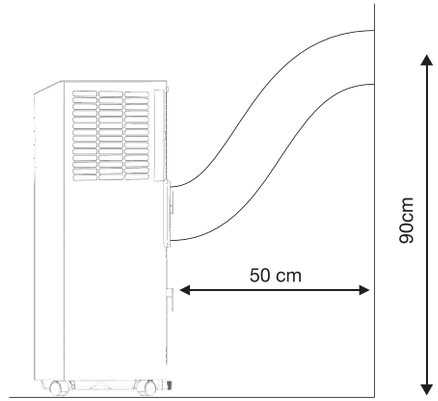

Connecting the Exhaust Hose


In many ways, your new air conditioner is like a refrigerator, but instead of securing the cold air inside it blows the air around the room. Air conditioners utilise refrigerant gas to cool down warm

air in a room and then blow the now-cooled air around the space with internal fans. They must vent the hot air outside (usually via a window, ventilation shaft, or dedicated passage) with an exhaust hose. To connect your exhaust hose and other accessories, follow the instruction below:

Exhaust Hose Assembly
In this stage, you will be assembling the hose and will need...

- Square connector
- Heat exhaust hose
- Heat exhaust hose short connector

1. Insert the square connector into the heat exhaust hose short connector.
2. Rotate the circular connector counterclockwise to lock it into the end of the heat exhaust hose.

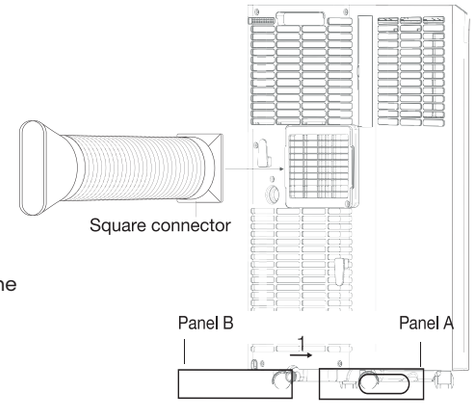

Exhaust Hose Installation
In this stage, you will need...

- Assembled heat exhaust hose
- Pro Breeze smart portable air conditioner

1. Clip the exhaust hose into the rear panel outlet situated on the back of your air conditioner. Ensure it is tightly secured in place
2. When in Cooling Mode, position your air conditioner close to a window or door, with the hose outside, to allow the unit to vent the warm air out of the room


Sliding Windows Sealing Board Assembly Installation
You will need:

- Window sealing board kit (Panel A&B + Clip)
- Finished heat exhaust hose short connector


1. Insert Panel B into Panel A and adjust to the length or height of the window (see images)
2. Open your window and place the sealing board assembly into the open space.
3. Adjust to ensure an exact fit and secure with the clip.
4. Close the window to lock everything into place.
5. Attach the heat exhaust hose short connector to the elliptical hole.

The sealing board assembly is now ready for use.

Horizontal Window

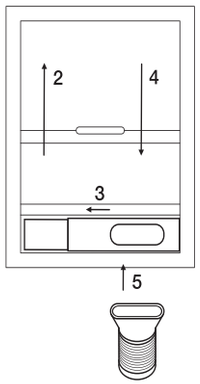

Vertical Window

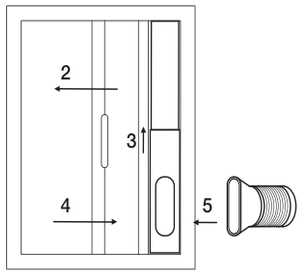

Notes:

- If your window opening is smaller than the minimum length of the sealing board assembly trim to desired length using a hack saw.
- If your window opening is larger than the maximum length of the sealing board assembly use plywood or similar to fill the gap.

Scan for Full Video Instructions on How Best to Fit Your Hinged Door and Window Seals

Hinged Window Sealing Fabric Assembly Installation


If your window is hinged, follow the instructions below:

You will need:

- Hinged window fabric sealing assembly
- Sealing velcro
- A soft, clean cloth

1. Open window and clean frame and casement surfaces of dust and particles.
2. Stick the velcro tape around the entire window frame. Never stick to the window seal as doing so will prohibit the window from closing fully.
3. Stick the velcro tape around the entire window casement (inside or outside). Check to ensure the window can close fully.
4. Attach side A of the sealing fabric assembly to the velcro on the window frame working from the centre outwards.
5. Close and open window to ensure no fabric gets trapped.
6. Attach side B of the sealing fabric assembly to the velcro on the window casement working from the centre outwards.
7. Open the window slightly and insert the heat exhaust hose short connector into the sealing fabric assembly securing with the zippers around its lip.

The sealing fabric assembly is now ready for use.

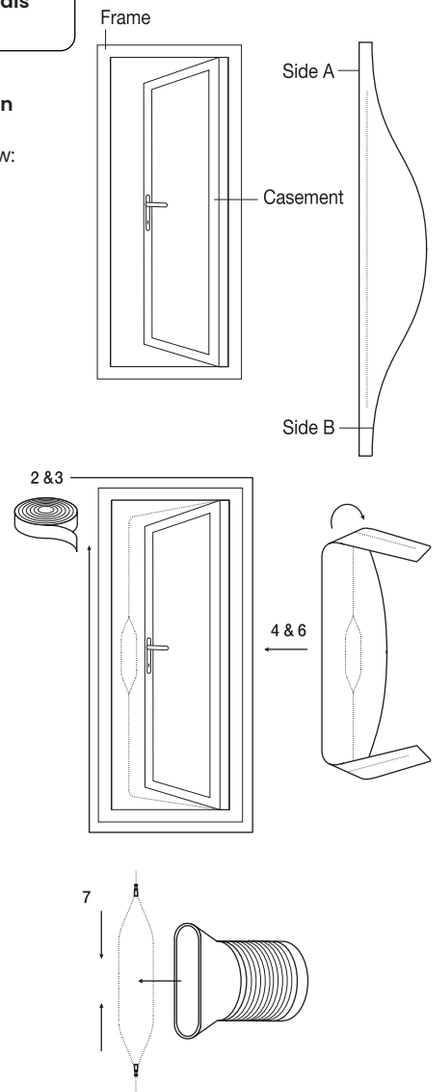

OPERATING INSTRUCTIONS

- **Power button:** Press once to turn your device ON/OFF.

- **Fan speed button:** Press to choose between high and low speed.

Note: You can not change the fan speed in dry mode.

- Up And Down Buttons

Use the up and down buttons to:

1. Set desired temperature when in cooling mode.
2. Set desired hours until turn-on and turn-off when setting a timer.
3. Change between ºC and ºF by pressing both down at the same time.

- **Mode button:** Press this button to change to one of the four modes outlined below. The relevant indicator will illuminate when the mode has been selected.

Note: Temperature can only be set when in cooling mode.

a. **Cooling Mode:** Perfect for cooling a room in hot weather. Use the up and down buttons when in cooling mode to set the desired temperature between 16ºC (60ºF) and 30ºC (80ºF). The appliance will cool the room if the room temperature goes above the set temperature. If the room temperature goes below the set temperature, cooling mode will pause, but the fan will remain operating at the set fan speed. **IMPORTANT: The heat exhaust hose must be connected to allow the hot air to be discharged outside. See instructions below.**

b. **Fan-Only Mode:** The appliance operates at the set fan speed, blowing cold air into the room. The room temperature is displayed on the digital display panel. **Note: The heat exhaust hose does not have to be connected to the appliance.**

c. **Dry (Dehumidifying) Mode:** Ideal for reducing room humidity in humid and damp times of year. The appliance will dehumidify the room if the room temperature is greater than or equal to 17ºC (62ºF) and the fan will operate at the low fan speed. If the room temperature decreases to less than or equal to 15ºC (59ºF) the appliance will stop dehumidifying the room, but the fan will continue to operate.

d. **Sleep Mode:** Set sleep mode to reduce energy consumption when in cooling mode. To activate, press the sleep button on the remote control or **both the timer and down buttons** on the control panel at the same time. The display will blink five times with SL to confirm sleep mode has been set then revert to the set temperature. In sleep mode, after two hours the set temperature will increase automatically by 1ºC (1ºF). After another two hours, the set temperature will increase automatically by a further 1ºC (1ºF) and the fan speed will change to low fan speed if it is not already at this fan speed. The appliance will continue to run at this setting until turned off.

- **Timer Button:** you can set your device to turn on or off automatically in one hour increments (from 1-24hrs) using the timer button.

Setting a Turn-On Timer

1. Ensure the appliance is plugged in and the power socket is turned on.
2. Press the timer button to activate the timer function.
3. Press the up and down buttons to set the desired time (1-24 hours) until turn-on.
4. The time digits will blink five times to confirm a timer has been set and the timer indicator light will remain illuminated.
5. Select the desired settings prior to turn-on.
6. To check the remaining time until turn on, press the timer button.
7. To cancel the turn-on timer, set the time to 0 hours or turn the appliance on and off.

Note: If no desired settings are selected the appliance will turn on in the previously set settings.

Setting a Turn-Off Timer

1. Ensure the appliance is plugged in and the power socket is turned on.
2. Press the power button to turn the appliance on.
3. Press the timer button to activate the timer function.
4. Press the up and down buttons to set the desired time (1-24 hours) until turn-off.
5. The time digits will blink five times to confirm a timer has been set and the timer indicator light will remain illuminated.
6. Select the desired settings prior to turn-off.
7. To check the remaining time till turn- off press the timer button.
8. To cancel the turn-off timer set the time to 0 hours or turn the appliance off and on.

PRO BREEZE APP SETUP

Our **Pro Breeze app** is a centralised app for smart device management. Control your unit and set up schedules to turn your unit on and off from your smart device.

Note: Ensure your Wi-Fi network is set to 2.4GHz for successful pairing.

Pair Your Device in 4 Steps:

1. **Register:** Download the **Pro Breeze app** from the Google Play or Apple App Store by scanning the QR code. Sign in or register for an account.
2. **Prepare your unit:** Once you're signed in, hold down the Fan Speed on the control panel for 5 seconds to turn on the unit's Wi-Fi pairing mode.
3. **Prepare the app:** Open the Pro Breeze app, press the "+" in the top right corner, then press "Add Device".
4. **Pair your unit:** The app will scan for devices. Once your unit shows up, press "Add". Enter the password for the Wi-Fi network your phone is connected to.

Scan the QR Code
to Download the App

Your unit is now connected to the **Pro Breeze app** and ready for remote control and scheduling.

VOICE CONTROL CONNECTION

Before you start, make sure:

Scan the QR Code
for a voice control guide

- The Pro Breeze app is downloaded and your appliance is paired.
- The Amazon Alexa app or Google Home app is downloaded.
- Your Echo or Google Home device is already set up with its app.

Set-Up with Amazon Echo (Alexa)

1. **Link Pro Breeze to Alexa:**
- Open the Pro Breeze app.
- Open the Me tab and go to Service Center.
- Tap the Alexa icon, then tap “Link to Amazon Alexa”.
- The system will redirect you to the Alexa app. Tap Link and follow the on-screen instructions to link your Pro Breeze account.
- If the device is already paired with the Pro Breeze app, it will automatically connect to Alexa.

Set-Up with Google Home

1. **Link Pro Breeze to Google Home:**
- Open the Pro Breeze app.
- Open the Me tab and go to Service Center.
- Tap the Google Assistant icon, then tap “Link to Google”.
- The system will redirect you to the Google Home app. Tap Continue and follow the on-screen instructions to link your Pro Breeze account.
- If the device is already paired with the Pro Breeze app, it will automatically connect to Google Home.

EMPTYING THE WATER TANK AND CONTINUOUS DRAINAGE

Your smart air conditioner also acts as a dehumidifier, extracting moisture from the surrounding air. This water is either stored in the water tank (and needs emptying) or can be automatically drained through the continuous drainage hose. For long-term use in humid or warm conditions, we recommend using the continuous drainage hose.

Instructions

When the water tank is full the warning FL will show on the display and the appliance will pause operation to prevent the water tank from overflowing.

⚠ **WARNING: Never leave water in the water tank when the appliance is not in use, microorganisms can grow in stagnant water, the water tank should be emptied and cleaned regularly.**

To empty the water tank:

1. **Step 1:** Turn off the appliance and unplug it from the wall socket.
2. **Step 2:** Unplug and dismantle the air exhaust hose. Place a shallow tray underneath the water outlet.
3. **Step 3:** Unscrew the bottom drainage cap, unplug the drainage plug and allow the water to collect in the shallow tray. The water will automatically start to flow.
4. **Step 4:** To fully empty the water tank gently tilt the appliance back on its rear wheels. Do not tilt more than 30 degrees.
5. **Step 5:** Once empty, return the appliance to a fully upright position and replace the drainage plug and bottom drainage cap.
6. **Step 6:** Empty the shallow tray.


Connecting the Water Hose for Continuous Drainage


For long-term use, it is recommended to connect a water hose for continuous drainage.

To attach the water hose:

Step 1: Unscrew the continuous drain cap, unplug the drain plug, and store safely.
Step 2: Insert the water hose into the water outlet. Tightly secure in place.
Step 3: Feed the other end of the water hose to a suitable drainage outlet (e.g. a drain or bucket).

Note: When the appliance is set at a warm temperature it is recommended to attach the water hose as the water tank will fill at a faster rate than when set at a cold temperature.

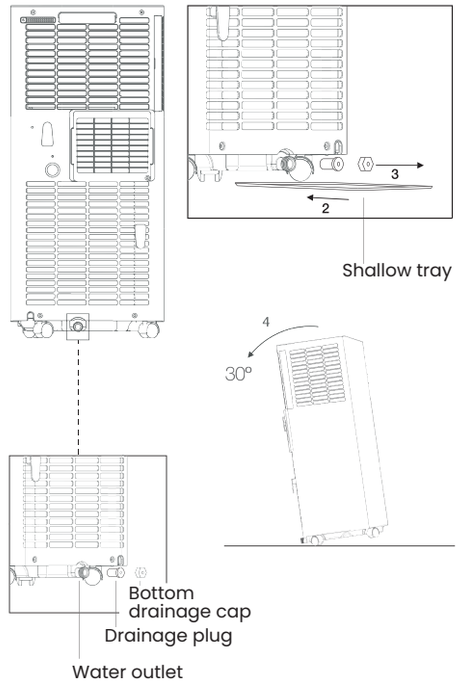

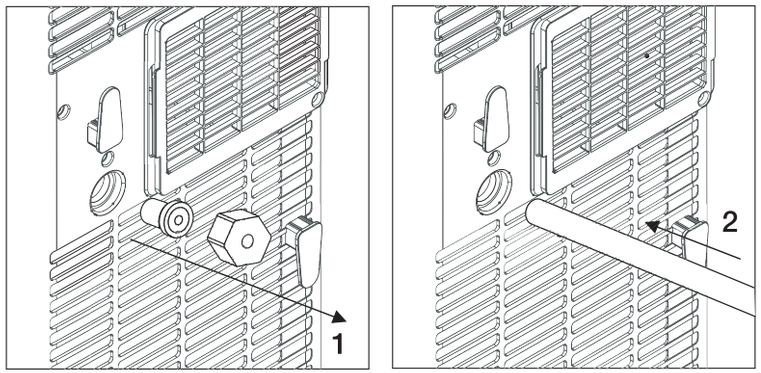

CLEANING

⚠ WARNING: ALWAYS TURN THE APPLIANCE OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

⚠ CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENTS, AS THIS WILL DAMAGE THE APPLIANCE. DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE APPLIANCE, AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.
- Cleaning and user maintenance shall not be made by children.

Exterior Cleaning:

- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.
- Clean the vents and openings of the appliance regularly with a vacuum cleaner, using the brush attachment to avoid any dust build-up.

⚠ CAUTION: DO NOT OPERATE THE APPLIANCE WITHOUT THE FILTER. THIS WILL CAUSE IT TO CLOG UP WITH LINT AND DIRT AND WILL REDUCE PERFORMANCE. ALWAYS INSERT THE FILTER SECURELY.

Clean the appliance's evaporator and condenser filter once every two weeks.

To remove and clean the filters:

1. Grip the first filter by gripping the handle to the left of the upper air inlet grille and gently remove.
2. Upon removing the first filter the second filter handle will be exposed. Gently remove the second filter.
3. Use a firm brush and or vacuum cleaner to clean the filter of any dust and particles.
4. Return both the second filter and then the first filter to the upper air inlet grille.

Heat Exhaust Pipe Cleaning

1. Remove the heat exhaust pipe from the rear of the appliance and the respective window sealing assembly. Allow to cool.
2. Use a soft, dry cloth to clean away any dust, or debris.
3. Return the heat exhaust pipe.

STORAGE

For long-term storage:

1. Empty the water tank and leave both the continuous and bottom drainage caps and drainage plugs off and unplugged.
2. Run the appliance in fan-only mode on the low fan speed setting for 12 hours to allow the interior of the appliance to fully dry.
3. Turn off the appliance, replace both the continuous and bottom drainage caps and drainage plugs, and unplug the power cord.
4. Remove the heat exhaust hose.
5. Remove the batteries from the remote control.
6. Ensure the appliance and water tank are clean and dry before storage.
7. Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
8. Store the appliance in a safe, clean and dry place, away from direct sunlight and out of reach of children when not in use. To store your product, we recommend using the original or a similar sized box.

SAFETY FEATURES

Anti-Frost Protection

If the internal pipe temperature drops too low the unit will pause. The display will show E4 and the appliance will initiate anti- frost protection rendering the control panel buttons inactive, apart from the power button. Once the internal pipe temperature has warmed to above 8°C (46.4°F) the anti-frost protection will cease, and the appliance will return to operating at the chosen settings.

Compressor Delay Protection

The device is too noisy.	Noise is natural for air conditioners as they pump refrigerant around the unit to cool the air. If your appliance is making an unusual noise it may be due to it being on an uneven surface.	Check that your device is on a flat, secure surface.
Not enough water is being collected.	Dehumidifiers draw air in and condense it on a cold surface to remove the moisture. If the surrounding air is too cold, their effective- ness is reduced.	For best results, dehumidifying mode is best used in warm, humid temperatures.
Display showing E1.	Pipe temperature sensor failure.	Arrange for a professional to check the pipe temperature sensor and related circuits.
Display showing E2.	Room temperature sensor failure.	Arrange for a professional to check the room temperature sensor and related circuits.
Display showing E4.	Anti-frost protection.	Appliance returns to operating at chosen settings once the internal pipe temperature exceeds 8°C (46.4°F)

To protect the compressor, apart from when the appliance and compressor are activated for the first time after being turned on via the power button, there will be a three-minute delay between every occurrence of the compressor turning off and on.

TROUBLESHOOTING

We do everything that we can to ensure our products are easy to install and use. If you do have any issues, here are some troubleshooting tips that may help you to solve the problem. If the problem persists, please contact our customer service team at help@probreeze.com

Problem	Cause	Solution
The appliance is not operating.	No power.	Connect the unit to a live power socket and turn it on.
	The unit will pause if the water tank is full. FL will show on the display panel.	Empty the water tank or connect the drainage hose as per instructions above.
	If TIMER off has been activated, the appliance cannot be turned on for 3 minutes.	Wait for three minutes and try to turn your device on.
	For your safety, the device will pause if the internal components drop below 8°C (46.4°F).	Wait for 5 minutes. The device will activate the safety features and will resume when the temperature has normalised.
	The device will stop if the temperature target has been hit.	Decrease the temperature target using the increase/ decrease button to re-activate the device.
The appliance is not cooling effectively.	Doors and windows are open or there are other heat sources impacting the room temperature.	Close all doors and windows or attach seals as per instructions. Remove all sources of heat from the room.
	Warm air is entering the room from the exhaust hose.	Position your unit close to a window or door and ensure they are sealed with the exhaust hose outside of the room.
	Filters are blocked.	Clean filters as per instructions above.
	Air inlet or air outlet is clogged.	Check for obstructions and clean the inlets or outlets.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators, and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household

waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	**Waste Electrical and Electronic Equipment (WEEE)**	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	**Waste Batteries and Rechargeable Batteries**	This symbol on the batteries supplied with your product indicates that Waste Batteries under Directive 2006/66/EC which governs used batteries and accumulators should not be disposed of with general household waste. If the battery contains more than 0.004% lead, the battery symbol will be accompanied by the letters (PB).
	**The Mobius Loop**	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit **www.probreeze.com**

The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

Personal Data Protection

Electrical and electronic products (WEEE) may contain personal user data, depending on the type of product. This may include app-linked products that connect to wifi. The end-user is responsible for deleting the data on the waste electrical and electronic products prior to disposal.

DECLARATION OF CONFORMITY

Hereby, One Retail Group Limited declares that the radio equipment type PB-AC01-UK and PB-AC-01-B-UK are in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: **https://probreeze.com/pages/ec-declaration-of-conformity/**

PSTI STATEMENT OF COMPLIANCE

Hereby, One Retail Group Limited declares that PB-AC01-UK and PB-AC-01-B-UK are in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. The full text of the UK PSTI Statement of Compliance is available at the following internet address: **https://probreeze.com/pages/psti-compliance/**

www.probreeze.com

One Retail Group, Ryland House,
24A Ryland Road, Kentish Town, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2025