KOMORE

# POPCORN MAKER

**BMHJ-902**



## Specifcations

| | |
|---|---|
| Description | POPCORN MAKER |
| Model | BMHJ-902, |
| Rated Voltage | 220-240V |
| Rated Frequency | 50/60Hz |
| Rated Power | 650 W |
| Dimension | 225mmX270mmX228mm |

**IMPORTANT SAFEGUARDS**

**- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved**

**- children shall not play with the appliance**

**- cleaning and user maintenance shall not be made by children without supervision**

**-the appliances are not intended to be operated by means of an external timer or separate remote-control system**

**-If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

1.Do not touch the power plug with wet hands.
2、This product is only suitable for family use, do not use it for other purposes.
3、Do not place the main engine in any liquid.
4、Please keep this product out of reach of children.
5、Do not put the product in the environment of high temperature, strong magnetism, inflammable and explosive gas, etc., in order to avoid abnormal working of components or fire accidents.
6、It is forbidden to bend, pull, bind or compress the power cord with heavy objects to avoid accidents such as electric shock and fire.
7、After power on, do not disassemble the machine, do not put a spoon in the machine or flip the popcorn without oven gloves.
8、Do not change, disassemble or repair by yourself. Do not use parts not approved by the manufacturer.

**IMPORTANT SAFEGUARDS**

1、When using electrical appliances, basic safety precautions should always be followed, including the following:

2、Do not touch hot surfaces. Use oven gloves when handling hot surfaces.

3、To protect against electric shock do not immerse cord, plugs in water or others.

4、Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.


5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

6、Do not place on or near a hot gas or electric burner, or in a heated oven.

7、Do not plug in power when not in use.

**SPECIFICATIONS**

1:Measuring cup 2: Steam vent 3: Cover 4：ovenware 5：handle of base 6: SWitch 7:shell 8: rotary knob 9: stirring shaft

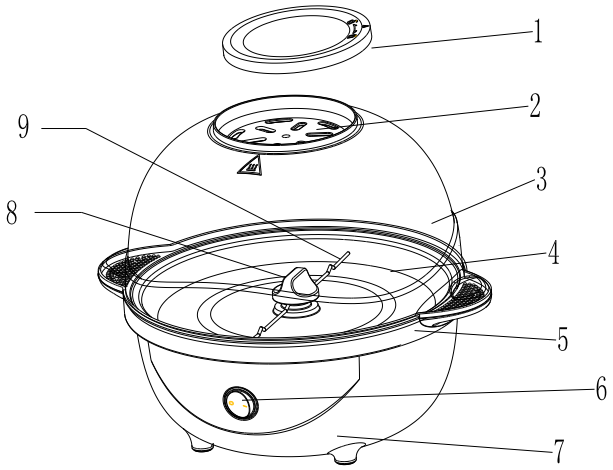

**Operating method**

1.Clean the lid and measuring cup with a non-abrasive sponge, towel or cloth before first using.Rotate the center knob counterclockwise to remove the agitator from the fuselage.

2.Wipe stirring sticks and baking sheets with a non-abrasive sponge, towel or cloth.Install the agitator rod, make sure the rod matches the area around the screw, and tighten the center knob clockwise.


3.Place the Popcorn Maker on a level surface.

4.If a long detachable power-supply cord or extension cord is used:


5.The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;

6.If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.

7.**Collect popcorn supplies: popcorn, seasonings, and vegetable oil or butter (special popcorn and vegetable oil are recommended for the best popcorn).**

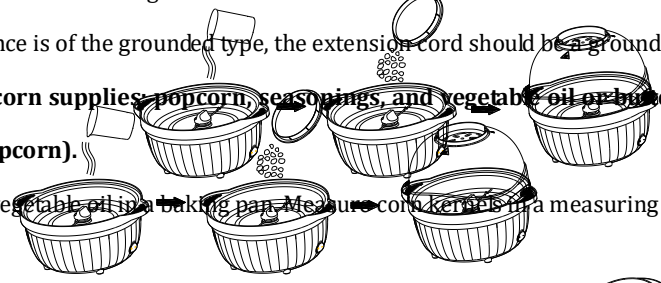

8.Place some vegetable oil in a baking pan.Measure corn kernels in a measuring cup. Pour into the pan. Cover with top.(do not measure the cup)

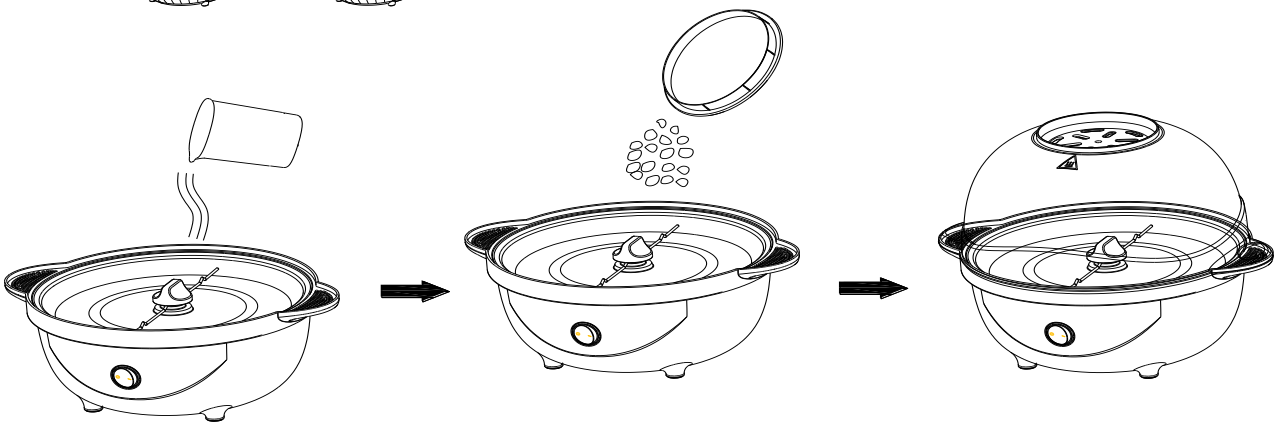

9.Make sure the switch is in the off position, plug it in, turn the switch down and the machine starts working.

10.The corn is bursting when you hear a "pop" sound. Do not touch the steam mouth to avoid burns.When the banging stops, flip the switch up, turn off the appliance, and pull the plug.

11.Fasten the measuring cup to the top of the top lid.

12.Put on the oven gloves, pinch the top cover handle and the host handle, flip them 180 degrees, and you have hot, fresh, delicious popcorn.It is recommended to eat immediately. It tastes better.

13.Please Wait for approx. 18 to 20 minutes before using the Popcorn Maker again

## cleaning and maintenance

Be sure to remove and cool the equipment before cleaning.Remove the mixer bar from the base by unscrewing the center knob.Use a damp, frictionless sponge or wool

A towel or dry cloth.Wash bowl and lid in warm water with no abrasive or sponge.Rinse thoroughly and dry with an abrasive free towel.

Note: do not wash the body into water or other solutions.