MEET YOUR FIRE HD 8 KIDS

INCLUDES

USB-C cable, power adaptor

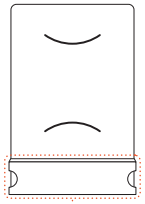

Make sure to check the accessories box before recycling.

ACTIVATE YOUR FIRE HD 8 KIDS

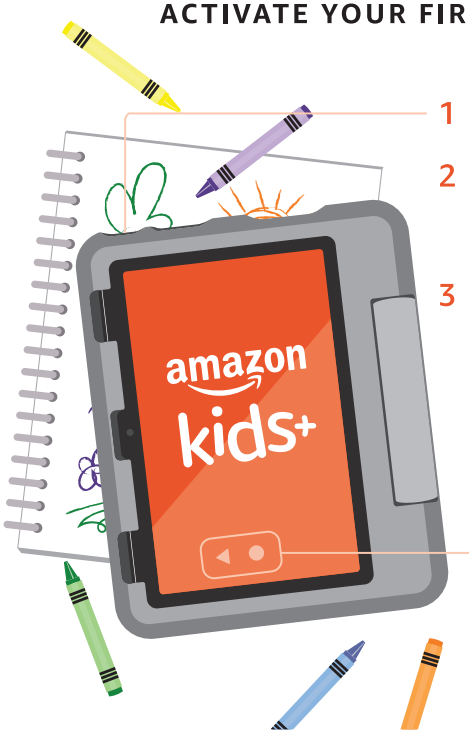

1 **POWER**
Turn on your tablet.

2 **PARENT SETUP**
Follow the on-screen instructions to complete setup. Set your password or PIN to access adult profile and other settings.

3 **CREATE CHILD PROFILE**
Follow prompts to activate the included 1-year subscription to Amazon Kids+ by completing your child profile.

Access **Parent Dashboard** to customise content and parental controls at https://parents.amazon.co.uk/.

- Go back
- Home screen

ENJOY YOUR FIRE HD 8 KIDS

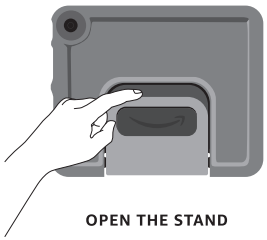

OPEN THE STAND

STAND ORIENTATIONS

ACCESS SETTINGS

SWIPE UP
to unlock.

SWIPE DOWN
for settings.

REMOVE THE CASE IF NEEDED

PUSH OFF UPPER CORNERS TO REMOVE THE CASE

CLEAN YOUR TABLET

Remove the case and clean with a dry, non-abrasive cloth.

EXPAND YOUR STORAGE

Remove the case to install a microSD card.

microSD card sold separately.