acctim

EN LCD ALARM CLOCK OPERATING INSTRUCTIONS

Thank you for your purchase of this quality clock. Please read these instructions carefully and keep in a safe place for future reference.

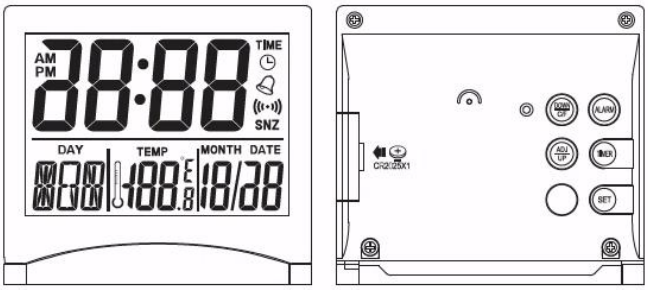

ACTIVATING THE CLOCK
Insert 1 X CR2025 battery into the battery compartment, taking care to observe the polarity. All segments will display briefly and the clock display will show 12:00. The clock will play alarm sound option 3.

SETTING THE TIME AND DATE
Press the SET button once the hour digits will flash. Press UP or DOWN button to set the hour, ensuring AM/PM is set correctly.
Press the SET button once again, the minute digits will flash.
Press UP or DOWN button to set the minutes.
Press the SET button once again, the year digits will flash.
Press UP or DOWN button to set the year.
Press the MODE button once again, the month digits will flash.
Press UP or DOWN button to set the month.
Press the SET button once again, the date digits will flash.
Press UP or DOWN button to set the date.
Press the SET button once again to exit.

12/24 HOUR FORMAT
In normal time mode, press the UP button once to select between 12/24 hour format.

SETTING THE ALARM
Press the ALARM button once the bell icon will display.
Press the SET button once the hour digits will flash. Press UP or DOWN button to set the hour, ensuring AM/PM is set correctly.
Press the SET button once again, the minute digits will flash.
Press UP or DOWN button to set the minutes.
Press the ALARM button once again, the display will show '60' and flash.
Press UP or DOWN button to set snooze duration from 1 to 60 minutes.
Press the SET button once again, the alarm sound option '1' will flash.
Press UP or DOWN button to select between options 1-9.
Press the SET button once again to exit.

TO TURN ON/OFF THE ALARM/SNOOZE
Press the ALARM button once the bell icon will display. To turn ON the alarm, press the UP button once and the alarm icon will display.
Press the UP button once again to turn ON the snooze function and the SNZ icon will display. Press the UP button once again to turn OFF the alarm and snooze.

USING THE SNOOZE FEATURE
When the alarm sounds, press the ALARM button to snooze the alarm for the preset snooze duration. The SNZ icon will flash. To stop the snooze function turn OFF the alarm/snooze.

SETTING THE TIMER
Press the TIMER button once. Press the SET button once and the hour digits will flash. Press UP or DOWN button to set the hour. Press the SET button once again, the minute digits will flash. Press UP or DOWN button to set the minutes. Press the SET button once again, the seconds digits will flash. Press UP or DOWN button to set the seconds. Press the TIMER button to START/STOP the timer. Note: Press the ALARM button to return to the time/alarm display.

TO SELECT TEMPERATURE IN DEGREE °C OR °F
In normal time mode, press the DOWN button to select °C or °F.

CHANGING THE BATTERIES
It is recommended that you replace the batteries annually even if the product is still running. Only use CR2025 (3V) Alkaline batteries in this clock. Do not mix old and new batteries, different types or brands. Remove the batteries if the clock is stored or not in use. Remove exhausted batteries from the product.