Modular TV Unit

Dimensions

Width - 103 cm
Depth - 50 cm
Height - 46 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

⚠️ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• We do not recommend the use of power drill/drivers *for inserting screws*, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Please check you have all the panels listed below
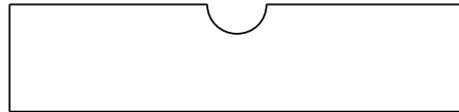
7 Back (998x237mm)
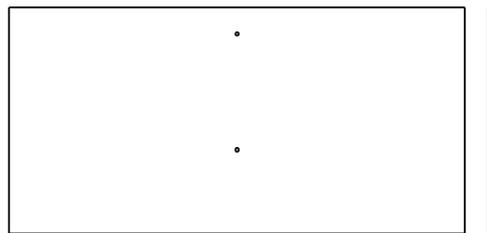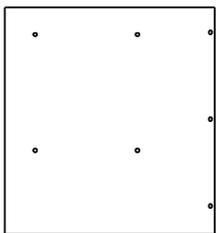
2 Top (999x499mm)

4 Shelf x2 (492x358mm)
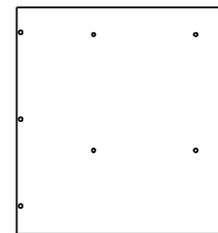
1 Side (460x500mm)

1 Side (460x500mm)
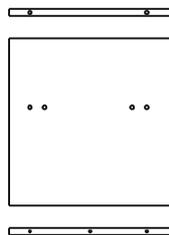
5 Central Panel (369x359mm)
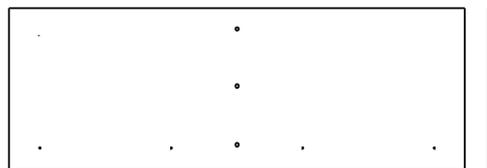
3 Bottom (999x360mm)
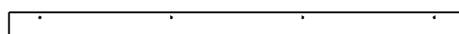
6 Front (999x59mm)

Components - Fittings

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A Plastic Support x 4	**B** 13mm Screw x 8	**C** Dowel x 7
D 50mm Screw x 16	**E** Allen Key x 1	**F** 8 Covering Sticker x 1 (⌀16mm)
G 6 Covering Sticker x 1 (⌀16mm)	**H** Nail Guide x 1	**I** Nail x 30
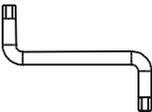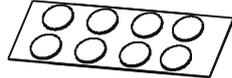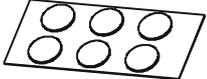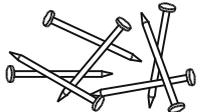
Tools required
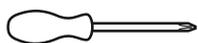
Phillips screwdriver

Eye protection
(when using a
hammer or glue)

Small
hammer

Ruler/tape
measure

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Attaching bottom panel

a: Use Screws **B** to fix Plastic Support **A** onto the Bottom Panel **3** .

a:
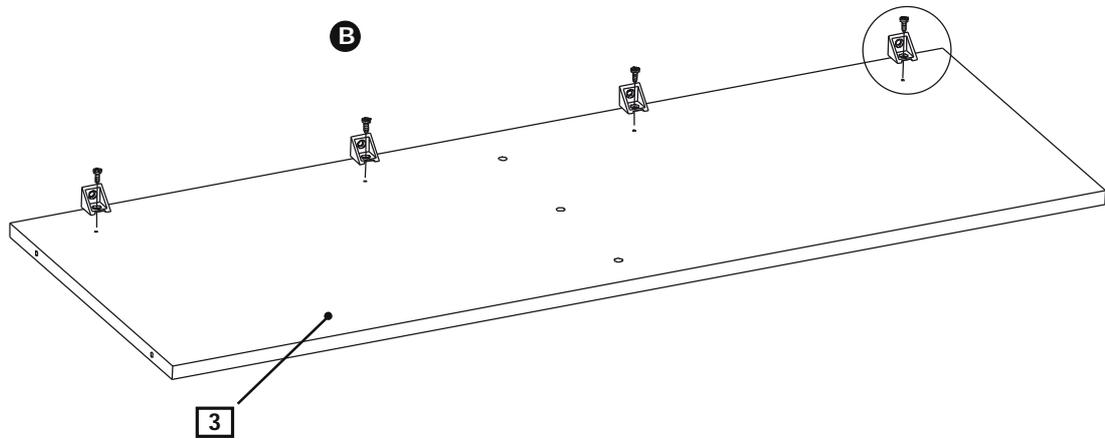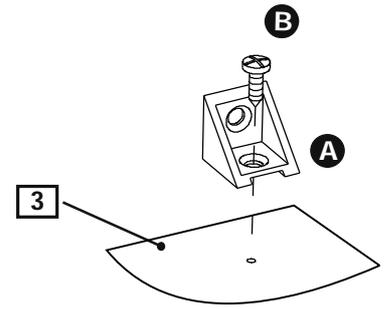
b: Use Screws **B** to connect the Front Panel **6** onto the Bottom Panel **3** .

b:
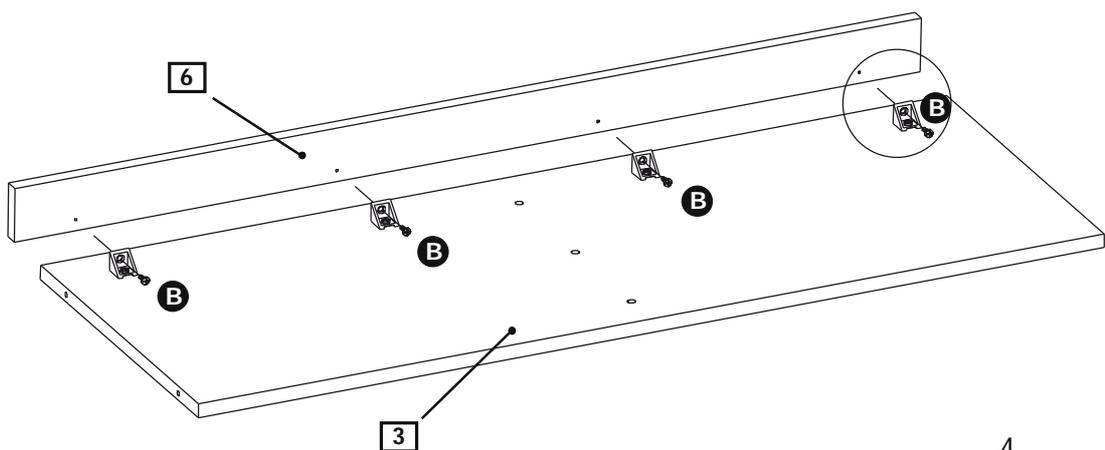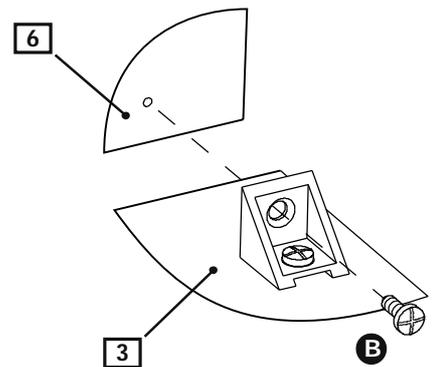
Assembly Instructions

Fitting Dowels

Insert Dowels **C** into the
Central Panel **5** .
(only one side)
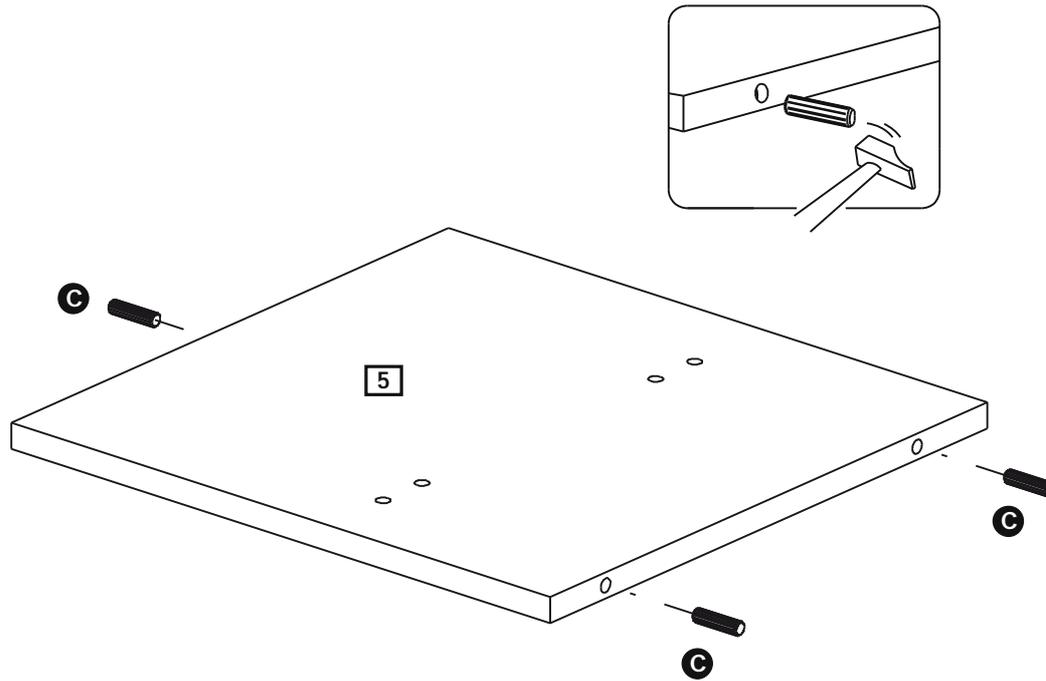
Step 3

Attaching Bottom panel

a: Use Screws **D** to fix the
Central Panel **5** onto the
Bottom Panel **3** .

Note: Use Allen Key **E**
to fix Screws **D** .
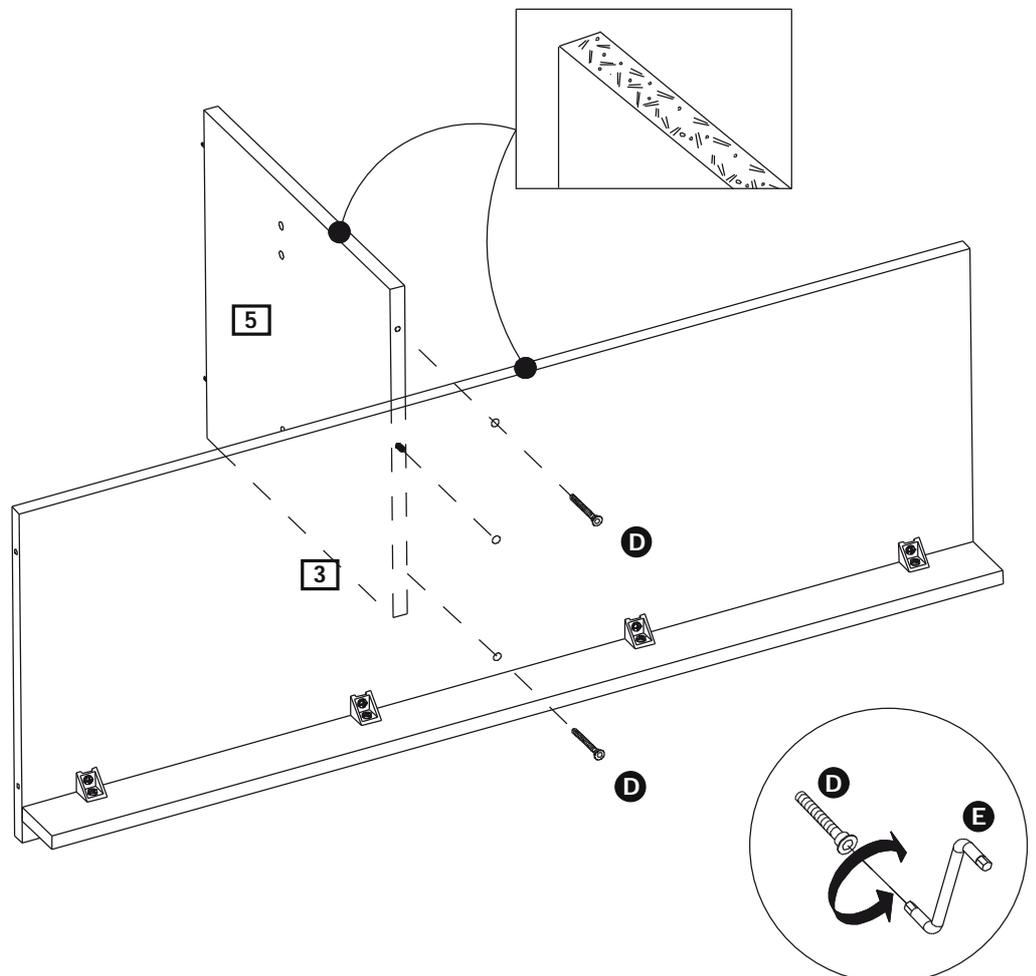
Assembly Instructions

Attaching Top Panel

Careffully place the Top Panel 2 onto the Central Panel 5 .

Two persons assembly is required.

2

5

3
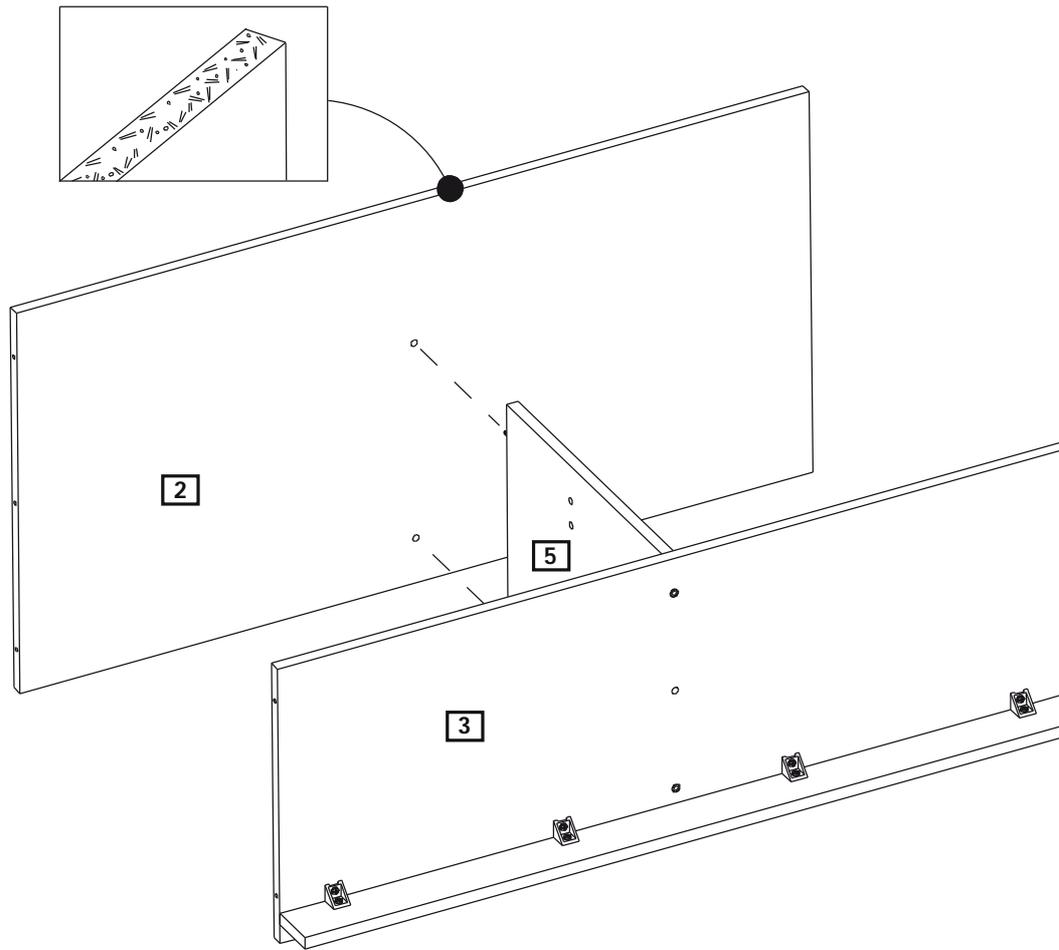
**Fitting Dowels**

Insert Dowels **C** into the Shelf 4.1.

(only one side)

a:

C

C

4.1
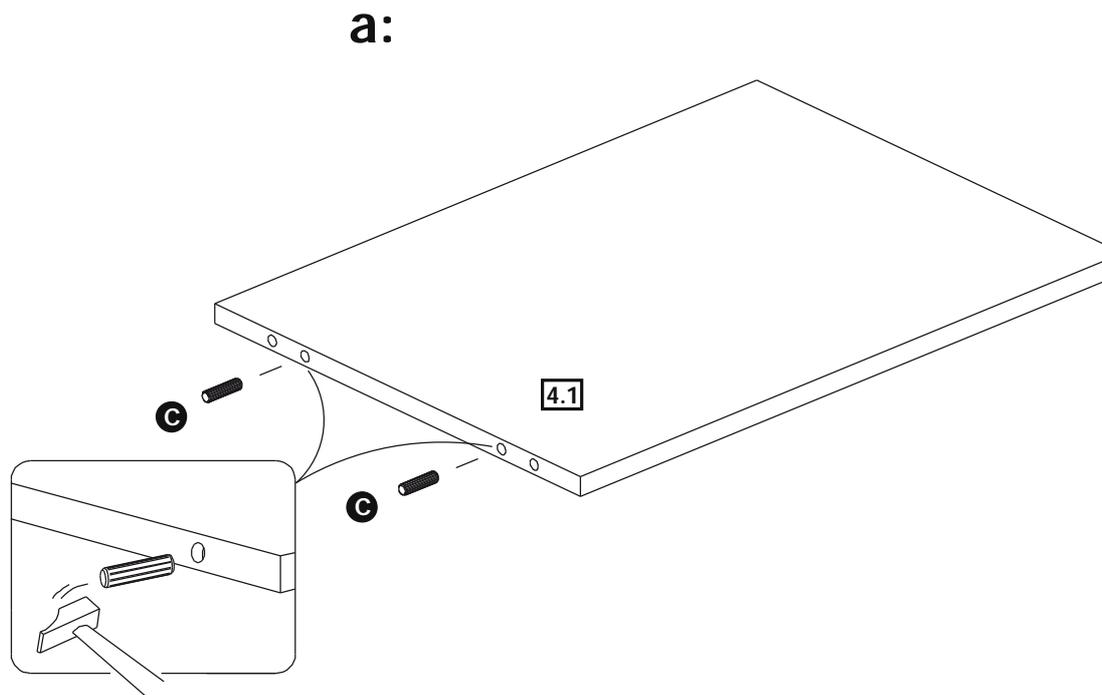
Assembly Instructions

Attaching Right Side Panel and Shelf

Use Screws **D** to fix the Left Side Panel **1** and Shelf **4.1** onto the unit.

Two persons assembly is required.

*Note:* Use Allen Key **E** to fix Screws **D**.

b:
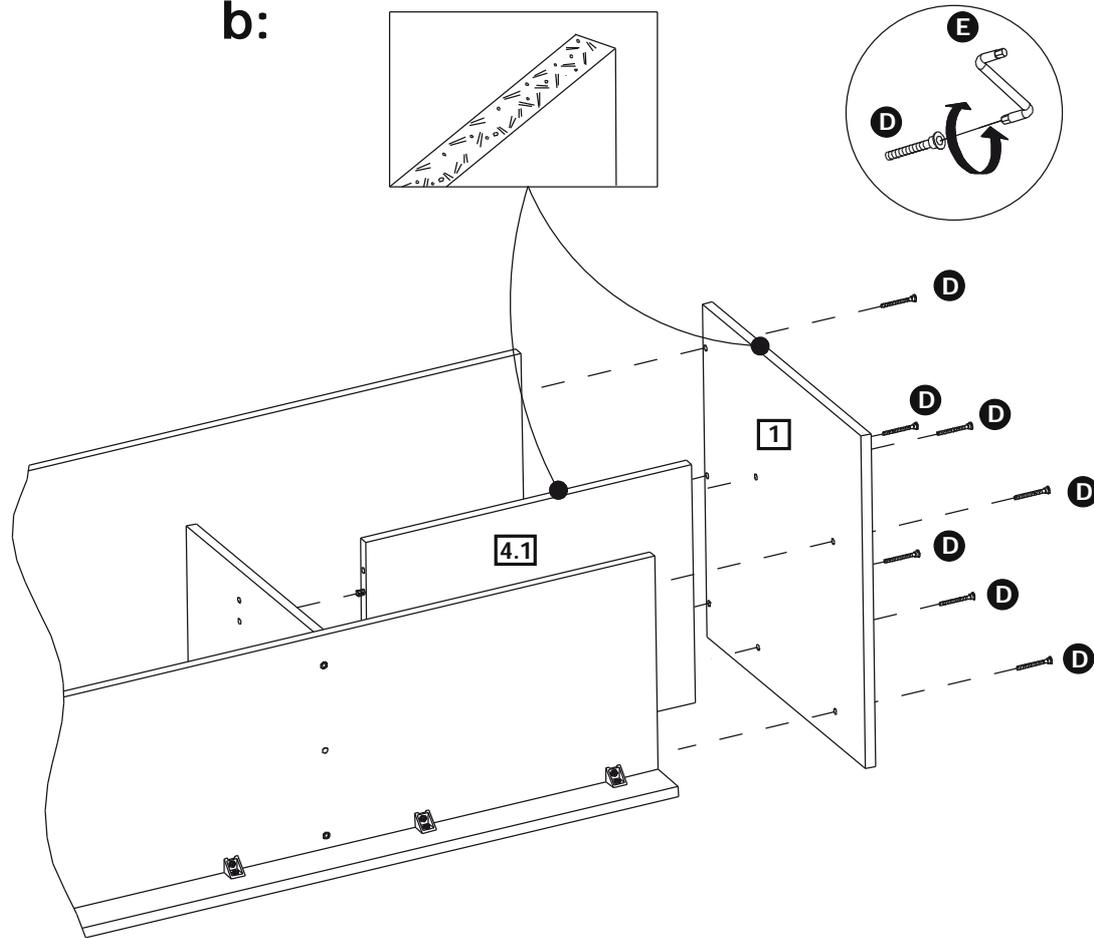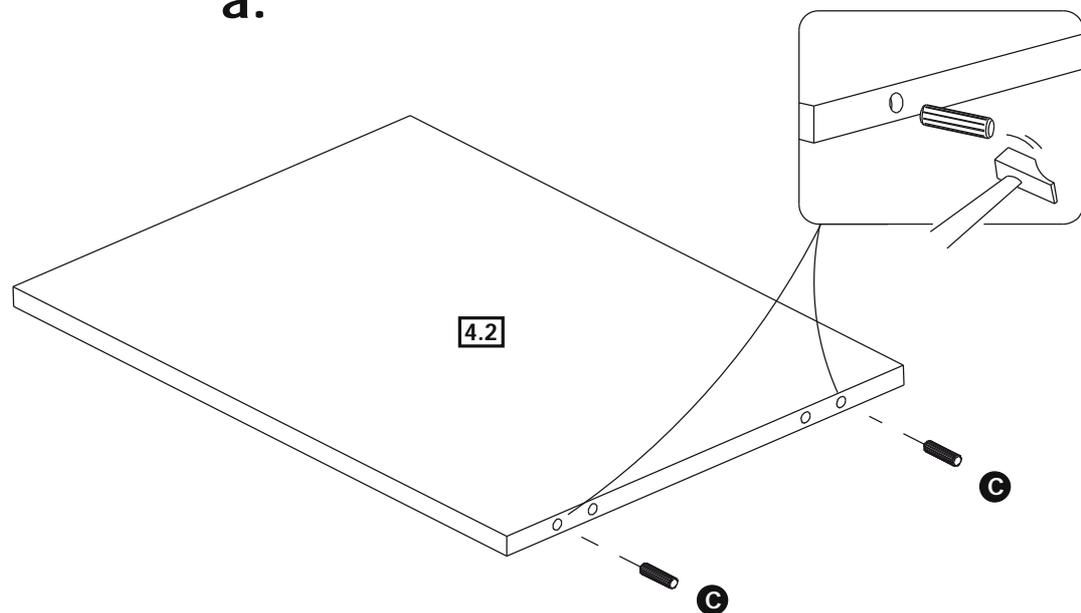
Fitting Dowels

Insert Dowels **C** into the Shelf **4.2**.

(only one side)

a:

7

Assembly Instructions

Step 8

Attaching Right Side Panel and Shelf

Use Screws **D** to fix the Right Side Panel **1** and Shelf **4.2** onto the unit.

Two persons assembly is required.

Note: Use Allen Key **E** to fix Screws **D** .

b:

1

4.2
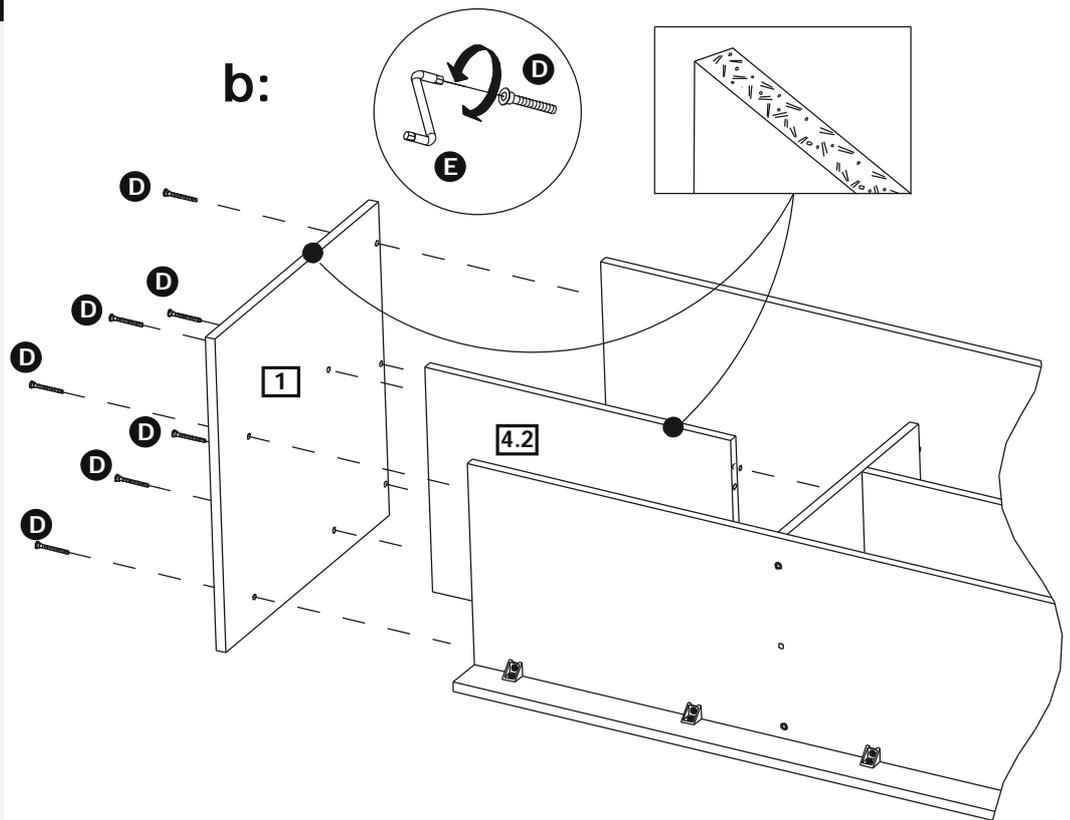
Step 9

Fixing back panel

Use Nails **I** to fix the Back Panel **7** onto the unit.

Note: Use Nail Guide **H** to keep a constant distance from the edge.

7

90
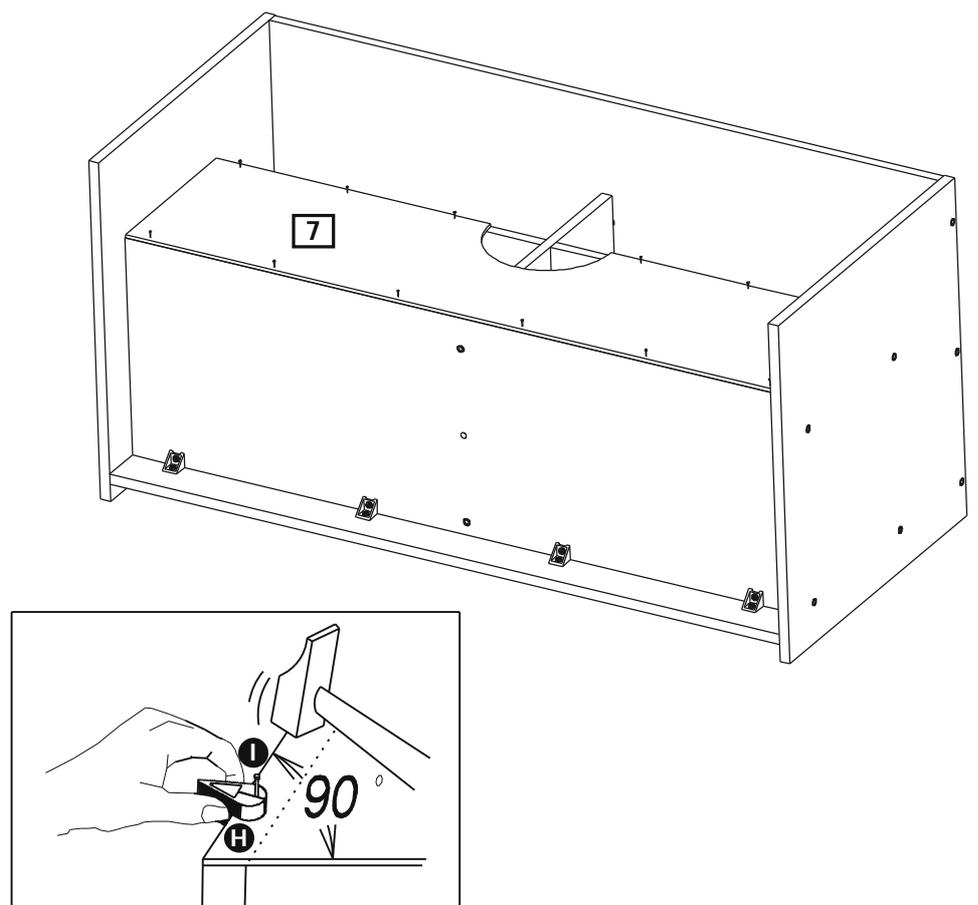
Assembly Instructions

Covering Sticker

Use the Covering Stickers **G** and **F** to cover the Screw Heads.