PowerA™

Customer Service
Service client
Kundendienst
Servicio a clientes
Assistenza clienti
Apoio ao Cliente

PowerA.com/Support

BDA, LLC.
15525 Woodinville-Redmond Rd NE
Woodinville, WA 98072

ENHANCED WIRED CONTROLLER

USER MANUAL
Manuel de l'utilisateur
Bedienungsanleitung
Manual de usuario
Manuale per l'uso
Manual do usuário

NINTENDO SWITCH™

Two year limited warranty
For warranty details or support with your authentic PowerA accessories, please visit **PowerA.com/Support**.

Beschränkte 2-Jahre-Garantie Informationen zur Garantie oder Unterstützung zu Ihrem PowerA-Originalzubehör finden Sie unter PowerA.com/Support.
Garantía limitada de dos años Si quieres más información sobre la garantía o necesitas ayuda con tus accesorios originales de PowerA, visita PowerA.com/Support.
Garantie limitée de deux ans Pour plus de détails sur la garantie ou pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter le site PowerA.com/Support.
Garanzia limitata di due anni Per i dettagli sulla garanzia o per richiedere assistenza per i tuoi accessori PowerA autentici, visita la pagina PowerA.com/Support.
Garantia limitada de dois anos Para mais informações sobre a garantia ou os acessórios originais da PowerA, visita PowerA.com/Support.

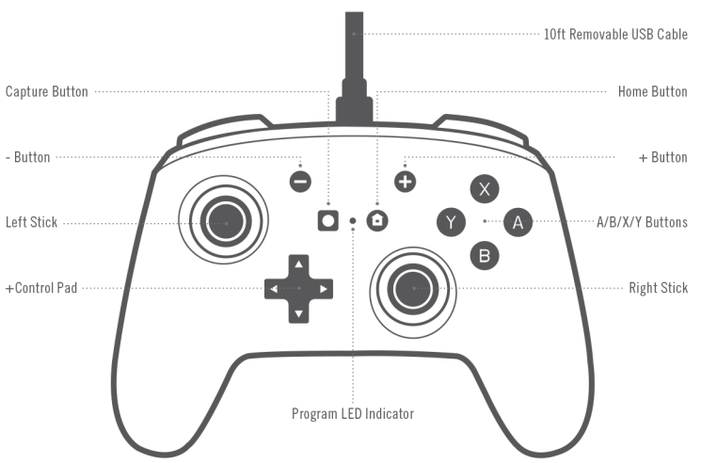

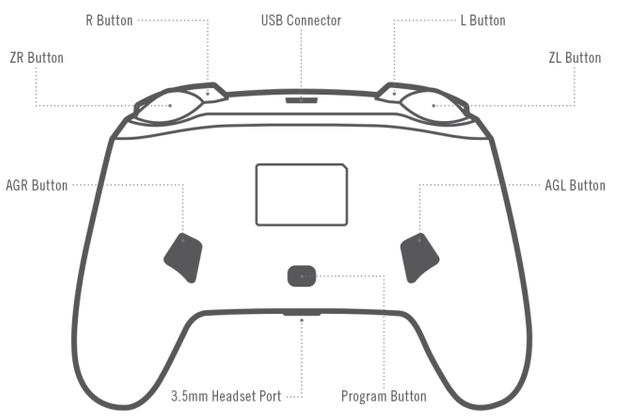

ENGLISH

CONTENTS
- Enhanced Wired Controller for Nintendo Switch™
- Detachable 10ft (3m) USB Cable
- User Manual

SET UP
1. Make sure your Nintendo Switch system is powered on and connected to your TV.
2. Insert the USB cable into a USB port on the Nintendo Switch dock. Connect the other end of the cable to the wired controller. Your wired controller is now ready for use.

BASIC USAGE
Connect multiple wired controllers to the Nintendo Switch console at a time. On-screen notifications will indicate which USB channel each controller is connected to.

ASSIGNING ADVANCED GAMING BUTTONS
1. Press and hold the program button for 2-3 seconds on the back of the controller. The program LED indicator will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L/R/ZL/ZR/Left Stick Press/Right Stick Press/+Control Button) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The Program LED indicator will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING ADVANCED GAMING BUTTONS
1. Hold the program button down for 2-3 seconds. The LED Connection Indicator will slowly flash, signaling the controller is in program mode.
2. Press and hold the Assign Program Button for 5 seconds to reset to no function.

TROUBLESHOOTING
Q1. Why isn't my controller connecting to my Nintendo Switch console?

A1. Confirm that the USB Cable is securely connected to the Wired Controller and the Nintendo Switch dock.

A2. Confirm that the Nintendo Switch is powered on and connected to an external display before connecting your wired controller.

A3. Confirm that your Nintendo Switch has the latest System Update installed.

Q2. Why don't I feel any vibration when using this controller?

A1. This product does not support vibration functionality

MOTION WARNING
Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:
- Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAN ICES-3(B)/NMB-3(B)
This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device

MANUFACTURED BY
Bensussen Deutsch & Associates, LLC. (BDA, LLC.)
15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072
BDAINC.com | POWERA.com

CONTACT/SUPPORT
For support with your authentic PowerA accessories, please visit **PowerA.com/Support**.

WARRANTY
2-Year Limited Warranty: Visit **PowerA.com/support** for details.

AUSTRALIAN WARRANTY STATEMENT
This product comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If purchased within Australia or New Zealand, this product comes with a One-year warranty from date of purchase. Defects in the product must have appeared within One year from date of purchase, in order to claim the warranty. All warranty claims must be facilitated back through the retailer of purchase in accordance with the retailer's return policies and procedures. Any expenses incurred, as a result of returning the product to the retailer of purchase are the full responsibility of the consumer.

AU WHOLESALE DISTRIBUTOR
Level 2, 2 Darling Street South Yarra, Australia VIC 3141
bluemouth.com.au | Email: support@bluemouth.com.au
+61 (3) 9867 2666

ADDITIONAL LEGAL
PowerA, and the PowerA logo are trademarks of Bensussen Deutsch and Associates, LLC. TM and © Bensussen Deutsch and Associates, LLC. Nintendo Switch is a trademark of Nintendo. Licensed by Nintendo. All rights reserved. All other trademarks are the property of their respective owners.

REGIONAL COMPLIANCE SYMBOLS
More information available via web-search of each symbol name.

The **WEEE** (Waste of electrical and electronic equipment) symbol requires battery disposal outside of other household waste per local regulations. Contact your city office, waste disposal service, or retailer for guidance.

CE (Conformité Européene aka European Conformity) is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.

The **Regulatory Compliance Mark** is a visible indication of a product's compliance with all applicable ACMA (Australian Communications and Media Authority) regulatory arrangements, including all technical and record-keeping requirements regarding the electrical safety and/or electromagnetic compatibility (EMC).

DECLARATION OF CONFORMITY
Hereby, Bensussen Deutsch & Associates LLC at 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA, declares that this wired controller is in compliance with Directive 2014/30/EU. The full text of the EU Declaration of Conformity is available at the following internet address: **PowerA.com/compliance**

FRANÇAIS

CONTIENT
- Manette filaire optimisée pour Nintendo Switch™
- Câble USB de 3 m
- Manuel de l'utilisateur

INSTALLATION
1. Assurez-vous que votre système Nintendo Switch est en marche et raccordé à votre télévision.
2. Insérez le câble USB dans le port de la station d'accueil de votre Nintendo Switch. Raccordez l'autre extrémité du câble à la manette filaire. Votre manette filaire est prête à l'emploi.

UTILISATION
Raccordez simultanément plusieurs manettes filaires à votre console Nintendo Switch. Les notifications à l'écran vous indiqueront à quel canal USB est raccordée chaque manette.

PROGRAMMER LES BOUTONS DE JEU PROGRAMMABLES
1. Appuyez sur le bouton de programmation à l'arrière de la manette et maintenez-le enfoncé pendant 2 à 3 secondes. Le voyant LED à l'avant clignotera, indiquant que la manette est en mode d'affectation.
2. Ensuite, appuyez sur une fonction de la manette à affecter (le voyant LED à l'avant clignote plus rapidement) : A/B/X/Y/L/R/ZL/ZR/Stick gauche/Stick droit/Croix directionnelle.
3. Appuyez ensuite sur le bouton AGR ou AGL pour affecter la fonction sélectionnée à un bouton de jeu programmable. Le voyant LED à l'avant arrête de clignoter dès que le bouton est paramétré. Répétez la procédure pour les autres boutons de jeu programmables.

REMARQUE : les fonctions des boutons de jeu programmables sont enregistrées sur la manette pour les sessions de jeu suivantes.

REPROGRAMMER OU RÉINITIALISER LES BOUTONS DE JEU PROGRAMMABLES
1. Répétez les 3 étapes précédentes pour modifier l'affectation d'un bouton.
2. Appuyez sur le bouton de programmation et maintenez-le enfoncé pendant 5 secondes pour supprimer toutes les affectations de bouton.

FOIRE AUX QUESTIONS (FAQ)
Q1. Pourquoi ma manette ne se connecte-t-elle pas à ma console Nintendo Switch?

R1. Vérifiez que le câble USB est bien raccordé à la manette filaire et à la station d'accueil de votre Nintendo Switch.

R2. Vérifiez que la Nintendo Switch est alimentée et raccordée à un écran extérieur avant de raccorder votre manette filaire.

R3. Vérifiez que les dernières mises à jour système ont bien été installées sur votre Nintendo Switch.

Q2. Pourquoi est-ce que je ne ressens aucune vibration lorsque j'utilise cette manette?

R1. Ce produit ne prend pas en charge la fonction vibrations.

MISE EN GARDE AU SUJET DES MOUVEMENTS
Les jeux vidéo peuvent provoquer des douleurs des muscles, des articulations, de la peau ou des yeux. Respectez les consignes suivantes pour éviter les problèmes tels que tendinite, syndrome du canal carpien, irritation cutanée ou fatigue oculaire :
- Évitez de jouer trop longtemps. Faites une pause de 10 à 15 minutes après chaque heure de jeu, même si vous n'en ressentez pas la nécessité. Les parents doivent s'assurer que leurs enfants jouent de manière appropriée.
- Si vous ressentez de la fatigue ou une douleur dans vos mains, poignets, bras ou yeux pendant le jeu, ou des symptômes tels que picotements, engourdissement, brûlure ou raideur, arrêtez de jouer et reposez-vous pendant plusieurs heures avant de reprendre le jeu.
- Si l'un des symptômes cités persiste ou si vous ressentez une gêne prolongée pendant ou après le jeu, arrêtez de jouer et consultez un médecin.

CAN ICES-3(B)/NMB-3(B)
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FABRIQUÉ PAR
Bensussen Deutsch & Associates, LLC. (BDA, LLC.)
15525 Woodinville-Redmond Rd. NE Woodinville, WA 98072
BDAINC.com | POWERA.com

SERVICE CLIENTÈLE
Pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter la rubrique **PowerA.com/Support**.

GARANTIE
Garantie limitée de deux ans. Consultez le site **PowerA.com** pour plus de détails.

INFORMATIONS LÉGALES SUPPLÉMENTAIRES
PowerA et le logo PowerA sont des marques de commerce Bensussen Deutsch and Associates, LLC. TM and © Bensussen Deutsch and Associates, LLC. Nintendo Switch est une marque déposée de Nintendo. Sous licence Nintendo. Tous droits réservés. Toutes les autres marques de commerce sont la propriété de leurs propriétaires respectifs.

SYMBOLES DE CONFORMITÉ RÉGIONALE
De plus amples informations sont disponibles en recherchant chaque nom de symbole.

Le symbole **WEEE** (déchet d'équipements électrique et électronique) indique que la batterie doit être éliminée séparément du reste des déchets ménagers conformément à la législation locale. Veuillez contacter votre hôtel de ville, le service d'élimination des déchets ou le revendeur pour toutes recommandations supplémentaires.

CE (Conformité Européenne aka European Conformity) est une marque de certification qui indique la conformité matière de protection de la santé, de la sécurité et de l'environnement pour les produits vendus au sein de l' Espace économique européen.

La **marque de conformité règlementaire** est une indication visible de la conformité d'un produit avec toutes les dispositions applicables de l'ACMA (Australian Communications and Media Authority), notamment les exigences techniques et celles en matière de tenue de registres concernant la sécurité électrique et/ou la compatibilité électromagnétique (EMC).

DÉCLARATION DE CONFORMITÉ
Par la présente, Bensussen Deutsch & Associates LLC à 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA, déclare que la manette filaire est conforme à la directive 2014/30/UE. Le texte complet de la déclaration de conformité européenne est disponible à l'adresse Internet suivante : **PowerA.com/compliance**