

Seville - Bedside

Assembly Instructions - Please keep for future reference

171/8140

170/9214

145/0446


157/3622

159/7732

160/9785

162/9325

162/7956

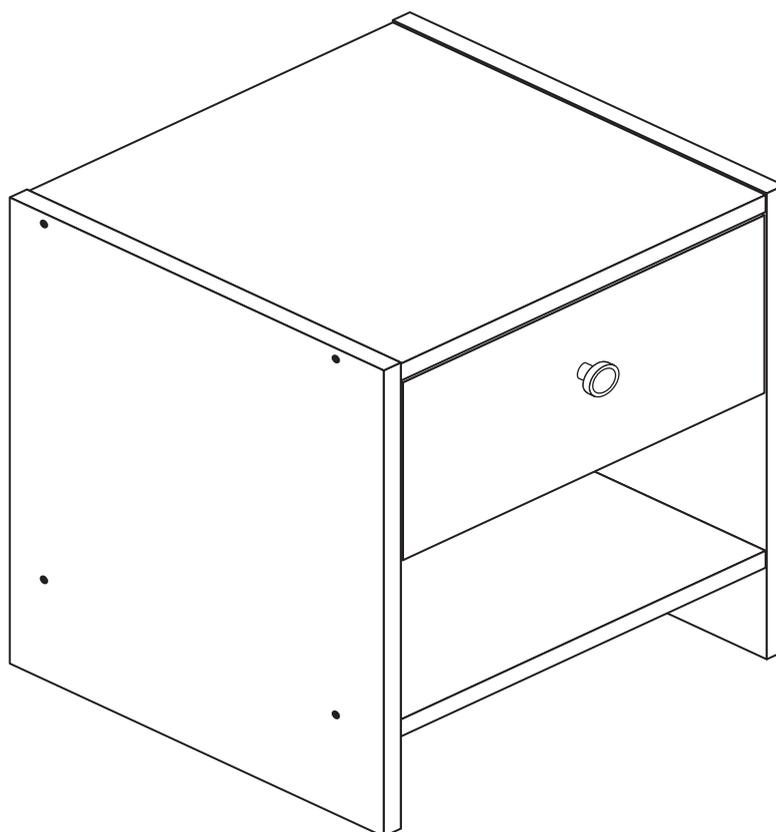

Dimensions

Width - 35.5cm

Depth - 33cm

Height - 41.5cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or email: Help@ClickSpares.co.uk (quoting your original order number)



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 7kgs. Please lift with care.

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or email: **Help@ClickSpares.co.uk** (quoting your original order number and the reference numbers below)


Please check you have all the panels listed below

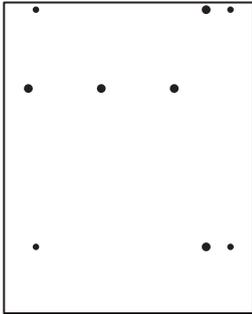


1 Left Side (D2494A)
(412 x 328mm)

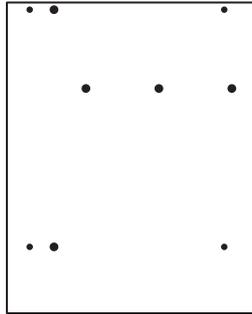


2 Right Side (D2495A)
(412 x 328mm)

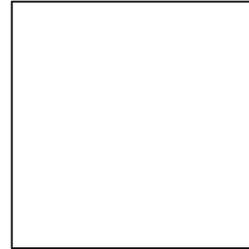


3 Top/Base (D2493A)
(321 x 327mm) x 2

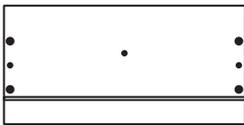


4 Drawer Front (D2496A)
(317 x 157mm)




5 Left Drawer Side (W410LH)
(300 x 95mm)




6 Right Drawer Side (W410RH)
(300 x 95mm)



7 Drawer Back (W288-95)
(288 x 95mm)

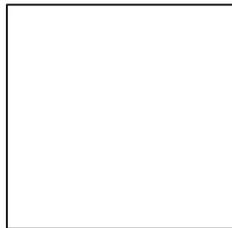

8 Drawer Base (T299-297)
(299 x 297mm)

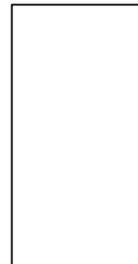

9 Back (X175-347)
(175 x 347mm)






Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** (quoting your original order number and the reference numbers below)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
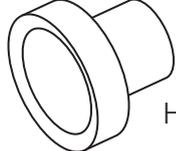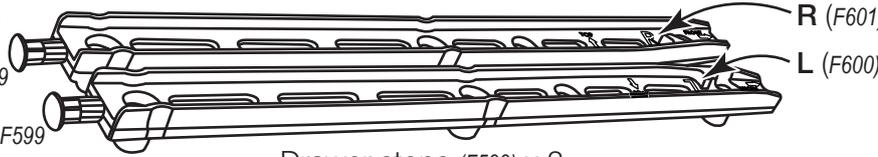
<p>A </p> <p>Wooden dowel (F22) x 4</p>	<p>B </p> <p>Metal dowel (F901) x 2</p>	<p>C </p> <p>Small locking nut (F3) x 2</p>
<p>D </p> <p>40mm Screw (F910) x 8</p>	<p>E </p> <p>25mm Screw (F95) x 1</p>	<p>F </p> <p>Nail (F51) x 5</p>
<p>G </p> <p>Handle (F300) x 1</p>	<p>H </p> <p>Knock-in Peg (F171WH) x 4</p>	
<p>I </p> <p>Drawer stops (F599) x 2 Runners (F600) x 1 and (F601) x 1</p>		

Tools required

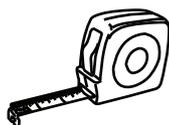

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or email: Help@ClickSpares.co.uk (quoting your original order number and the reference numbers below)

Step 1

Prepare the drawer front

Screw 2 metal dowels **B** into the holes shown on the back of the drawer front **4**.

Note: Tighten metal dowels up fully against the panels.

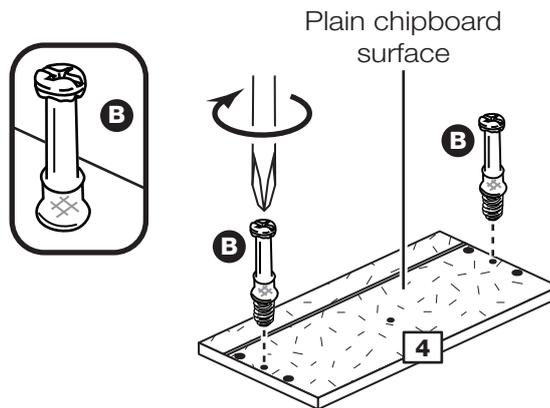


Step 2

Prepare the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side **5** and right drawer side **6**.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

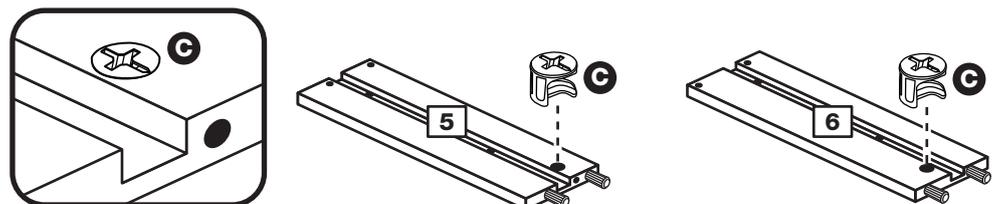


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side **5** and right drawer side **6** onto the back of the drawer front **4**.

Turn the small locking nuts **C** on the left drawer side **5** and right drawer side **6**.

Note: Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

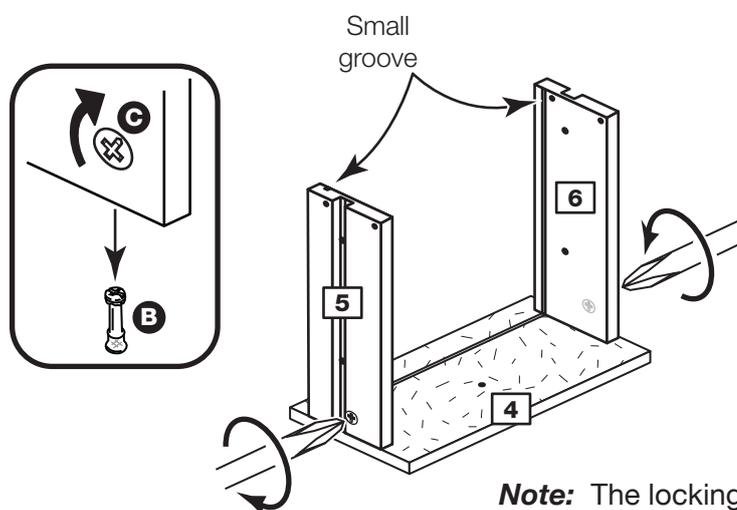


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **8** down the grooves in the drawer sides **5** and **6** and down into the groove in the drawer front **4**.

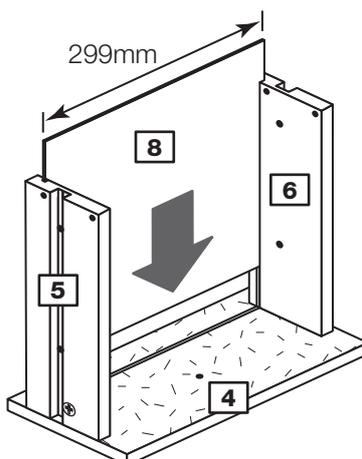


Step 5

Fit the drawer back

Fit the drawer back **7** between the drawer sides **5** and **6**.

Make sure that the drawer base **8** fits into the groove in the drawer back **7**.

Hold the drawer back **7** in position and tap the knock-in pegs **H** through the holes in the drawer sides **5** and **6**.

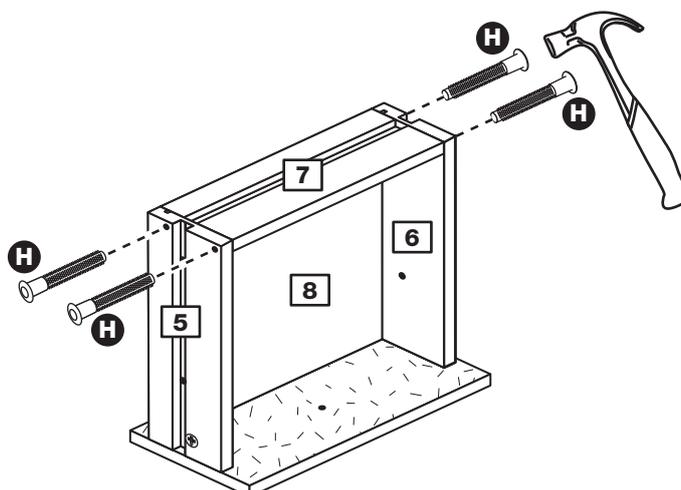


Step 6

Push in drawer stops

Carefully break off the 2 drawer stops (F599) from the drawer runners **1**.

Push the drawer stops fully through the drawer sides **5** and **6** from the inside.

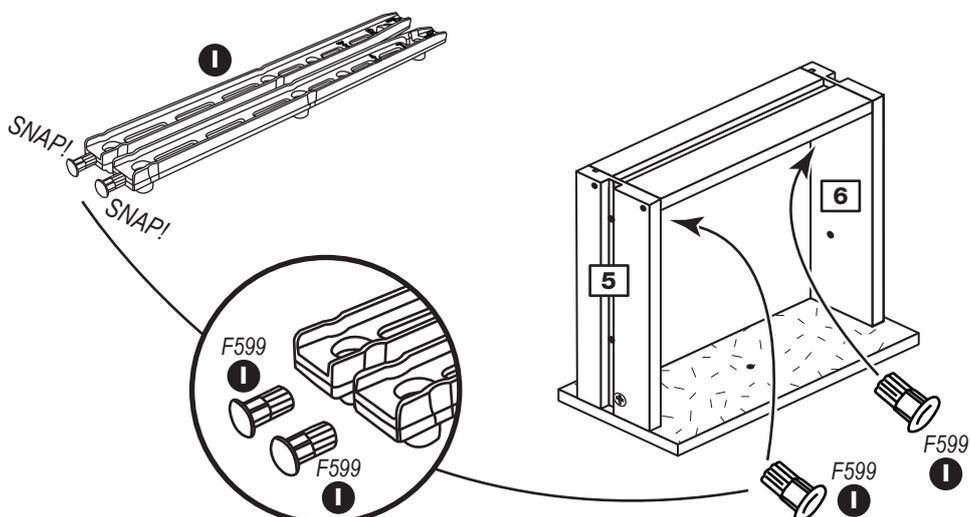


Assembly Instructions

Step 7

Attach the handle

Attach the handle **G** to the drawer front **4** using screw **E**.

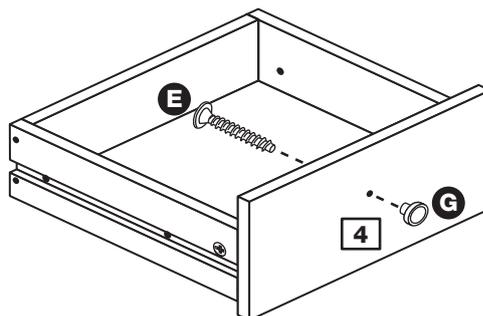



Step 8

Prepare the left side

Separate the runners **1**.

Push fit the left runner **1** marked 'L' into the left side **1**.

Note: Runners must be fitted flat against the panel. If necessary gently tap into final position.

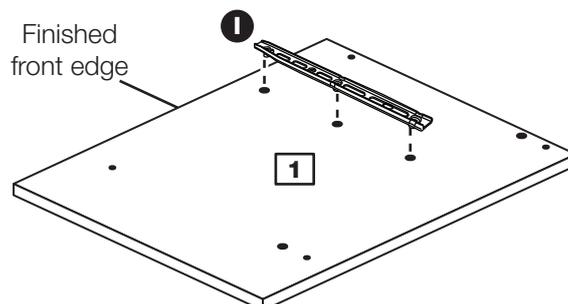
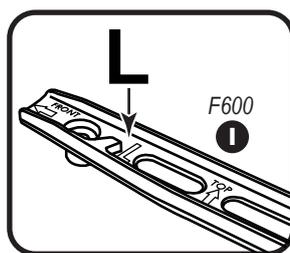


Step 9

Prepare the right side

Push fit the left runner **1** marked 'R' into the right side **2**.

Note: Runners must be fitted flat against the panel. If necessary gently tap into final position.

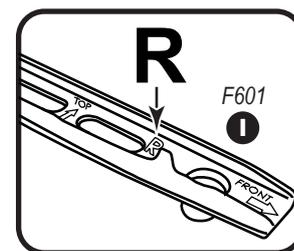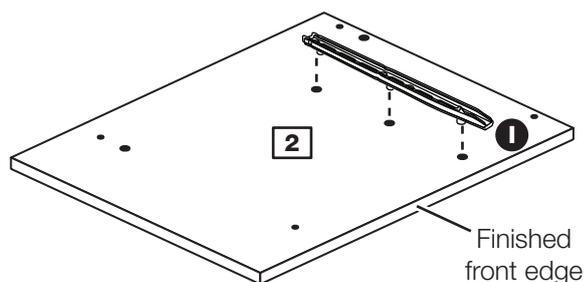


Assembly Instructions

Step 10

Prepare the top and the base

Tap 2 wooden dowels **A** into the top **3** and the base **3**.


x 2

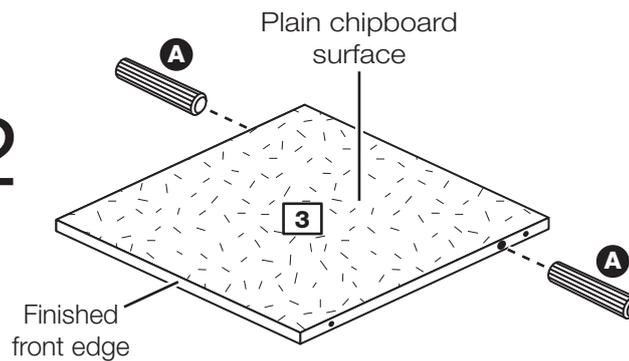

Step 11

Join the top to the right side


Push the top **3** onto the right side **2** and secure with 2 screws **D**.

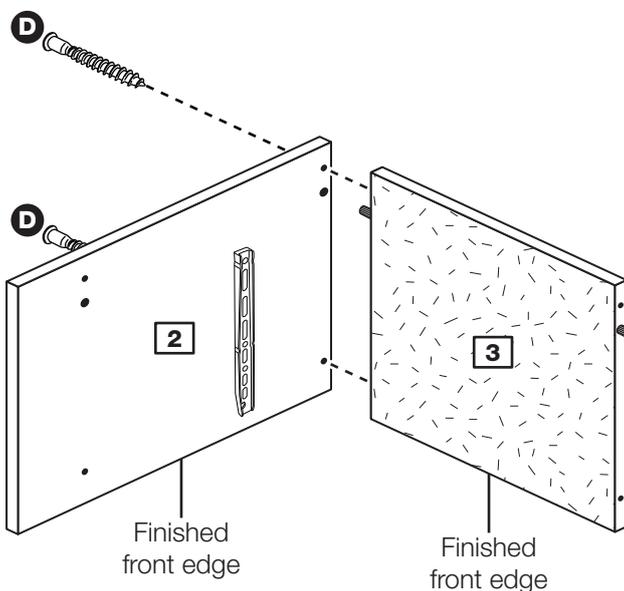

Step 12

Join the base to the right side

Push the base **3** onto the right side **2** and secure with 2 screws **D**.

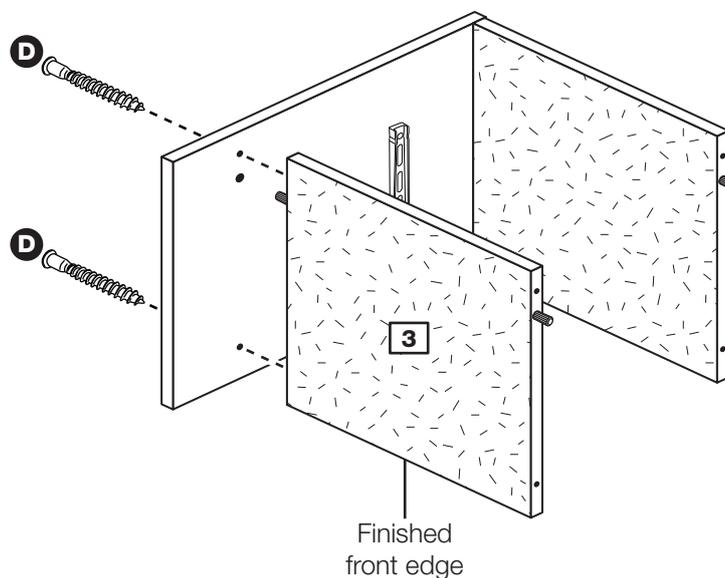


Assembly Instructions

Step 13

Fit the left side

Push the left side **1** onto the assembly and secure with 4 screws **D**.

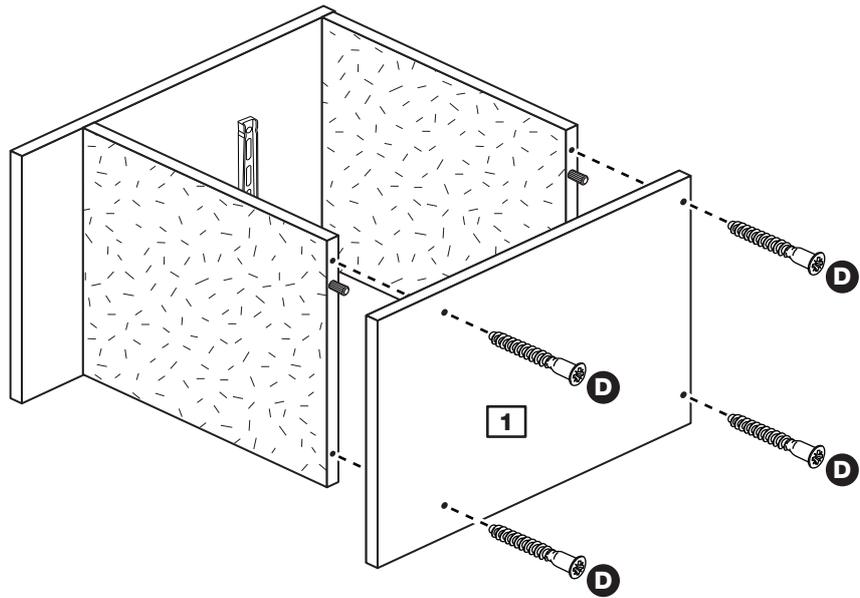

Step 14

Fit the back


a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **9** onto the unit.

Nail **F** around the 3 edges of the back **9** as shown.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

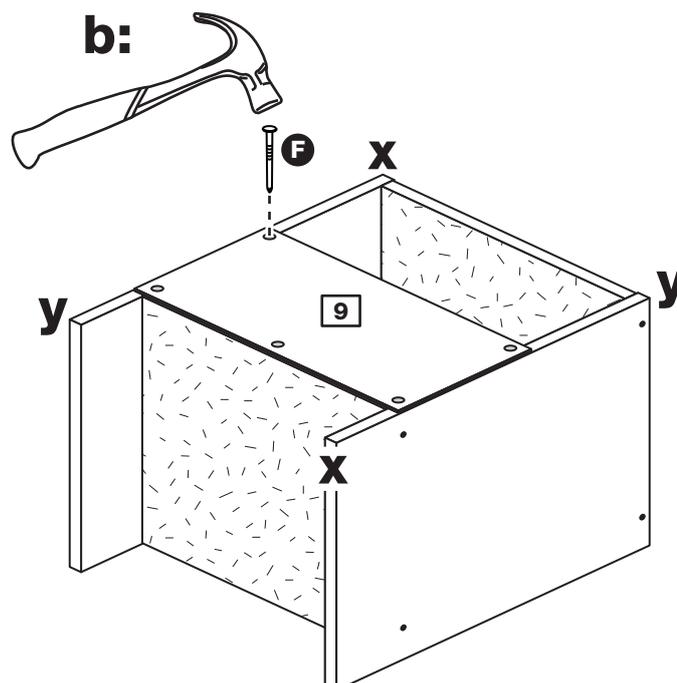

Assembly Instructions


Step 15

Insert the drawer

Lift the front of the drawer whilst inserting to overcome the 'stop' system.

Note: To ensure that your drawer runs smoothly, spray a small amount of furniture polish into the grooves.

Assembly is complete

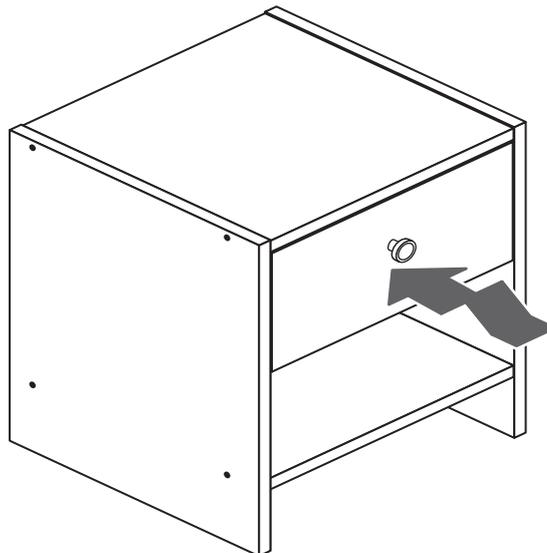

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or email: **Help@ClickSpares.co.uk** (quoting your original order number and the reference numbers on the component pages)
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

