DOUBLE WARDROBE NEW FORMAT

Easy Assembly Instruction




Before you start, here is some helpful advice

- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- 2. If you follow the instructions carefully the end result should be worth the effort.
- 3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fitting.
- 4. Assemble this product on a carpet.
- 5. To ensure an easier assembly, we stongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
- 6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
- 7. Keep glue and fitting out of children's reach.
- 8.In order to prevent overturning, this product must be used with the wall attachment device.

After-sales telephone number for spare parts :03456 400 800

Component parts and fittings contained in the box

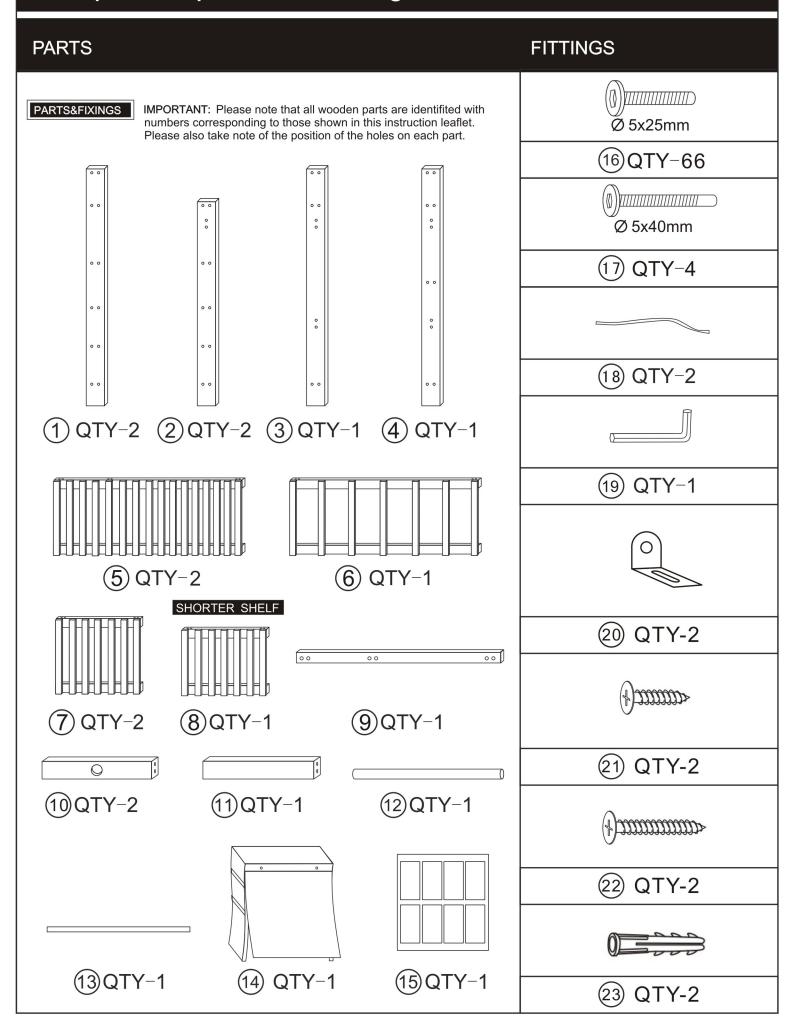




Ensure you have correctly identified corner posts 1234 before beginning the next steps.

- 1) First secure shelves

 (5) in between corner posts (1) (2) (3) (4) using fixings (16).
- 2) Then secure shelf
 6 in between corner posts 1 2 3 4 using fixings 6.

STEP1

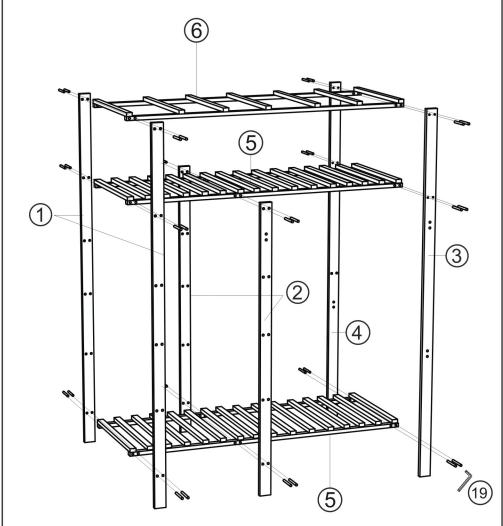






Secure shelves 7 in between corner posts 12 using fixings 6.

Note the locations of shelves 7. A space must be left in the middle for shorter shelf 8.


STEP2

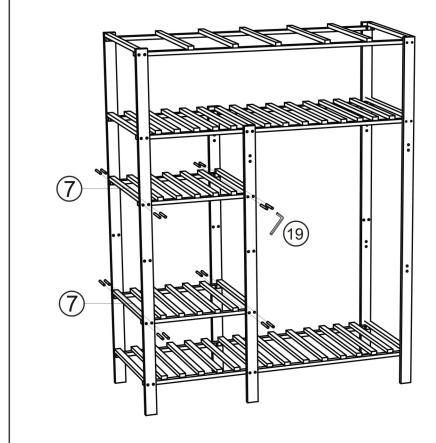




Secure rear support bar 9 and shorter shelf 8 as shown. use fixings 6 and 7.

Note the different fixing points for fixings (16) and (17).

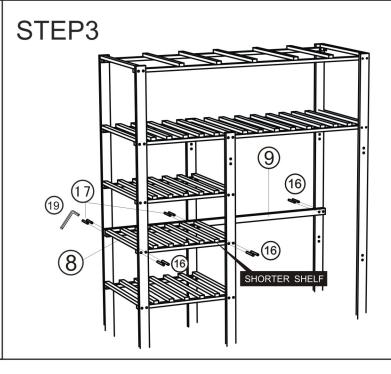






- 1) Fit side support 11 using fixings 16 .
- 2) With hanging rail
 in position .Fit 12
 hanging rail frames
 10 using fixings 16.

STEP4

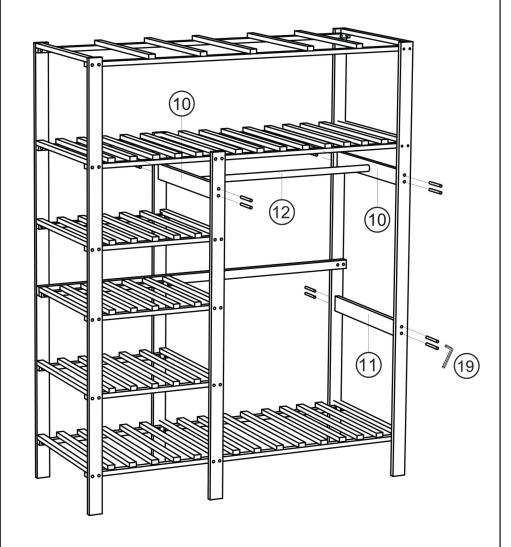






- 1) Place cover (14) over the assembled frame.
- 2) Slide cover pole (13) into the seam in the bottom of the front flap.
- 3) Finally fix shoe
 storage pocket (15)
 using velcro
 fastenings.
 The door can be
 rolled up and secured
 using the ties (18).
- 4) Use the wall attachment device 20 21 22 23 to help prevent toppe over.

STEP5

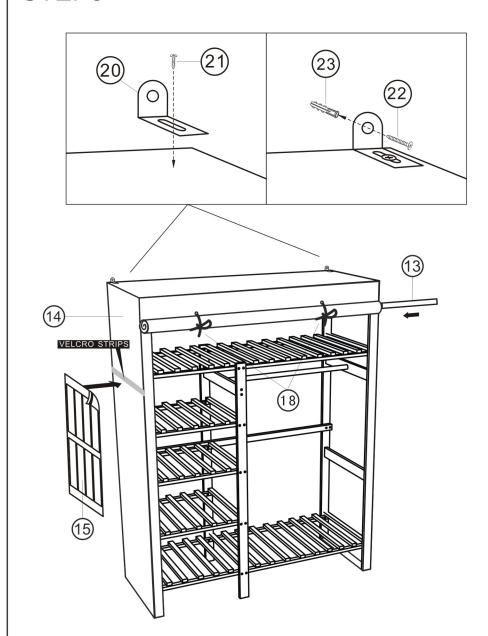

COVER CLEANING

Minor stains and spillages should be removed immediately using a damp cloth and mild soapy water. Do not soak the fabric or shrinkage may occur! Light marking can also be removed using this methed.

To remove stubborn stains or markings, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on an inconspicuous area of cover.

Solid wood / Real wood veneers.

This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different component parts.

Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal, and is not the result of any manufacturing fault.

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



 these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug




For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.