




3073962

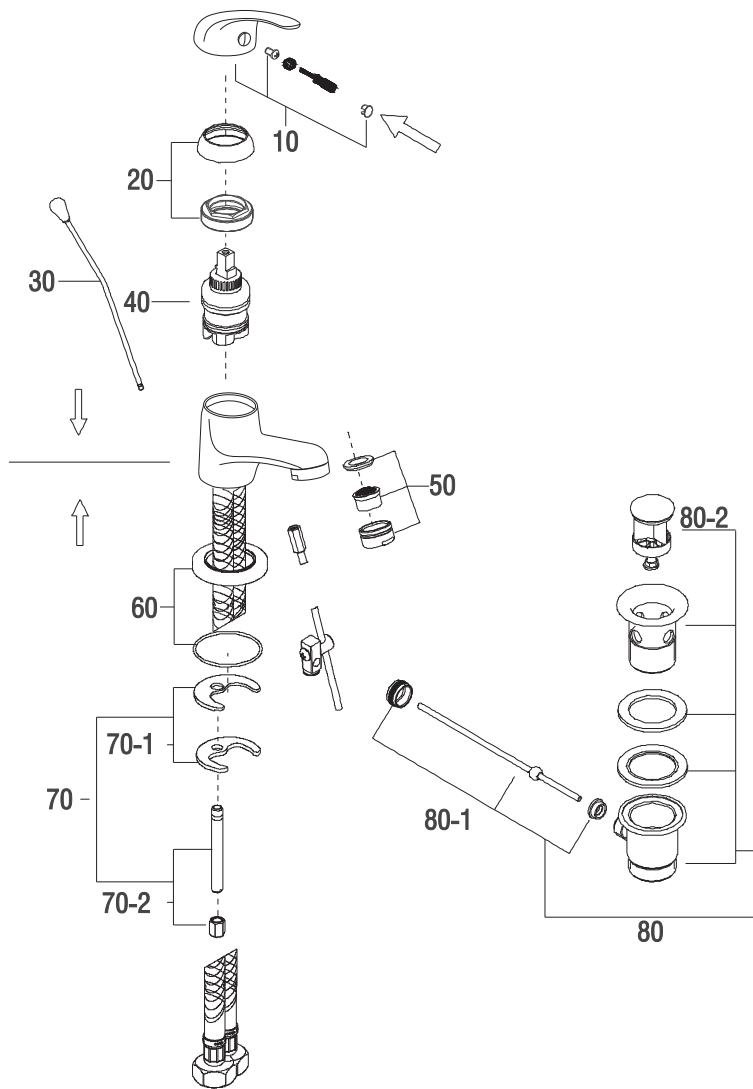


1 Fix the base,O ring,screw inlet flexible hose.

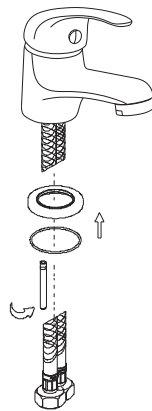


2 Fix the faucet on the basin, then connect the extension rod.

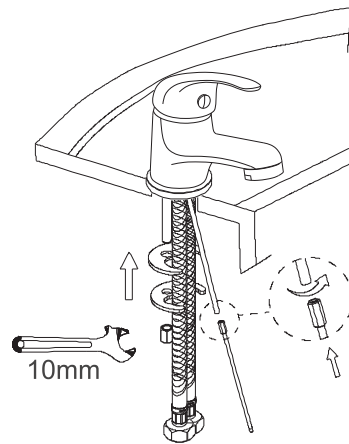



3 Connect the inlet flexible hose and angle valve.

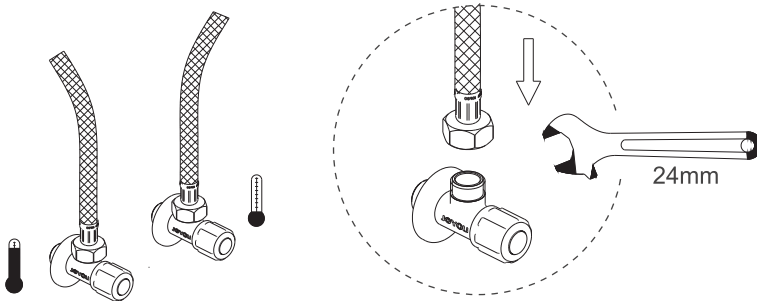

4 The following are some mistaken placement of hoses.

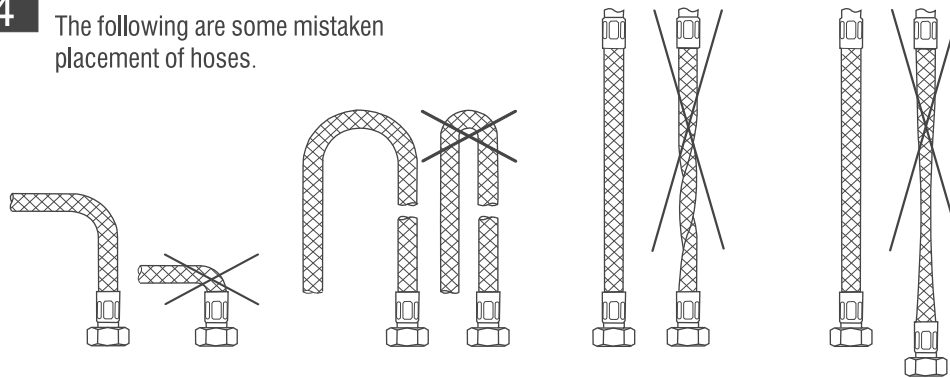

5 Assemble the pop-up waste over the basin.

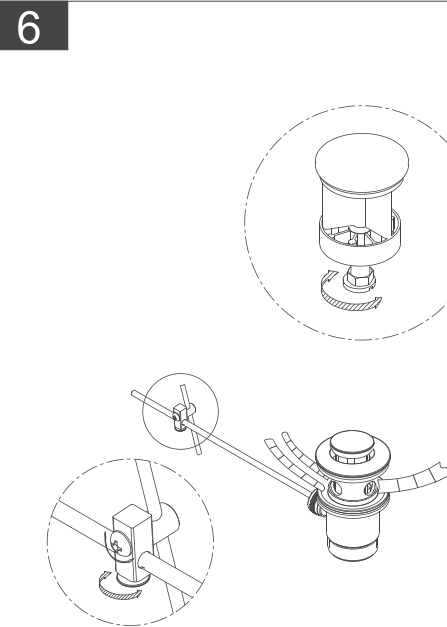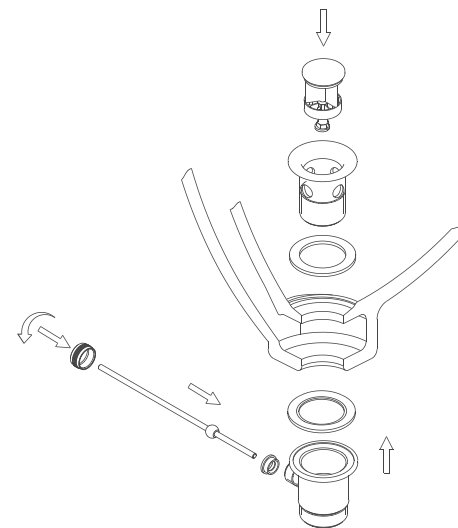

7 1.Open the angle valve
2.Remove the aerator
3.Open the faucet and keep the water flowing for 30 sec ,clean the sundries and then fix the filter:

