

Dorset - 5FT Bed

Assembly Instructions - Please keep for future reference

3573981

3329812



Dimensions

Width - 165cm

Depth - 211.5cm

Height - 110cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- Improper use of electrical tools will crack the components.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

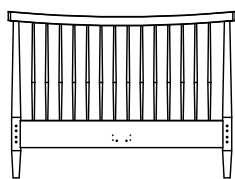

1 Headboard x1 (165 x 110x6cm)




2 Footboard x1 (161 x 40 x 6cm)




3 Bed side x2 (199.5 x 18 x 5.5 cm)




6 "U" Block x2 (15 x 8 x 3 cm)



4 Middle Bar x1 (202.5 x 8 x 4 cm)

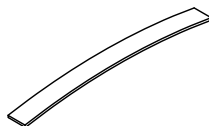

5 Bed slats x32 (75.5 x 6 x 1 cm)



7 Middle foot x2 (23.5 x 6 x 4 cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | | | |
|--------------------------------------|--|---|--|--------------------------------------|
| A Bolt x8 (M8 x 90 mm) | B Half round block x8 (M8x30x15x8mm) | C Washer x8 (Ø16.0 / Ø8.4 x1mm) | D Spring washer x8 (Ø13.0 / Ø8.4 x1mm) | E Nut x8 (M8x12x6mm) |
| F Dowel x8 (Ø10x50mm) | G Dowel x4 (Ø8x30mm) | H Spanner x1 (12mm) | I Plastic mid caps x16 | J Plastic end caps x32 |
| K Screw x2 (Ø7x50mm) | L Allen key x1 (4mm) | M Screw x12 (Ø4x40mm) | | |

Tools required



Flatblade screwdriver (medium)



Phillips screwdriver (medium & large)


Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1


Insert Dowels **G** into "U"
Block **6** as shown.

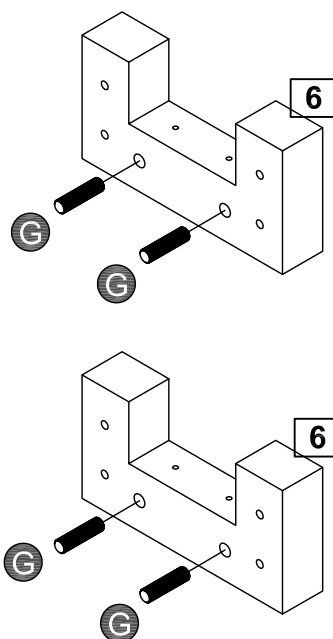

Step 2

Screw the bolts **A** into the
headboard **1**.

Attach "U" block **6** onto the
headboard **1** with screws **M**
as shown.

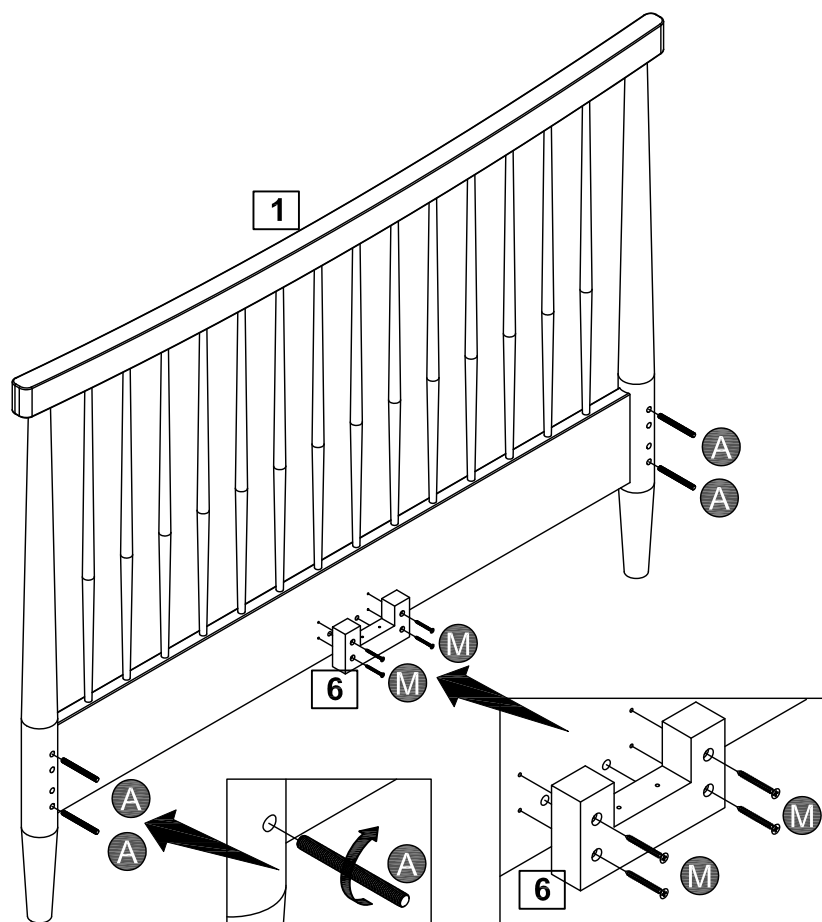


Assembly Instructions

Step 3


Screw the bolts **A** into the footboard **2**.

Attach "U" block **6** onto the footboard **2** with screws **M** as shown.

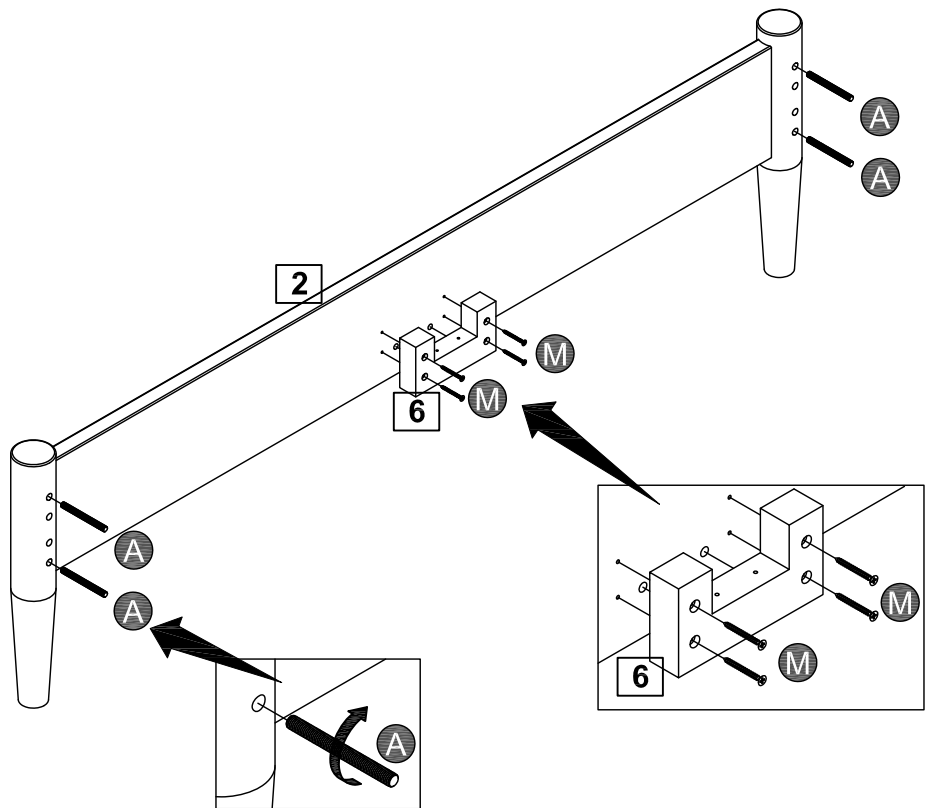

Step 4


Insert Dowels **F** into the ends of the bed side **2**.

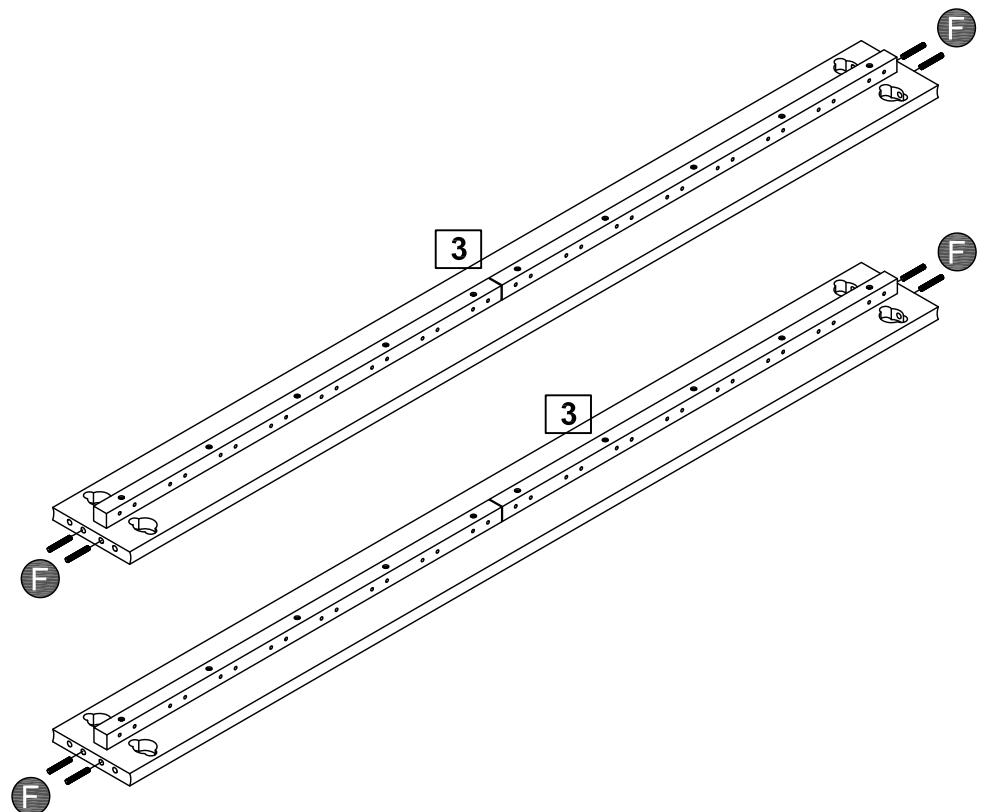

Assembly Instructions


Step 5

Attach Bed sides **3** onto headboard **1** and footboard **2** by using hardware **B** **C** **D** **E** ; use spanner **H** to fix tightly nut **E**.

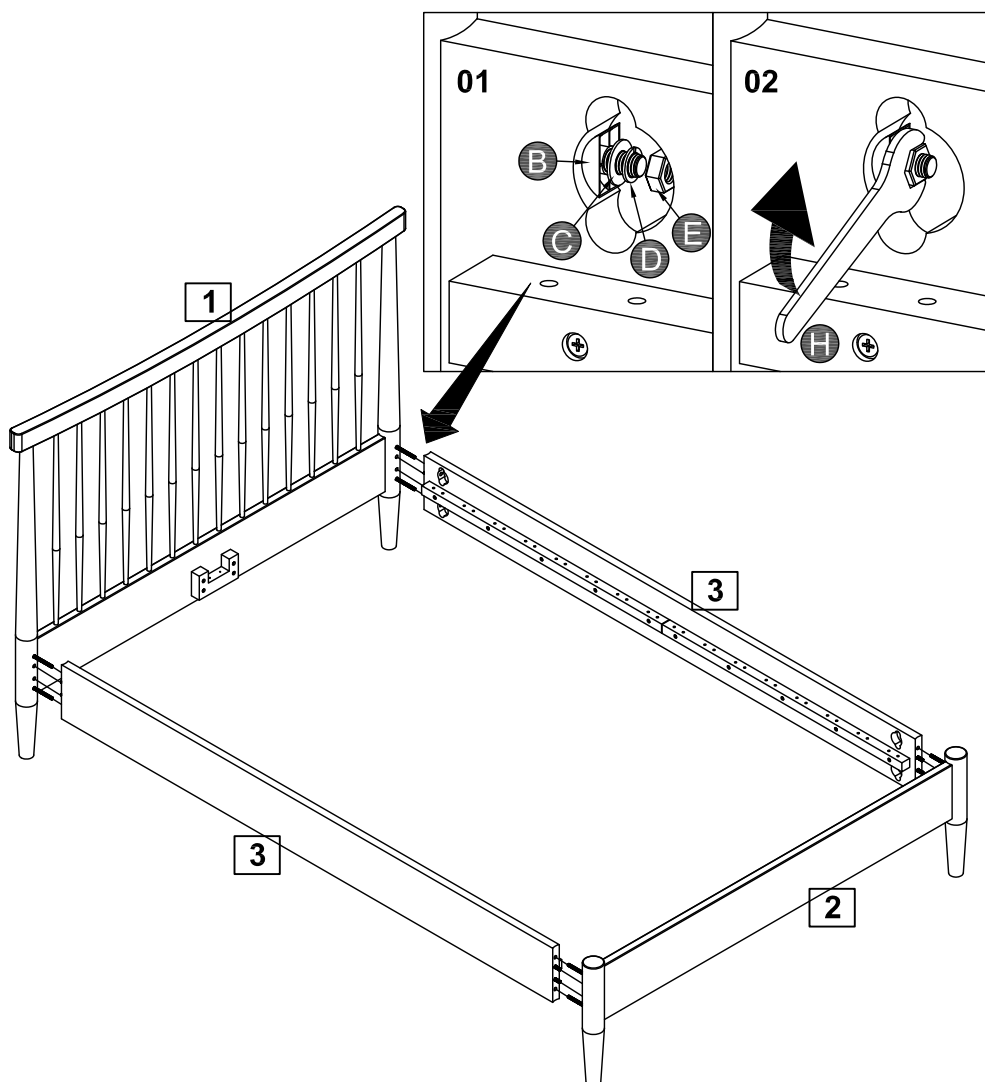

Step 6


Attach Middle bar **4** onto middle foot **7** with screws **K** using allen key **L**.

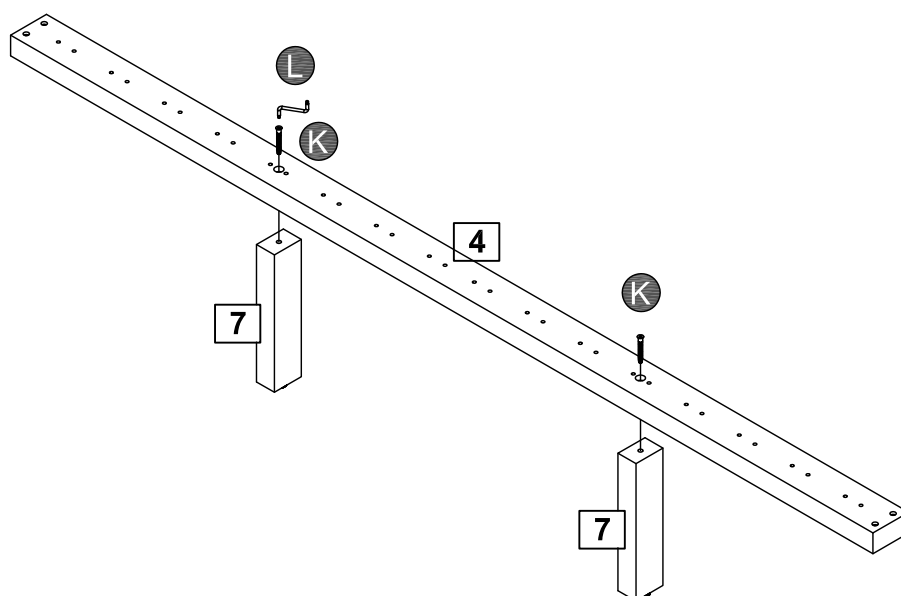

Assembly Instructions


Step 7

Put Middle bar **7** on the "U" block **6**, use Screws **M** to fix them.

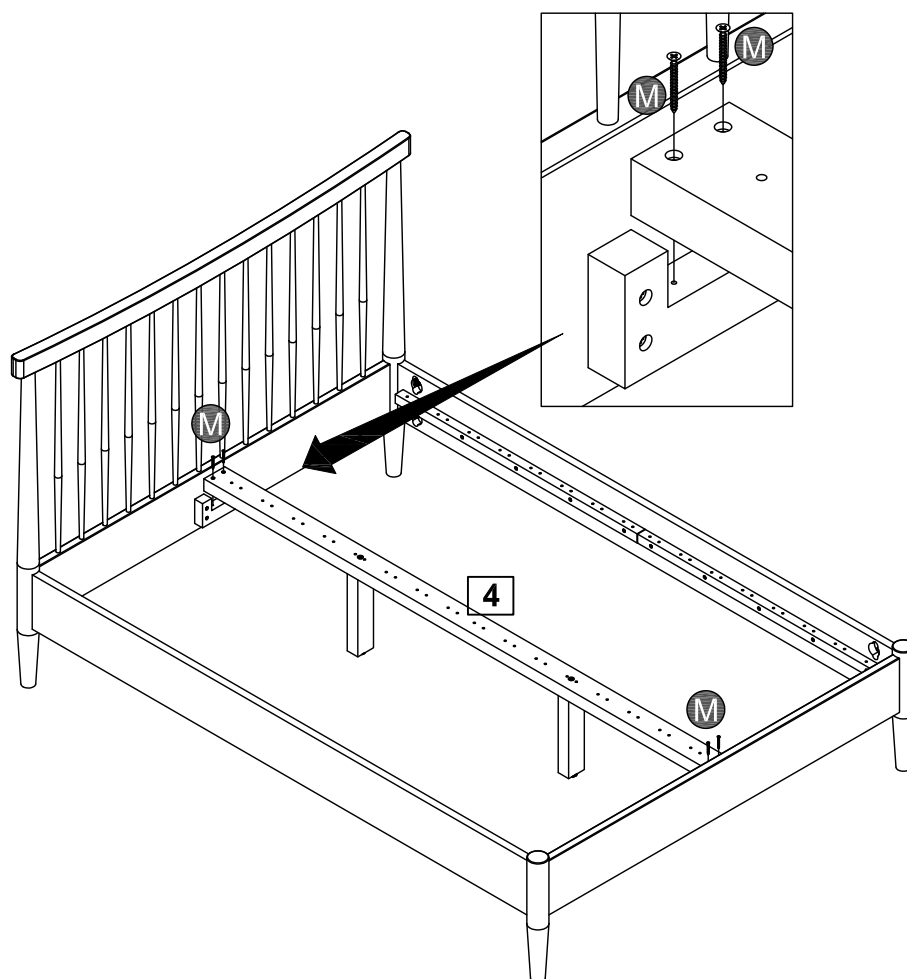

Step 8


Place the plastic middle caps **F** and the plastic end caps **E** onto the slats **9** as shown.

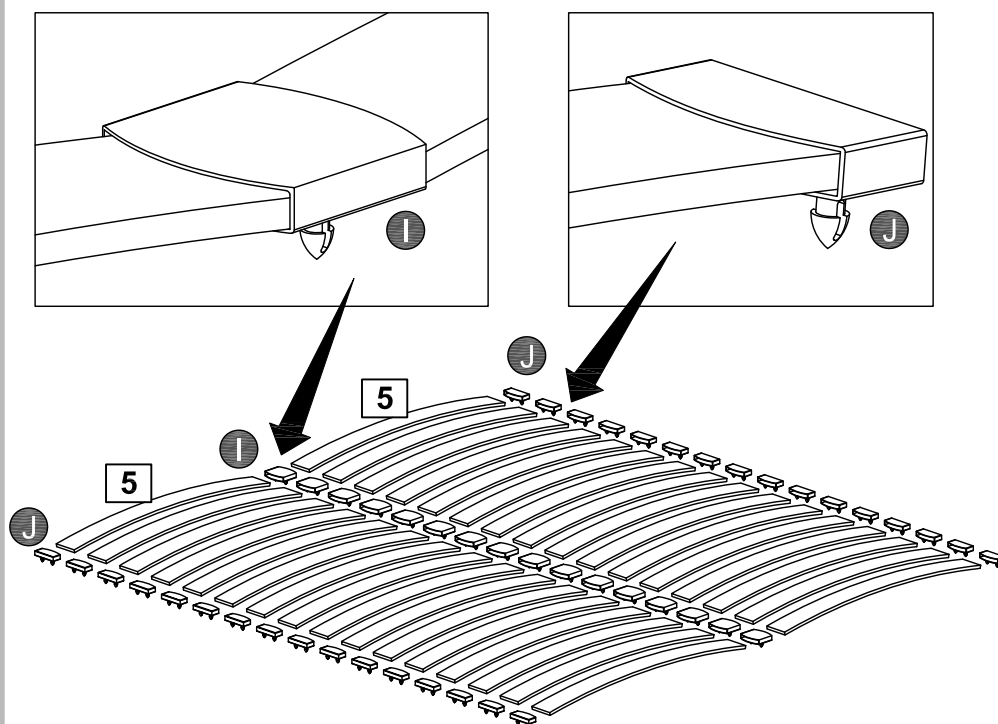


Assembly Instructions

Step 9

Inset plastic mid caps **F**
and plastic end caps **E**
onto bed side **3** and
middle bar **4** as shown.

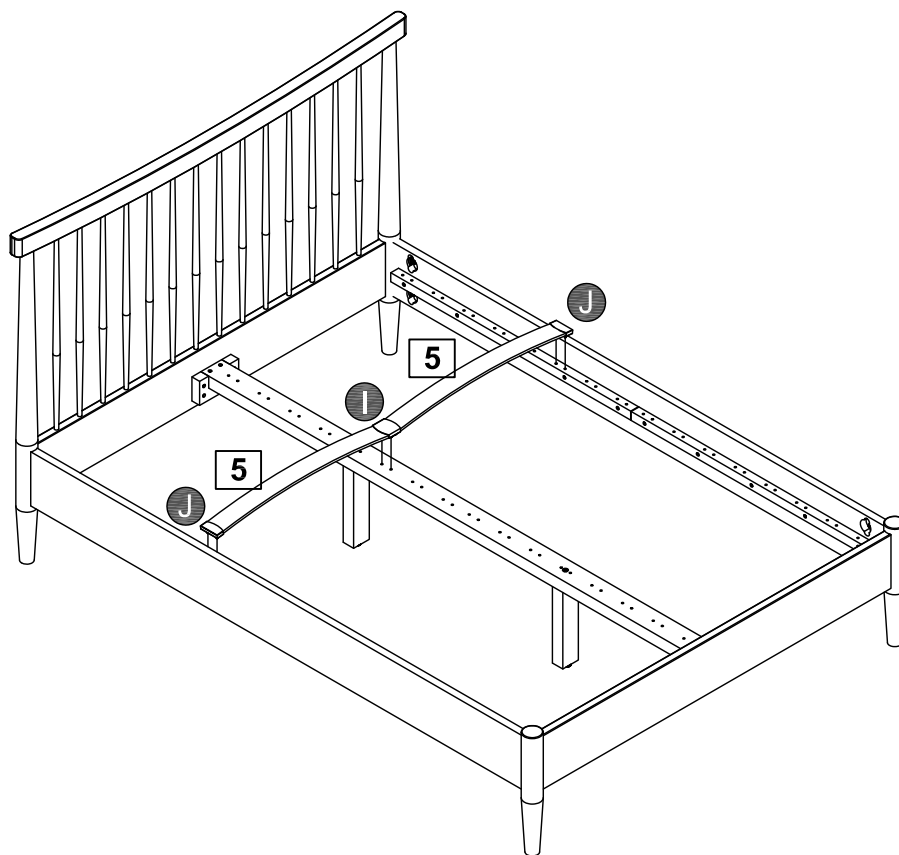

Step 10

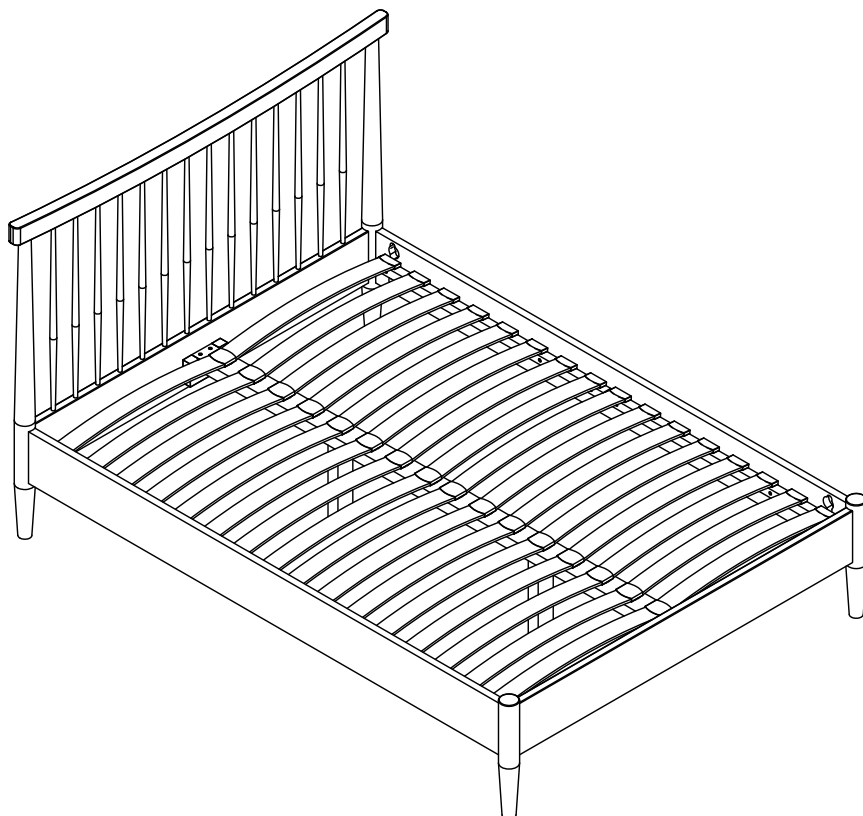

Assembly is complete!