


# Babystart Delfina - Cot Bed

**Assembly Instructions** - Please keep for future reference

377/4467  
377/4474

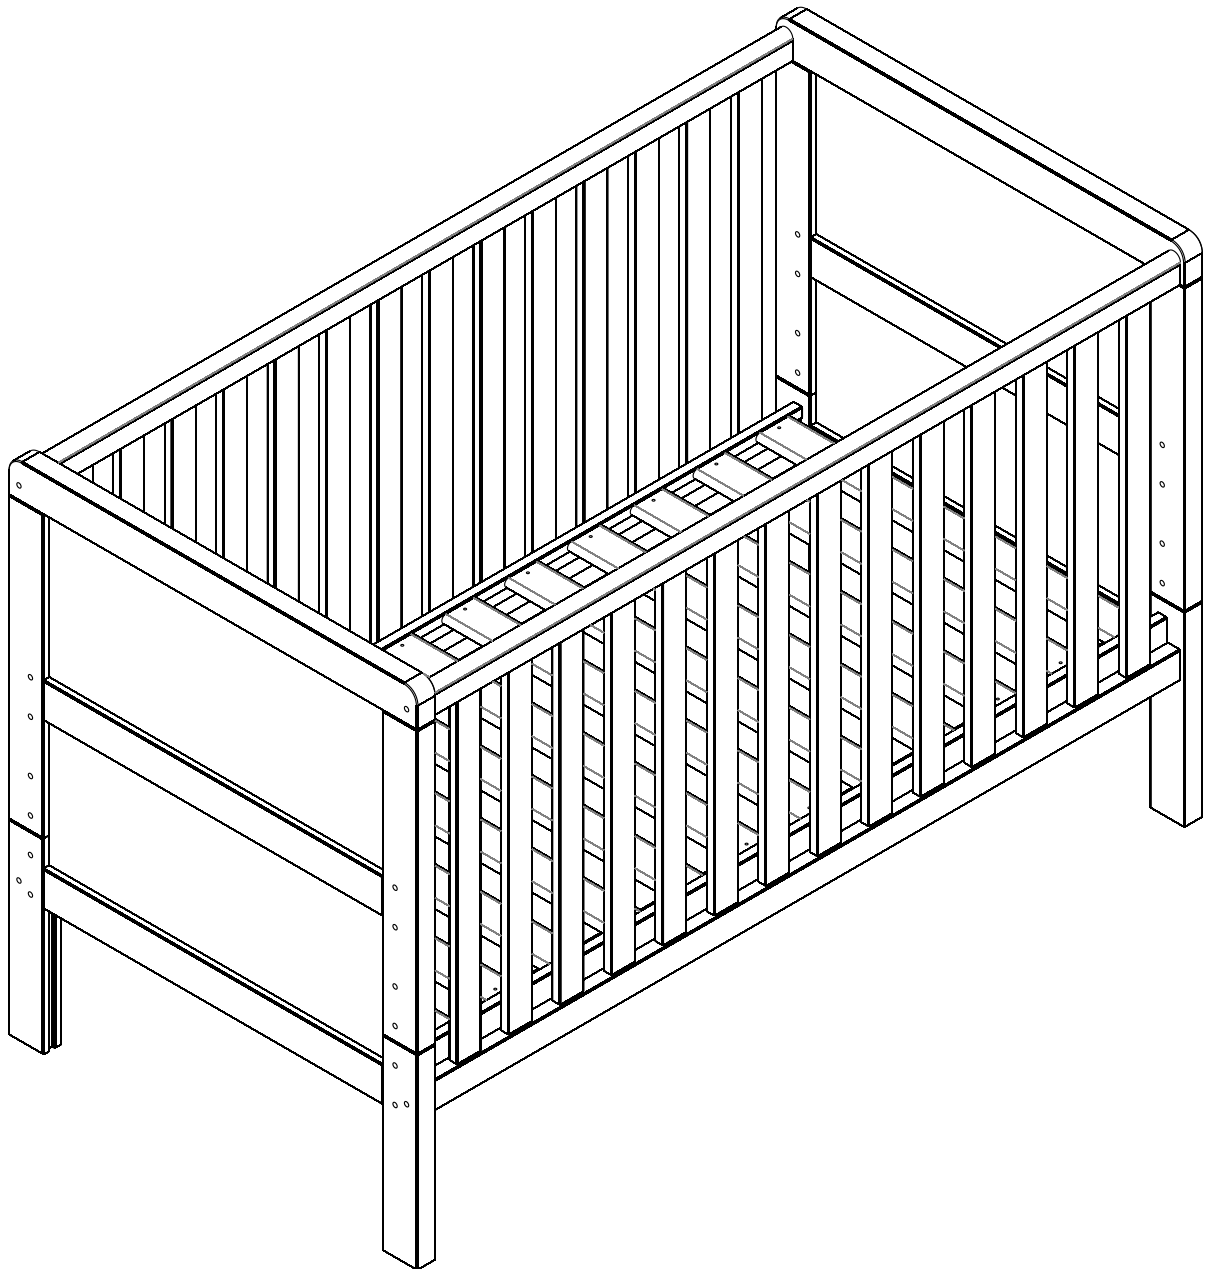

## Dimensions

Width - 145cm

Depth - 76.5cm

Height - 94cm

**Important** – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.


- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- This product contains Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

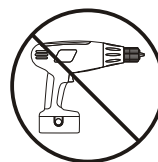

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

## Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- From time to time check that there are no loose screws on this unit.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Warning !


### IMPORTANT KEEP IT FOR FUTURE REFERENCE, READ IT CAREFULLY.

- In cot mode, three base height positions are possible. The lowest position is the safest and should always be used once the child can sit unaided.
- The thickness of the mattress should be such that the distance between the top of the mattress and the top of the sides should be no less than 500mm with the base in its lowest position and no less than 200mm with the base in its highest position (indicated by printed line on cot frame).
- Do not leave anything (large toys etc.) in the cot which could provide a foothold or present a danger of suffocation or strangulation.
- The cot is suitable for a mattress of 1400mm in length and 700mm in width. For safety reasons, the minimum mattress size to be used in this cot must be 1380mm in length and 680mm in width.
- Do not position too close to strong sources of heat e.g. open fires, electric fires or gas fires.
- Regularly check the security of fittings and ensure there are no loose screws which could trap parts of the body, or clothing (e.g. strings, necklaces or ribbons for dummies) which would pose a risk of strangulation.
- Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer
- Do not use more than one mattress in the cot
- The cot shall no longer be used when the child is able to climb out of the cot to prevent injury from falls
- Designed and manufactured to BS EN 716-1: 2008


**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels

Please check you have all the panels listed below

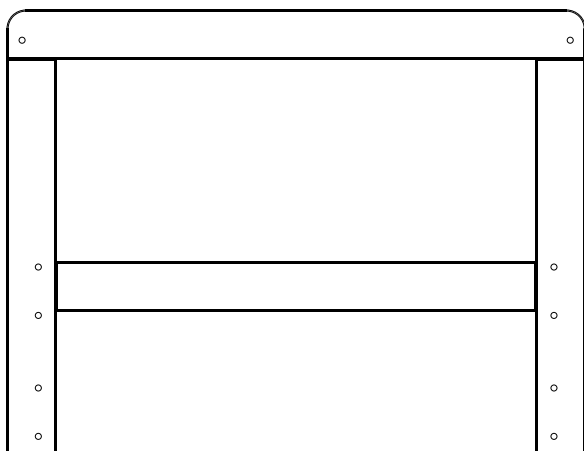


01 Headboard-top x 2 (59 x 76.5cm)

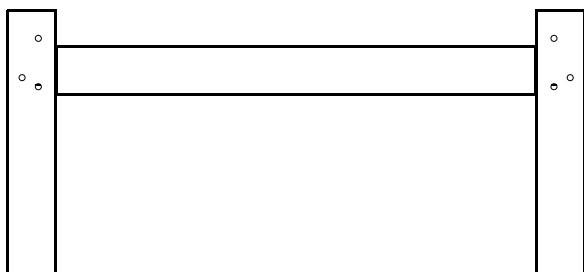


02 Headboard-bottom x 2 (35 x 76.5cm)



03 Headboard Panel x 2 (64.5 x 25cm)



04 Side frame x 2 (140 x 69cm)



05 Side rail x 2 (140 x 9cm)








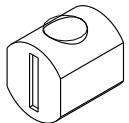
06 Slat x 12 (66.4 x 6,7cm)

# Components - Fittings

If you have damaged or missing components,  
call the Customer Helpline: **08456 400 800**

**Please check you have all the fittings listed below**


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  1/4" x 40mm Bolt X 8	<b>B</b>  Allen key X 1	<b>C</b>  3,5 x 25mm Screw X 24
<b>D</b>  8,0 x 30mm Wooden dowel X 8	<b>E</b>  1/4" x 60mm Bolt X 8	<b>F</b>  Barrel Nut x 8

## Tools required



Phillips screwdriver  
(medium & large)

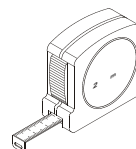

Ruler/tape  
measure




Small  
hammer



Eye protection  
(when using a  
hammer or glue)

**Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions


COT

## Step 1

Fitting dowels

Insert 4 wooden dowels **D**  
into headboard-bottom **02**

X 2

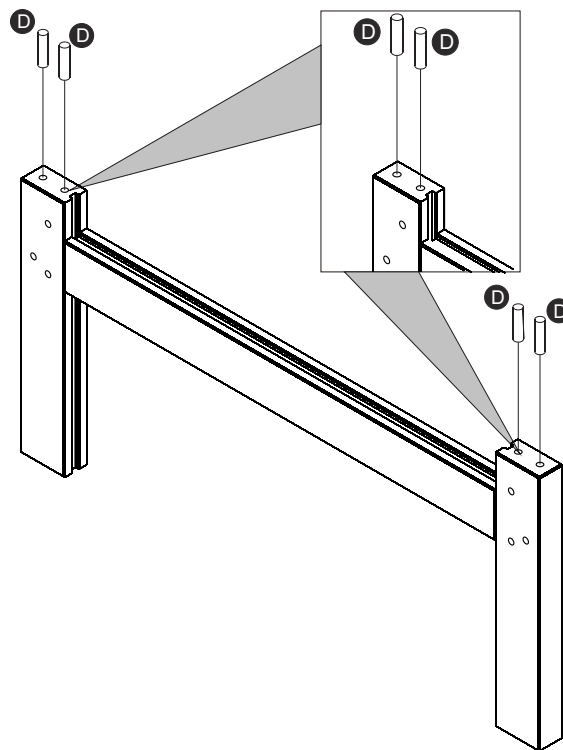


## Step 2

Assembling headboards

Insert headboard panel **03**,  
into headboard top **01**.  
Then attach headboard  
bottom **02** as shown.

X 2

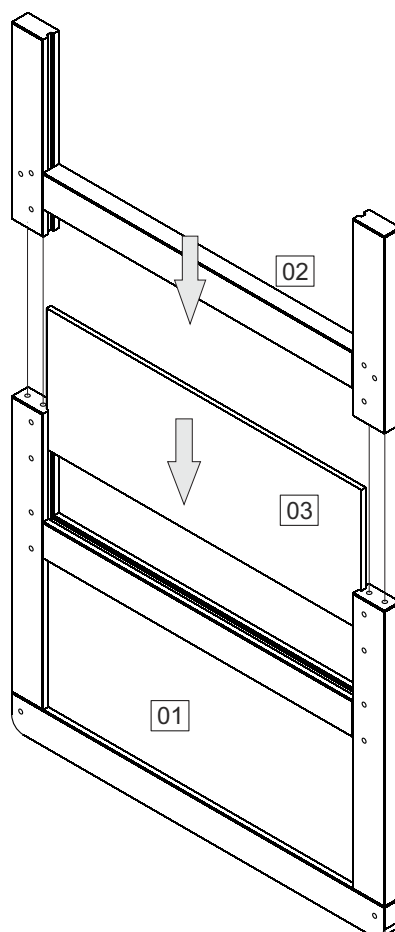

# Assembly Instructions

## Step 3

Assembling cot bed

a) Insert barrel nuts **F** into side rails **05** as shown.

b) With help fix side rails **05** to the desired height position in the assembled headboards using bolts **E** and allen key **B**.



### Attention!

To the correct position of the side rails before fixing.



### Attention!

Ensure mattress marks on headboard are facing inward.



**Note:** Do not fully tight bolts.




**Important:** Note there are three height positions for the base. The lowest position is the safest. Please refer to the first page, warning section for more information.

## Step 4

Carefully fit side frames **04** to the headboards as shown, then fix them using bolts **A** and allen key **B**.



Finish tighten bolts on side rails using allen key **B**.

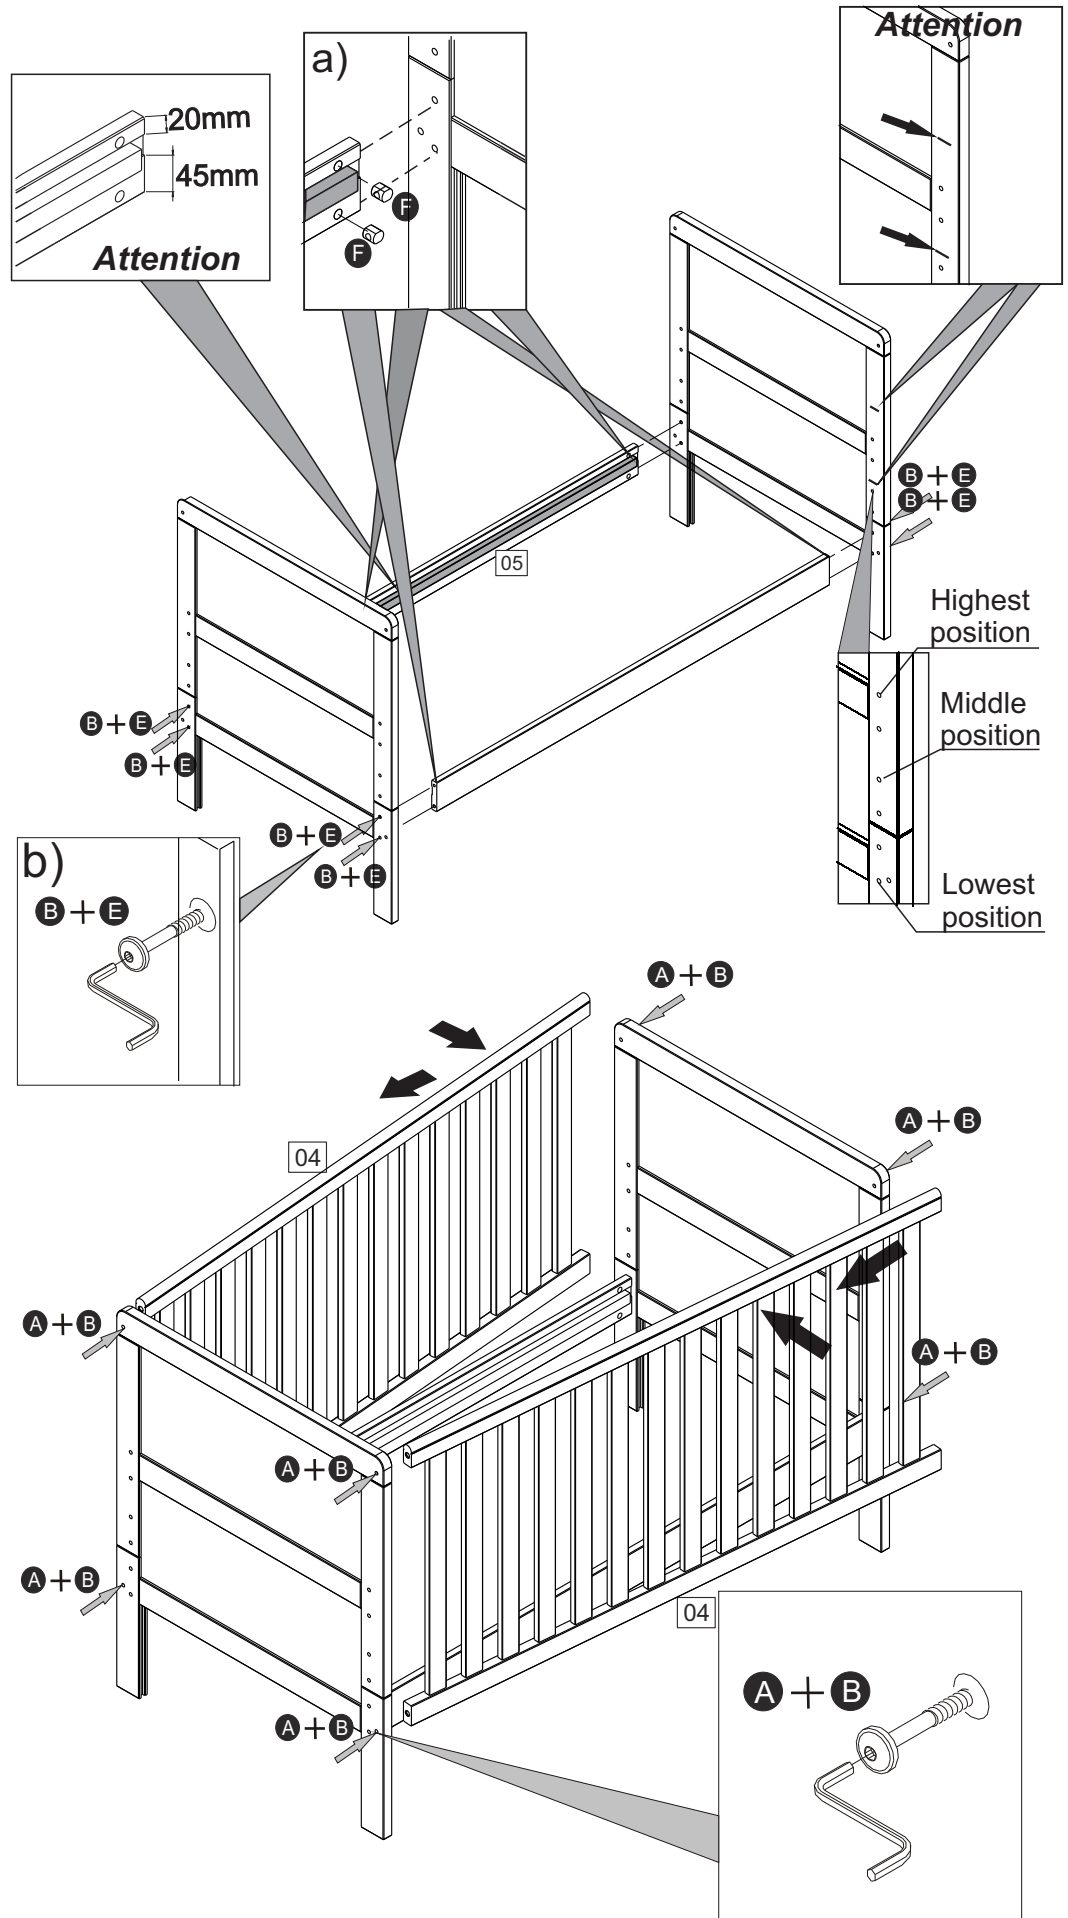

# Assembly Instructions

## Step 5


### Assembling cot base

Fix slats **06** to the side rails **05** using screws **C**.

Fix first slats at 20mm from the side rails ends, then work towards the middle leaving a space of 50 mm in between each adjacent slat, as shown.



*Make sure slats are fully pushed to the sides of the side rails before fixing. And countersunk holes are facing up.*

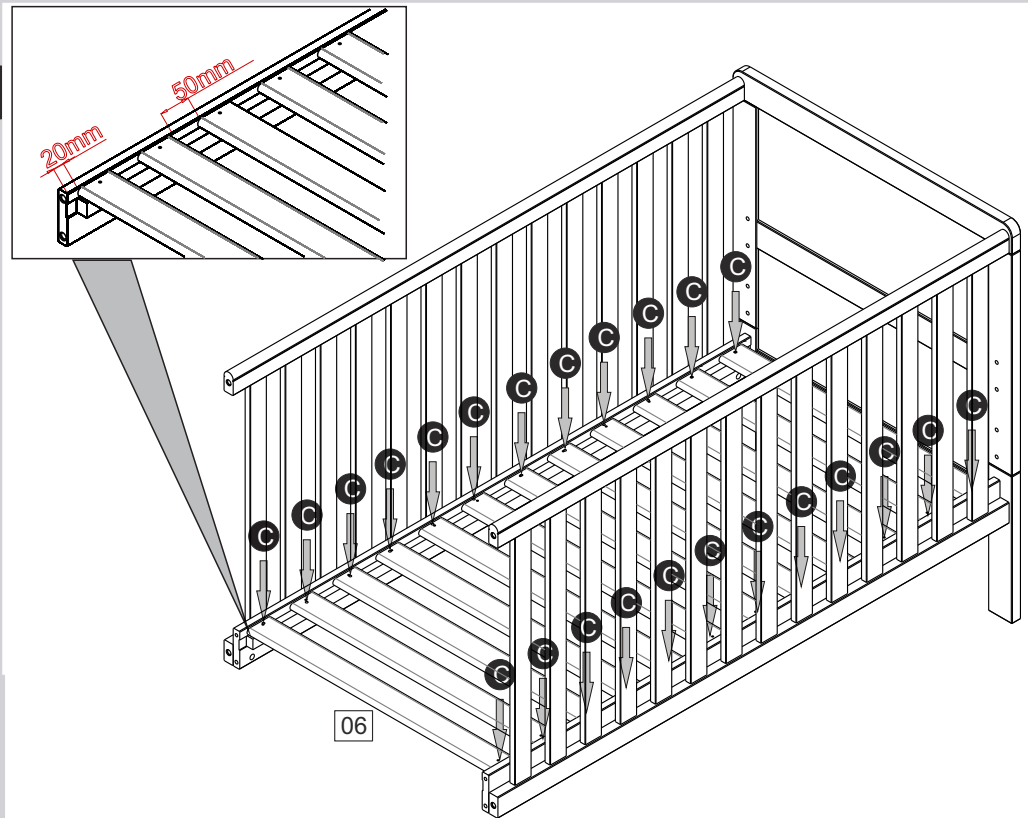

## JUNIOR BED


## Step 1

### Assembling junior bed

Fix cot base to the headboard top **01** using bolts **E** and allen key **B**.



**Attention** to the correct position of the side rails before fixing

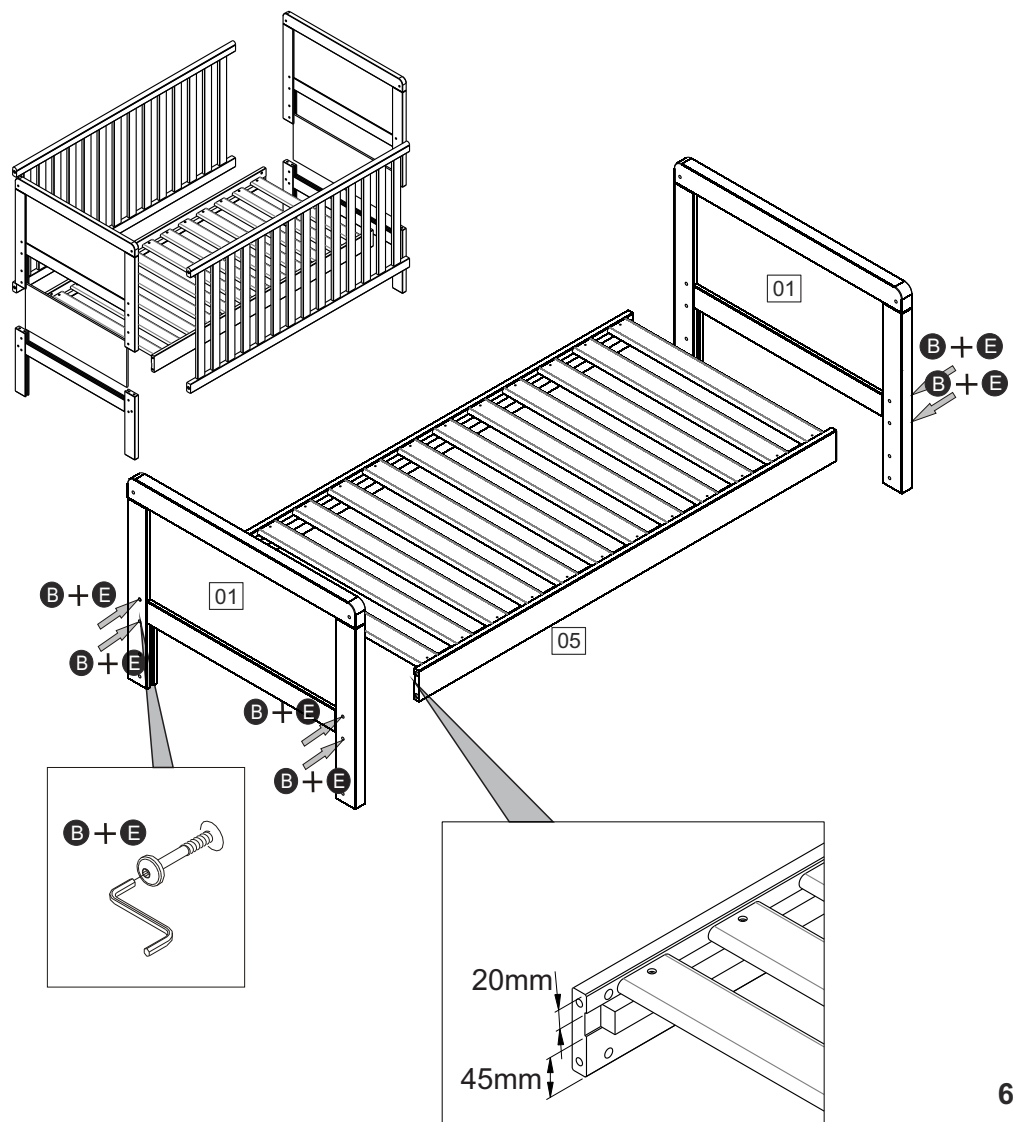

**Assemble is complete.**