
Wow Pine Kitchen Trolley

Assembly Instructions - please keep for future reference

424/6963

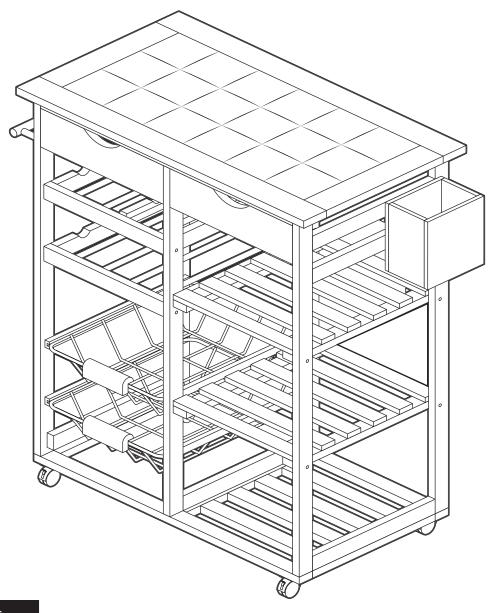

Dimensions

Width - 79.5cm

Depth - 37cm

Height - 82.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the

Customer Helpline: 0845 640 0800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed below and on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- · Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.


 Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below

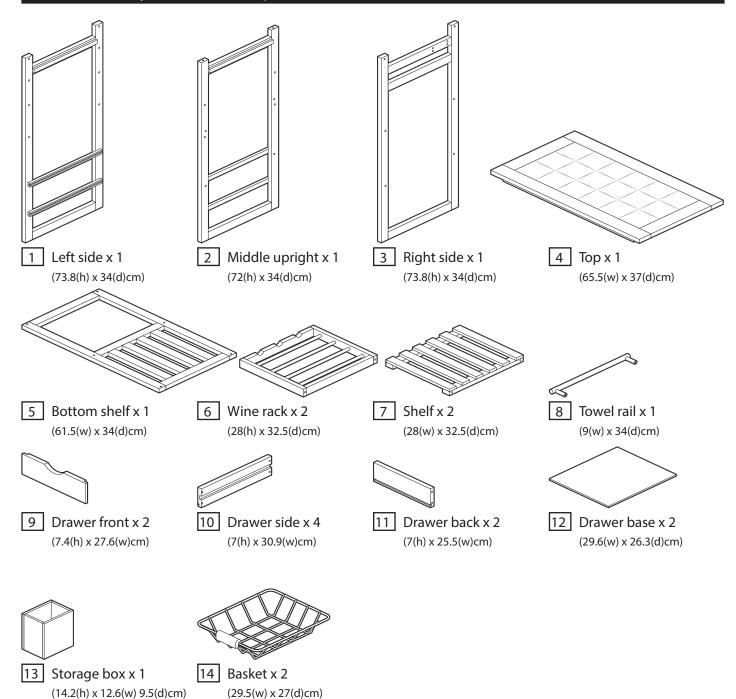


Components - Fittings

If you have damaged or missing components, call the Customer Helpline: 0845 640 0800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

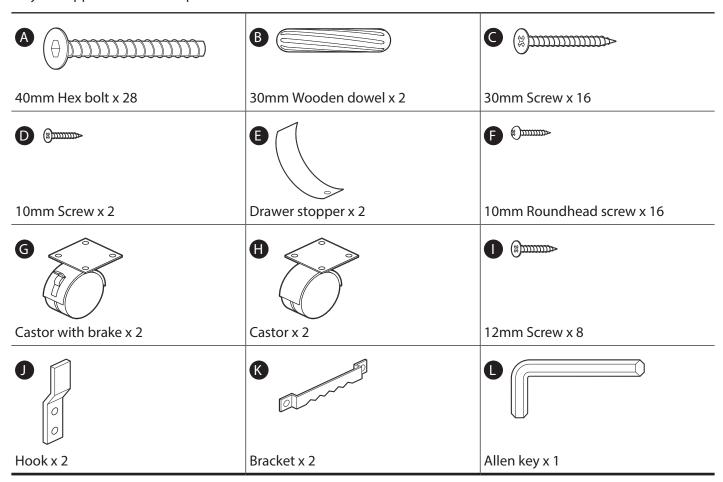

Tools required



Ruler – Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Step 1

Connect 2 x drawer side 10 to 1 x drawer front 9 using 4 x 30mm screw 6 as shown.

Step 2

Slide drawer base 12 into slots of sides as shown.

Step 3

Connect 1 x drawer back

11 to left and right sides using 4 x 30mm screw

as shown.

Repeat Steps 1–3 to assemble second drawer.


Step 4


Connect 2 x drawer stopper **(3)** to underside of top **(4)** using 2 x 10mm screw **(D)** as shown.

Note: the 'loose' end of the drawer stopper must point towards the rear of the unit.

Step 5

Connect 2 x castor with brake **G** and 2 x castor **1** to underside of bottom shelf **5** using 16 x 10mm roundhead screw **F** as shown.

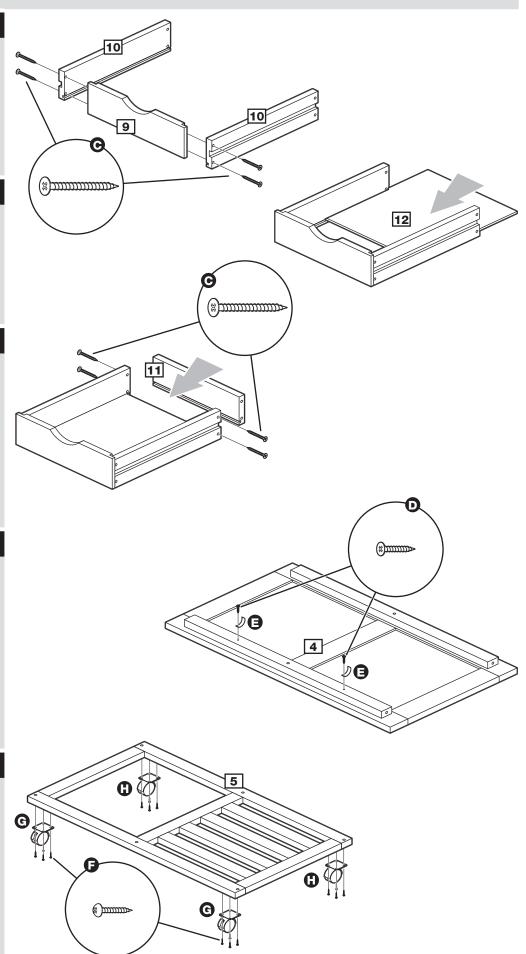


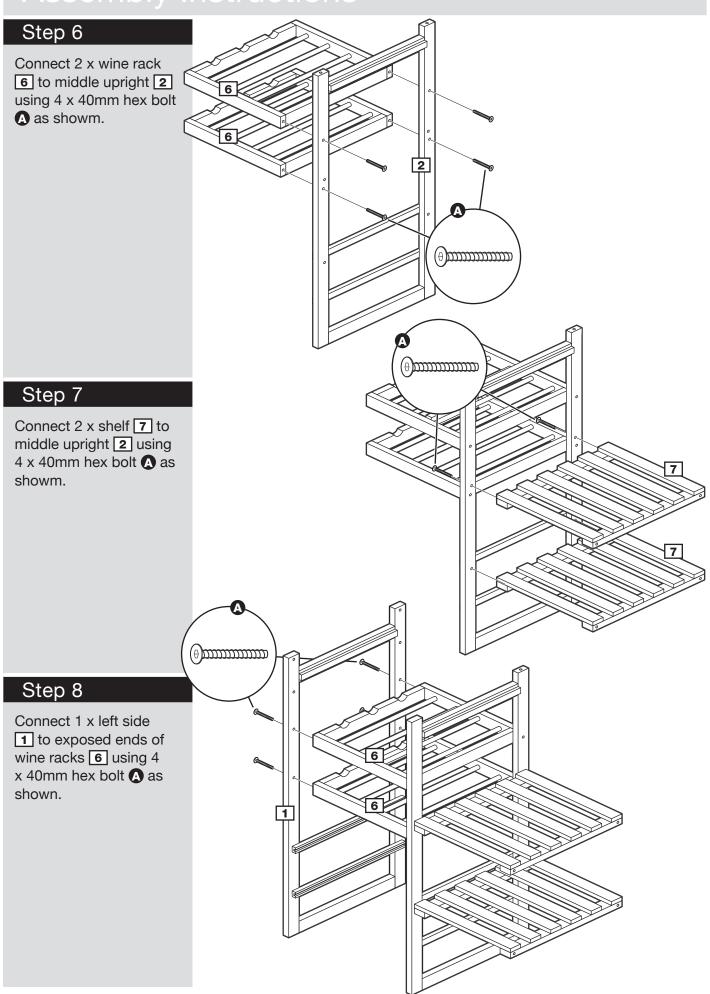

Step 9


Connect 1 x right side

3 to exposed ends
of shelves 7 using 4
x 40mm hex bolt as
shown.

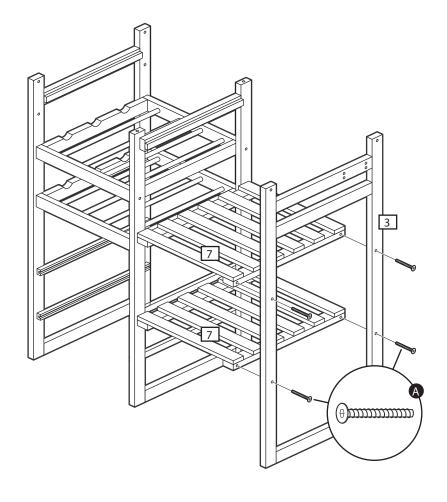


Step 10

Fix rail 8 to left side 1 using 2 x 40mm hex bolt A as shown.

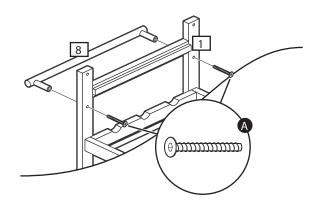


Step 11

Connect bottom shelf 5 to legs using 6 x 40mm hex bolt **(A)** as shown.

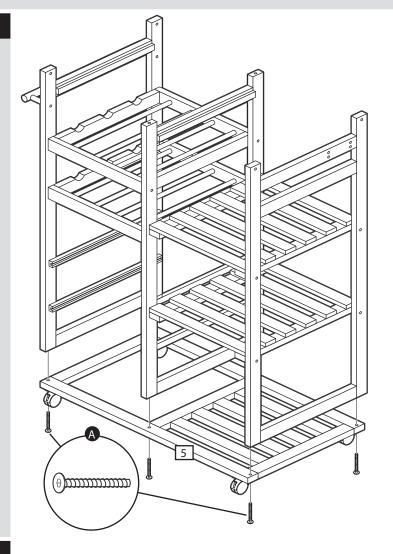

Step 12

Connect top 4 to top of side and middle panels using 4 x 40mm hex bolt A and 2 x 30mm wooden dowel B as shown.

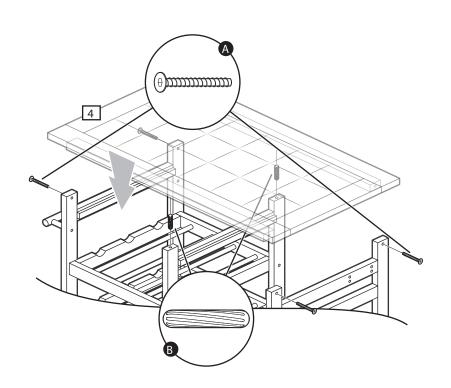

Step 13


Fix 2 x hook to right side using 4 x 12mm screw as shown.


Step 14

Connect bracket & and storage box using 12mm screws as shown.

Step 15

Place storage box 13 onto hooks.

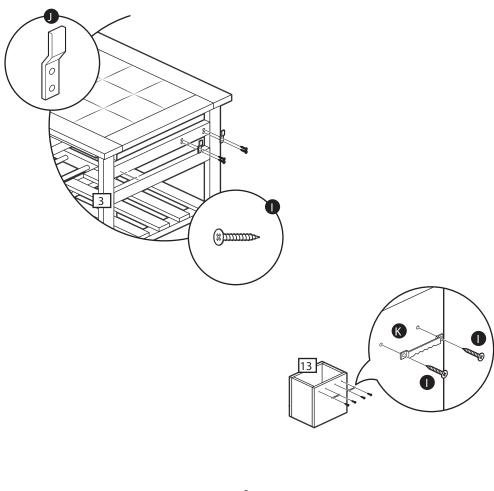

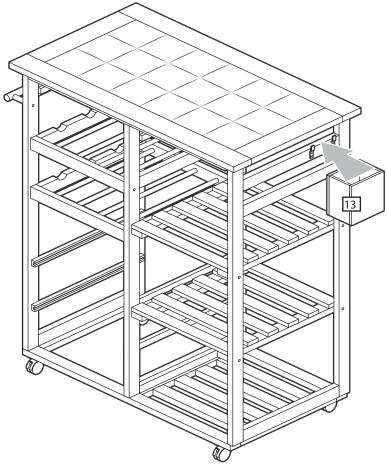

Step 16

Insert 2 x basket 14 and 2 x drawer completed at Step 3 as shown.

Assembly complete.

