






























<b>A</b> 			
<b>B</b>  <b>x2</b>		<b>C</b> 	
<b>D</b> 		<b>E</b> 	
<b>F</b> 		<b>G</b>  <b>x2</b>	
<b>H</b> 		<b>I</b> 	
<b>J</b>  <b>x2</b>		<b>K</b> 	
<b>L 1</b>  <b>M4L12 X4</b>	<b>L 2</b>  <b>M5L12 X4</b>	<b>L 3</b>  <b>M6L12 X4</b>	<b>L 4</b>  <b>M8L12 X4</b>
<b>L 5</b>  <b>M4L25 X4</b>	<b>L 6</b>  <b>M5L25 X4</b>	<b>L 7</b>  <b>M6L25 X4</b>	<b>L 8</b>  <b>M8L25 X4</b>
<b>M</b>  <b>M4 X4</b>		<b>N</b>  <b>x4</b>	
<b>maybe required (sold separately)</b>  <b>x4</b>  <b>x4</b>  <b>Power Drill</b>			

  
 200x200

  
 Max  
25kg


  
 23"-50"


  
 35mm

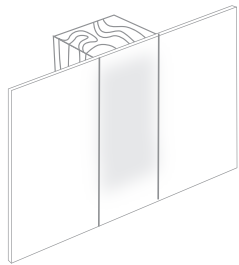**1** 


**stud wall**

Locate the stud using a quality stud finder and mark the edges

**2**  **Bubble in the middle**

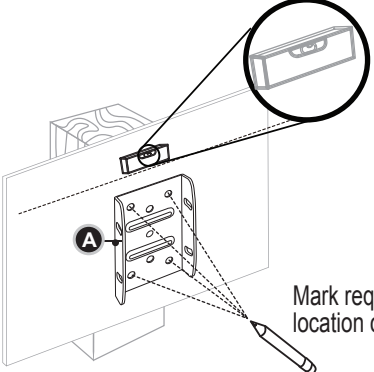


**Mark required location on wall**

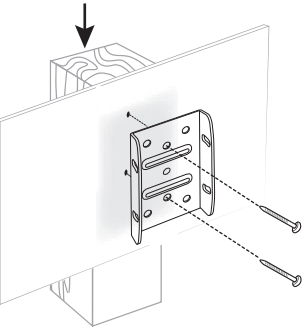


**use wood screws**

**3A** **solid wall - concrete**

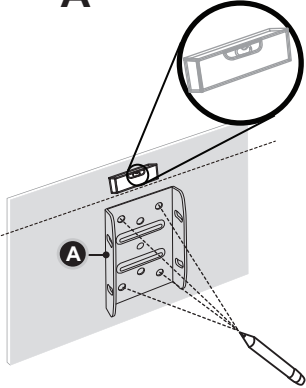


**Mark required location on wall**

**3B**

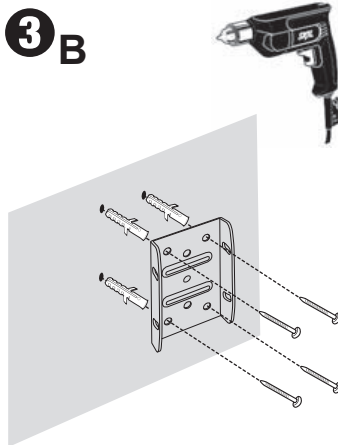


**Drill to correct size using appropriate drill size and power drill**

**4**

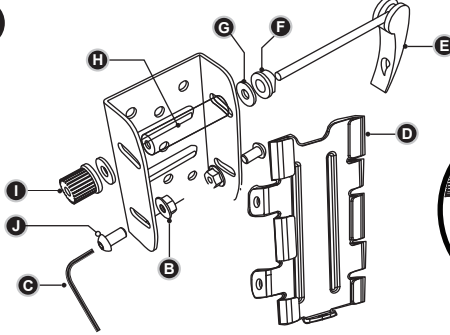


**TIGHTEN**

**Check Bolt size before installing**

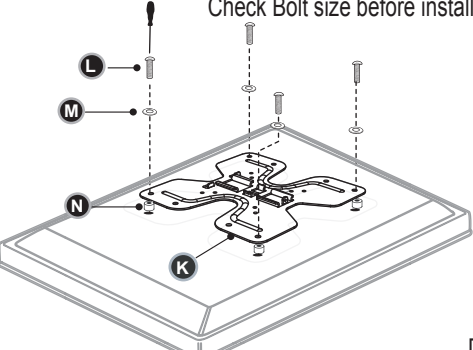

**DO NOT OVERTIGHTEN**


**5**

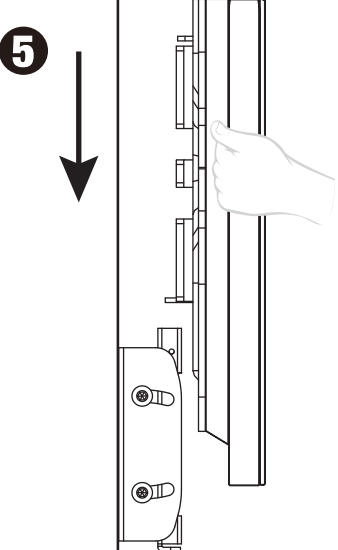

**align above as shown and slide down to install**

**two people required**

**6**

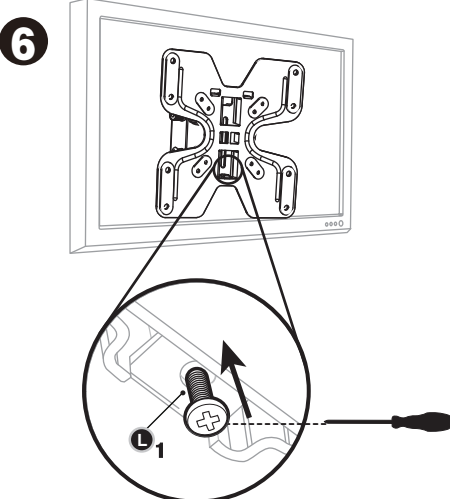

**Re-install and tighten removed locking screw to secure and finish installation**