


Oxford - Cot Bed

Assembly Instructions - Please keep for future reference

604/5540

614/5536

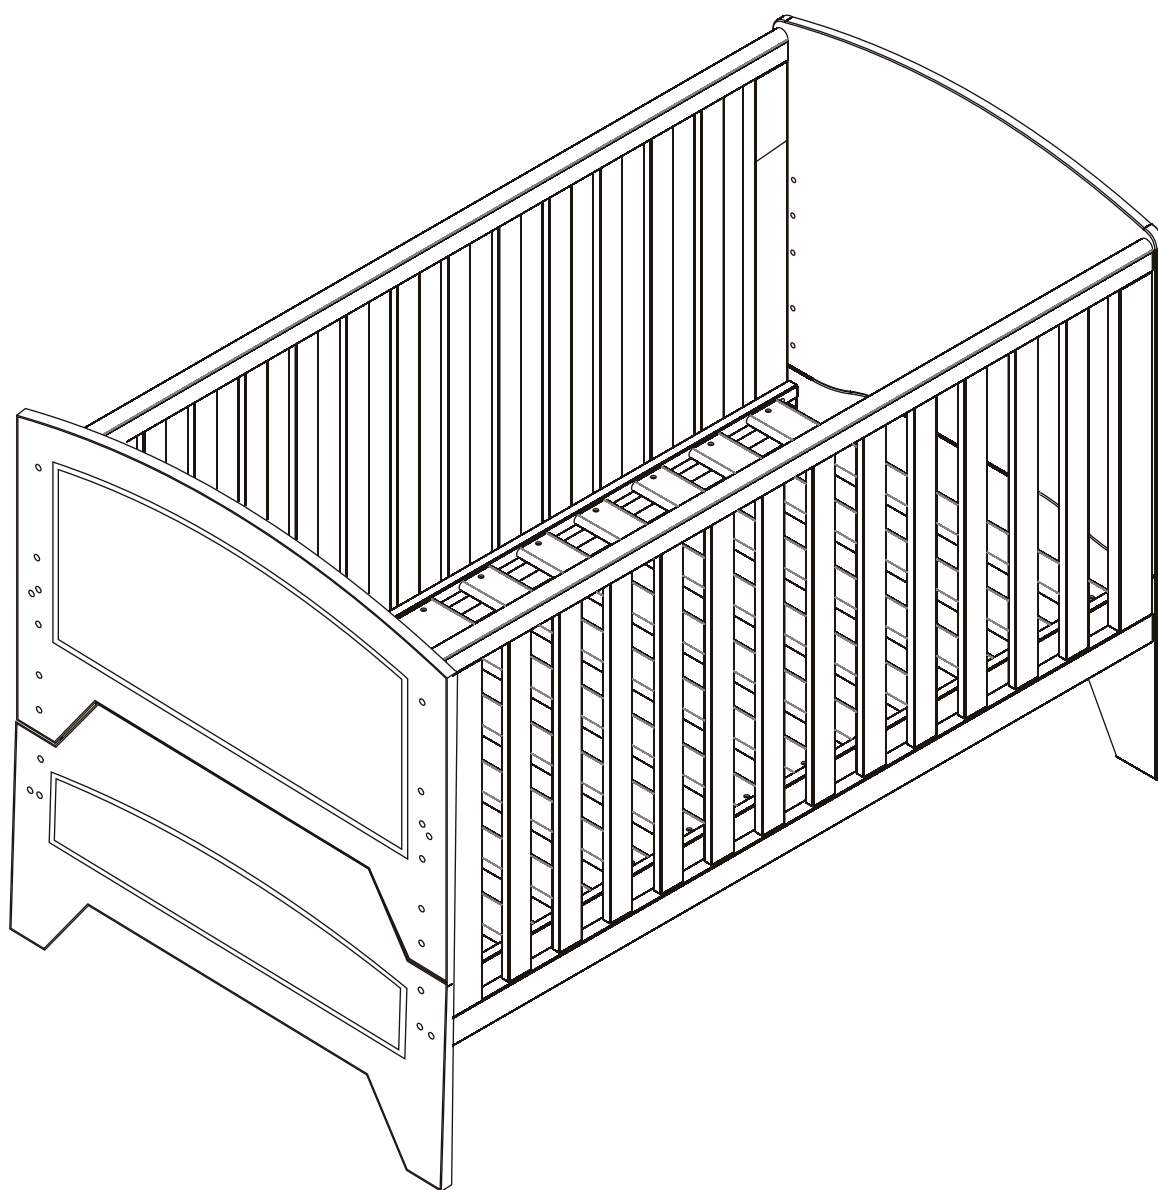

Dimensions

Width - 143,6cm

Depth - 76.5cm

Height - 98,5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- This product contains Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.

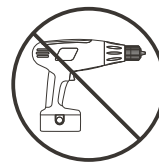

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.
- From time to time check that there are no loose screws on this unit.
- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Warning !


IMPORTANT KEEP IT FOR FUTURE REFERENCE, READ IT CAREFULLY.

- In cot mode, three base height positions are possible. The lowest position is the safest and should always be used once the child can sit unaided.
- The thickness of the mattress should be such that the distance between the top of the mattress and the top of the sides should be no less than 500mm with the base in its lowest position and no less than 200mm with the base in its highest position (indicated by printed line on cot frame).
- Do not leave anything (large toys etc.) in the cot which could provide a foothold or present a danger of suffocation or strangulation.
- The cot is suitable for a mattress of 1400mm in length and 700mm in width. For safety reasons, the minimum mattress size to be used in this cot must be 1380mm in length and 680mm in width.
- Do not position too close to strong sources of heat e.g. open fires, electric fires or gas fires.
- Regularly check the security of fittings and ensure there are no loose screws which could trap parts of the body, or clothing (e.g. strings, necklaces or ribbons for dummies) which would pose a risk of strangulation.
- Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer
- Do not use more than one mattress in the cot
- The cot shall no longer be used when the child is able to climb out of the cot to prevent injury from falls, when the child is able to climb out of the cot, the cot shall no longer be used for that child.
- Designed and manufactured to BS EN 716-1: 2008 and BS 8509:2008 + A1:2011
- The toddler bed is suitable for children aged from 18 months to 4 years.
- Do not leave anything in the cot or place the cot close to another product, which could provide a foothold or present a danger of suffocation, e.g. strings, blind/curtain, cords, etc.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

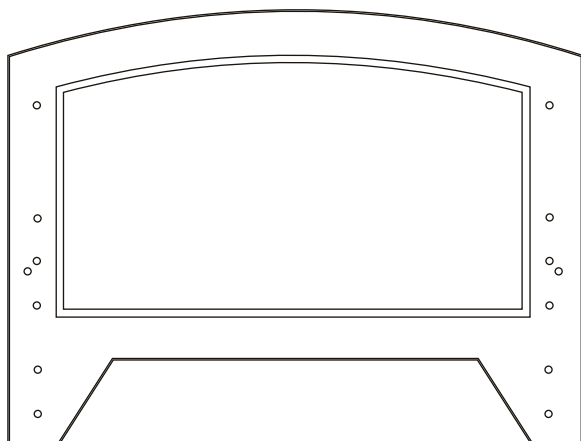

01 Headboard-top x 2 (63 x 76.5cm)

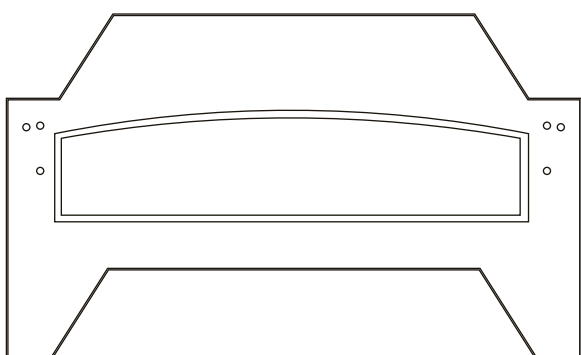


02 Headboard-bottom x 2 (45 x 76.5cm)

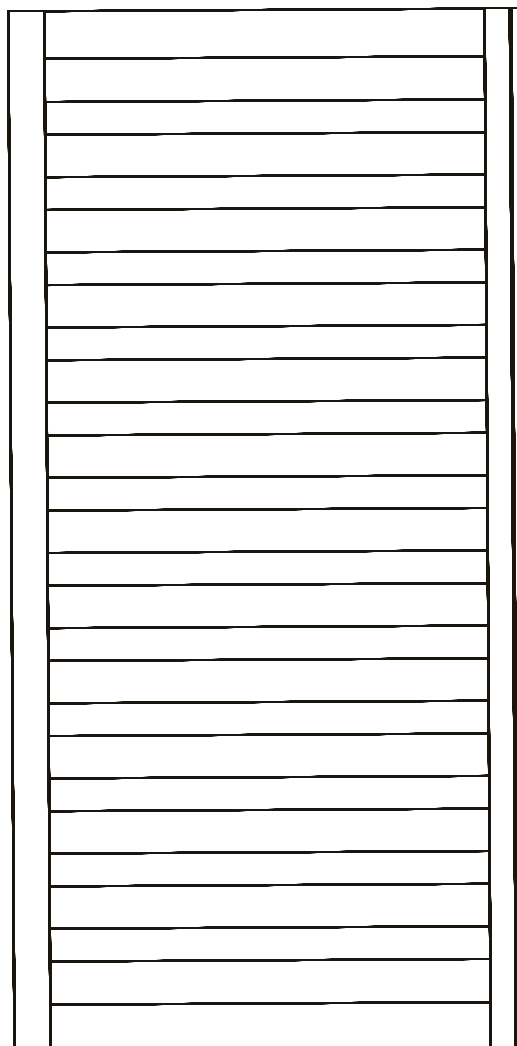

04 Side frame x 2 (140 x 69cm)



03 Slat x 12 (66.4 x 6,7cm)

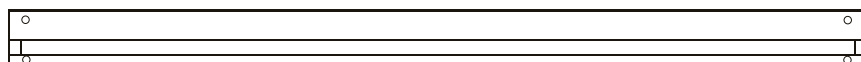

05 Side rail x 2 (140 x 9cm)


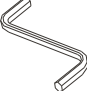



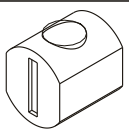






Components - Fittings

If you have damaged or missing components, call the Customer Helpline: **03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  1/4" x 40mm Bolt X 12	B  Allen key X 1	C  3,5 x 25mm Screw x 20
D  10 x 50mm Wooden dowel X 8	E  1/4" x 50mm Bolt X 8	F  Barrel Nut x 8
G  M4 x 50mm Bolt x 4	H  55mm x 55mm Spacer	I  Nut x 4
J  Washer x 4		

Tools required




Phillips screwdriver
(medium & large)

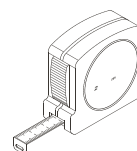

Ruler/tape
measure



Small
hammer



Eye protection
(when using a
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


COT

Step 1

Fitting dowels

Insert 4 wooden dowels **D**
Into headboard-bottom **02**

X 2

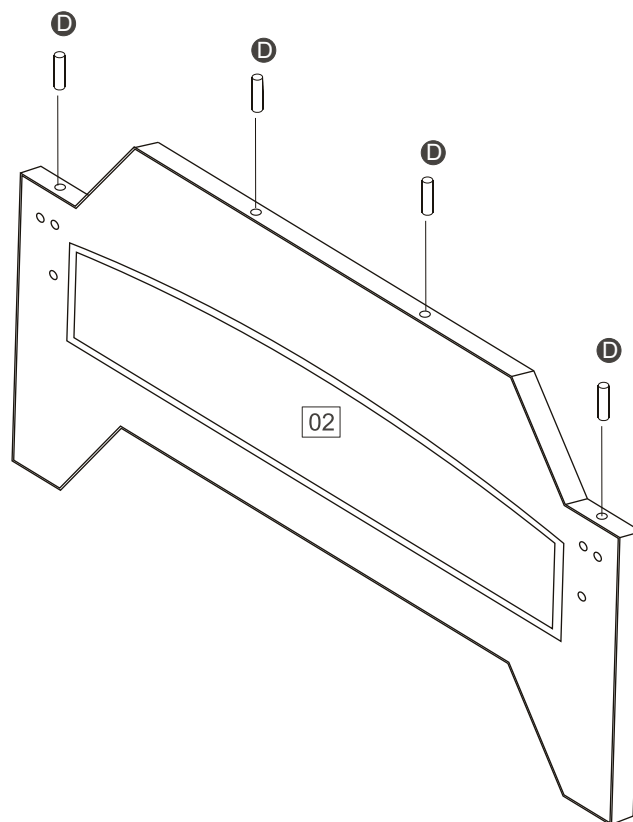


Step 2

Assembling headboards

Fit headboard top **01** to
headboard bottom **02**.

X 2

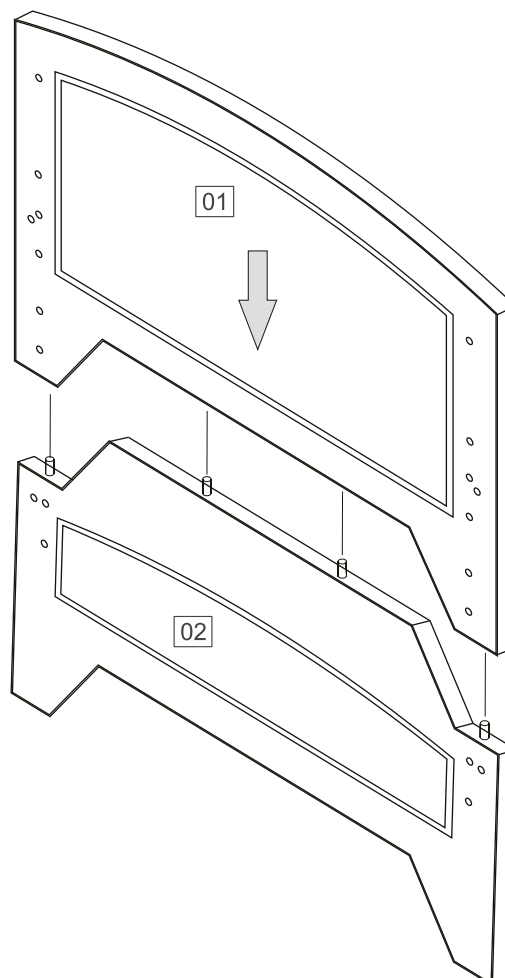

Assembly Instructions

Step 4



Fix sides frames **04** to the headboards using bolts **A** and allen key **B**.

Do not fully tighten bolts at this stage as side rails need to be fixed first.



Attention! Ensure mattress mark on side frame is facing inwards, as shown.

Attention

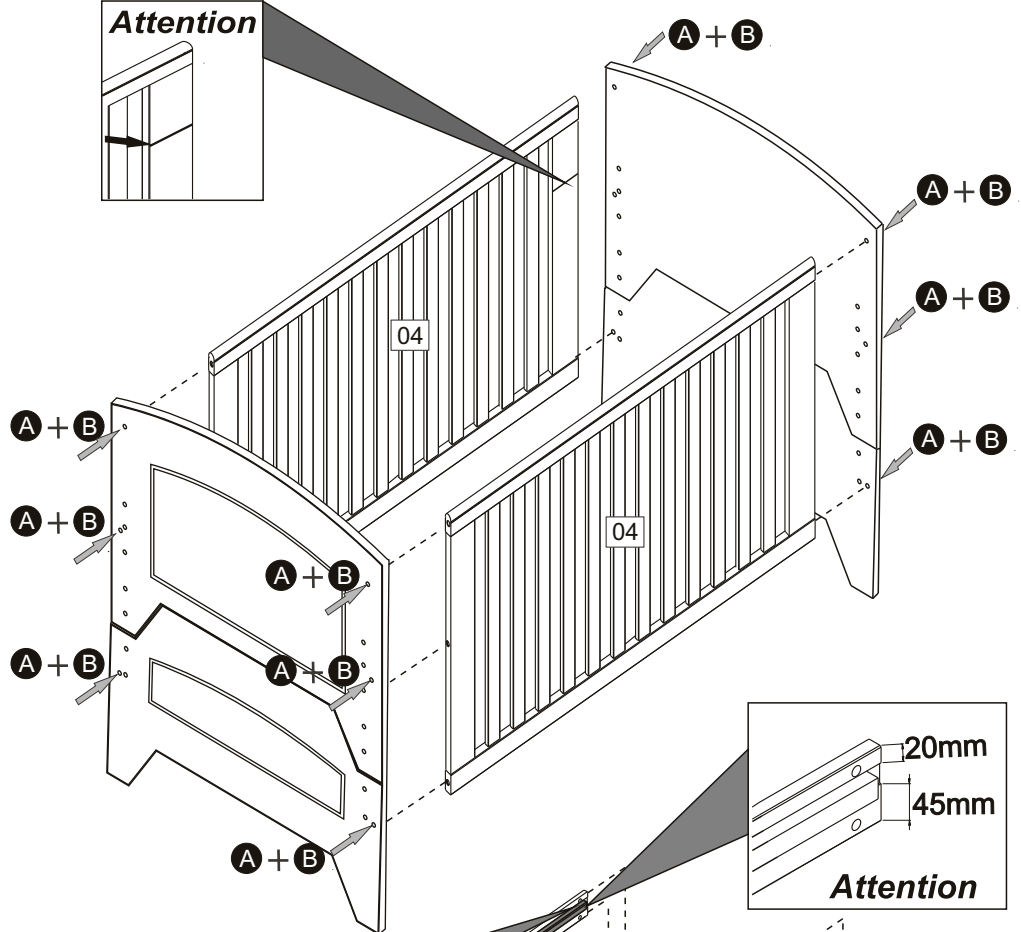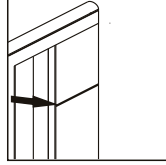

Attention

Step 5

Insert barrel nuts **F** into the side bars **05**.

With help, fix side rails **05** to the first height position in the assembled headboards using bolts **E** and allen key **B**.




Attention! To the correct position of the side rails.

There are three height positions in the cot for the base, you will need to lower the side rails as the baby grows. Please refer to the first page - warning section - for more information.




Attention! Finish tighten bolts on side frames using allen key **B**.

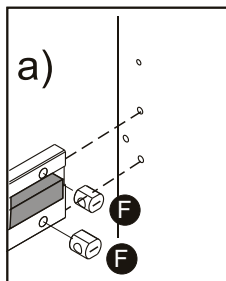

Highest position


Middle position

Lowest position

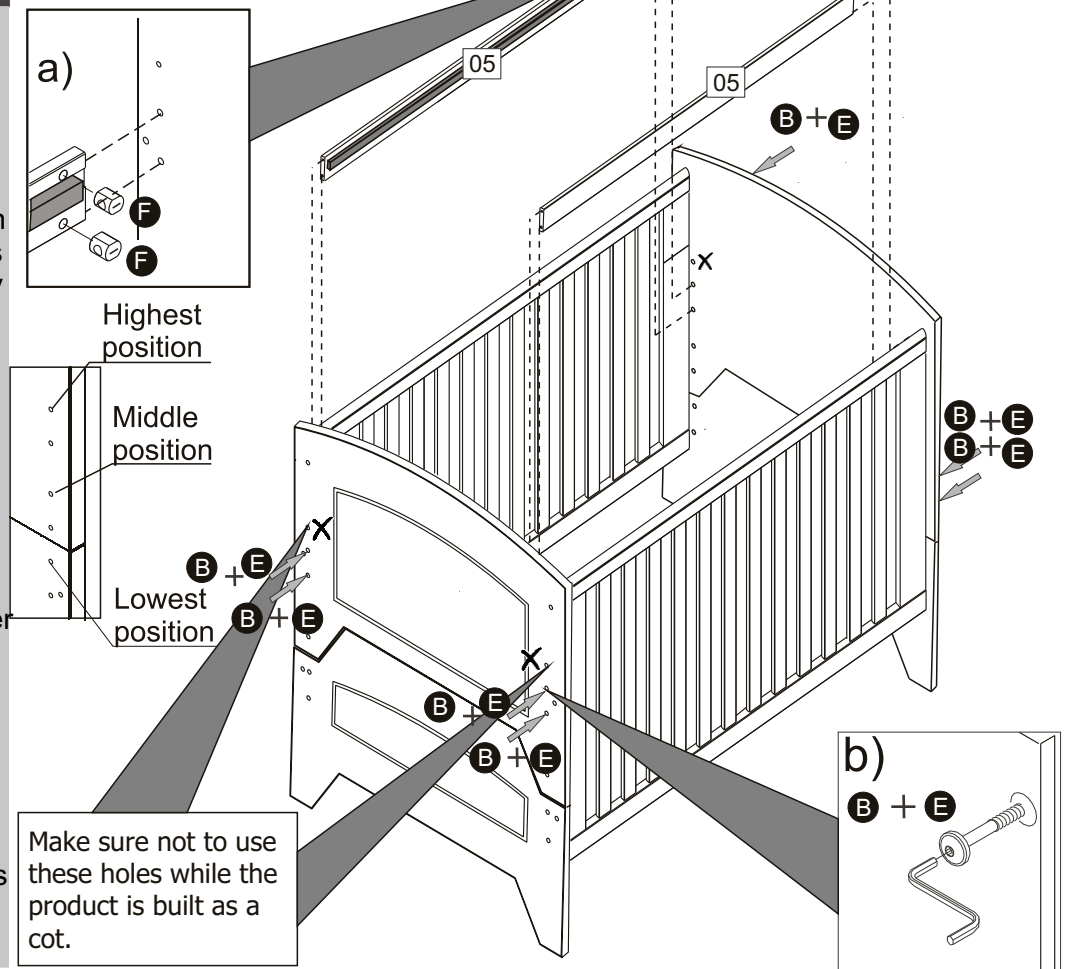

b)

B + E

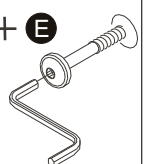

Make sure not to use these holes while the product is built as a cot.

Assembly Instructions

Step 6

Assembling cot base

Fix first two slats **03** next to the headboard and footboard using bolts **G**, washer **J** and nut **I** through the holes.

Then, using spacer **H** work towards the middle of the cot fixing slats **03** to the side rails **05** using screws **C**.

Note that the slats in the middle will have a gap smaller than the spacer length.



Make sure slats are fully pushed to the sides of the side rails before fixing and countersunk holes are facing up.



Important!
Cot/Bed base must never be dismantled once built.

TODDLER BED

Step 1

Assembling toddler bed

Remove all bolts from the headboard, cotbase and side frames and take the cotbed apart. Then, remove the bolts from the first slats next to headboards.

Fix cot base to the headboard top **01** using bolts **E** and allen key **B**.



Attention to the correct position of the side rails before fixing.

Fix the first slats next to the headboards back using bolts **G**, washer **J** and nut **I** through the holes.

Use the holes indicated in the drawing, otherwise, the toddler bed will not be built according to norm BS8509.

Assemble is complete.

