


# Sparkle - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

411/3436

428/7094

418/1035

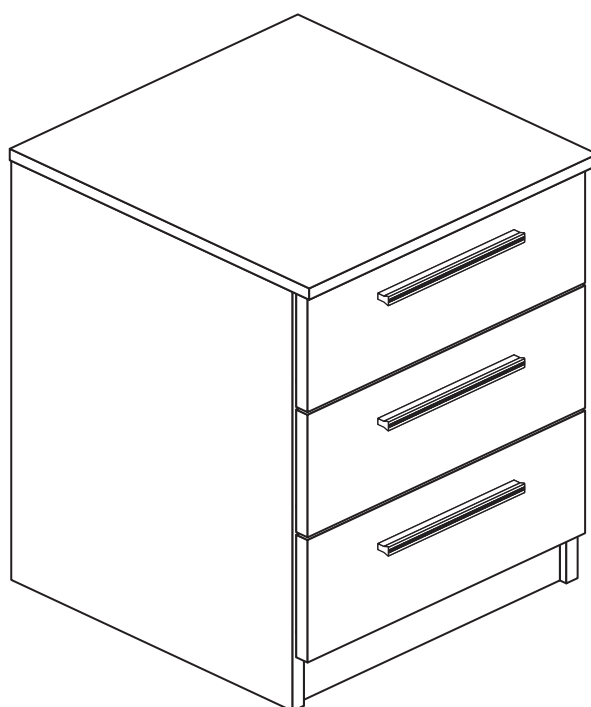

## Dimensions

Width - 38.1cm

Depth - 39.6cm

Height - 57.1cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 14kgs. Please lift with care.
  - Check you have all the components and tools listed on pages 2 and 3.
  - Remove all fittings from the plastic bags and separate them into their groups.
  - Keep children and animals away from the work area, small parts could choke if swallowed.
  - Parts of the assembly will be easier with 2 people.
  - Make sure you have enough space to layout the parts before starting.
  - Do not stand or put weight on the product, this could cause damage.
  - Assemble the item as close to its final position (in the same room) as possible.
  - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
  - **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
  - Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
numbers below


Please check you have all the panels listed below

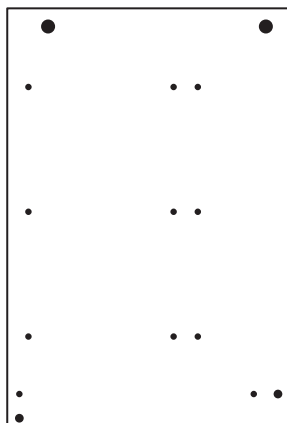


**1** Left Side (DF3853)  
(55.6 x 37.2cm)

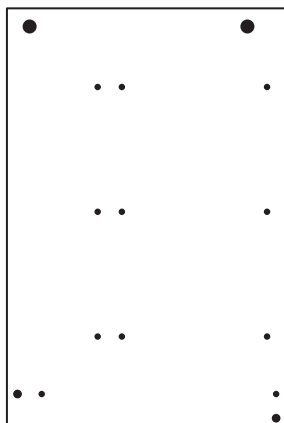


**2** Right Side (DF3854)  
(55.6 x 37.2cm)

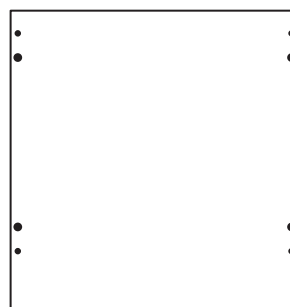


**3** Top (DF3806)  
(38.1 x 39.6cm)




**4** Rail (DF3807)  
(34.7 x 6cm) x 2

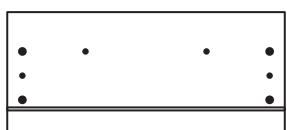


**5** Drawer Front (DF3808)  
(36.7 x 16.2cm) x 3




**6** Left Drawer Side (W370-124LH)  
(37 x 12.4cm) x 3



**7** Right Drawer Side (W370-124RH)  
(37 x 12.4cm) x 3



**8** Drawer Back (W314-124)  
(31.4 x 12.4cm) x 3



**9** Drawer Base (T325-367)  
(32.5 x 36.7cm) x 3



**10** Back (X531-373)  
(53.1 x 37.3cm)












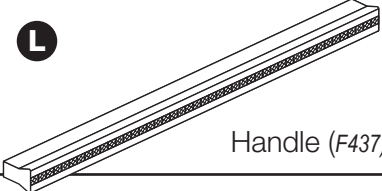



# Components - Fittings

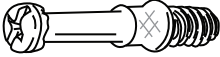If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
numbers below

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  Metal dowel (F901) x 14	<b>B</b>  Large locking nut (F900) x 8	<b>C</b>  Small locking nut (F3) x 6
<b>D</b>  Wooden dowel (F22) x 8	<b>E</b>  Nail (F51) x 14	<b>F</b>  Knock-in Peg (F171GY) x 12
<b>G</b>  25mm Screw (F50) x 6	<b>H</b>  9mm Screw (F74) x 6	<b>I</b>  9mm Screw (F73) x 12
<b>J</b>  Plastic Nail (F91) x 4	<b>K</b>  Wedgefix (F639) x 6	<b>L</b>  Handle (F437) x 3
<b>M</b>  Drawer runner (F1004) x 6		

## Tools required




Rule



Cross-head  
screwdriver



Scissors




Hammer



Eye protection  
(when using a  
hammer or drill)

**Ruler** - Use this ruler to help correctly identify the screws

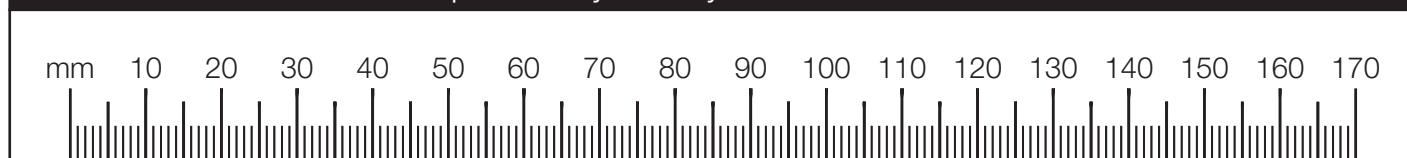

# Assembly Instructions


If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
 numbers below

## Step 1

### Prepare the 3 drawer fronts

Screw 2 metal dowels **A** into each of the drawer fronts **5**.

**Note:** Tighten the metal dowels up fully against the panels.

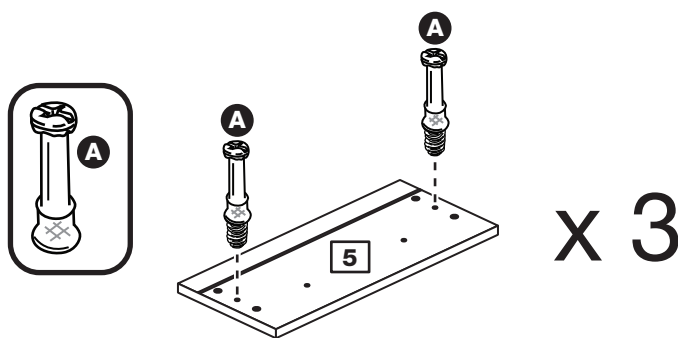


## Step 2

### Prepare the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side **6** and the right drawer side **7**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

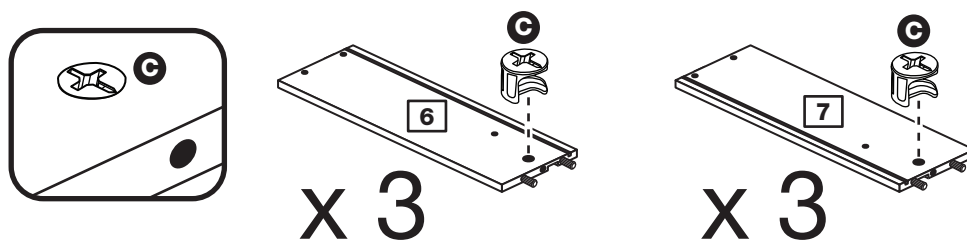


## Step 3

### Attach the drawer sides to the drawer fronts

Push the left drawer sides **6** and right drawer sides **7** onto the back of the drawer fronts **5**.

Turn the small locking nuts **C** on the left drawer side **6** and right drawer side **7**.

**Note:** Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

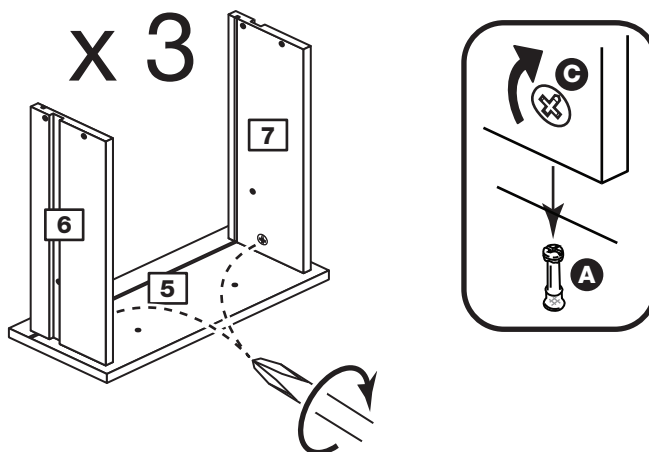


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **9** down the grooves in the drawer sides **6** and **7** and down into the groove in the drawer front **5**.

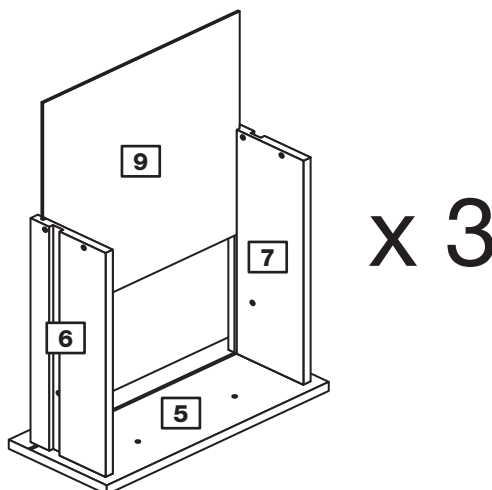


## Step 5

### Fit the drawer back

Fit the drawer back **8** between the drawer sides **6** and **7**. Make sure that the drawer base **9** fits into the groove in the drawer back **8**.

Hold the drawer back **8** in position and tap the knock-in pegs **F** through the holes in the drawer sides **6** and **7**.

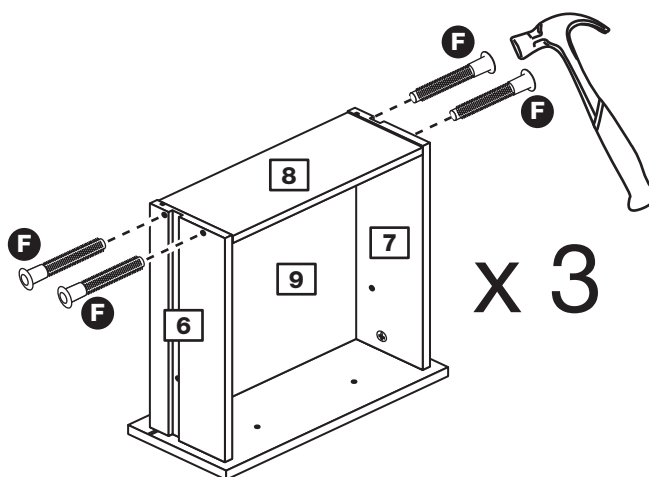


## Step 6

### Attach the handles

Attach a handle **L** to each of the drawer fronts **5** using screws **G**.



**Note: Do not overtighten the screw.**

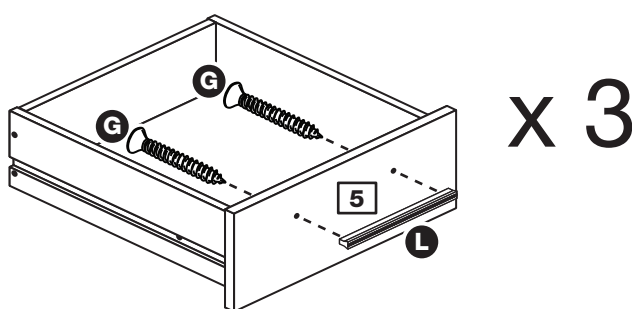

## Step 7

### Fit the wedgfixes

Turn the 3 drawer assemblies over and slide 2 wedgfixes **K** into the front and back grooves, as shown, and tighten up the screws.

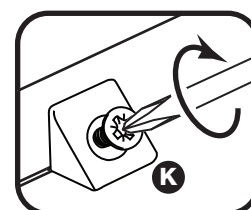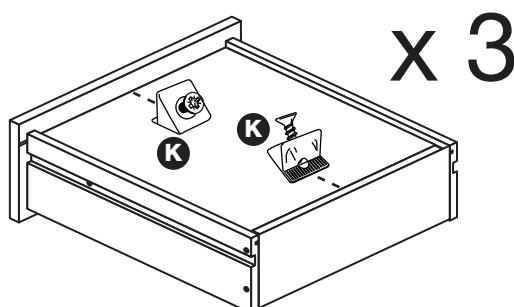

# Assembly Instructions

## Step 8

### Prepare the left side

**a:** Place 3 runners **(M)** on the left side **(1)** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **(I)**.

**b:** Slide the runner **(M)** back the other way and fit the 2nd screw **(I)** into the corresponding hole in the left side **(1)**.


**c:** Screw 2 metal dowels **(A)** into the left side **(1)**.

Insert 2 large locking nuts **(B)** into the left side **(1)**.

**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels **(D)** into the left side **(1)**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

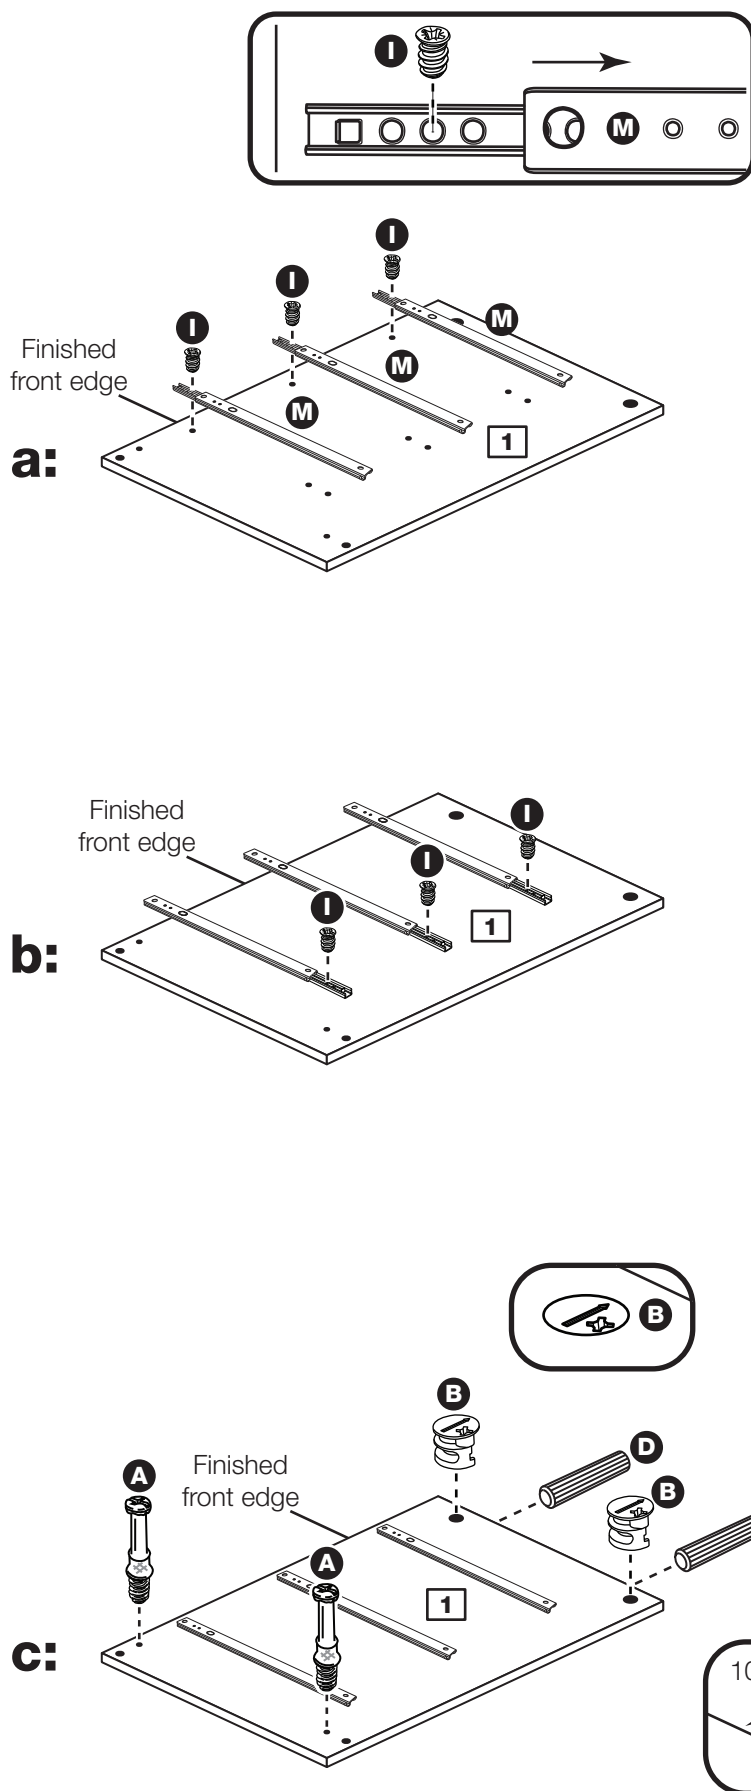

# Assembly Instructions

## Step 9

### Prepare the right side





**a:** Place 3 runners **M** on the right side **2** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **I**.

**b:** Slide the runner **M** back the other way and fit the 2nd screw **I** into the corresponding hole in the right side **2**.

**c:** Screw 2 metal dowels **A** into the right side **2**.

Insert 2 large locking nuts **B** into the right side **2**.

Tap 2 wooden dowels **D** into the right side **2**.

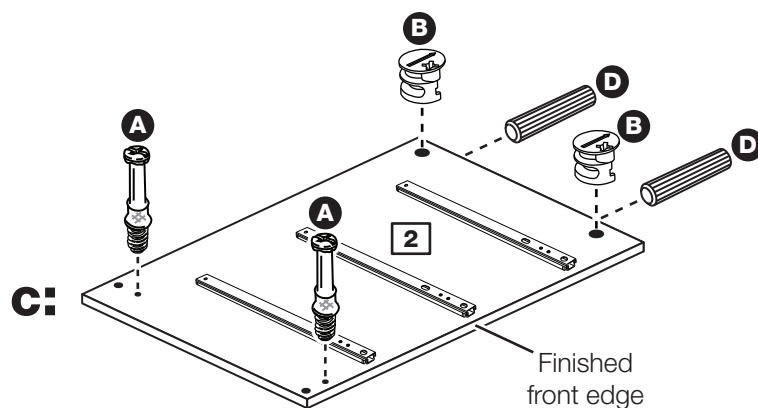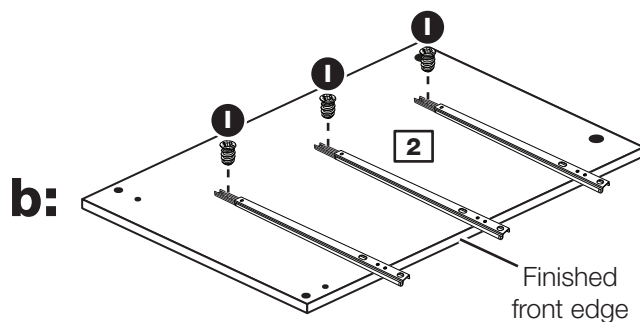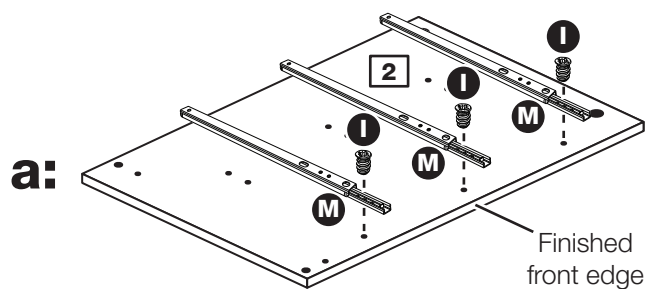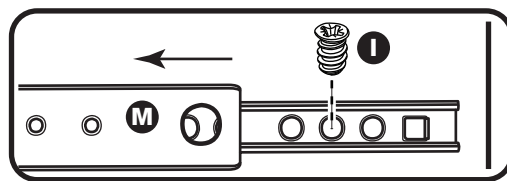




# Assembly Instructions

## Step 10

### Prepare the 2 rails

Insert 2 large locking nuts **B** into each of 2 the rails **4**.

Tap 2 wooden dowels **D** into each of 2 the rails **4**.

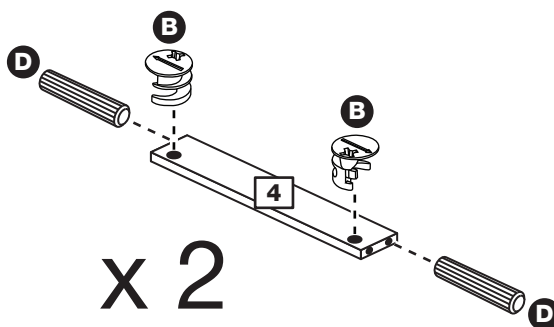



## Step 11

### Fit the the 2 rails to the right side

Push the 2 rails **4** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails **4**.

**Note:** Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.

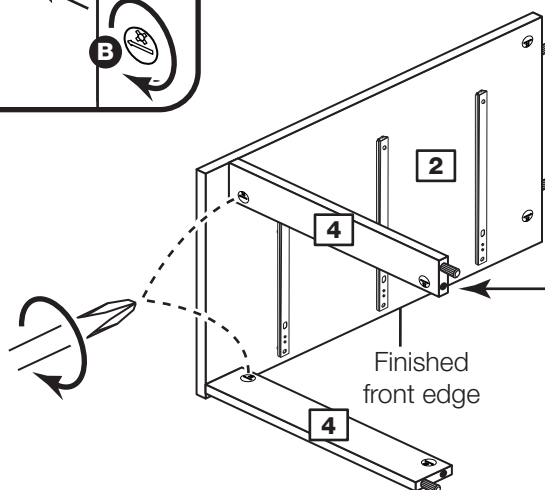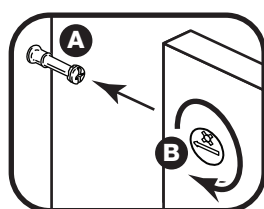


**Note:** Support this rail until the left side has been fitted in the next step.

## Step 12

### Fit the left side

Push the left side **1** onto the rails **4**.

Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails **4**.

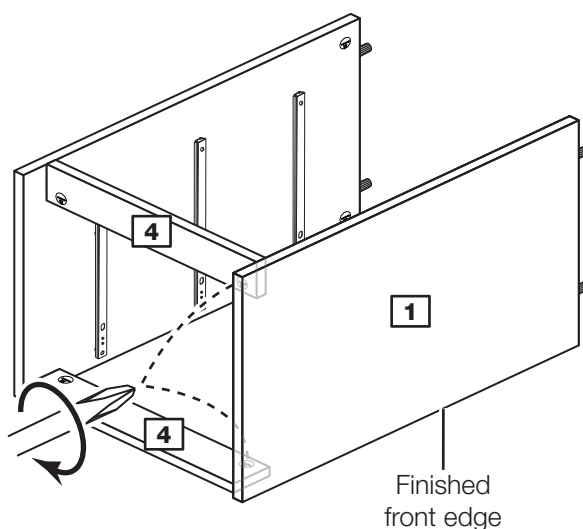


# Assembly Instructions

## Step 13

### Prepare the top

Screw 4 metal dowels **A** into the top **3**.

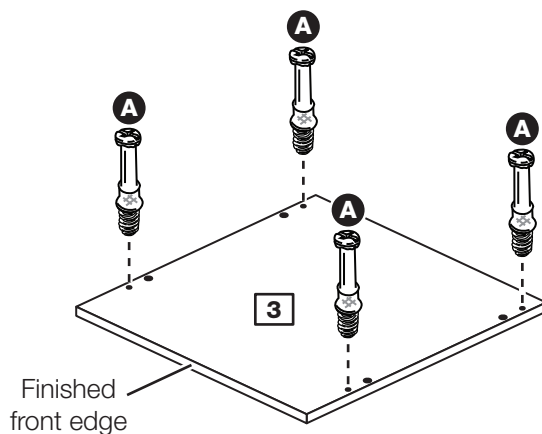


## Step 14

### Fit the top

Push the top **3** onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts **B** fitted to each of the sides **1** and **2**.

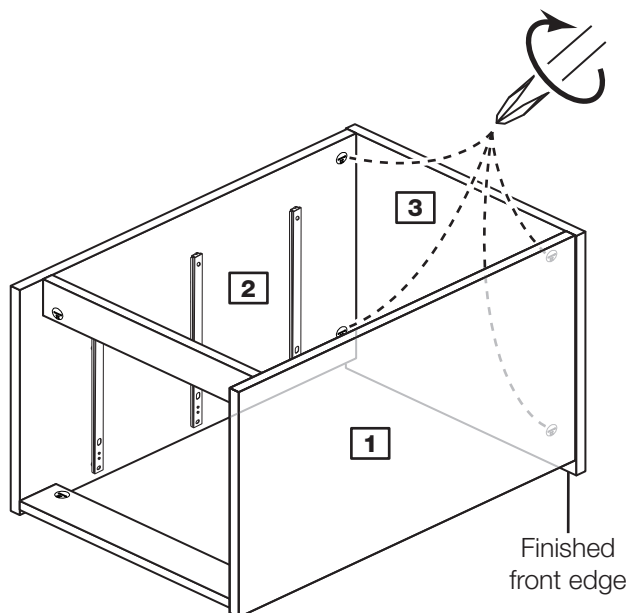

## Step 15

### Fit the 4 plastic nails

Tap 2 plastic nails **J** into the bottom edge of each of the sides **1** and **2**.

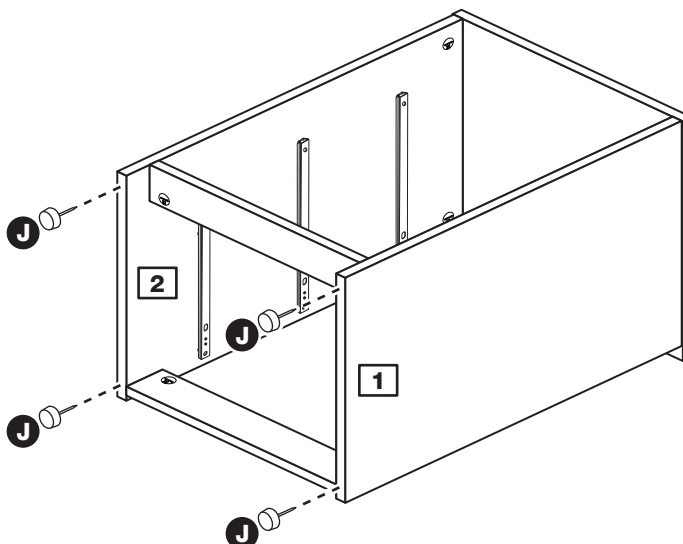

# Assembly Instructions

## Step 16

### Fit the back

**a:** Square up the unit by making sure that measurement **x to x** equals **y to y**.


**b:** Place the back **10** onto the unit.

Nail **E** around the outside edges of the back **10**.

**Note:** Nails should be spaced about 150mm apart.

**Stand the unit up for the next step.**

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

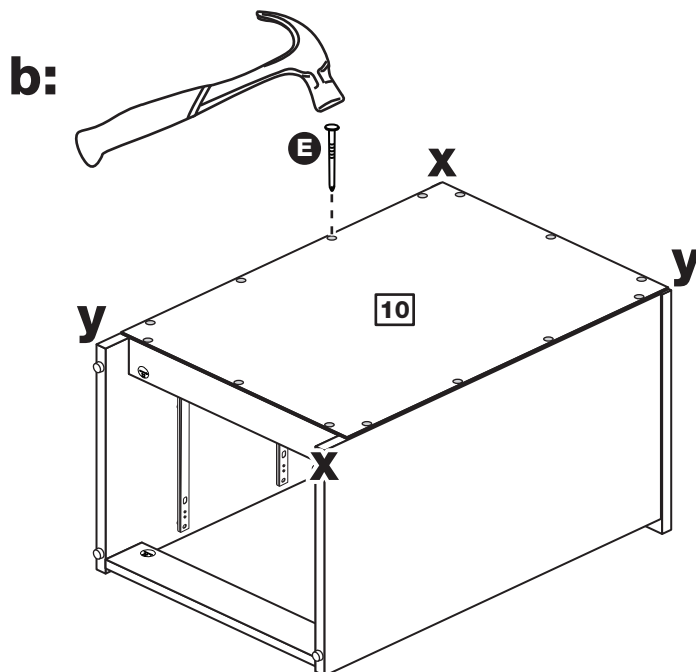

# Assembly Instructions

## Step 17



### Fit the drawers

Starting with the bottom drawer, slide both the runners **M** forward and locate the drawer sides **6** and **7** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **M**.

Working from the inside of the drawer, insert 2 screws **H** through the drawer sides and out into the 2nd threaded hole in the runner.

**Note:** Do not overtighten the screws **H**. If they catch on the runner you may need to loosen them slightly.

**Assembly is complete**

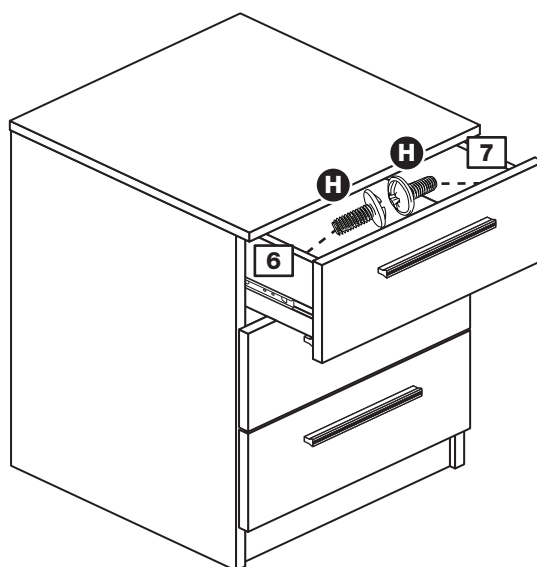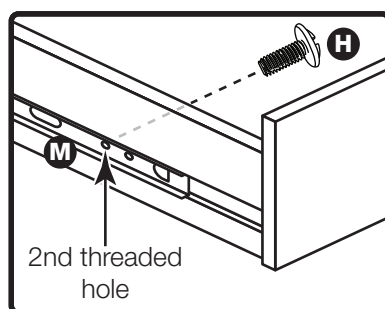

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW