


# WOW - Budget PC Trolley Metal

Assembly Instructions - Please keep for future reference

617/8273

617/1328

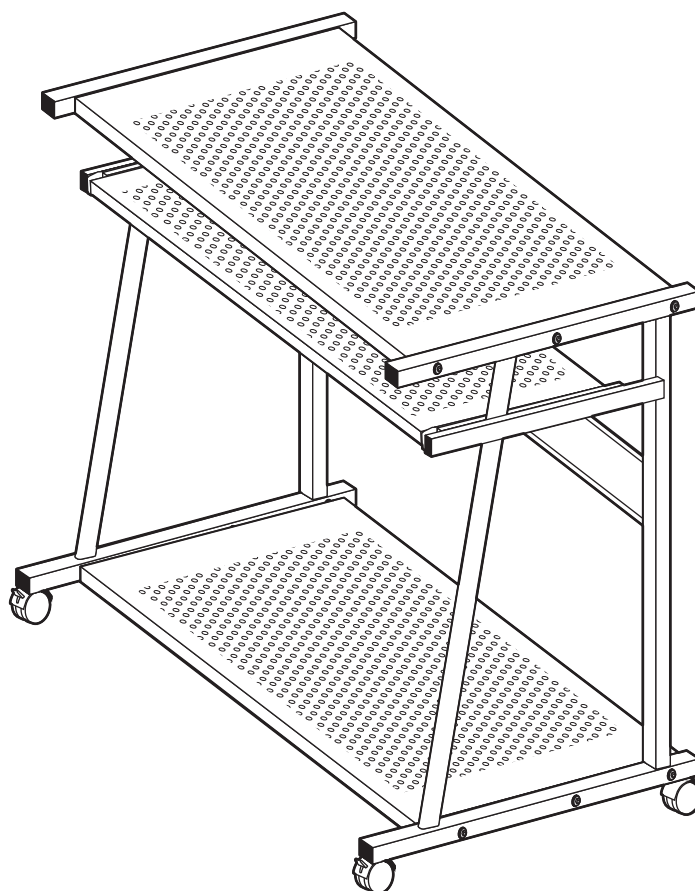

## Desk Dimensions

Width - 70cm

Depth - 55cm

Height - 76cm

**Important** - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**




# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

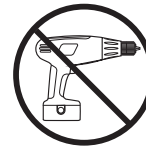

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


## Keep These Instructions For Future Reference

- This product complies with BS 4875-5:2009
- Argos plc  
489-499 Avebury Boulevard  
Central Milton Keynes  
MK9 2NW
- Batch No./Date of manufacture:


**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels


Please check you have all the panels listed below

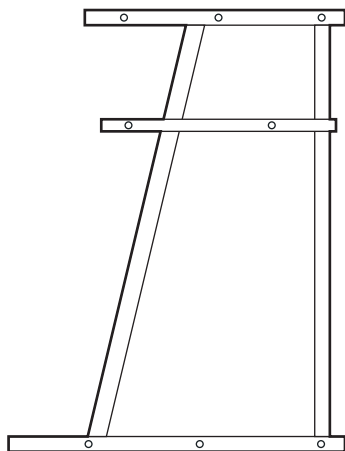

**1** Left hand side frame  
(73 x 55cm)

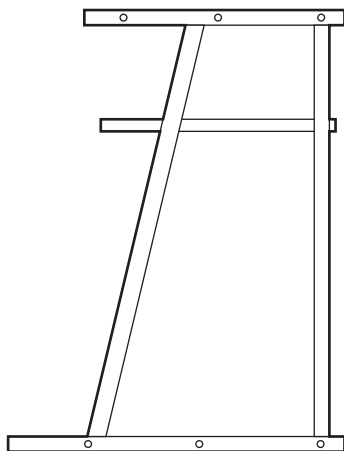


**2** Right hand side frame  
(73 x 55cm)

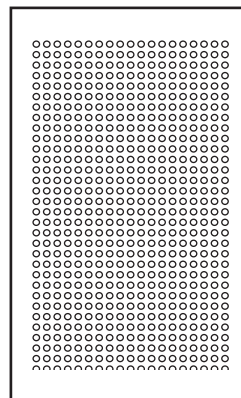


**3** Top and bottom shelf x2  
(65 x 40cm)



**4** Metal bar x6 (64.8 x 16cm)

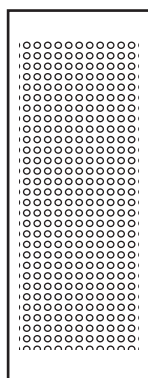

**5** Keyboard shelf  
(61 x 23.5cm)



**6** Back panel (69.8 x 14.5cm)












# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  15A01 Left side runner x 1	<b>B</b>  9mm Crosshead screw x 4	<b>C</b>  15B01 Right side runner x 1
<b>D</b>  Spring washer x 16	<b>E</b>  50mm Allen screw x 12	<b>F</b>  13mm Crosshead screw x 4
<b>G</b>  Castors with brake x 2	<b>H</b>  Castors without brake x 2	<b>I</b>  13mm Allen Screw x 4


## Tools required

 Screwdriver  
(not included)

 Allen key  
(included)

 Spanner  
(included)

Ruler - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1

### Attaching runner


**a:** Place runner **15A01**

**A** on left hand side frame **1**.

Slide top of the runner forward.


Fix through hole as shown by using 1 pc screw **B**.

**a:**

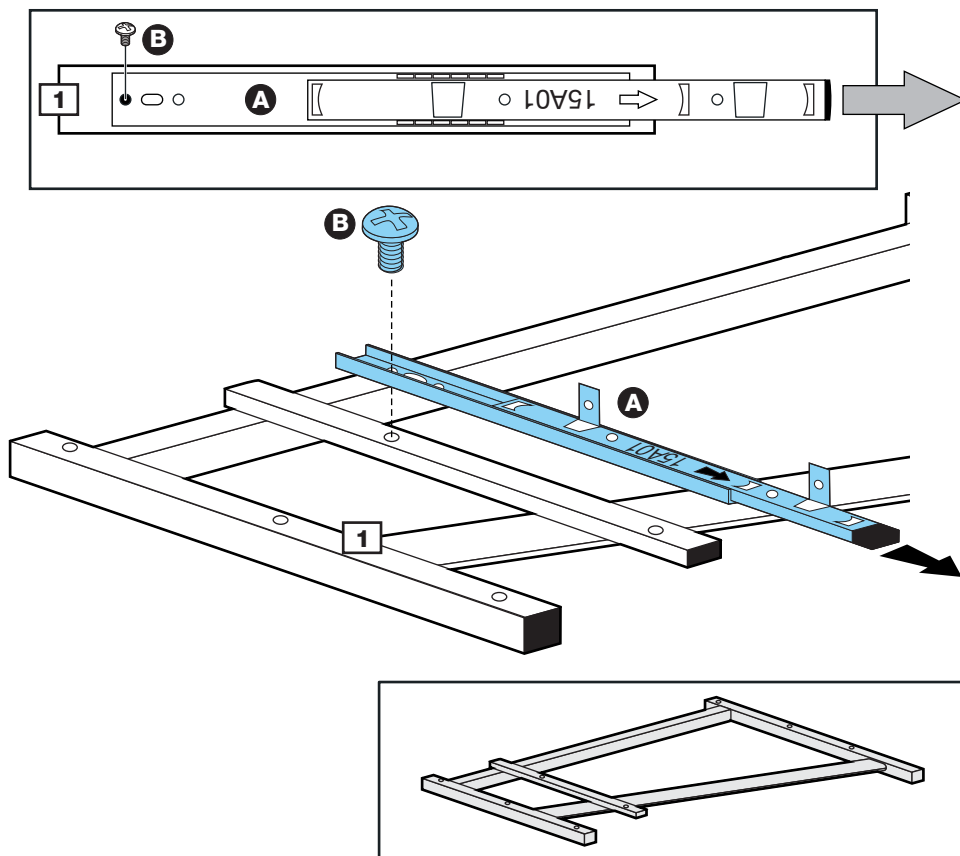

**b:** Slide top of runner **15A01** **A** backward and fix as shown by using 1 pc screw **B**.

**b:**

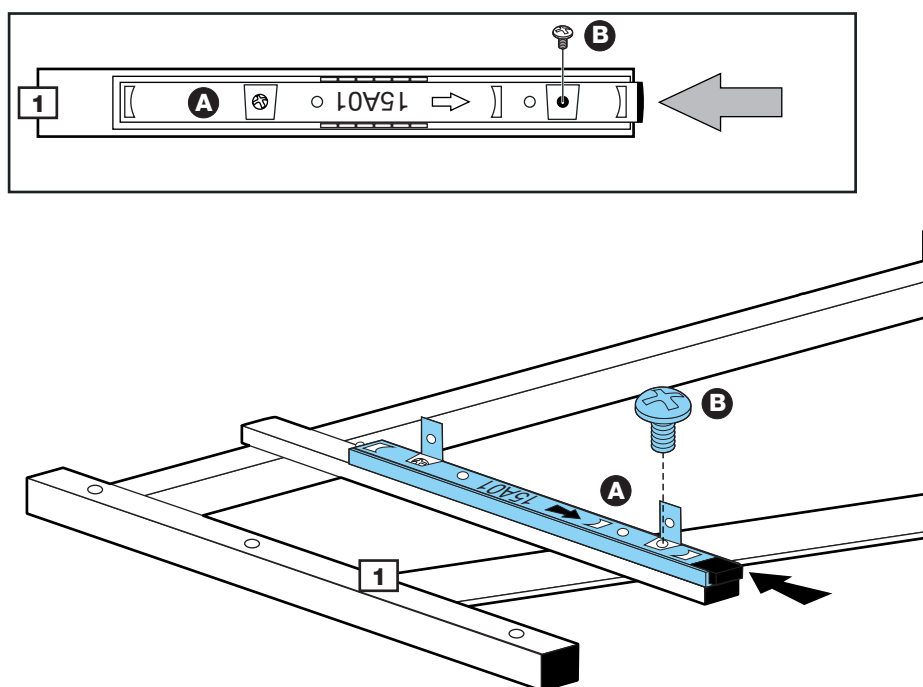

# Assembly Instructions


## Step 2

### Attaching runner


**a:** Place runner **15B01** **C** on right hand side frame **2**.

Slide top of the runner forward.

Fix through hole as shown by using 1 pc screw **B**.

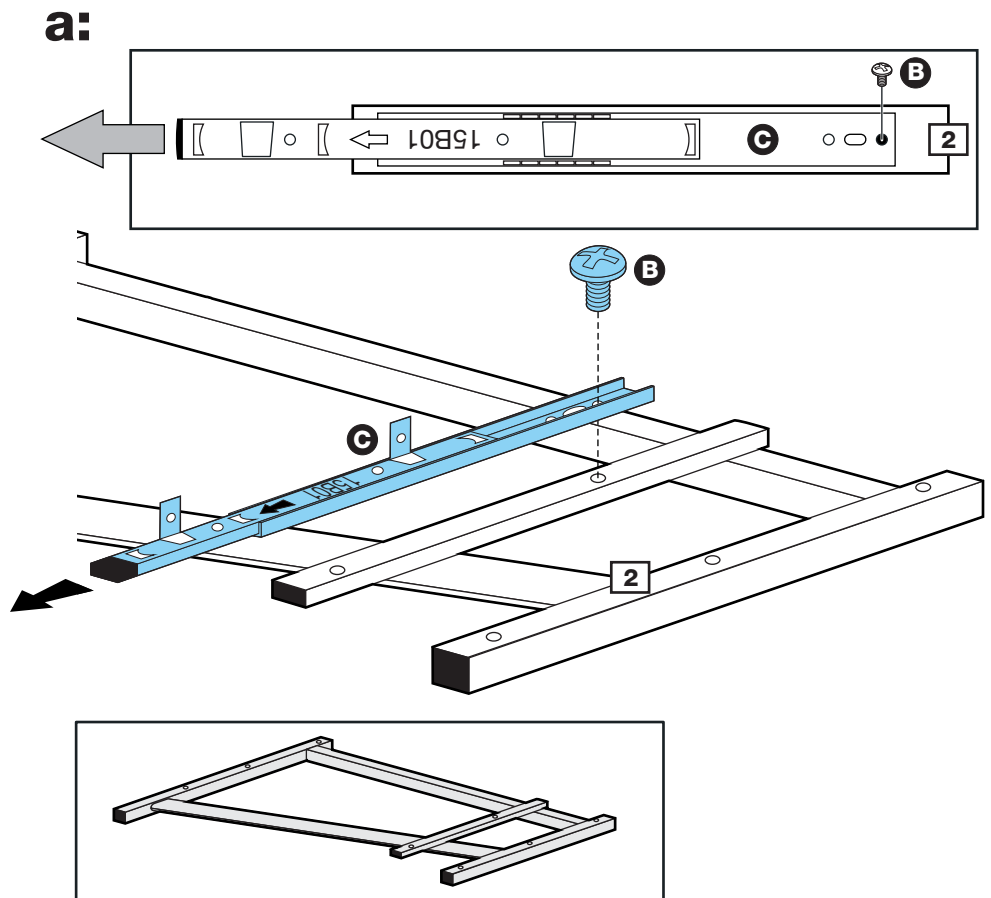

**b:** Slide top of runner **15B01** **C** backward and fix as shown by using 1 pc screw **B**.

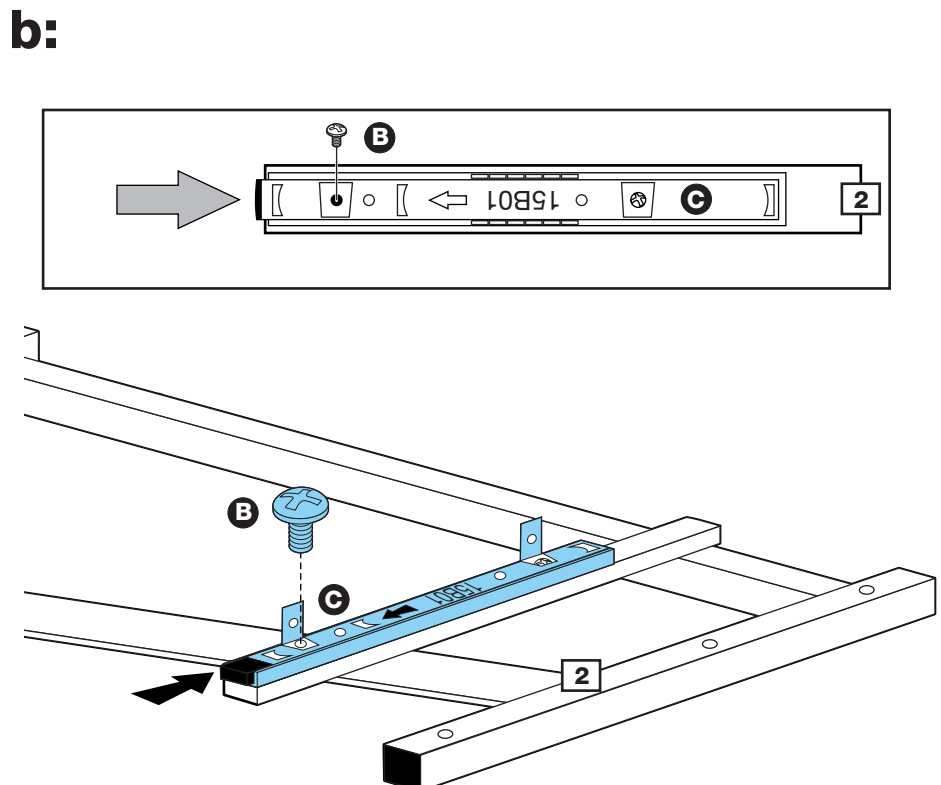


# Assembly Instructions

## Step 3

### Attaching metal bar

Fix 3 metal bars **4** to top shelf **3**.

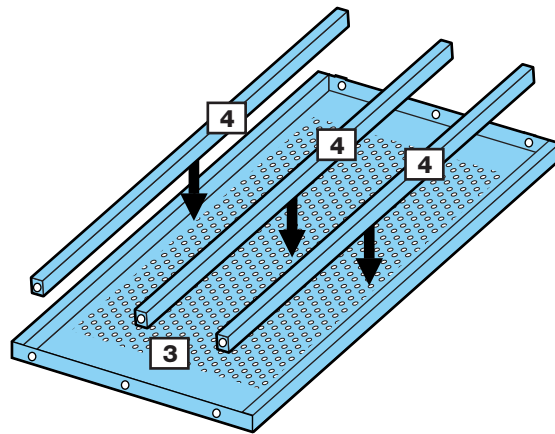


## Step 4

### Attaching top shelf


**a:** Attach metal frame **1** to top shelf **3** by using 3 pcs of screw **E** and spring washers **D**.

**a:**

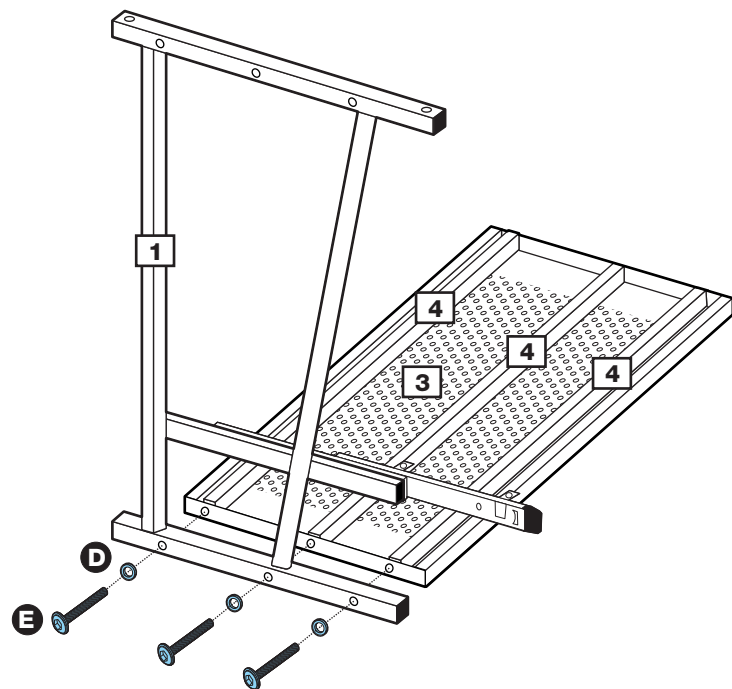

**b:** Attach metal frame **2** to top shelf **3** by using 3 pcs of screw **E** and spring washers **D**.

**b:**

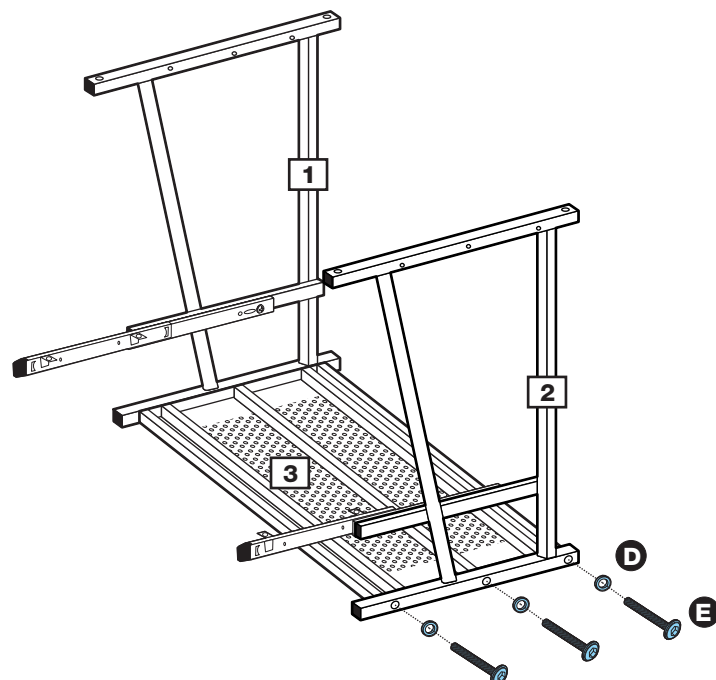


# Assembly Instructions

## Step 5

### Attaching keyboard shelf

Two people are required here.

Attach the keyboard shelf **5** to the unit by using 4 pcs of screw **F**.

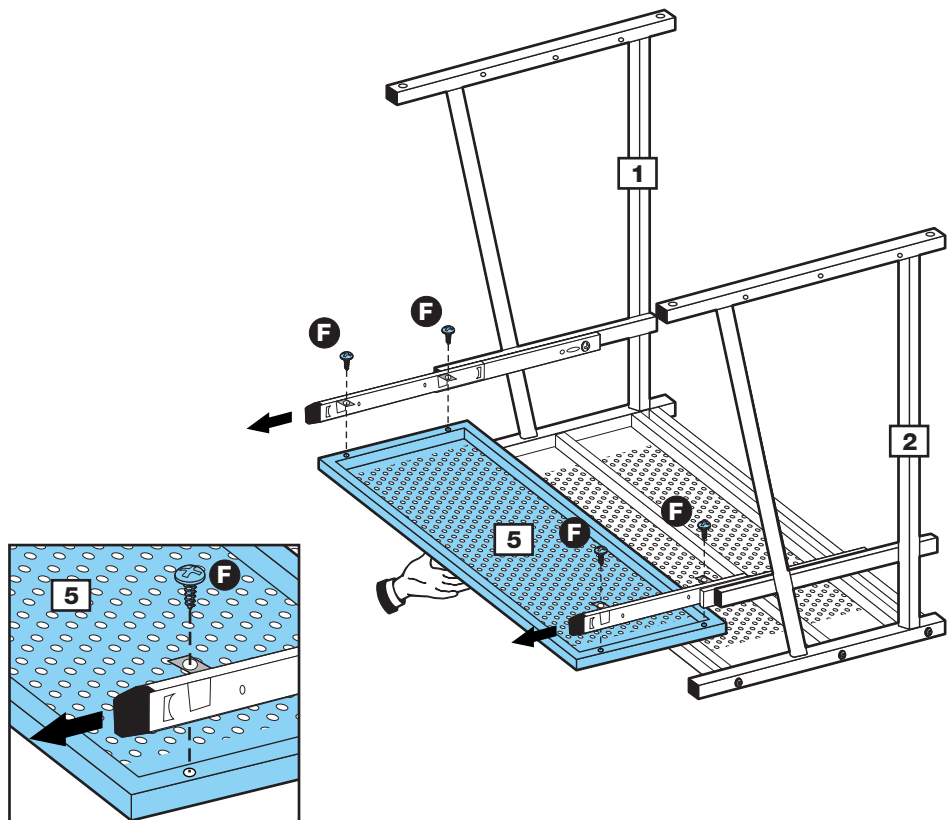


## Step 6

### Attaching bottom shelf

Two people are required here.

**a:** Attach the bottom shelf **3** to metal frame **2** by using 3 pcs of screws **E** and spring washers **D**.

**a:**

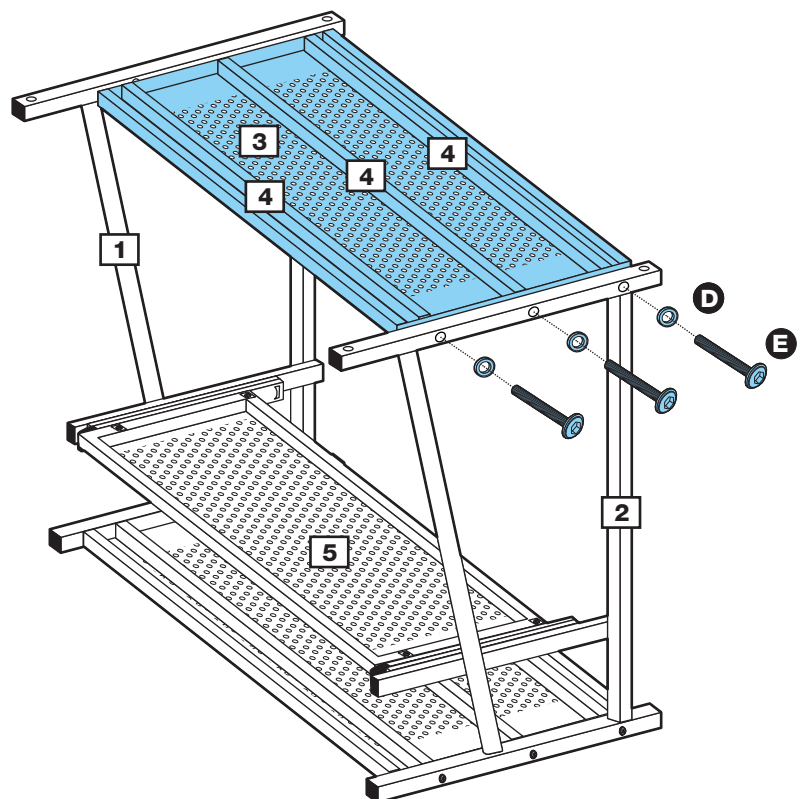


# Assembly Instructions

## Step 6 - continued

**b:** Fix the bottom shelf **3** to the metal frame **1** by using 3 pcs of screws **E** and spring washers **D**.


**b:**

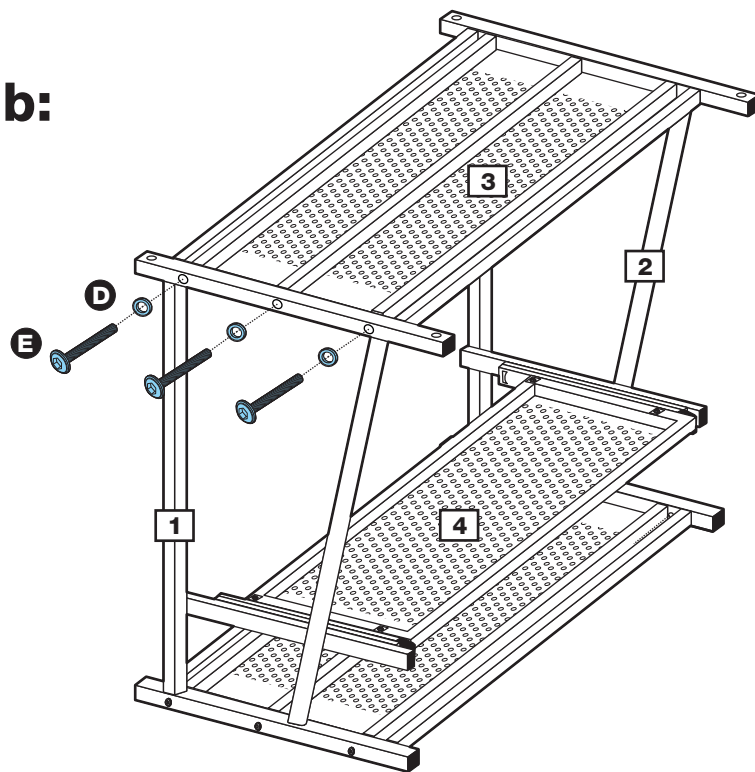

## Step 7

### Attaching castors

Fix 2 pcs of brake castors **G** and 2 pcs of castors **H** to the unit.

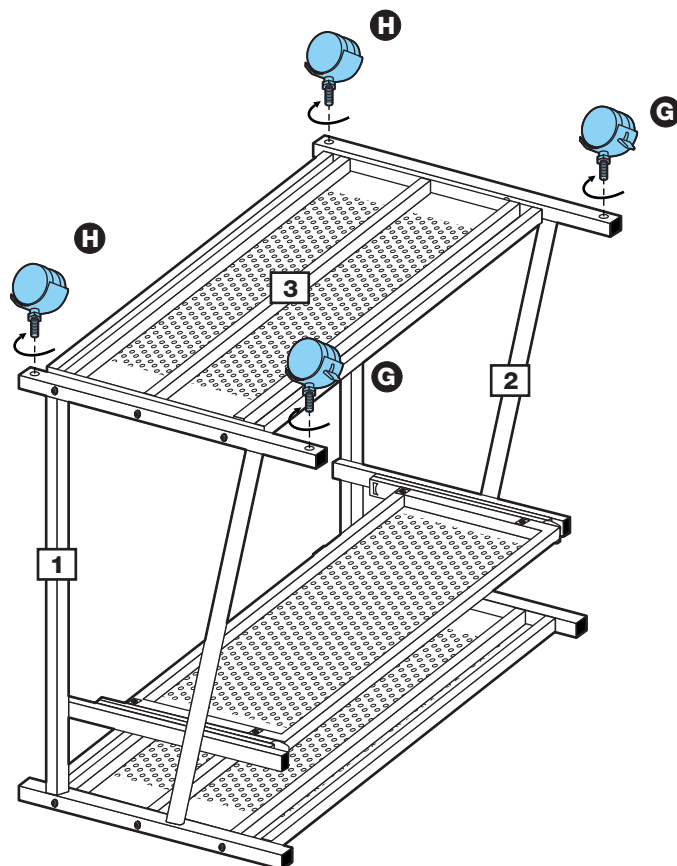


# Assembly Instructions

## Step 8


### Attaching back panel

Attach the back panel **6** to the unit by using 4 pcs of screws **I** and spring washers **D**.

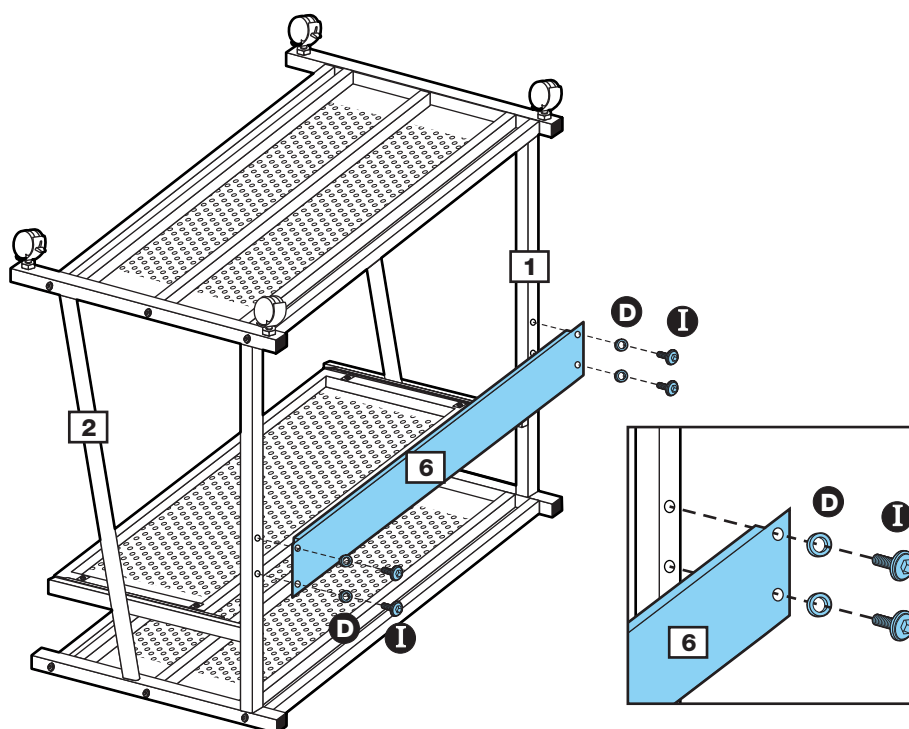

## Step 9

**Assembly is complete.**

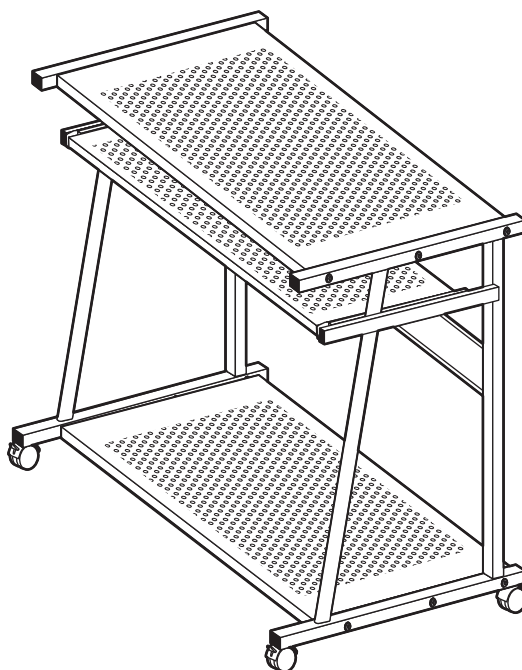

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800