


Budget PC Trolley Metal

Assembly Instructions - Please keep for future reference

617/8273

617/1328

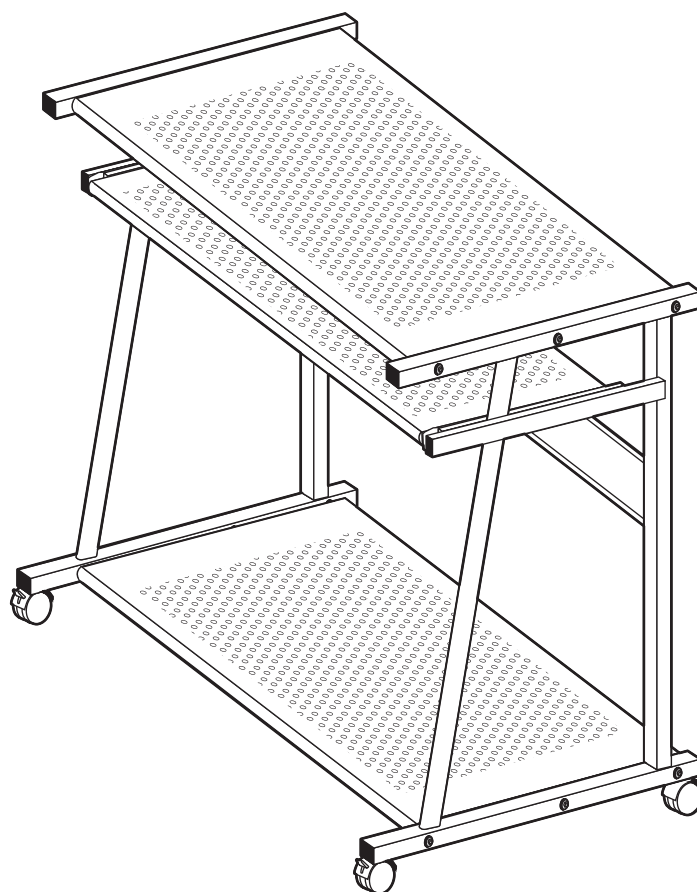

Desk Dimensions

Width - 70cm

Depth - 55cm

Height - 76cm

Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Keep These Instructions For Future Reference


- Argos plc
489-499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

- Batch No./Date of manufacture:


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

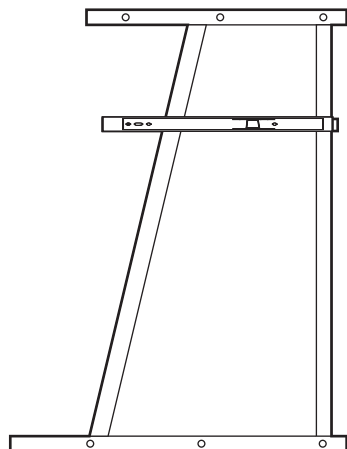

1 Left hand side frame
(73 x 55cm)

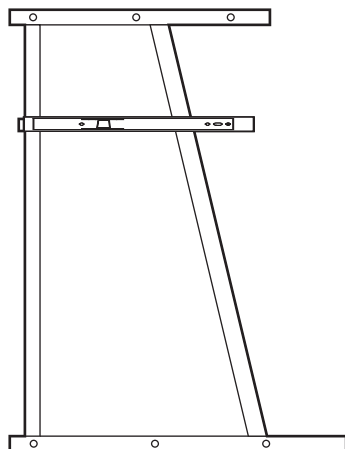


2 Right hand side frame
(73 x 55cm)

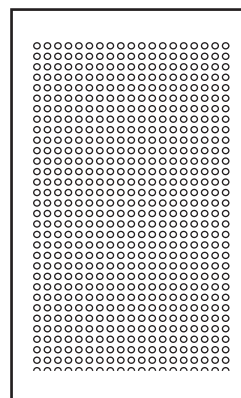

3 Top and bottom shelf x2
(65 x 40cm)



4 Metal bar x2 (64.8 x 16cm)

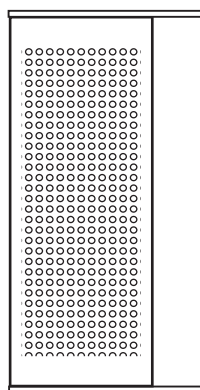

5 Keyboard shelf
(61 x 23.5cm)



6 Back panel (69.8 x 7cm)








Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Spring washer x 16	B  45mm Allen screw x 12	C  Castors with brake x 2
D  Castors without brake x 2	E  12mm Allen Screw x 4	


Tools required



Screwdriver
(not included)




Allen key
(included)



Spanner
(included)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching metal bar

Fix metal bars **4** to top shelf **3**.

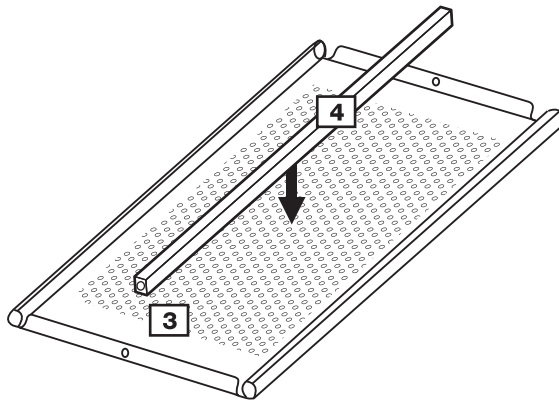


Step 2

Attaching top shelf


a: Attach metal frame **2** to top shelf **3** by using 3 pcs of screw **B** and spring washers **A**.

a:

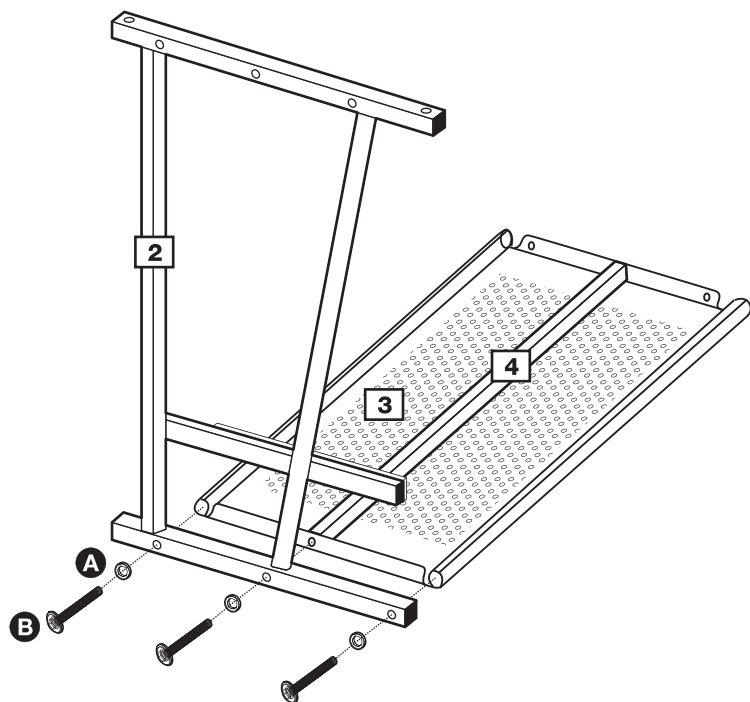

b: Attach metal frame **1** to top shelf **3** by using 3 pcs of screw **B** and spring washers **A**.

b:

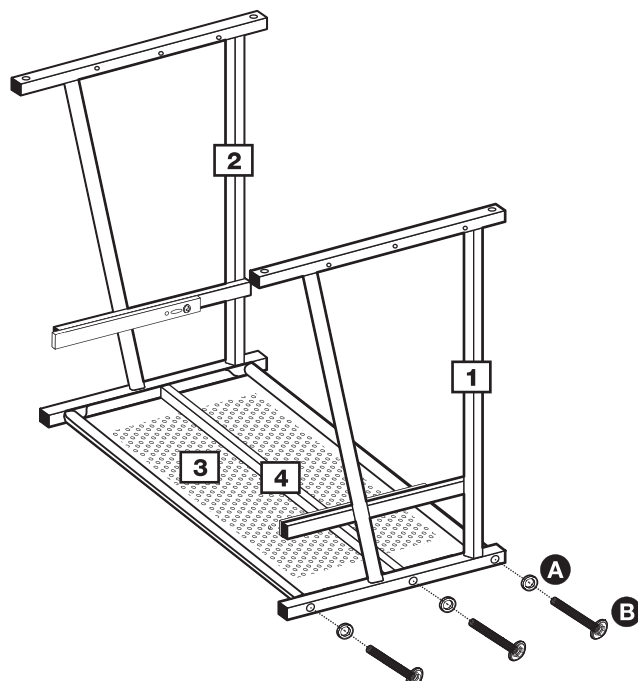


Assembly Instructions

Step 3

Attaching keyboard shelf

Two people are required here.

Attach the keyboard shelf **5** push into the runner on the metal frame.

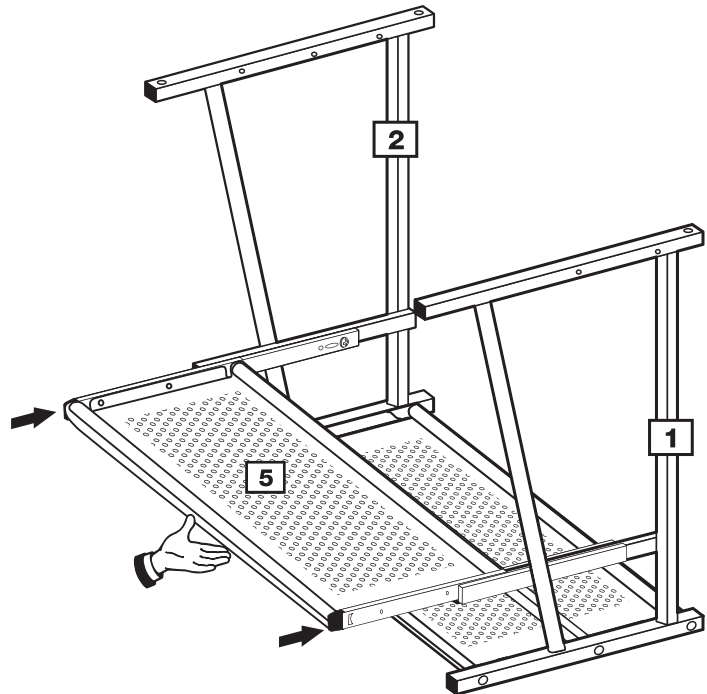


Step 4

Attaching bottom shelf

Two people are required here.

a: Attach the bottom shelf **3** to metal frame **1** by using 3 pcs of screws **B** and spring washers **A**.


a:

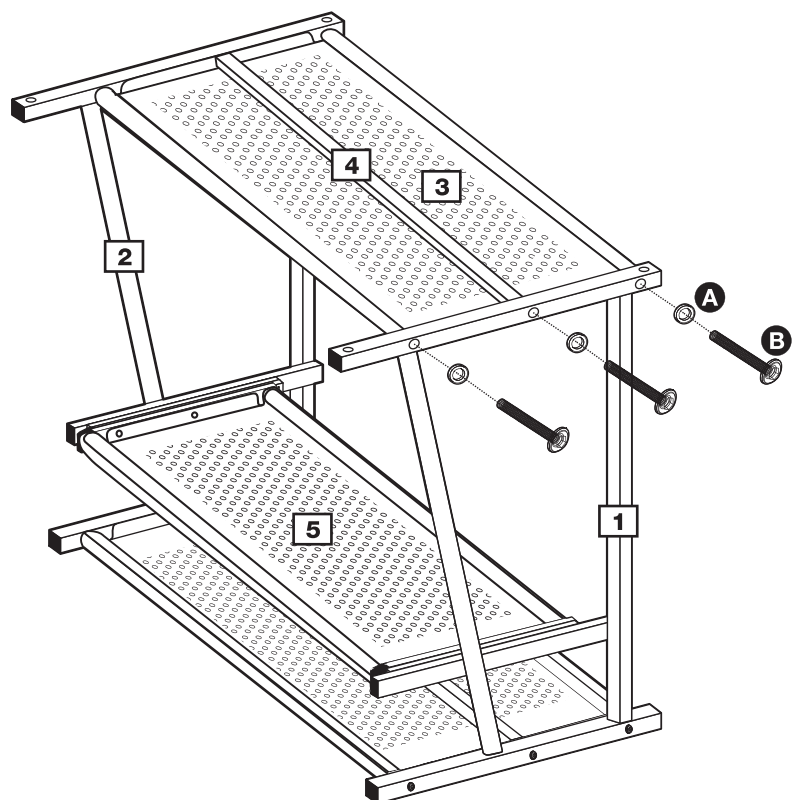

Assembly Instructions

Step 5 continued


b: Fix the bottom shelf **3** to the metal frame **2** by using 3 pcs of screws **B** and spring washers **A**.

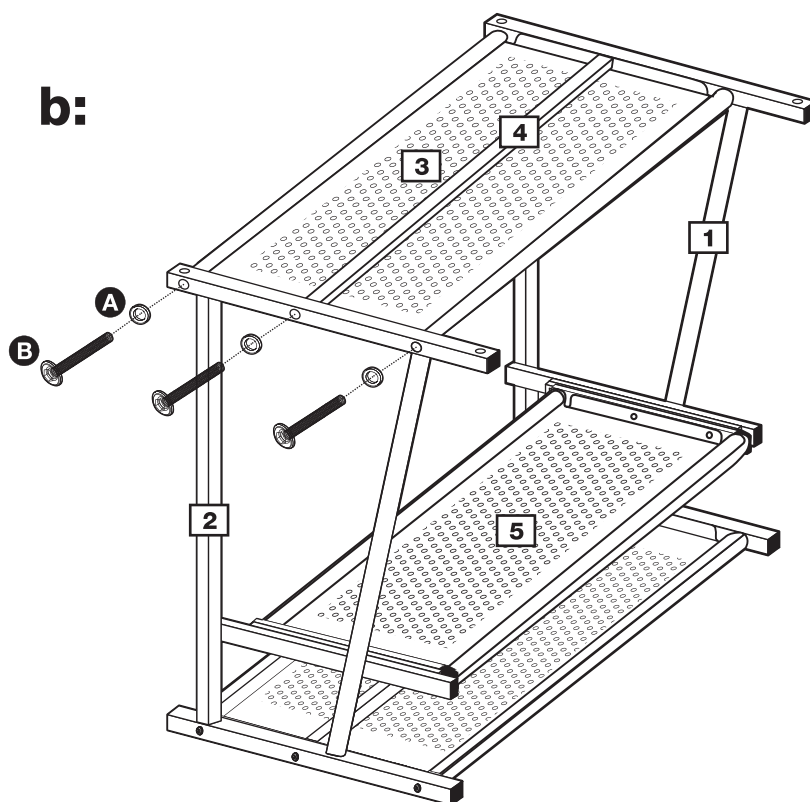

Step 6

Attaching castors

Fix 2 pcs of brake castors **C** and 2 pcs of castors **D** to the unit.

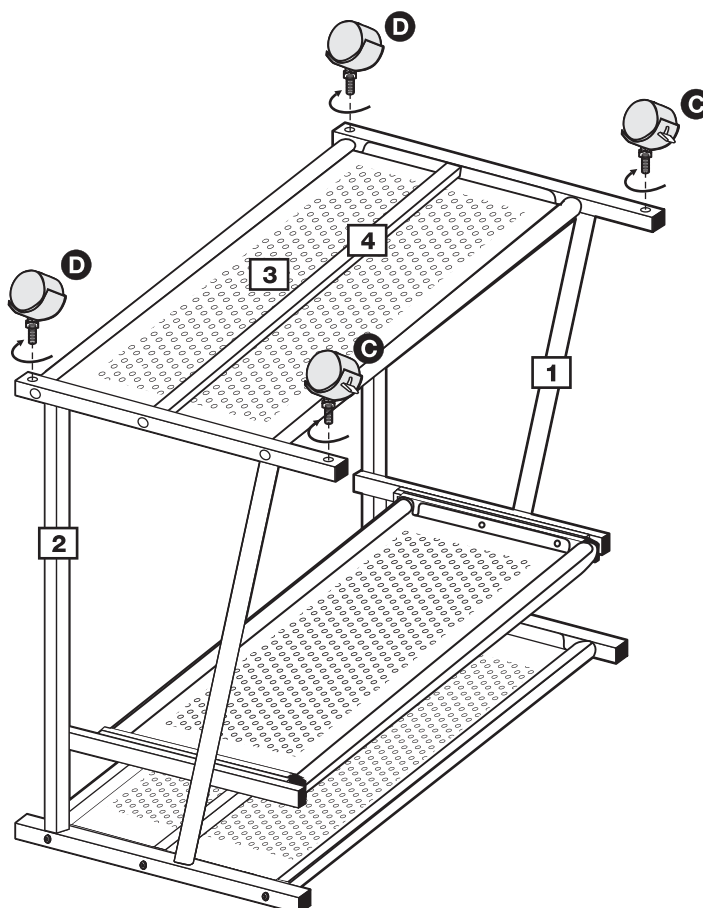


Assembly Instructions

Step 7


Attaching back panel

Attach the back panel **6** to the unit by using 4 pcs of screws **E** and spring washers **A**.

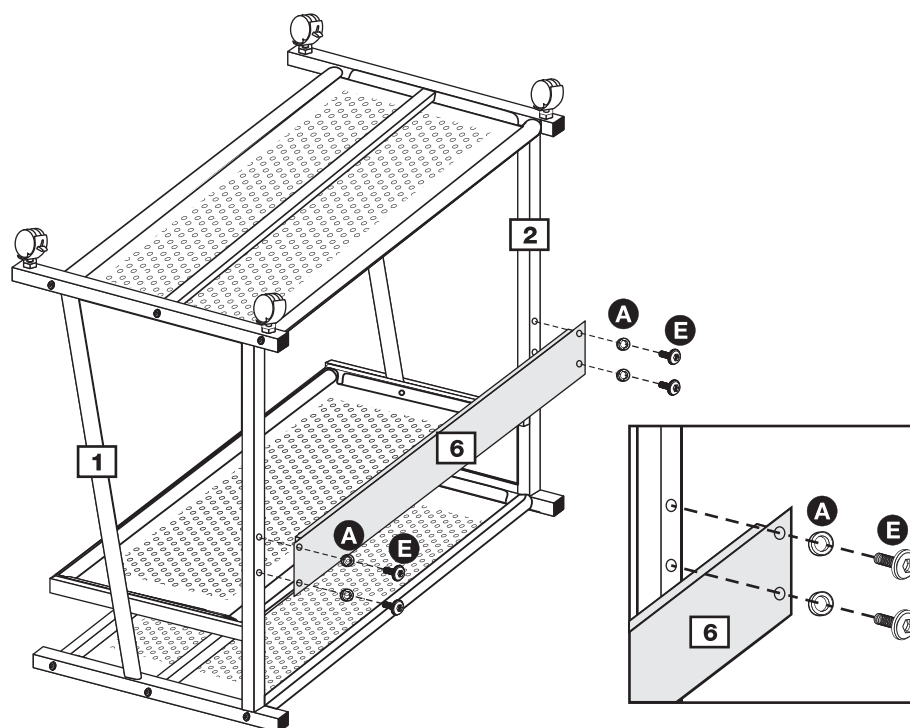

Step 8

Assembly is complete.

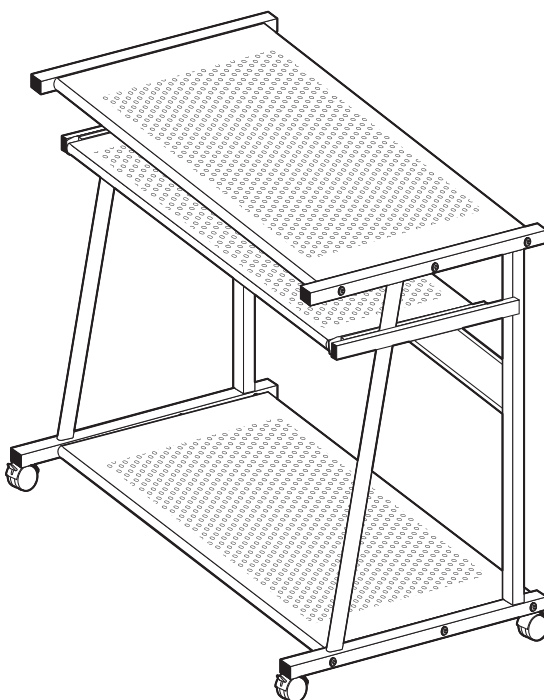

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800