


Atlas 3ft Bed

Assembly Instructions - Please keep for future reference

664/9458

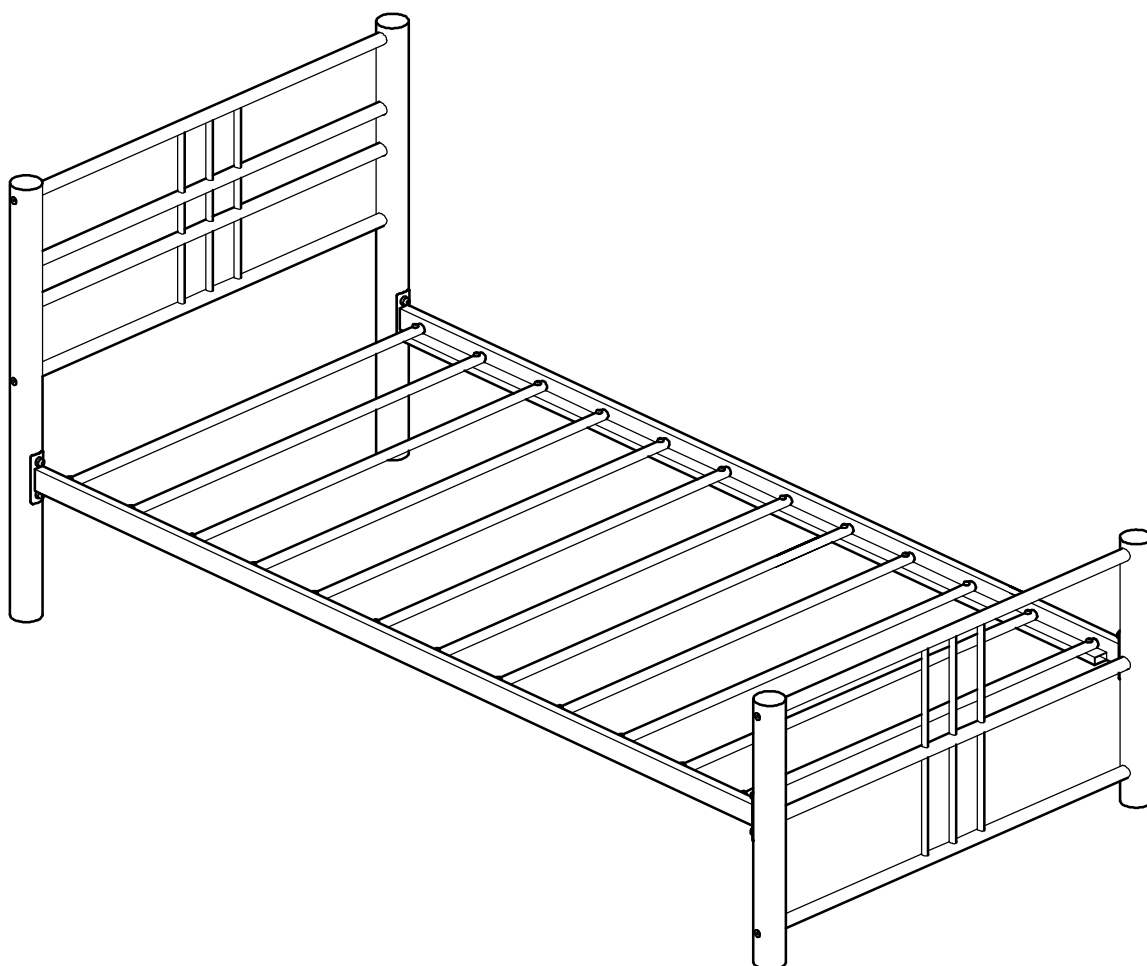

Dimensions

Width - 100cm

Depth - 204cm

Height - 89cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- As you unpack and prepare for assembly, clear an area for assembly. The parts should be placed on a carpeted or padded area to protect them from damage.
- Parts of the assembly will be easier with 2 or 3 people.
- Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components,
call the **Customer Helpline: 0845 6400800**

Please check you have all the panels listed below



- 1** Left headboard post
(dia6.0 x 90cm)



- 2** Right headboard post
(dia6.0 x 90cm)



- 3** Left footboard post
(dia6.0 x 55cm)




- 4** Right footboard post
(dia6.0 x 55cm)




- 5** Headboard upright x 3
(dia1.27 x 39.4cm)




- 6** Footboard upright x 3
(dia1.27 x 46.9cm)




- 7** End horizontal bar x 4
(dia2.5 x 88.8cm)



- 8** Middle horizontal bar x 3
(dia2.5 x 99.5cm)



- 9** Side rail x 2 (192 x 10cm)













- 10** Slat x 12 (dia1.9 x 92cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  42mm Bolt x 24	B  30mm Bolt x 8	C  80mm Bolt x 8
D  Small plain washer x 48	E  Large plain washer x 8	F  Spring washer x 8
G  Nut x 24	H  Small hex key x 1	I  Large hex key x 1
J  Wrench x 1		

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1


Assemble headboard

a: Assemble end horizontal bar **7** and middle horizontal bars **8** to left headboard post **1** and right headboard post **2** using bolts **C** as shown in the figure.


Note: The chrome cap on both posts should be at the top.

Do not fully tighten bolts.


a:

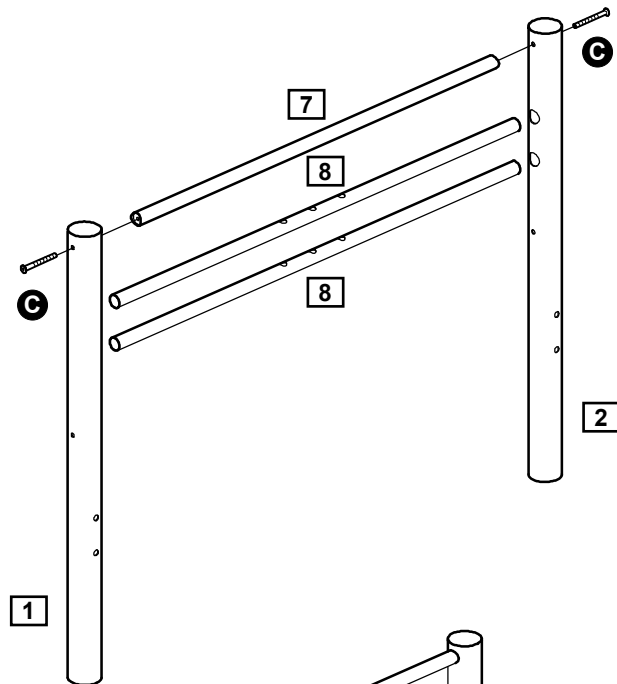

b:

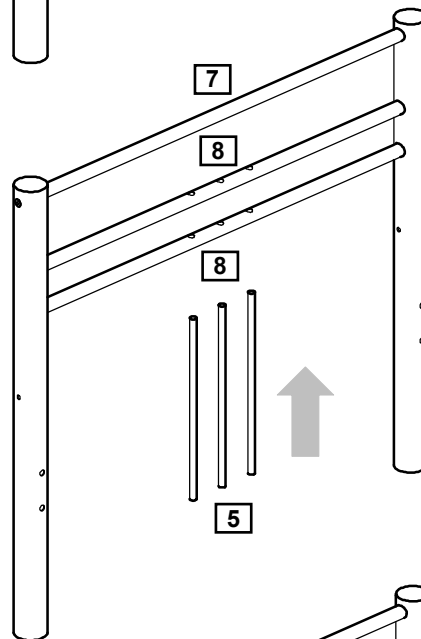

c:

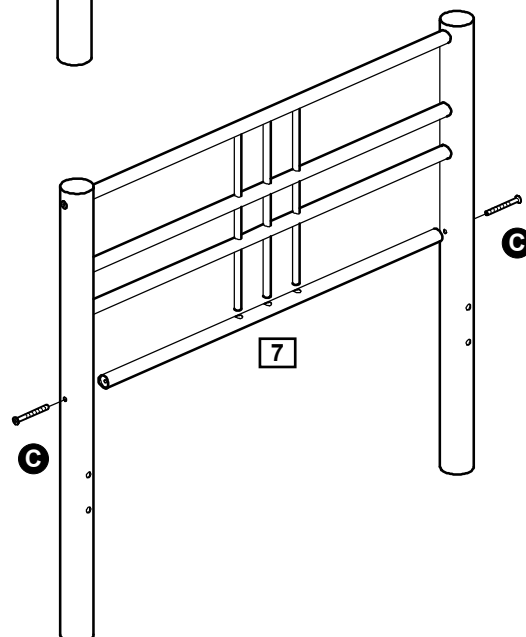

Assembly Instructions

Step 2


Assemble footboard

a: Assemble end horizontal bar **7** and middle horizontal bar **8** to left footboard post **3** and right footboard post **4** using bolts **C** as shown in the figure.

Note: The chrome cap on both posts should be at the top.


Do not fully tighten bolts.

a:

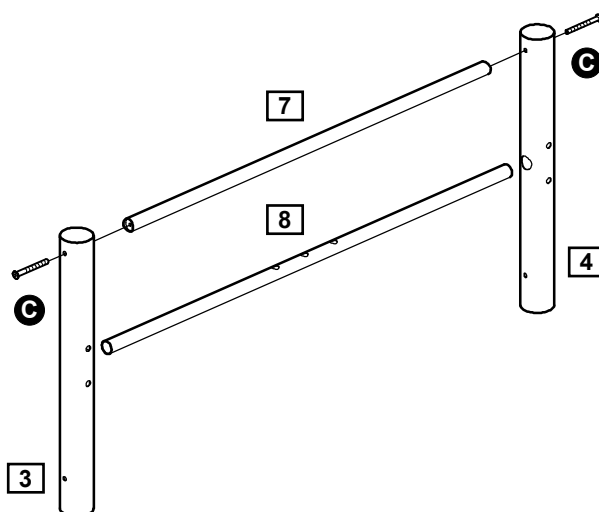


b: Insert footboard uprights **6** through middle horizontal bar **8** to end horizontal bar **7**.

b:

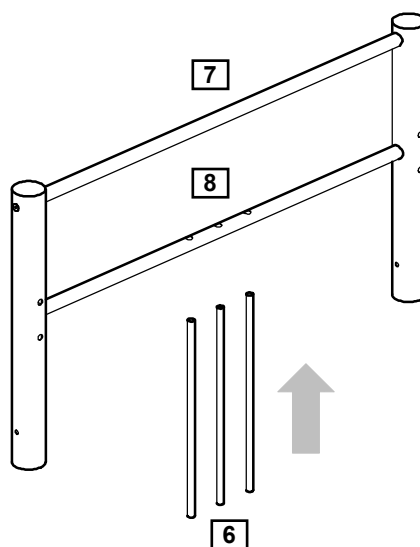

c: Attach end horizontal bar **7** to the footboard uprights and fix to the headboard posts using bolts **C**.

c:

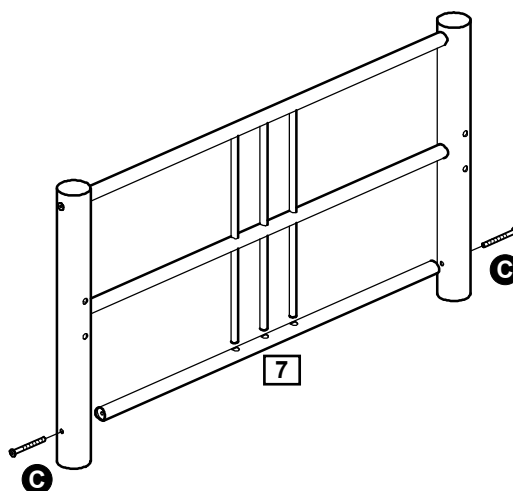

Assembly Instructions


Step 3

Assemble side rails

Three people are needed here.

Assemble side rails **9** to headboard frame and footboard frame using bolts **B**, spring washers **F** and large plain washers **E**.

Note: Do not fully tighten bolts.

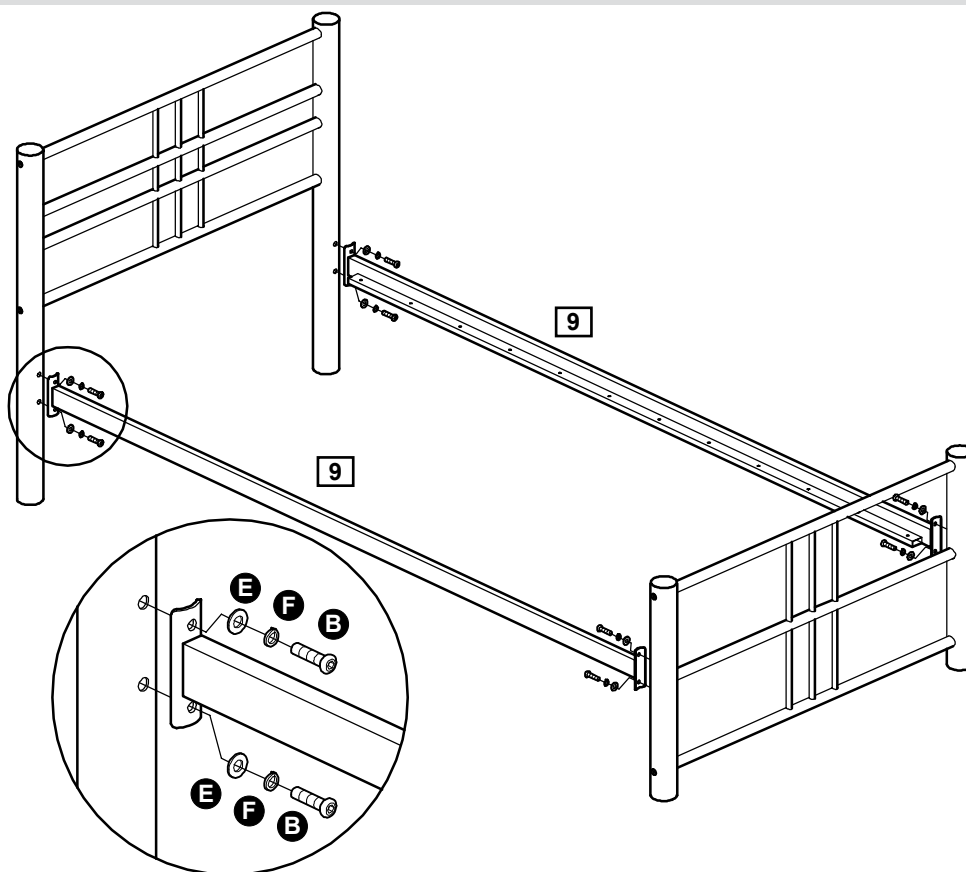


Step 4

Assemble slats

Assemble slats **10** to the unit using bolts **A**, small plain washers **D** and nuts **G**.

Note: Re-tighten all the bolts.

Assembly is complete.

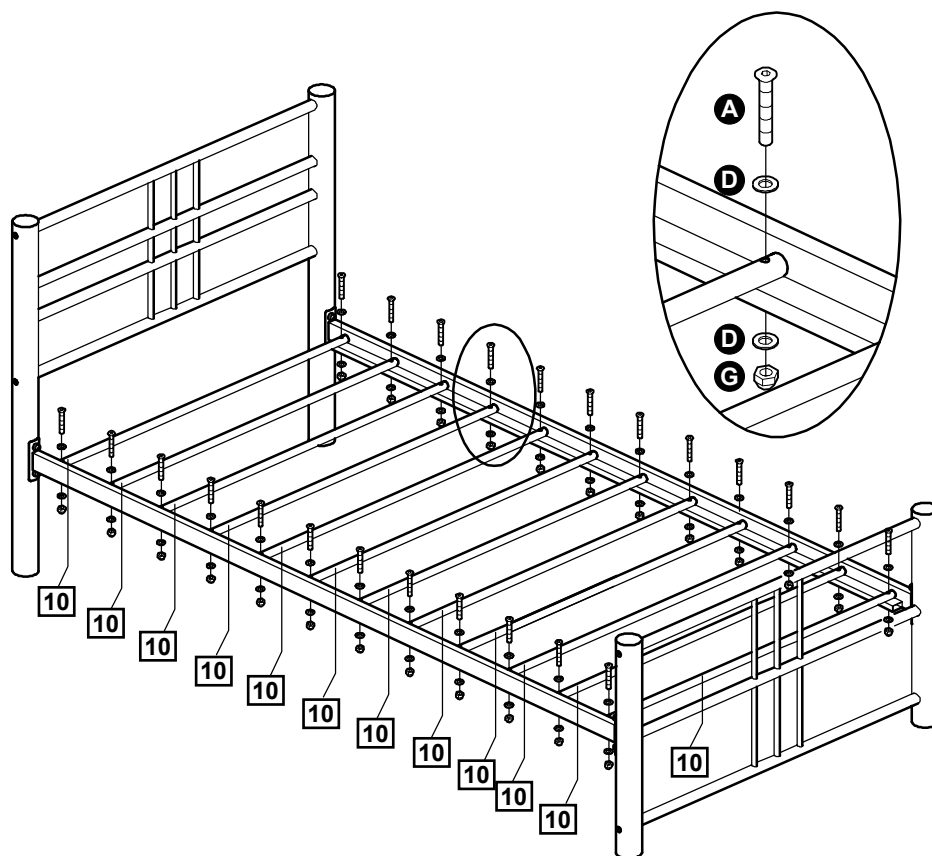

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**