


INSTRUCTIONS FOR STARTING NEGATIVE GROUNDED VEHICLES BEFORE STARTING, READ WARNING ON BOTH SIDES

- 1) Connect clamps in order as shown in diagram
- 2) Move away from car being boosted.
- 3) Start dead battery car. If unsuccessful, first start good battery car and then start dead battery car.
- 4) Remove clamps in exact reverse order. Be careful to avoid moving blades of fan.
- 5) If either battery is positive ground, see vehicle owners manual for instructions or seek service assistance.

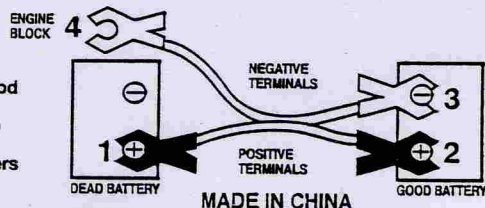

WARNING- BATTERIES PRODUCE EXPLOSIVE GASES

Wear safety glasses when using booster cables.

Consult your car owners manual and booster cable package for complete details.

1. Connect one clamp to "dead" battery terminal wired to starter or solenoid. (Positive (+) Post.)
2. Connect the other end of the cable with same color coded clamp to the positive (+) post of the good battery.
3. Connect the other clamp to Negative (-) post of "good" battery.
4. Connect remaining clamp to engine block of stalled car as far away from the battery as possible.
5. Start car and immediately remove clamps, reversing procedure by removing clamp at engine block first.

Consulte el manual de su automovil y el paquete de cable impulsador para detalles mas completos.

1. Conecte una abrazadera a la terminal del acumulador "muerto", conectado al iniciador o solenoidal (Positivo (+) Post).
2. Conecte la otra punta del cable con abrazadera del mismo color al lado Positivo (+) Post, del acumulador bueno.
3. Conecte otra abrazadera al lado Negative (-) Post del acumulador "bueno"
4. Conecte la abrazadera que sobra al bloque del motor del coche inmovilizado, tan lejos del acumulador como sea posible.
5. Empiece el coche e inmediatamente saque las abrazaderas, proceda al reverso, sacando primero la abrazadera en el bloque del motor.

Made in China