


Assembly Instructions

Step 3

Connect front/back **1** to sides **2** as shown.

Tighten female camlocks with a screwdriver (see **a**).


Note: you should feel a click when camlocks are secure.

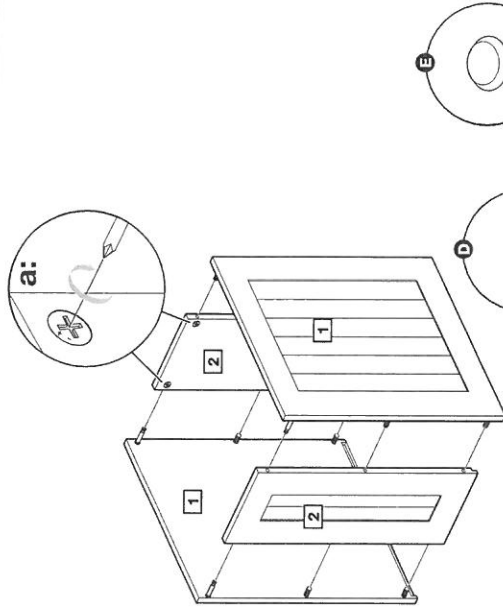

Step 4

The unit upside down and connect base **3** using 10 x 12mm screw **D** as shown.


Attach 1 x self-adhesive foot pad **E** to bottom of each foot as shown.

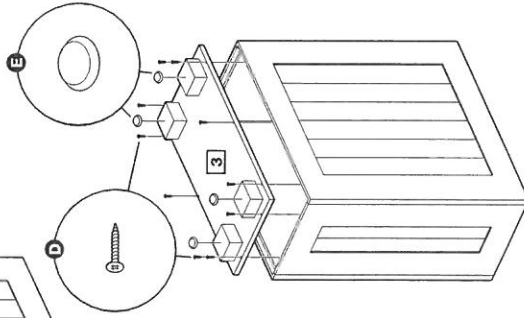

Step 5

Turn unit right way up and set lid **4** in place.


Assembly complete.

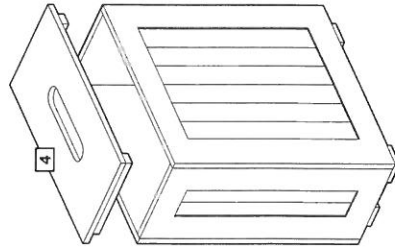

Bathroom Tidy

Assembly Instructions - please keep for future reference

833/0569

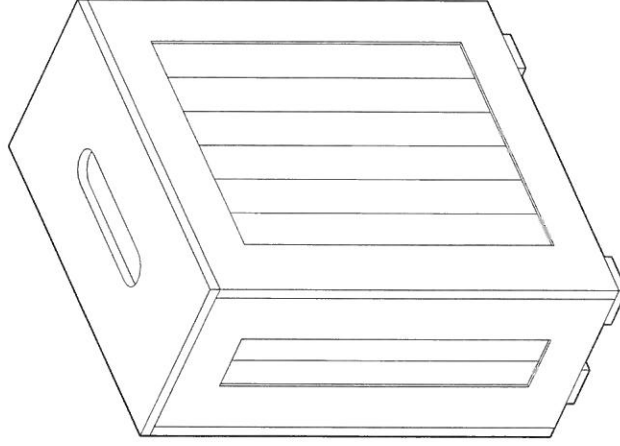

Dimensions

Width - 31cm

Depth - 17cm

Height - 33cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800



Safety and Care Advice

Important – Please read these instructions fully before starting assembly


- Check you have all the components and tools listed below and opposite.
 - Remove all fittings from the plastic bags and separate them into their groups.
 - Keep children and animals away from the work area, small parts could choke if swallowed.
 - Make sure you have enough space to layout the parts before starting.
 - Do not stand or put weight on the product, this could cause damage.
 - Assemble the item as close to its final position (in the same room) as possible.
 - Assemble on a soft level surface to avoid damaging the unit or your floor.
 - Parts of the assembly may be easier with 2 people.
-  • We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components – Panels

Please check you have all the panels listed below

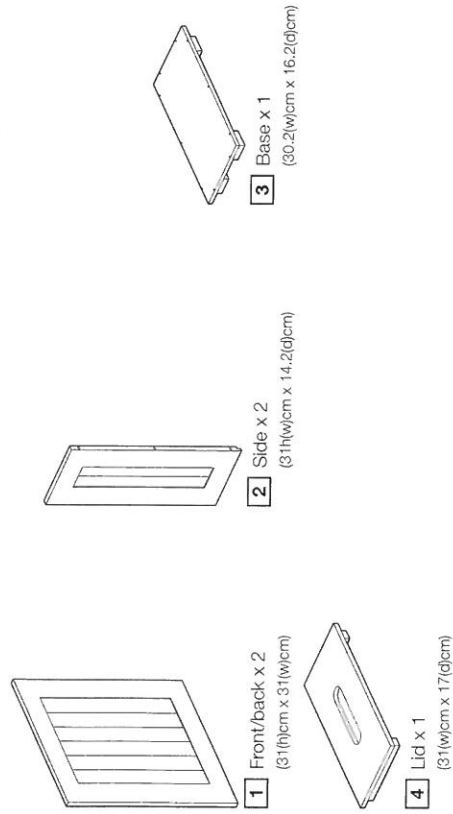

Components – Fittings

If you have damaged or missing components, call the Customer Helpline: 0845 640 0800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 	B 	C 	D 	E 
35mm Male camlock x 4	Female camlock x 4	30mm Wooden dowel x 8	12mm Screw x 10	Foot pad x 4

Tools required



Phillips screwdriver
(medium & large)


Ruler – Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert 2 x male camlock **A** and 4 x wooden dowel **C** into each front/back **1** as shown.

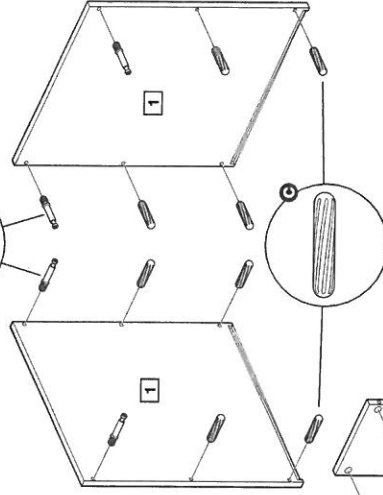

Step 2

Insert 2 x female camlock **B** into each side **2** as shown.

