


Assembly Instructions


Step 9

Connect back panels **8** using 10 x back panel screw **E** as shown.

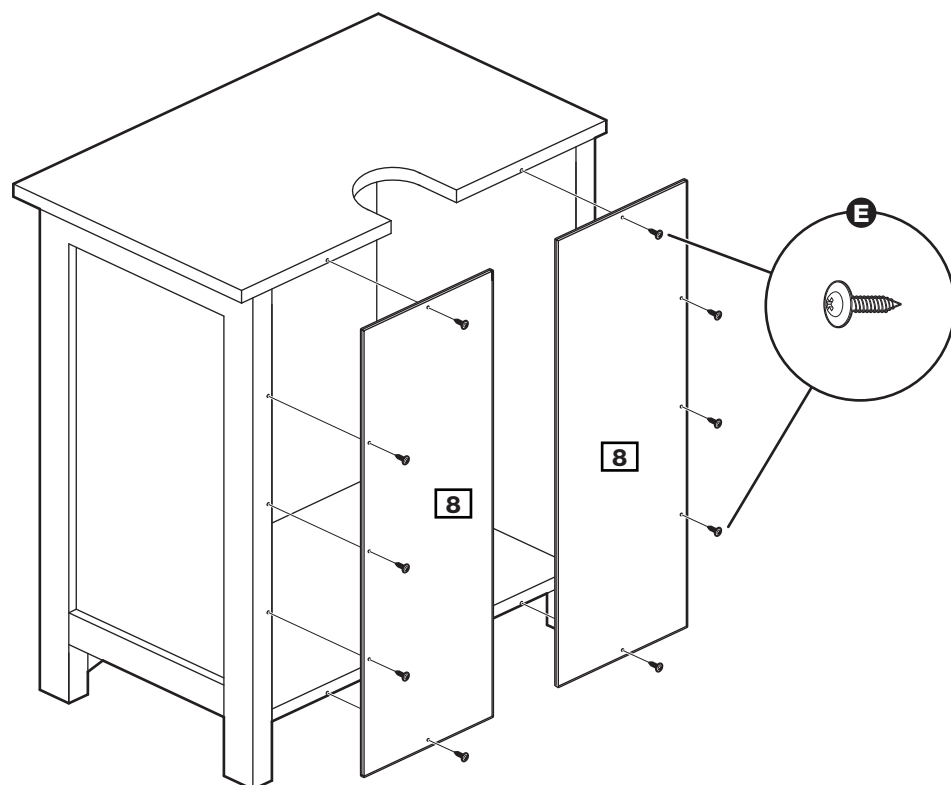

Step 10

Insert 4 x shelf bracket **L** inside the unit at the desired height as shown and set internal shelf **9** in place.

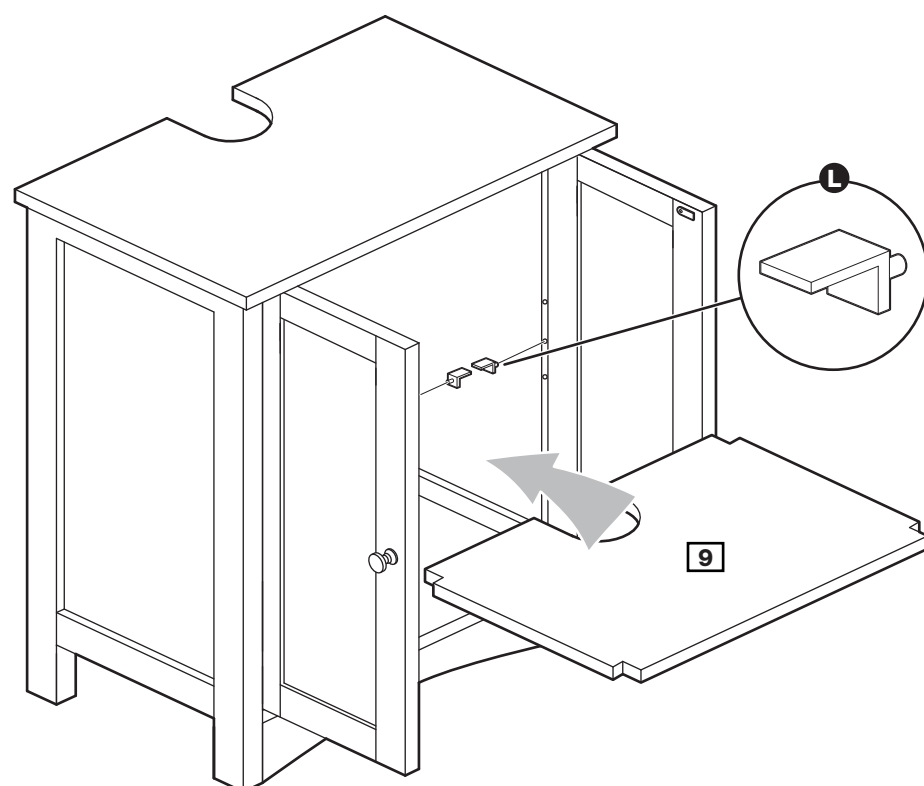


Assembly complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800

Under Basin Storage Unit

Assembly Instructions- please keep for future reference

833/2811

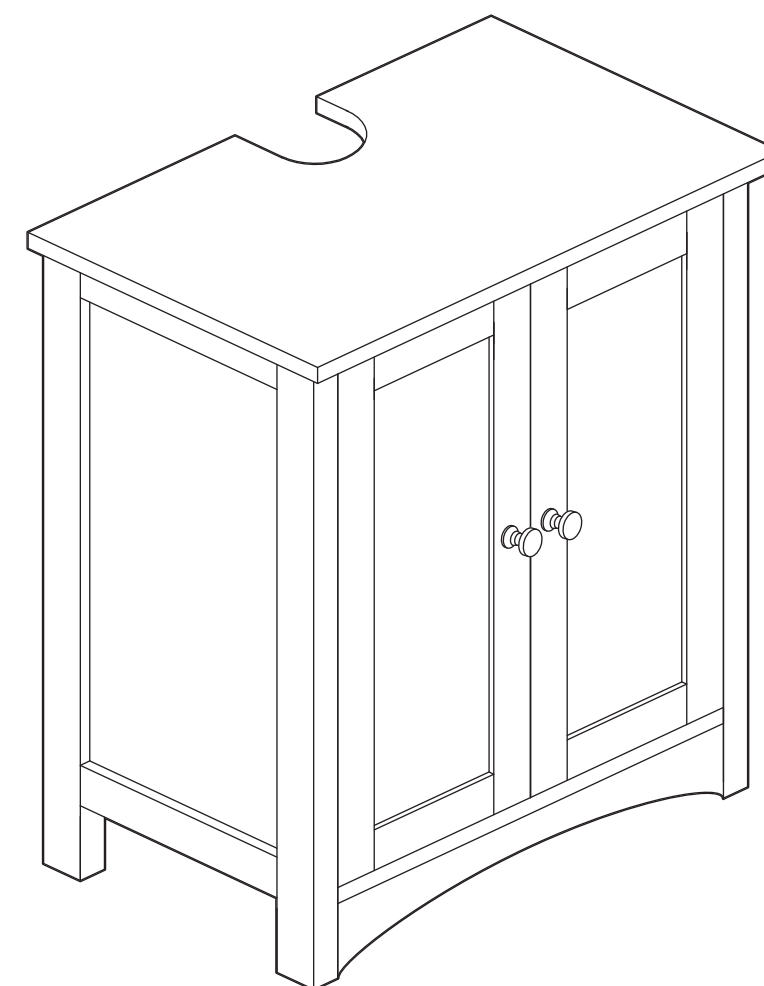

Dimensions

Width - 48cm
Depth - 30cm
Height - 60cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 0800

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.


- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below

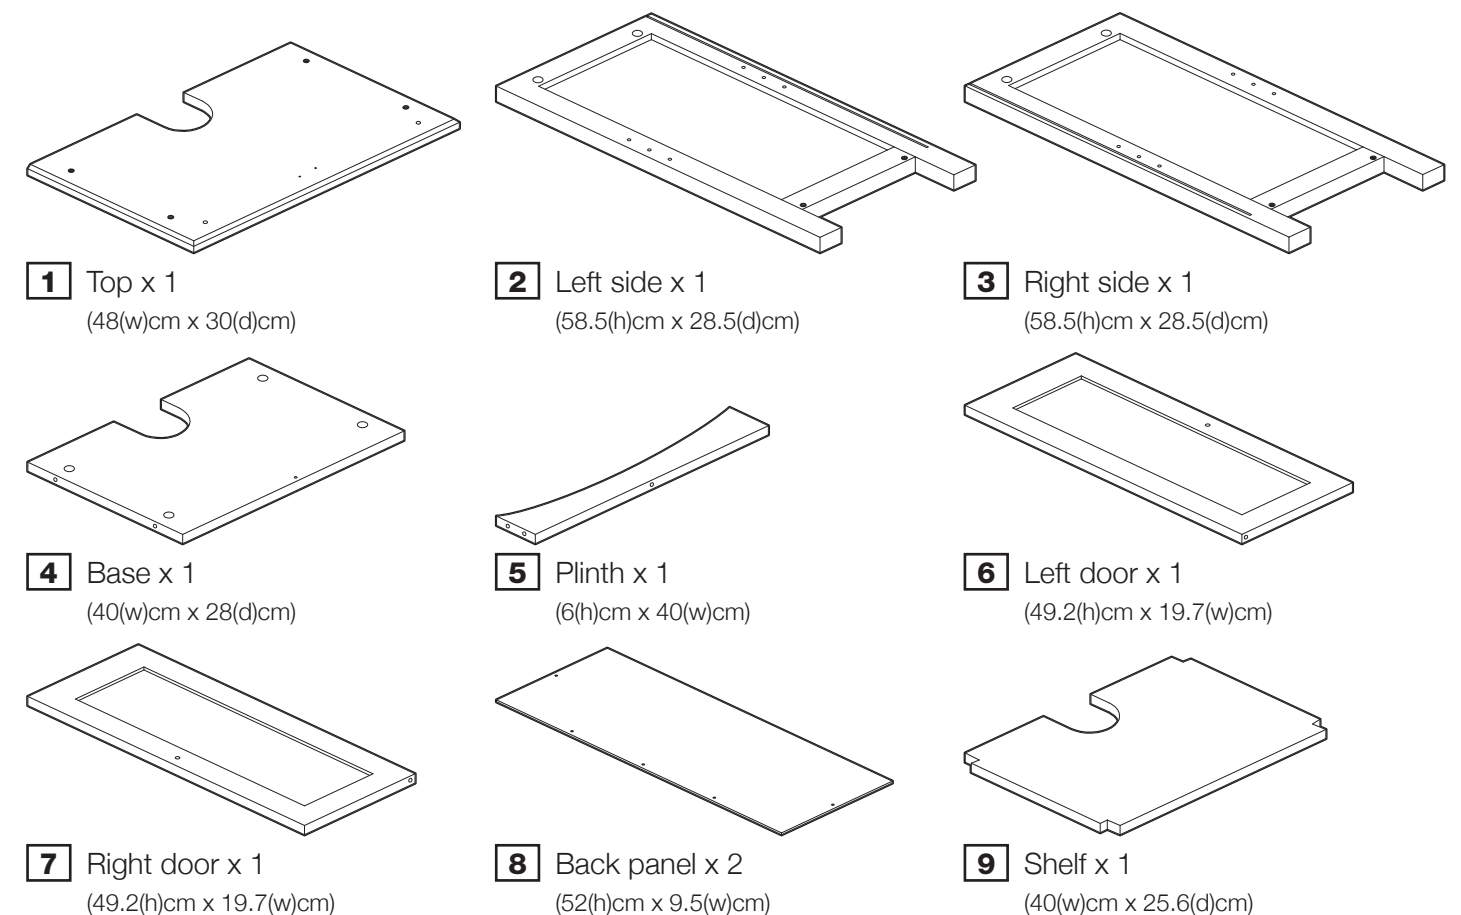













Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

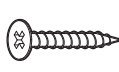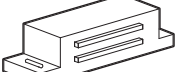Please check you have all the fittings listed below

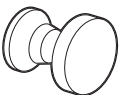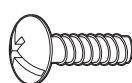Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

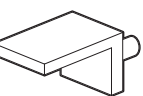A 	B 	C 	D 
35mm Male camlock x 8	Female camlock x 8	14mm Screw x 2	Magnetic catch x 1
E 	F 	G 	H 
Back panel screw x 10	Wooden dowel x 5	Hinge x 4	Knob x 2
I 	J 	K 	L 
16mm Screw x 2	Catch plate x 2	10mm Screw x 2	Shelf bracket x 4

Tools required



Ruler – Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Screw 4 x 35mm male camlock **A** into underside of top **1** as shown.


Connect magnetic catch **D** using 2 x 14mm screw **C**.

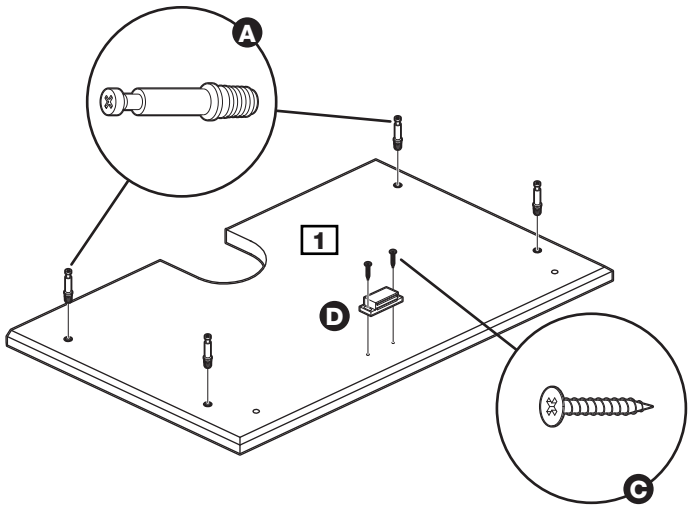

Assembly Instructions

Step 2


Insert 4 x female camlock **B** into underside of base **4** as shown.

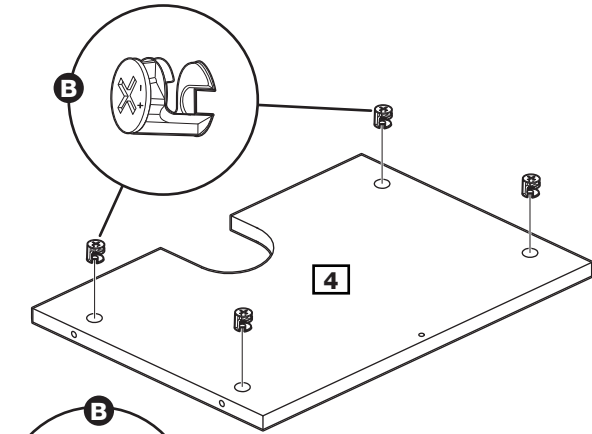

Step 3


Screw 2 x 35mm male camlock **A** into holes at bottom of left side **2** and right side **3** as shown.

Insert 2 x female camlock **B** into the holes at the top of left side **2** and right side **3** as shown.

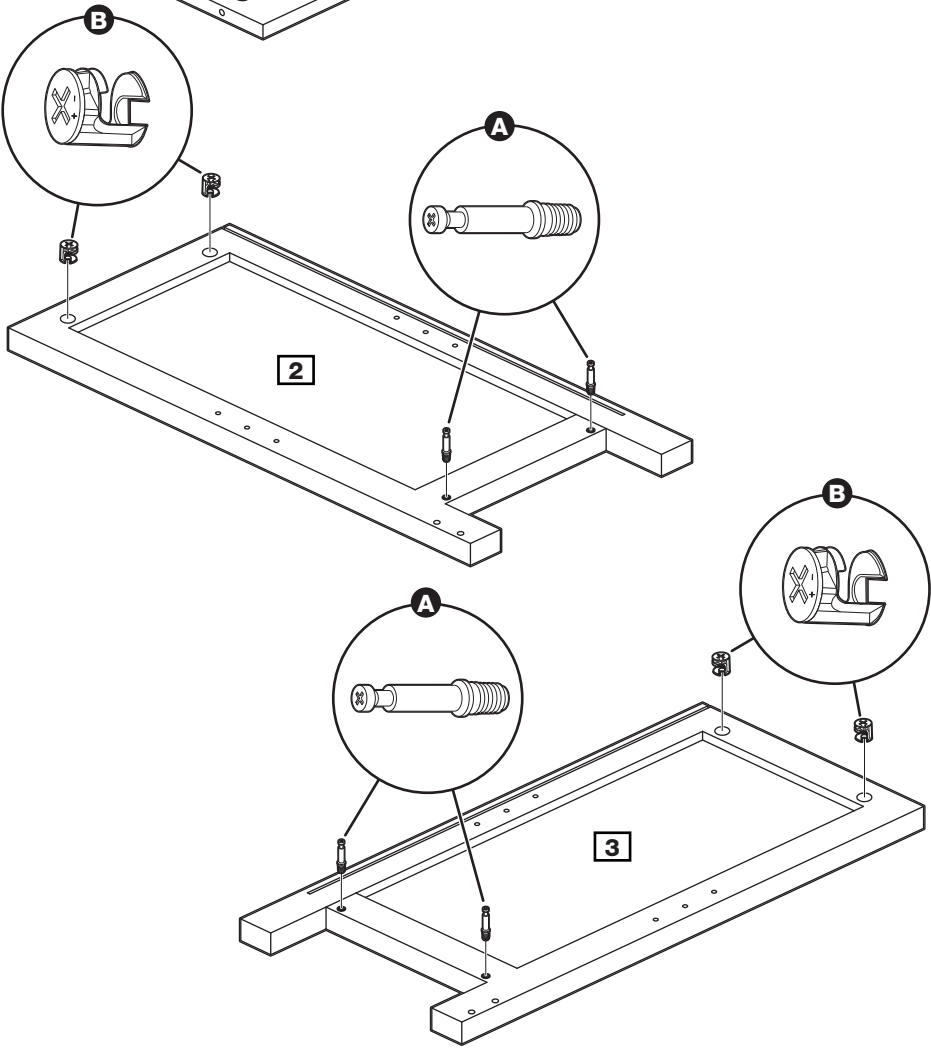

Step 4


Insert 5 x wooden dowel **F** into the bottom rail **5** as shown.

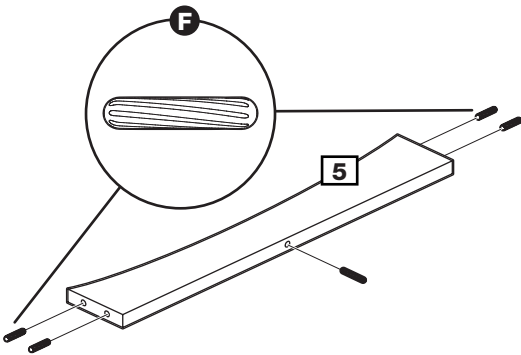

Assembly Instructions

Step 5

Connect plinth **5** to underside of base **4** as shown.

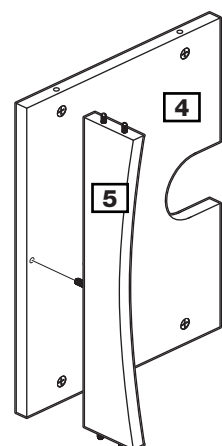


Step 6

Connect assembly completed in Step 5 to left side **2** as shown.

Tighten female camlocks in underside of base **2** with a screwdriver.

Note: you should feel a click when the camlocks are secured.

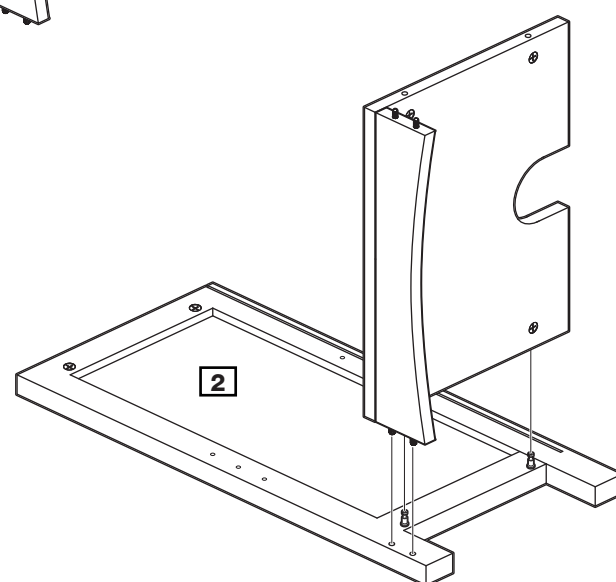


Step 7

Connect right side **3** to other end of assembly completed in Step 5 as shown.

Tighten female camlocks in underside of base **2** with a screwdriver.

Note: you should feel a click when the camlocks are secured.

Note: it may be helpful to have assistance from another person with this stage.

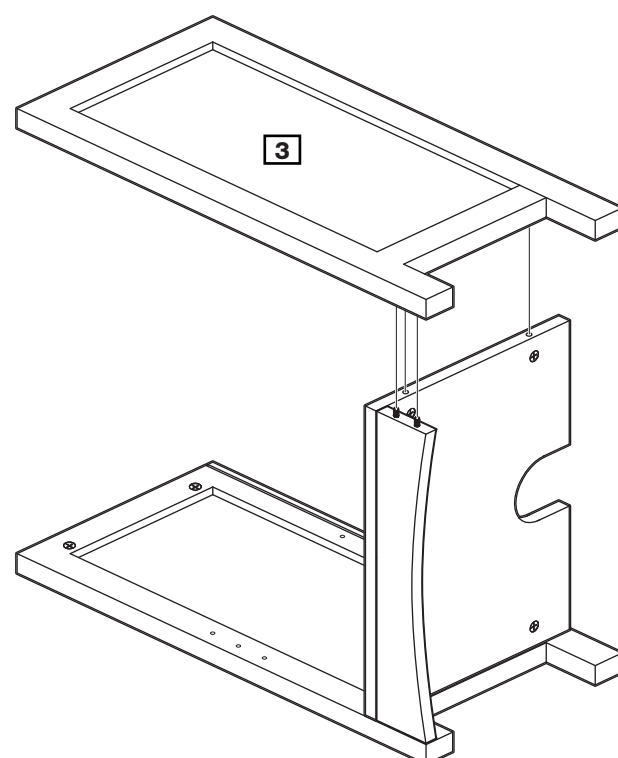

Assembly Instructions

Step 8

Connect knobs **H** to doors **6** and **7** using 16mm screws **I** as shown.

Connect catch plates **J** to doors **6** and **7** using 10mm screws **K** as shown.

Insert a hinge **G** into the top and bottom of doors **6** and **7** as shown.

Note: it may be helpful to have assistance from another person with the next stage.

Locate door hinges in place in base as shown, then connect the top panel **1** ensuring that top hinges of doors slot into place **(a:)**, and tighten female camlocks on inside of left and right side with a screwdriver.

