


# Chicago Bar Stool

habitat 

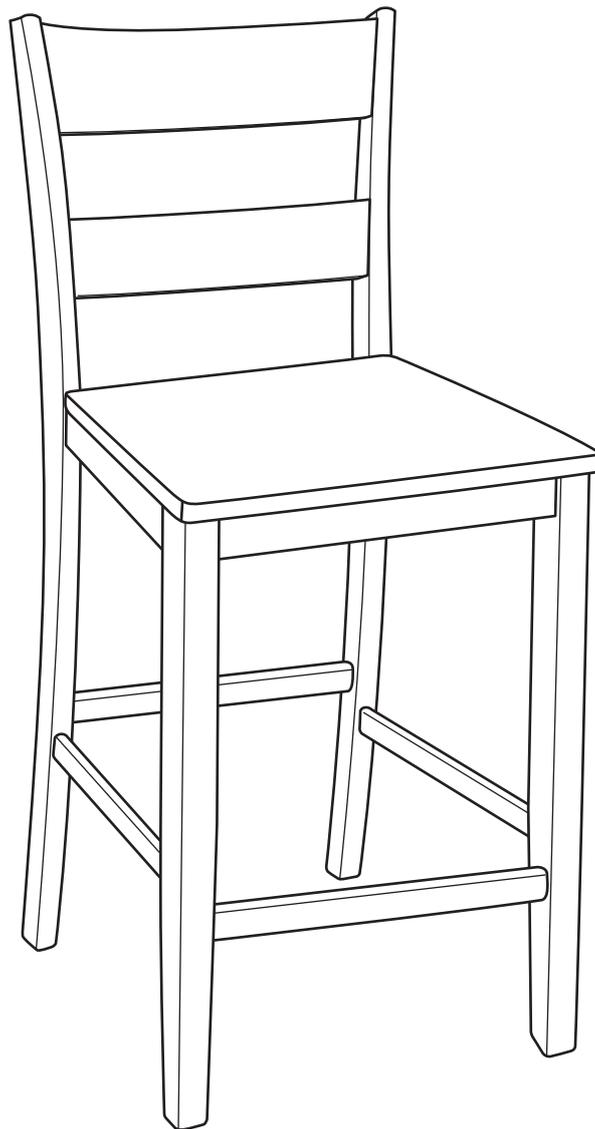

## Spare Parts

 [www.argos-support.co.uk](http://www.argos-support.co.uk)

 [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk)

 0370 112 1928

## Customer Support

 0345 640 2020



# Safety and Care Advice

---

## Product Details

803/4683 887/7606 920/4137 125/4769  
845/9392 930/5579 117/5219

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.



## Care and maintenance

---

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Additional Guidance

---


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.
- This product is compliant BS12520

# Parts




Pt. No

1 Backrest

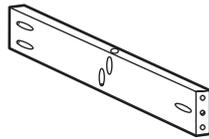


Pt. No

2 Side rail x2

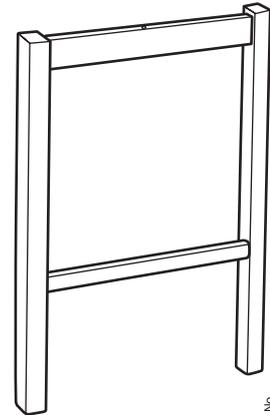


Pt. No

3 Front leg



Pt. No

4 Seat

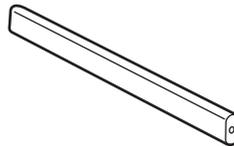


Pt. No

5 Stretcher x2

## Fittings (Shown to scale)


### Bag 1



A M6 x 50mm Bolt x 6




B Spring Washer x 6



C M4 x 32mm Screw x 7




D Wood dowel x 6




E Allen Key x 1

## Tools required



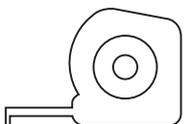


Ruler/tape  
measure





Phillips screwdriver  
(small & medium)

# 1

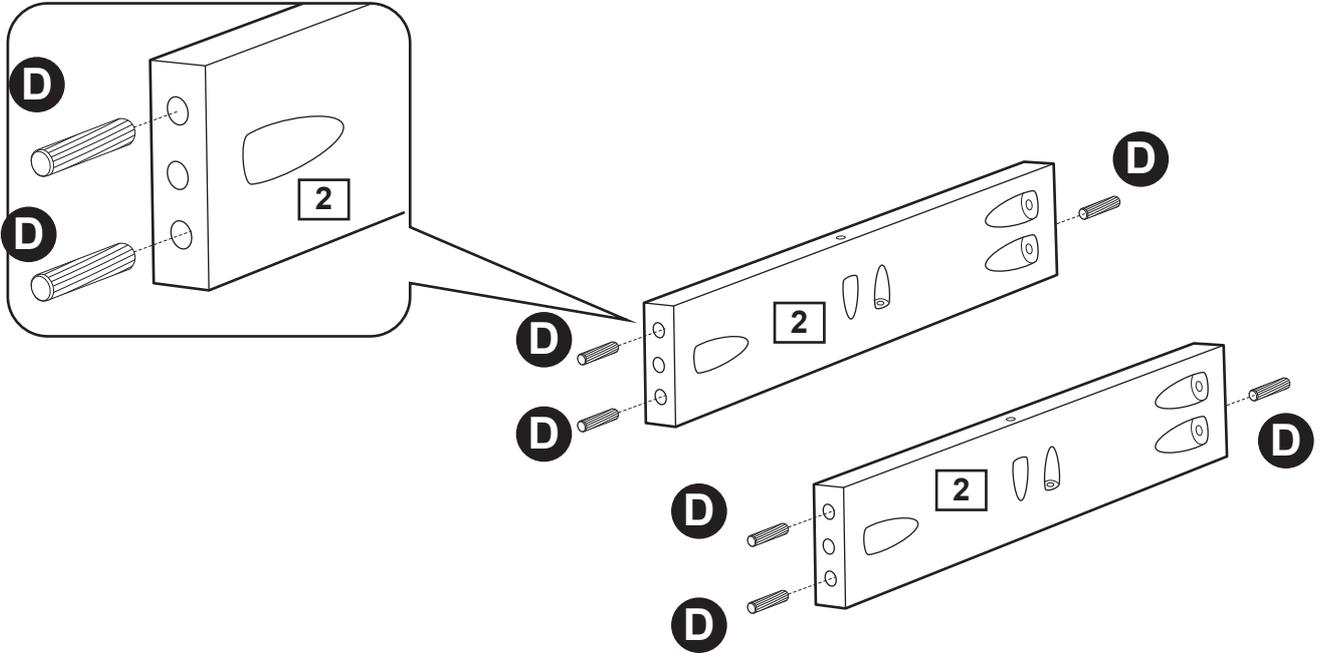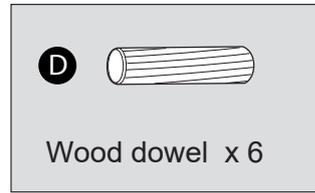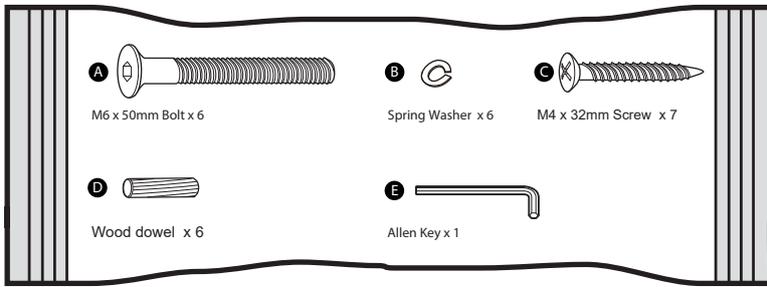


# 2

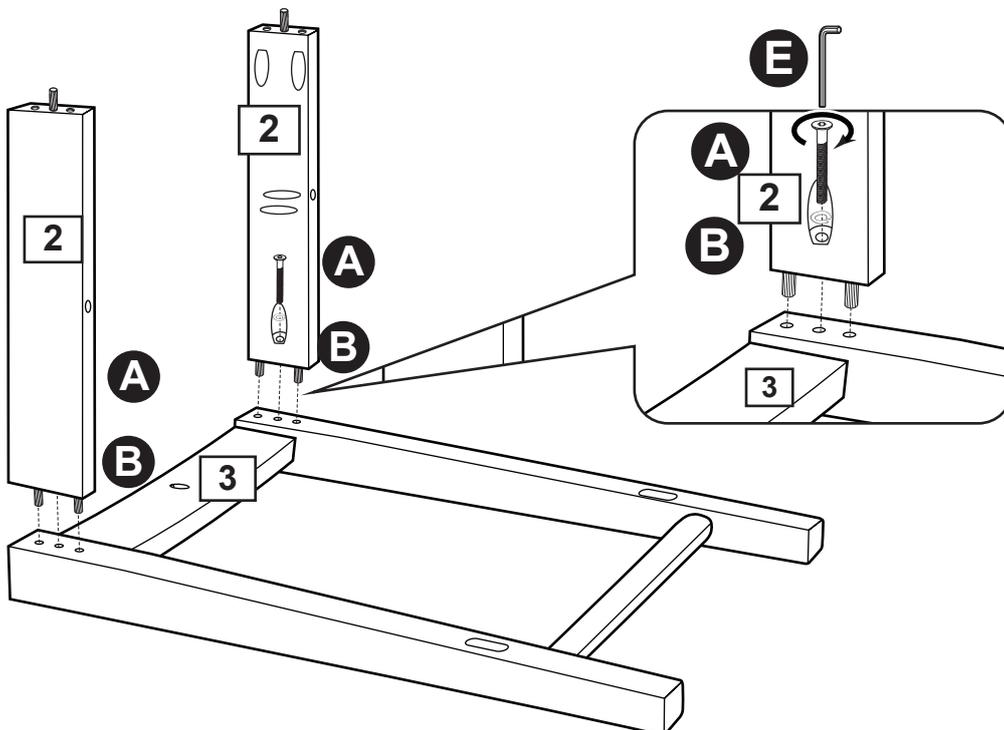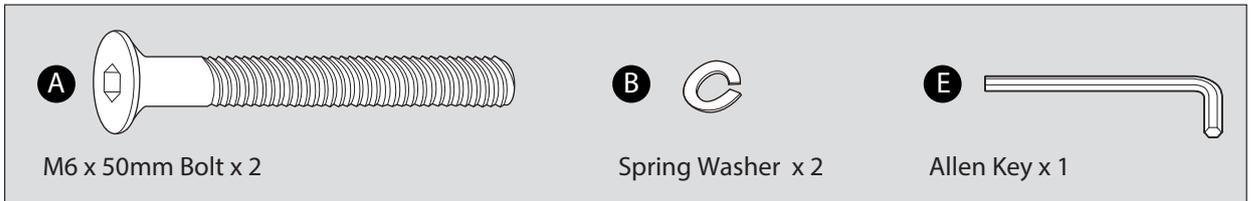


**WARNING!**  
FASTEN BOLTS USING ALLEN KEY BUT DO NOT FULLY TIGHTEN AT THIS STAGE. USE OVAL HEAD OF ALLEN KEY WHEN TIGHTEN THE BOLTS ON CORNER POSITIONS.


# 3

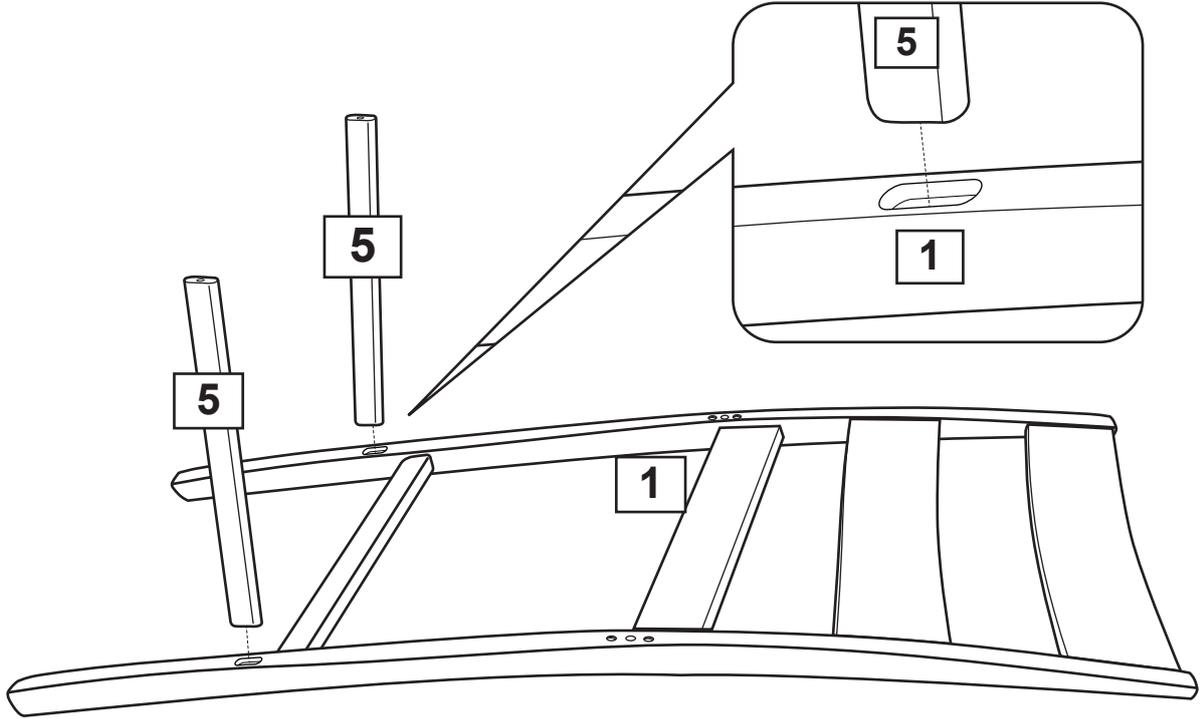

# 4

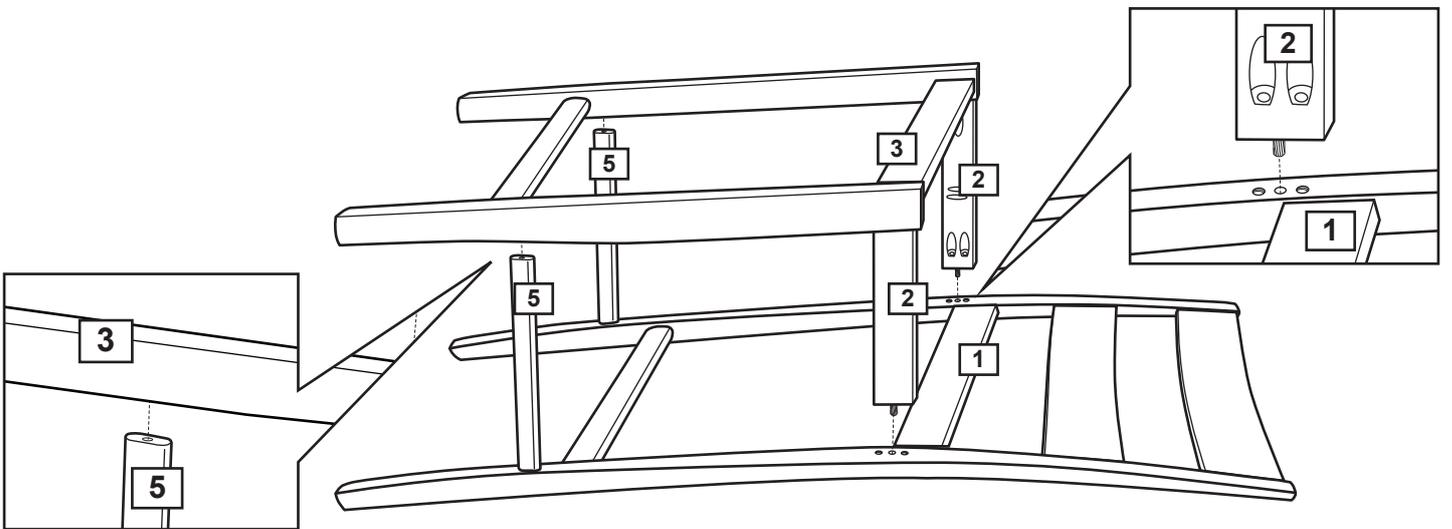

# 5




M6 x 50mm Bolt x 4



Spring Washer x 4



Allen Key x 1

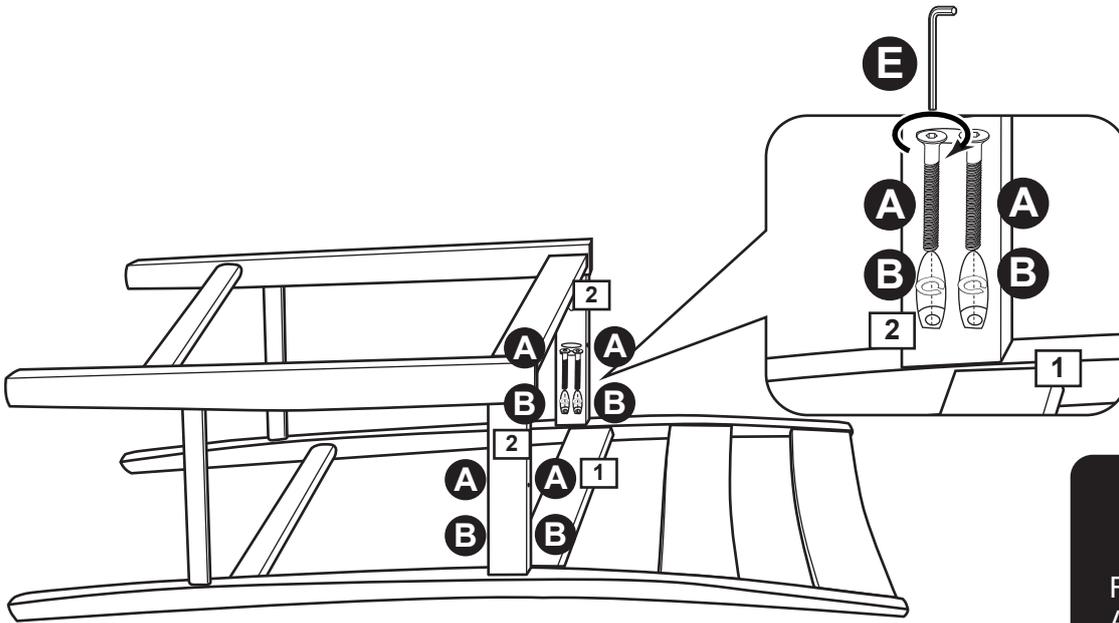


## WARNING!

FASTEN BOLTS USING ALLEN KEY BUT DO NOT FULLY TIGHTEN AT THIS STAGE. USE OVAL HEAD OF ALLEN KEY WHEN TIGHTEN THE BOLTS ON CORNER POSITIONS.

# 6



Allen Key x 1


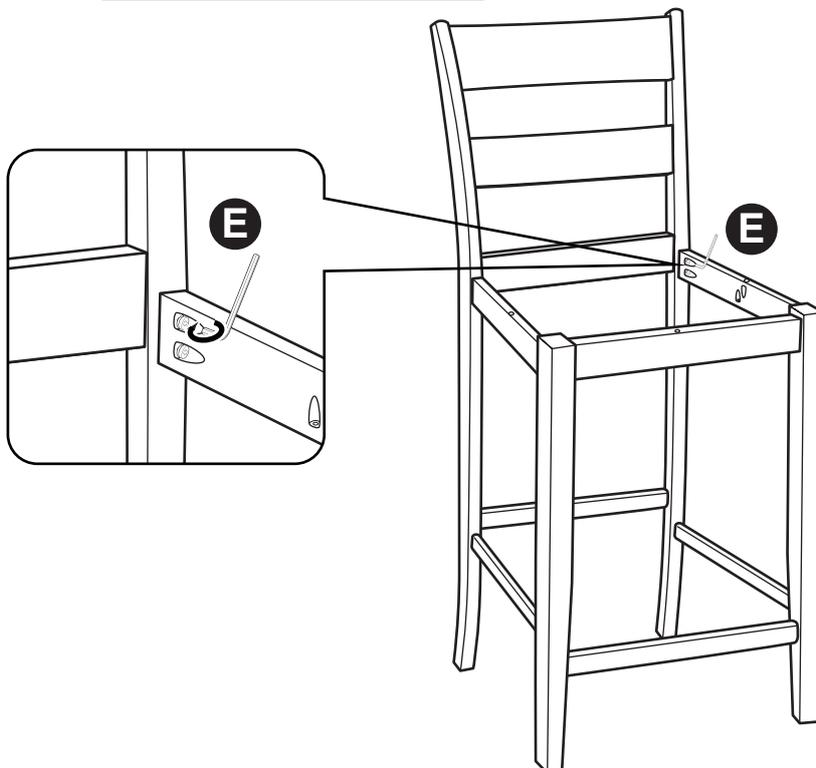


## WARNING!



CAREFULLY TURN THE CHAIR UPRIGHT AND PLACE ON A FLAT SURFACE.


MAKE ADJUSTMENTS TO ENSURE THE CHAIR FRAME IS STRAIGHT AND THE LEGS ARE EVEN ON THE FLOOR THEN FULLY TIGHTEN ALL BOLTS ASSEMBLED IN PREVIOUS STEPS USING ALLEN KEY

# 7

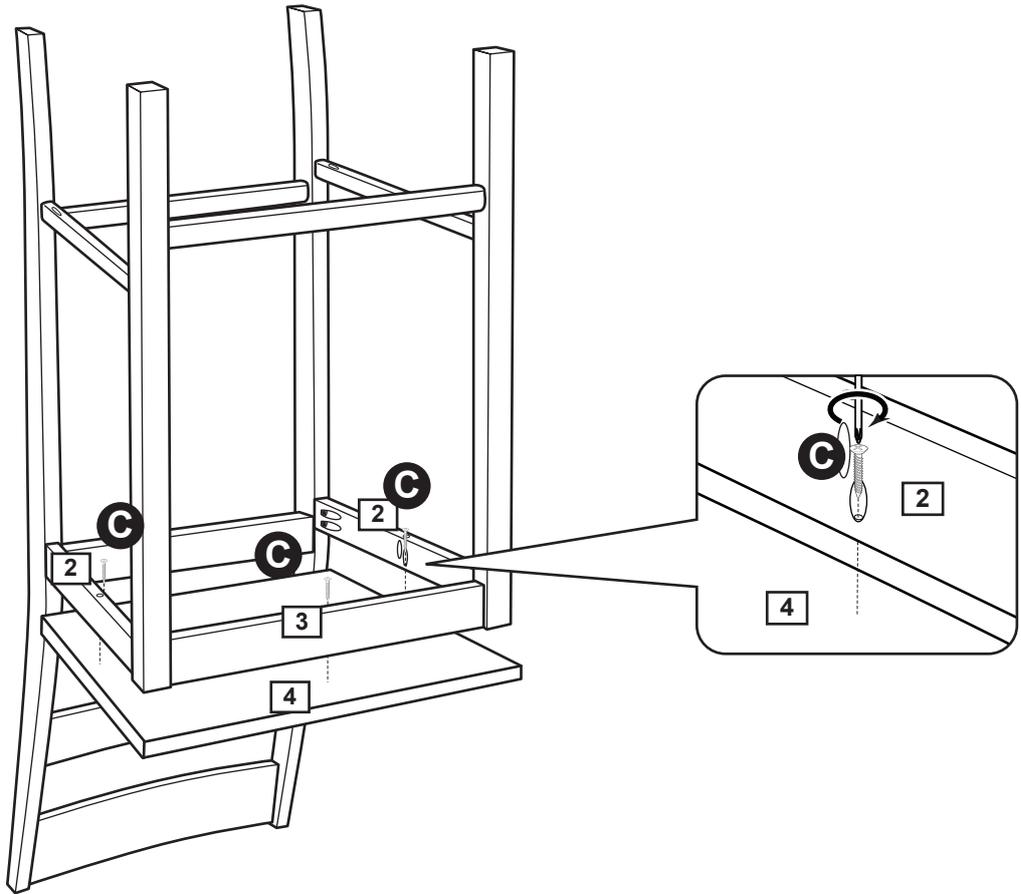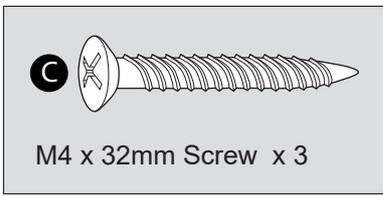

# 8

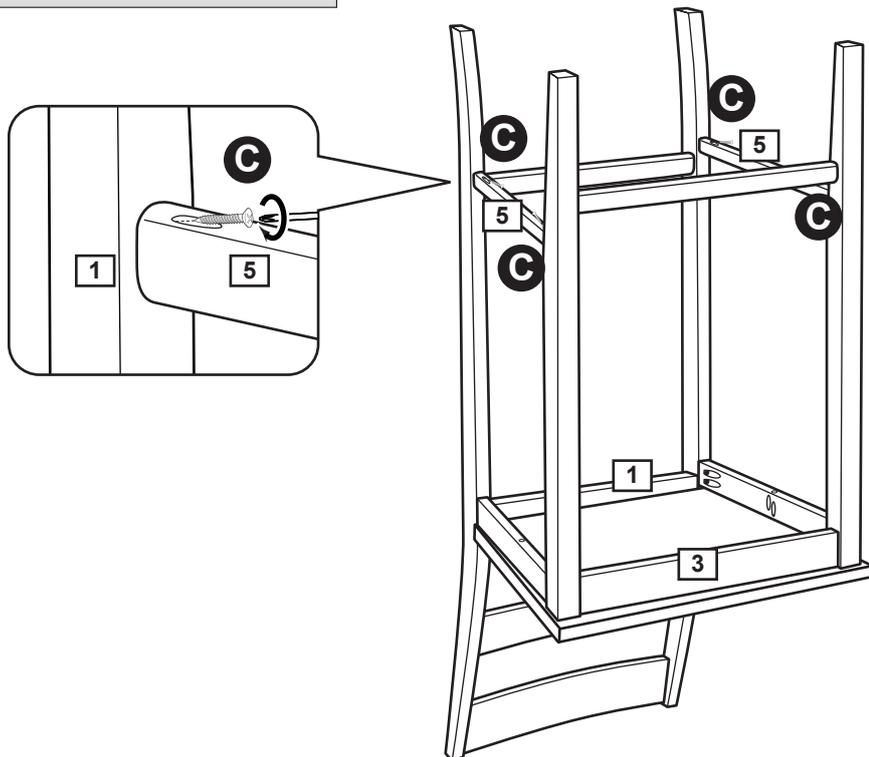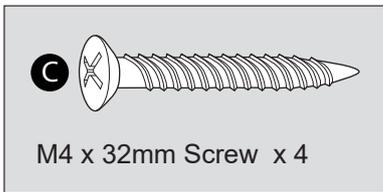

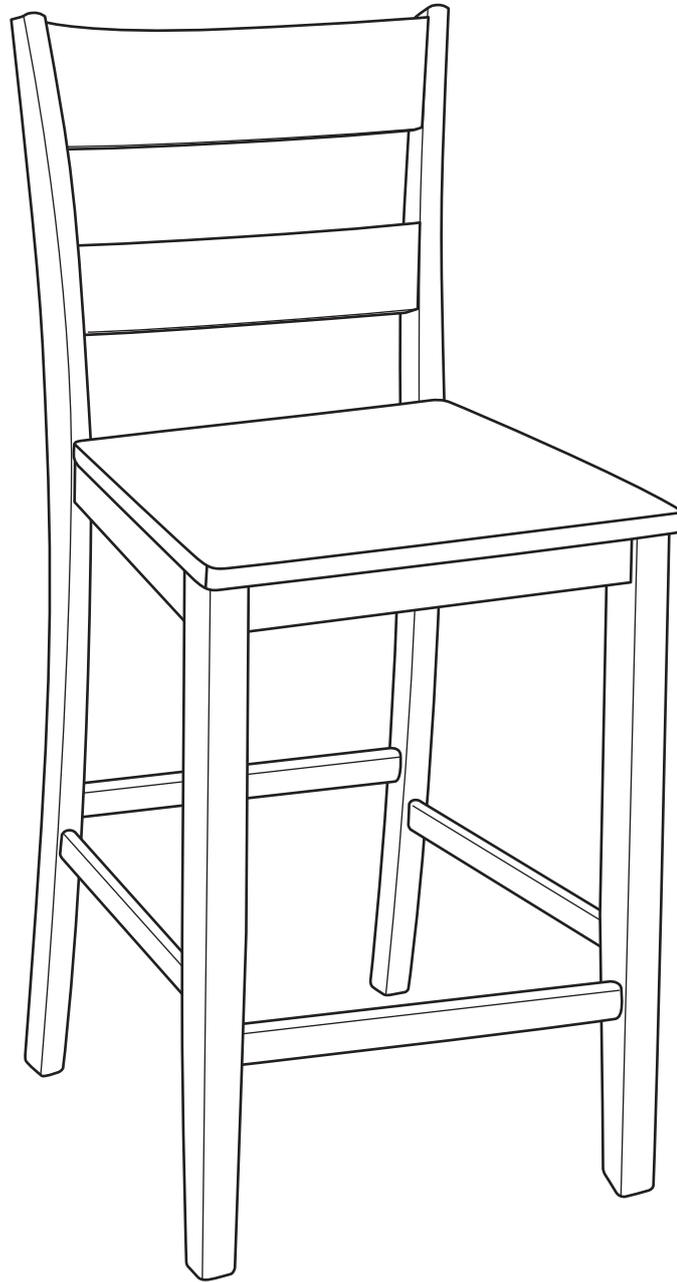

Assembly complete.