


IN00316 (rev B)

Folding Bath Screen


- Instruction suitable for both Right and Left Hand Fixing.
- Instruction suitable for 1-Fold, 2-Fold, 3-Fold, 4-Fold, 5-Fold, 6-Fold and 7-Fold Bath Screen variants.

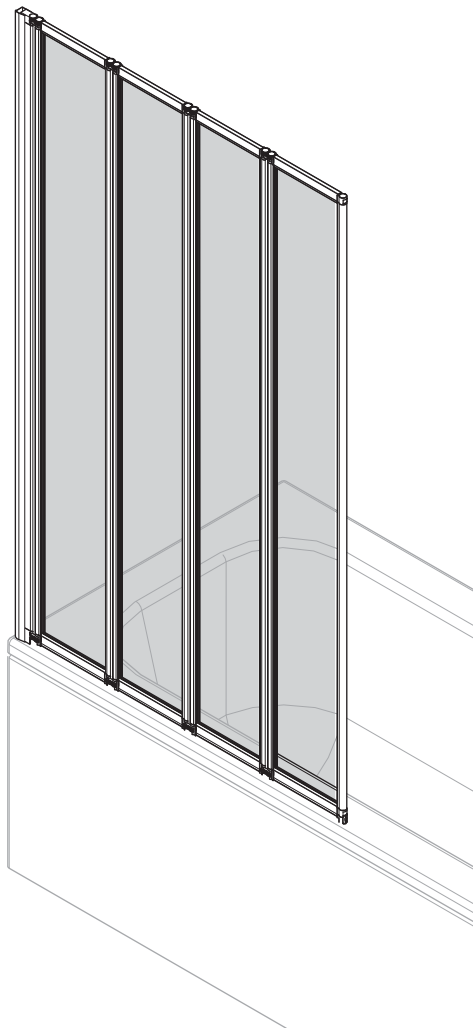

Before You Start

- Check that the bath has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. **Please Note:** All product supplied without bath.
- Check that there is sufficient space on the bath for the product and that the screen movement does not foul other items such as sinks and taps.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat.
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type – if in doubt seek professional advice
- Ensure the area is clean, dry and dust free.
- Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').

Fig.A.

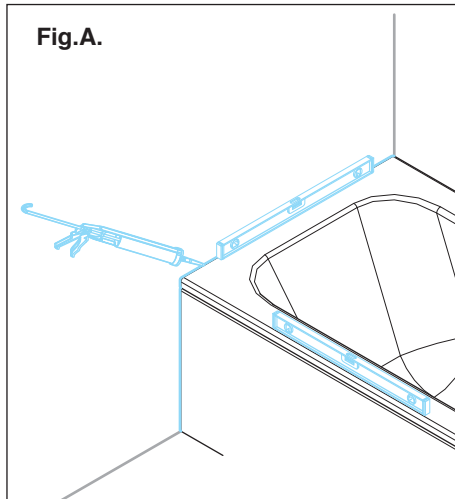

Safety

- Handle all glass with care - support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened – it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
- Use safety eyewear when handling glass.
- Keep all small parts away from children.

Disclaimer

- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

Tools Required (not supplied)

Spirit Level 	Screwdriver 	Tape Measure 	Pencil 	Utility Knife
Junior Hacksaw 	Silicone Gun & Sealant 	Power Drill 	Suitable Drill Bits 6mm dia. * 3mm dia. HSS	* Ensure drill bit used is suitable for wall surface



Help Line: 0870 241 6131

Lines open: 8.30am - 5.00pm Monday to Friday
Standard National call charge rate from BT landlines


Parts & Fittings Supplied



Keep small parts away from children




Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from a damaged or faulty product being installed.

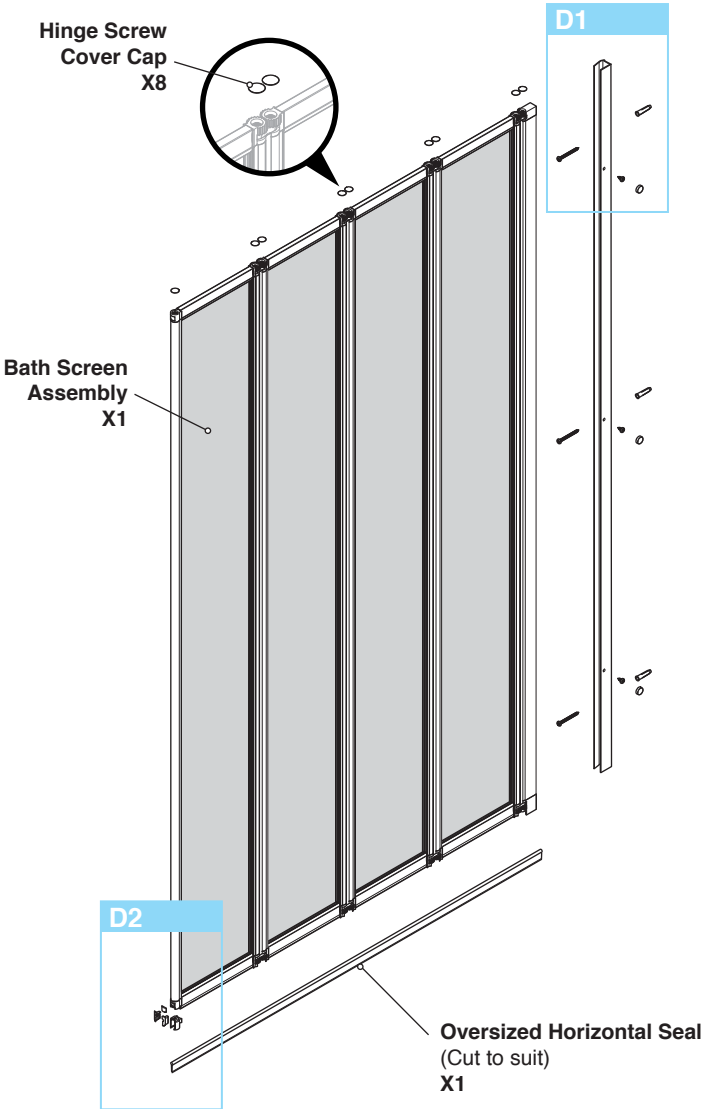

D1

Wall Channel
X1

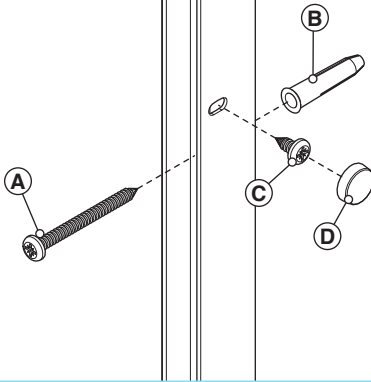

D2

End Cap
X1





Seal
End Cap*
X2

End
Moulding
X1

* Left and Right Hand variants
Supplied (1 No. of each)

Loose Screws & Fittings Supplied

(A)	No.8 x 1½" Pan Head Pozi Screws	 (actual size)	Qty x3
(B)	Wall Plugs	 (actual size)	Qty x3
(C)	No.8 x ¾" Pan Head Pozi Screws	 (actual size)	Qty x3
(D)	Screw Cover Caps	 (actual size)	Qty x3



Tip:
When drilling tiles apply masking
tape to surface to stop drill bit
slipping.




Wall plugs supplied are for solid
walls only. Ensure correct wall
plug for wall type is used. If in
doubt seek professional advice.




Position wall channel on wall.
Ensure channel is vertically level
and does not overhang the bath.

1

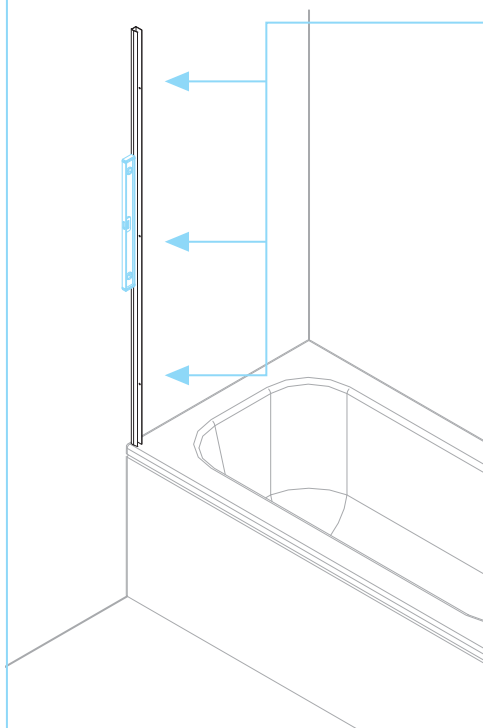


1.1

Mark position
pre-drilled Wall
Channel holes


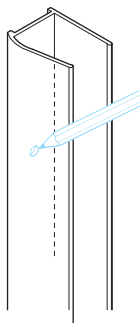


1.2

6mm dia. holes with
drill bit suitable for
wall surface

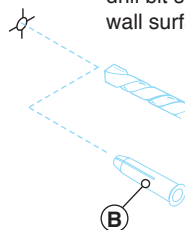

1.3

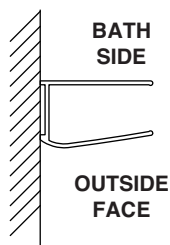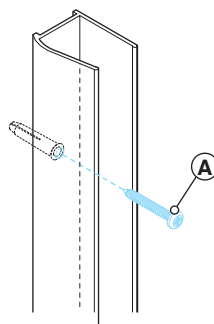

**BATH
SIDE**


**OUTSIDE
FACE**

Please Note:


Position Wall
Channel with
curved side
facing away
from bath.

Horizontal Seal Preparation


i)

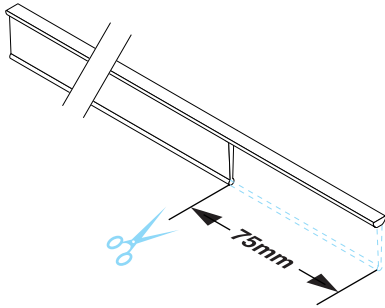


ii)

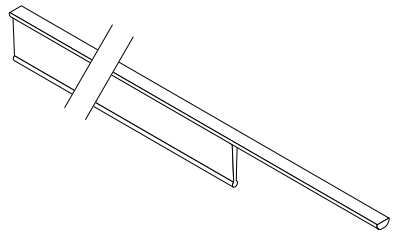


2.1

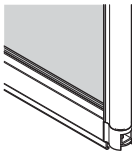

Slide Horizontal Seal into position




2.2

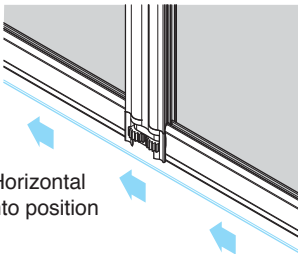


Slide Horizontal Seal into position

2.3

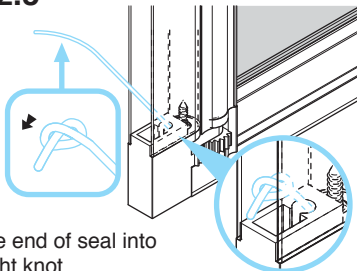

Tie end of seal into tight knot


2

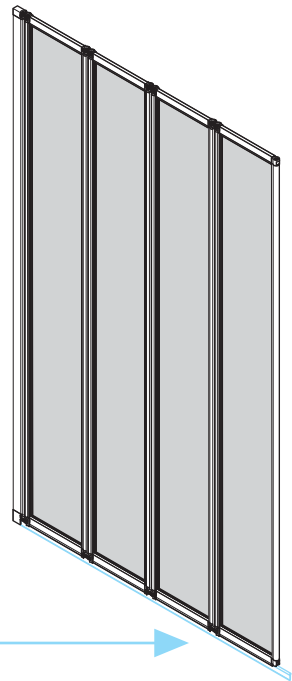



Tip:
Apply a small amount of Silicone Lubricant to the Horizontal Seal to help slide into position.

3

Underside View

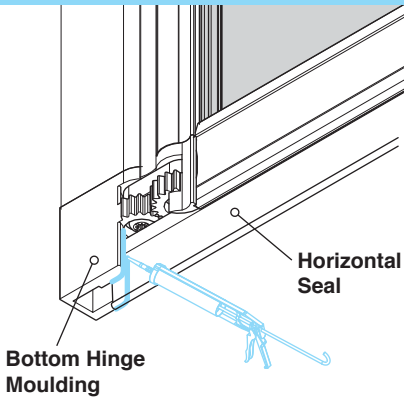


Plan View

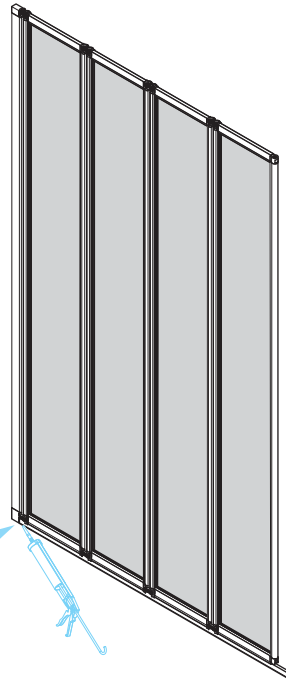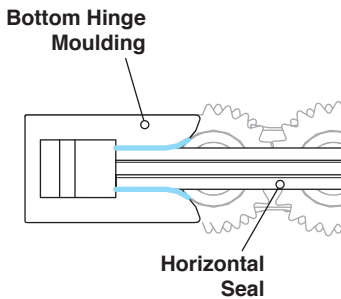


IMPORTANT NOTE:
Please ensure that Silicone Sealant is apply fully between Horizontal Seal and Bottom Hinge Moulding as shown.

4.1

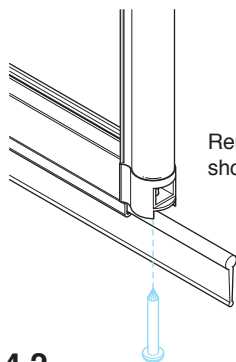



Remove screw as shown.

4.2

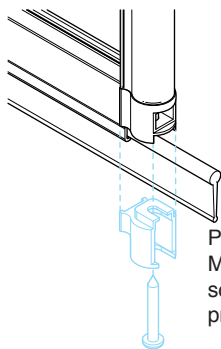


Push fit End Cap Moulding, fix using screw removed in previous step.

4

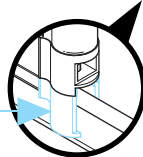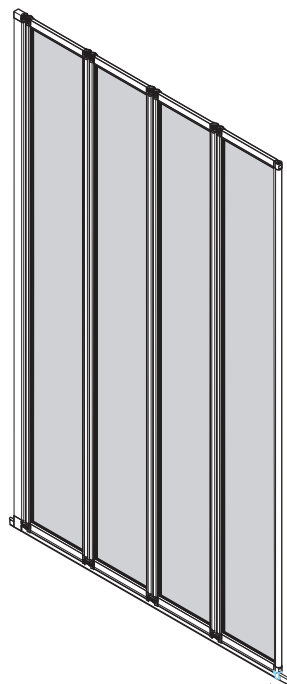


5.1

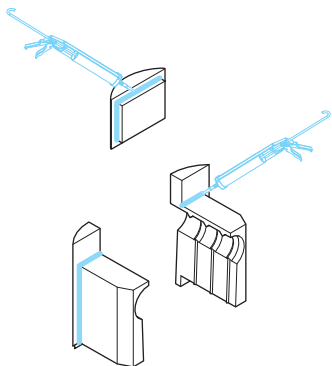


Apply a small amount of silicone sealant to End Cap and Seal End Caps.

5.2

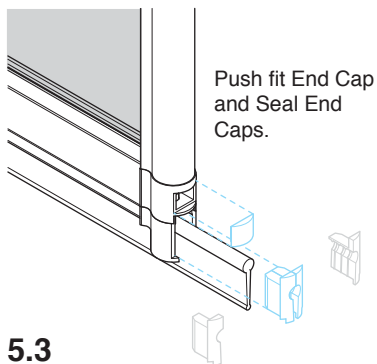

Push fit End Cap and Seal End Caps.



5.3

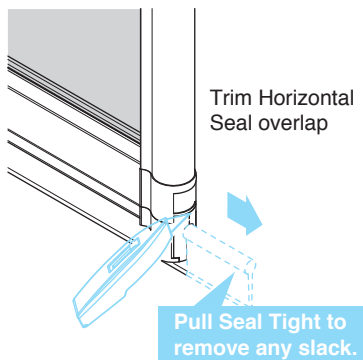


Trim Horizontal Seal overlap

Pull Seal Tight to remove any slack.

5

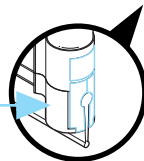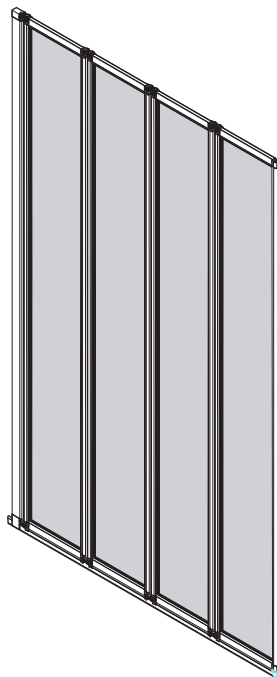

6

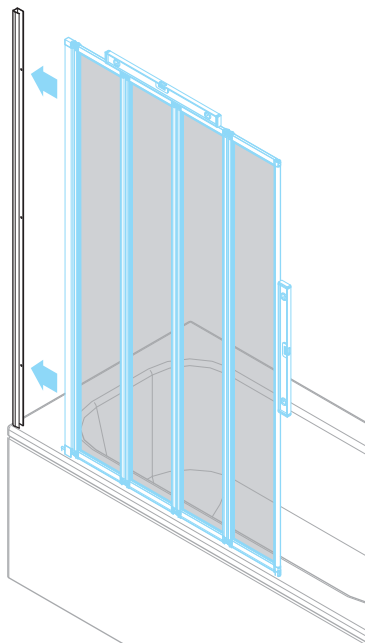


OUTSIDE
FACE

BATH
SIDE

Please Note:
Ensure Horizontal Seal
sits on top of bath.


Inside View

7

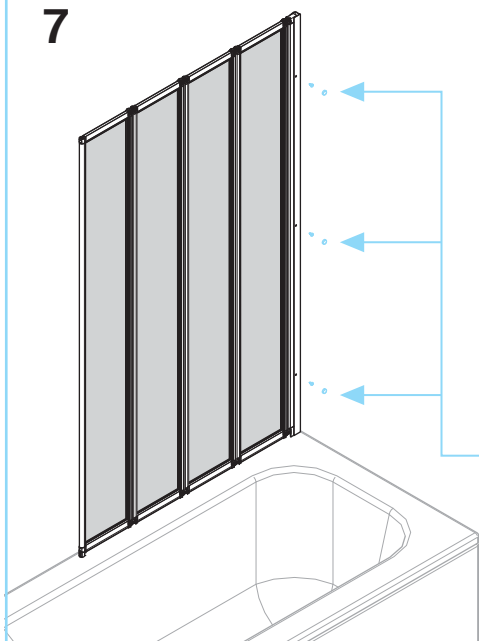


Inside View

* 3mm dia. holes through
pre-drilled wall channel holes
using HSS drill bit

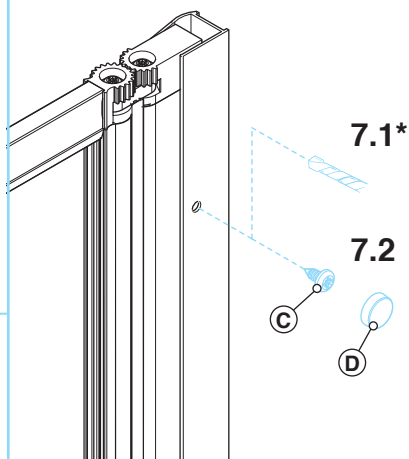


Inside View

8

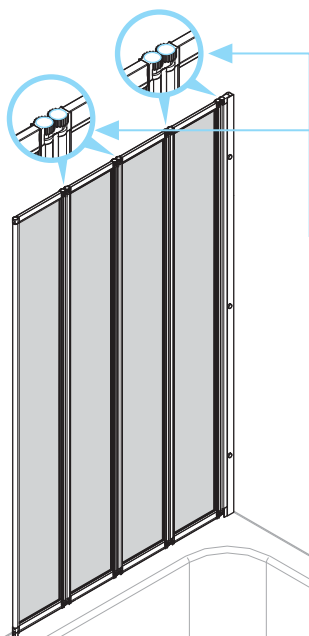

Inside View


8.1

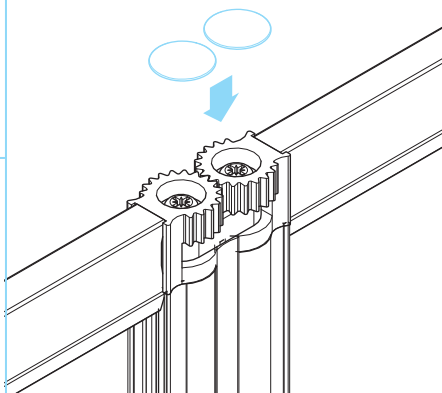

Push fit Hinge Screw Cover Caps.


Inside View

9

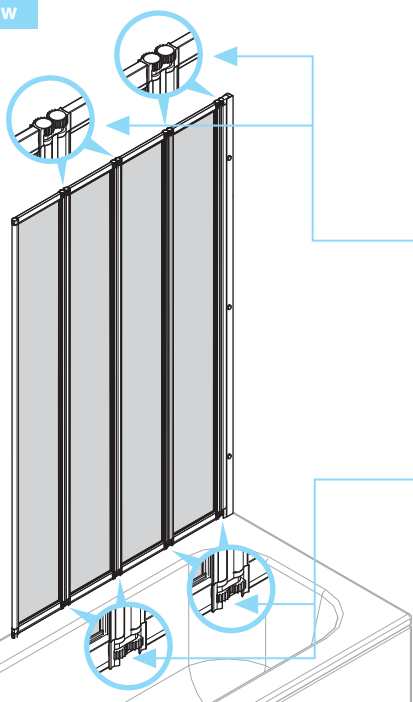


Inside View

9.1

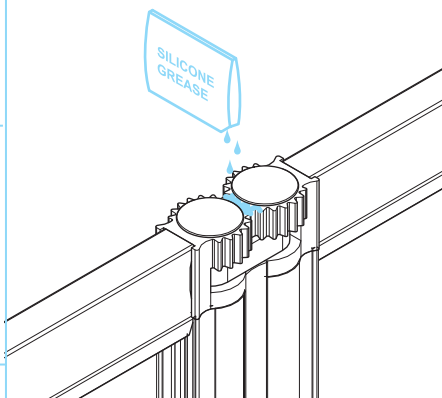


Apply a small amount of Silicone Grease from sachet (supplied) to the hinge mouldings.

10

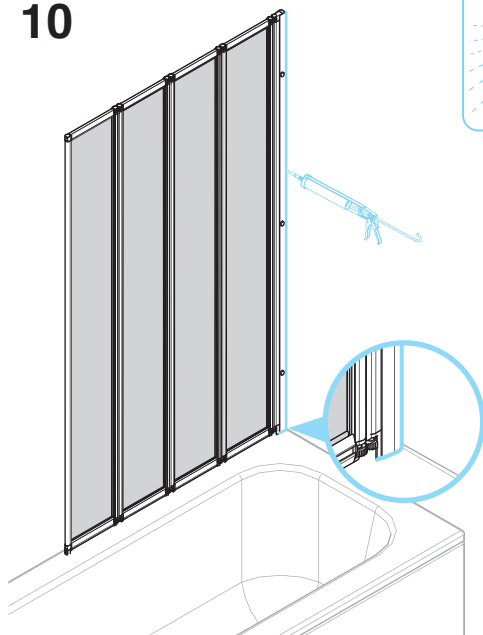

Apply Silicone Sealant, (not supplied).

11

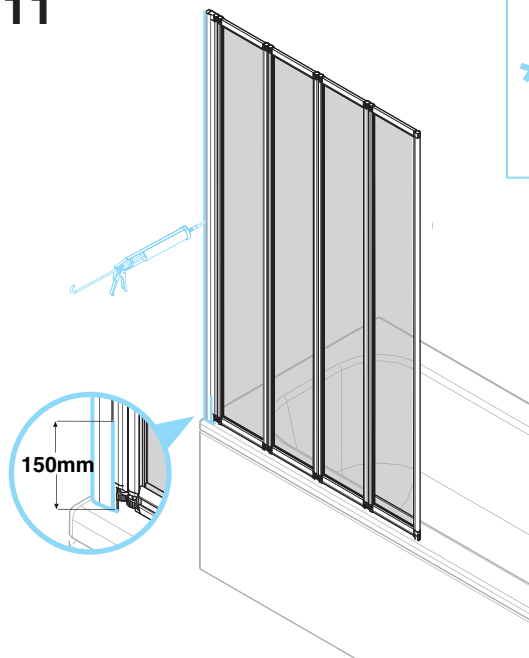

Product Care:
Use a non abrasive cleaner.
Water marks may be removed
with a proprietary limescale
remover or household
vinegar.



Apply Silicone Sealant, (not supplied).