


# Lydiard Gloss White Large Shoe Cabinet

Assembly Instructions - please keep for future reference

617/5599

**hygena**

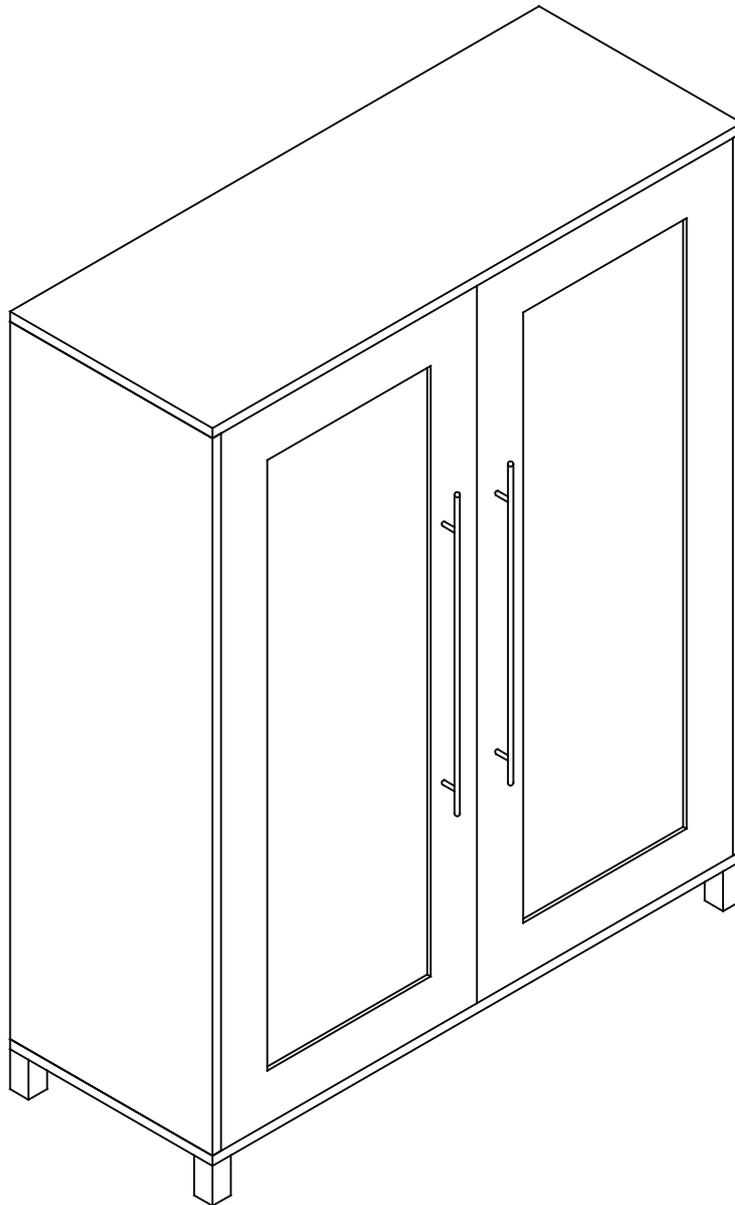

## Dimensions

Width - 91.5 cm

Depth - 35 cm

Height - 115 cm

**Important**– Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**



# Safety and care advice

## Important–Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


- Regularly check and ensure that all bolts and fittings are tightend properly.

# Components - Panels


Please check you have all the panels listed below

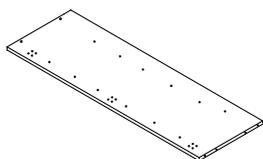


1 Left Side Panel x 1  
(H104.5cm x W34.2cm)

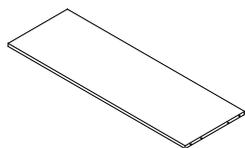

2 Right Side Panel x 1  
(H104.5cm x W34.2cm)

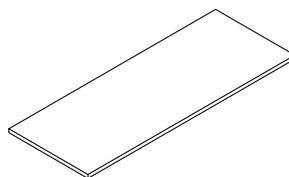

3 Top Panel x 1  
(H91.5cm x W35cm)

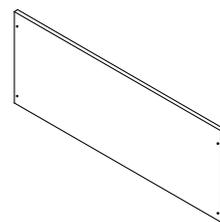

4 Base Panel x 1  
(H91.5cm x W35cm)




5 Shelf Panel 5 x 4  
(H88.5cm x W32.7cm)




6 Shelf Panel 6 x 2  
(H88.5cm x W32.7cm)



7 Left Door x 1  
(H104.5cm x W44.3cm)



8 Right Door x 1  
(H104.5cm x W44.3cm)







9 Back panel  
(H106cm x W90cm)


# Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


<b>A</b>  35mm Male Camlock x 12	<b>B</b>  Female Camlocks x 12	<b>C</b>  35mm Screw x 6	<b>D</b>  15mm Screw x 4
<b>E</b>  12mm Screw x 36	<b>F</b>  Hinges x 6	<b>G</b>  Feet x 4	<b>H</b>  25mm Screw x 16
<b>I</b>  Dowels x 20	<b>J</b>  Handle x 2	<b>K</b>  16mm Screw x 24	<b>L</b>  Wall Plug x 2
<b>M</b>  Wall Strap x 2			

## Tools required



Phillips screwdriver  
(medium & large)


Ruler – Use this ruler to help correctly identify the screws



## Using Camlocks

### Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

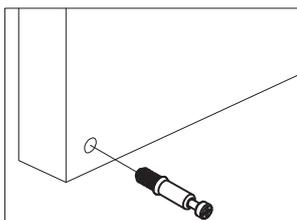

### Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

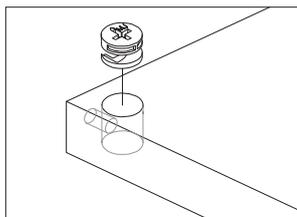

### Step 3

Push the male camlock into the entry hole.

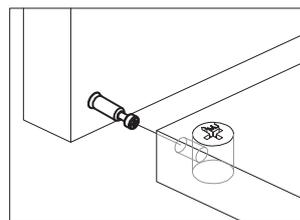


### Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

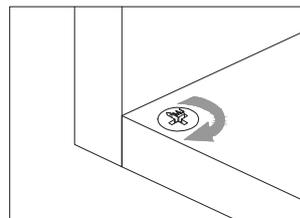


# Assembly Instructions

## Step 1

### Inserting Male Camlocks and Dowels

1. Insert 4 x Male Camlocks **A** into Left Side Panel **1** and 4 x Male Camlocks **A** into Side Panel **2**.

2. Into Left Side Panel **1** insert 8 x Dowels **I** in position shown. Into Right Side Panel **2** insert 8 x Dowels **I** in positions shown

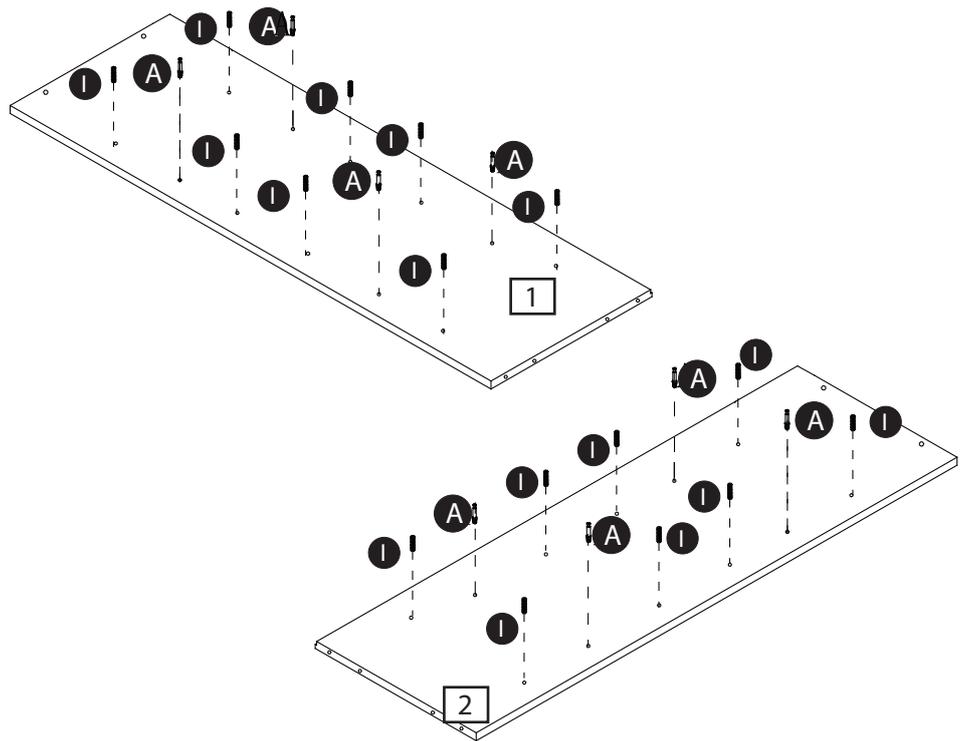

## Step 2

1. Onto the Dowels in Left Side panel **1** locate 4 x Shelves **5**

2. Onto the Male Camlocks in Left side panel **1** locate 2 x Shelf **6**


3. Into holes in the underside of 2 x Shelves **6** insert 4 x Female Camlocks **B**. Use a screwdriver to turn the Female Camlocks Clockwise to lock

For more information refer to the Using Camlocks Section

4. Onto Shelf panels, locate Right Side Panel **2**

5. Into Holes shown in the underside of 2 x Shelf Panels **6** insert 4 x Female Camlocks **B**. Use a screwdriver to turn the Female Camlocks Clockwise to lock

For more information refer to the Using Camlocks Section

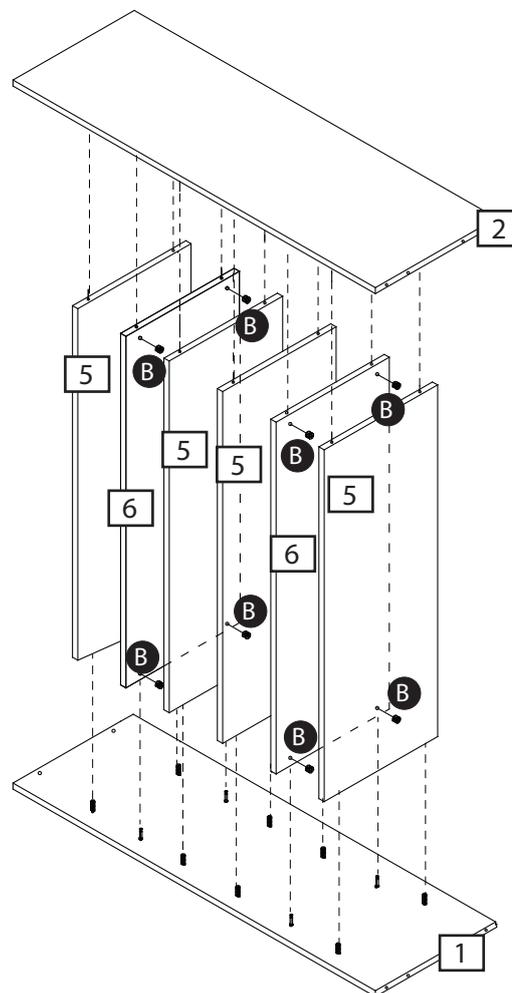

# Assembly Instructions


## Step 3

1. Into the ends Left and Right Side Panels

**1** and **2** insert 4 x Dowels **I**.


2. Connect Base Panel

**4** to Panels **1** and **2** using 4 x Screw **C**

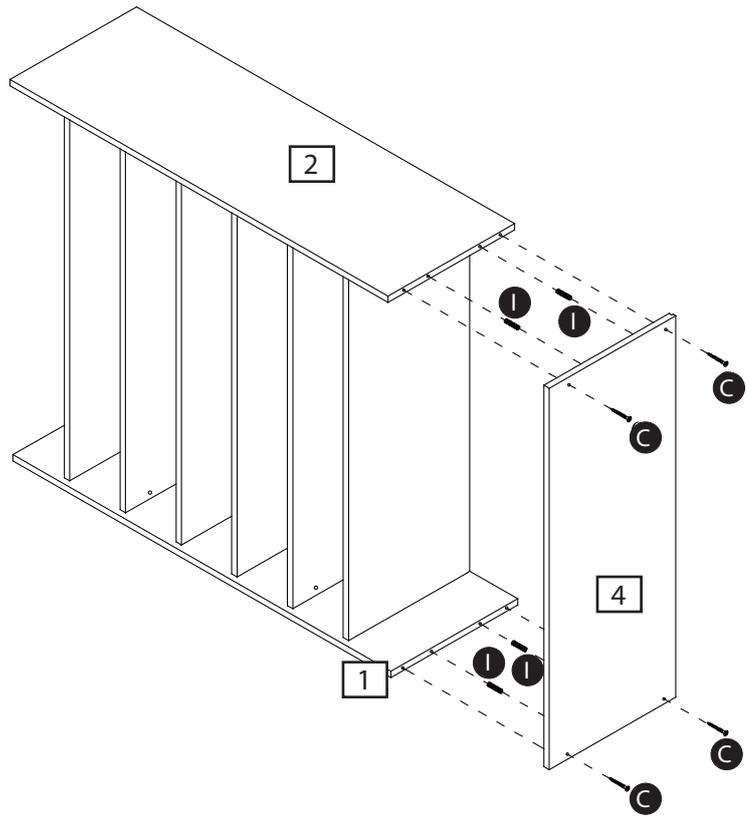

## Step 4

1. To Base Panel **4** connect 4 x Feet **G** using 4 x Screws **H** per Foot

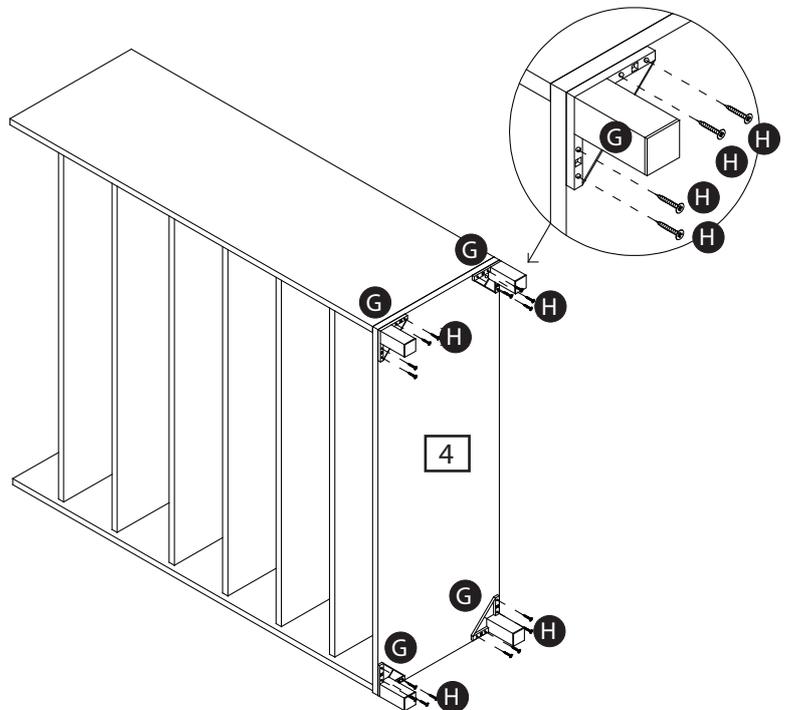

# Assembly Instructions

## Step 5

Lift the unit to its feet





**Warning:**

The unit is heavy.

**Lift with care.**

1. Insert 4 x Male Camlocks **A** into the underside of Top panel **3**
2. Locate Top panel **3** onto Side Panels **1** and **2**.
3. Into Holes shown in Side Panels **1** and **2** insert 4 x Female Camlocks **B**  
Use a screwdriver to turn the Female Camlocks Clockwise to lock

For more information refer to the Using Camlocks Section

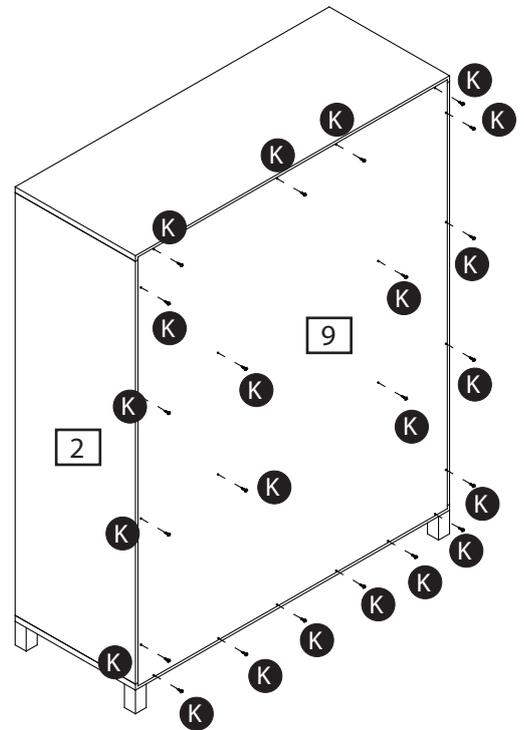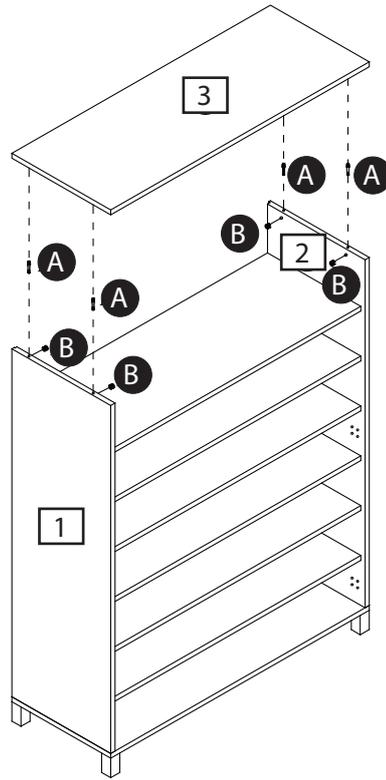


## Step 6

1. Connect Back panel **9** using 22 x **K** screw **K**

## Step 7

1. To Left Door **7** and Right Door **8** Connect 2 x Handle **J** Using 2 x Screw **D** per Handle.
2. Connect 3 x Hinges **F** to Left Door **7** using 2 x Screw **E** per Hinge.
3. Connect 3 x Hinges **F** to Right Door **8** using 2 x Screw **E** per Hinge.
4. Attach Left Door **7** by connecting the hinges to Left Side panel **1** using 4 x Screw **E** per Hinge
5. Attach Right Door **8** by connecting the hinges to Right Side panel **2** using 4 x Screw **E** per Hinge

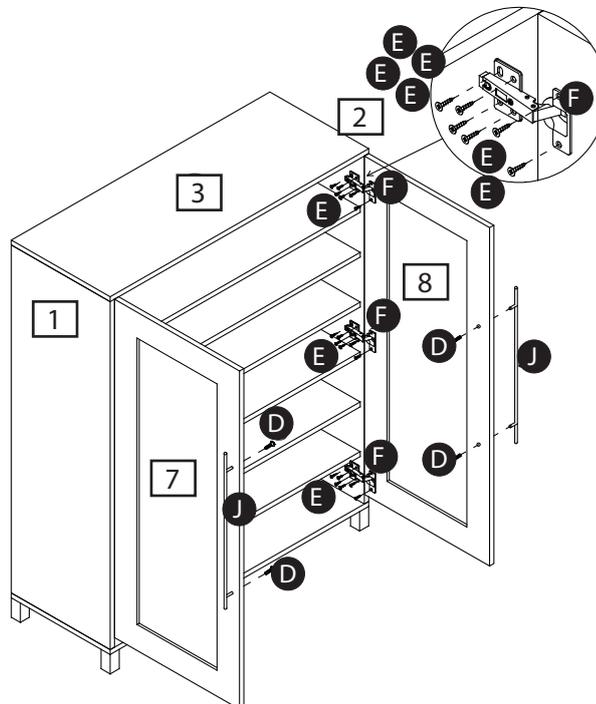

# Assembly Instructions

## Step 8

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Connect 2 x wall straps **M** to the unit with 2 x screws **K** in position Shown

2. Move the unit into desired position.



**Warning:**  
The unit is heavy.  
Lift with care.

3. Mark the wall with a suitable scribe the position of the fixing holes.




**Warning:**  
Before drilling, check wall for hidden pipes and cables.

4. Drill holes and insert 2 x wall plugs **L**

5. Secure the straps to the wall using 2 x screws **C**

*Note:* To hide the straps behind the unit, drill the holes lower than the top of the unit

Assembly Complete

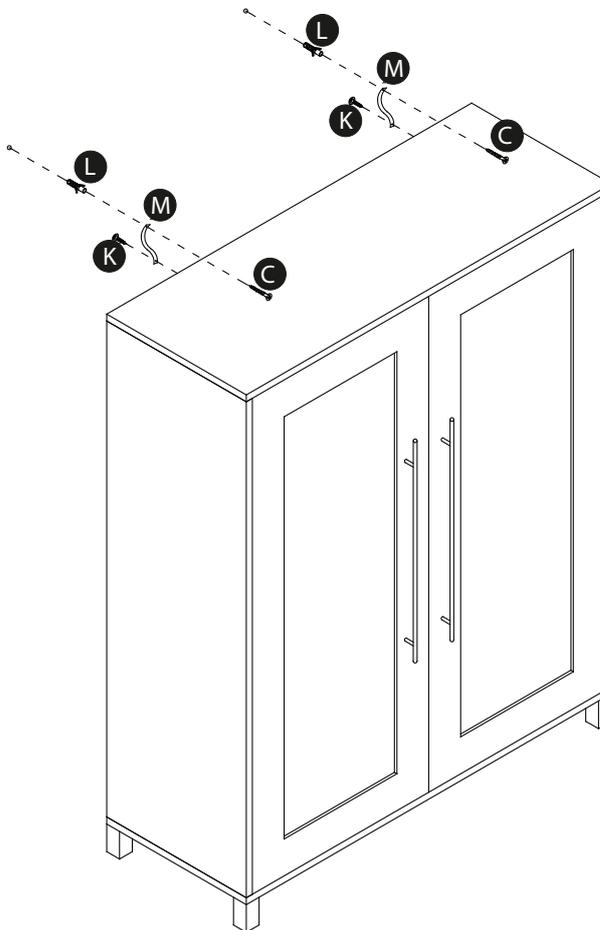


# A guide to wall mounting & fixings

## Important note:

If plastic wall plugs are supplied with your product, these are only suitable for use in masonry walls.

e.g.:



If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



**Important:** when drilling into walls always check that there are no hidden wires or pipes etc.

**Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.**


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

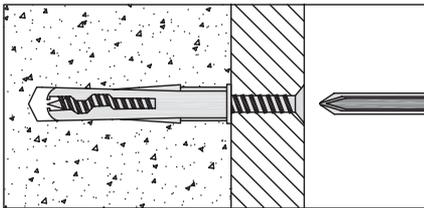


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

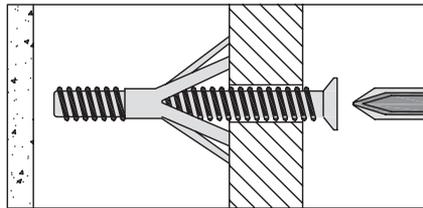


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

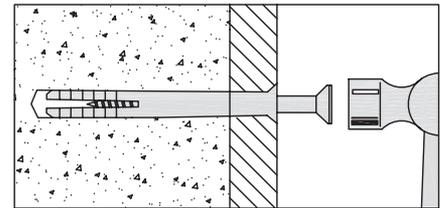


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

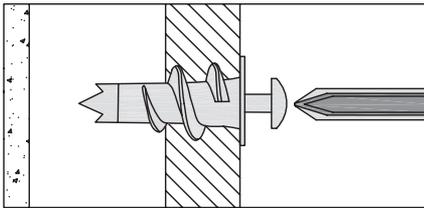


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

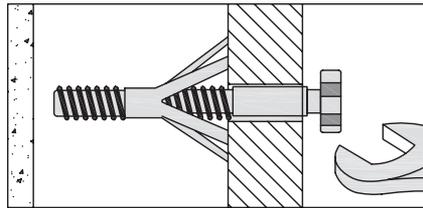

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

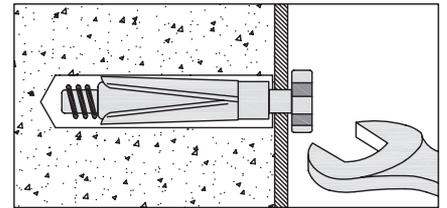

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



## Care & Maintenance

**Safety:** always check the fitting and location to ensure your safety in and around the home.

**Fitting:** from time to time check the fitting to ensure the wall plugs or screws do not become loose.