






Firmly insert black plug (M) into axle opening, as shown. Align spring lock with dropout hole in axle and push firmly into position, until piece "clicks" into place.

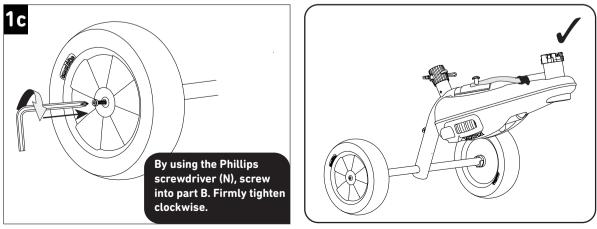


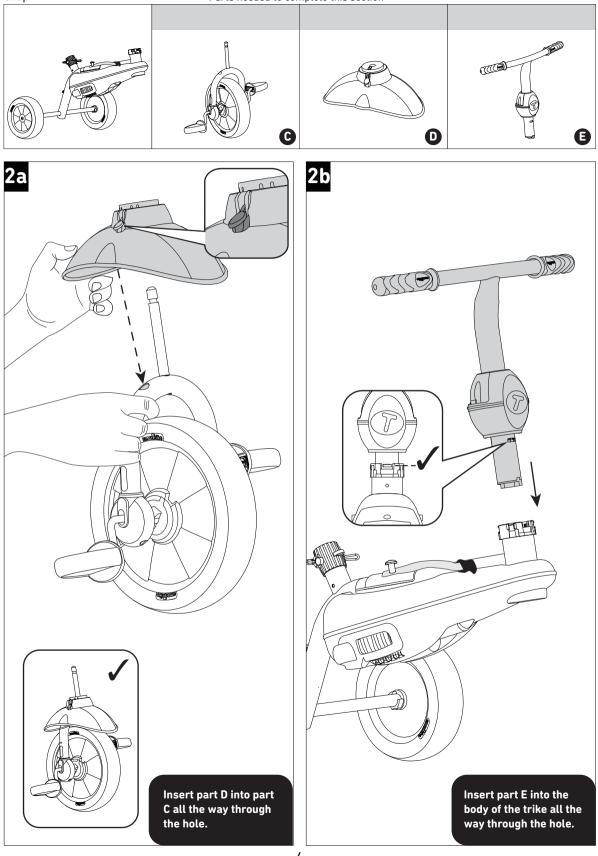


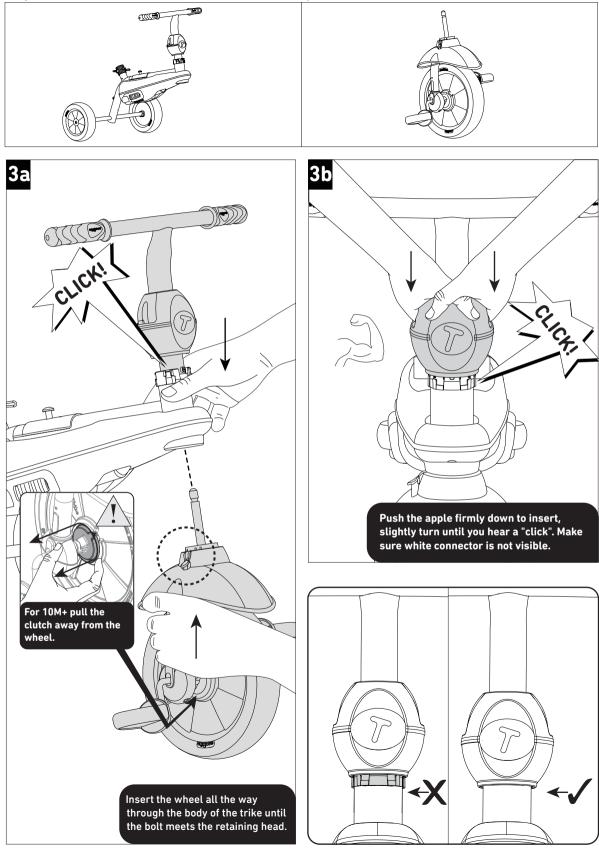


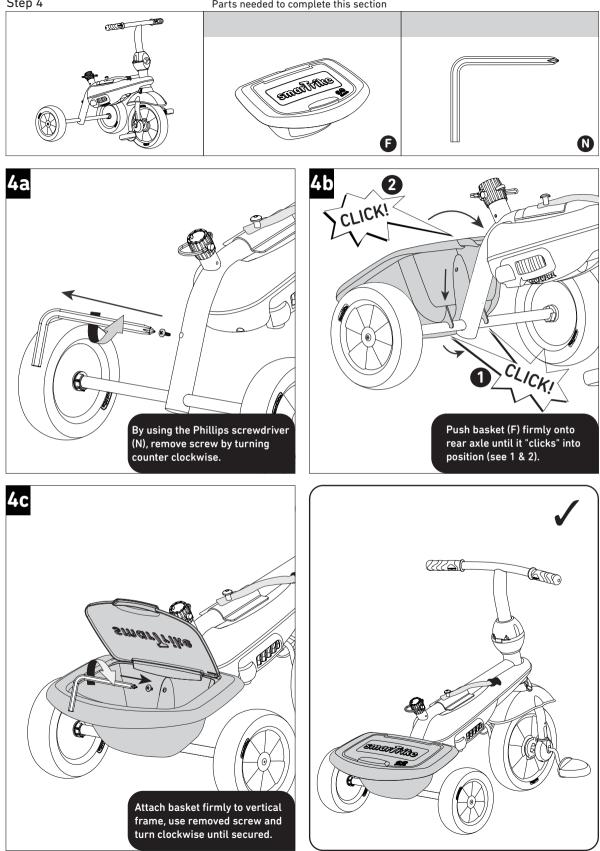

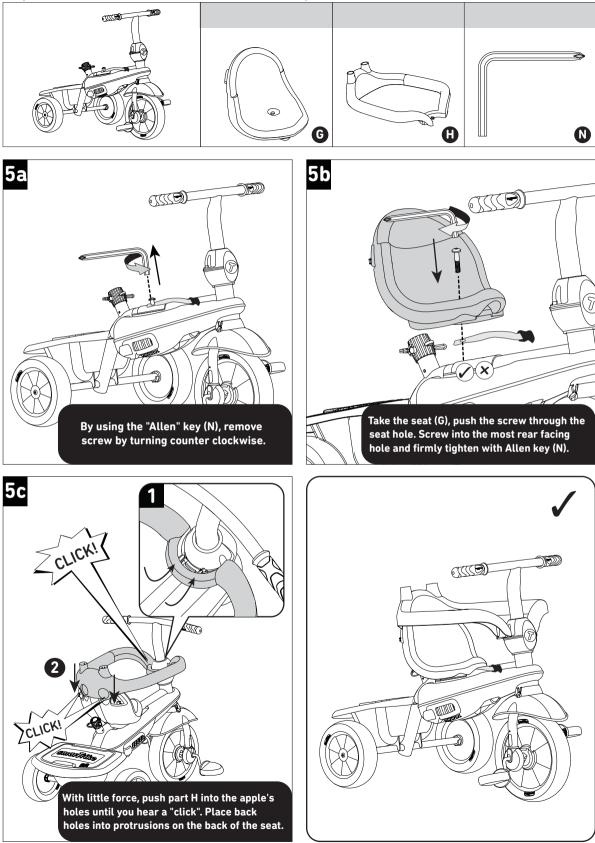


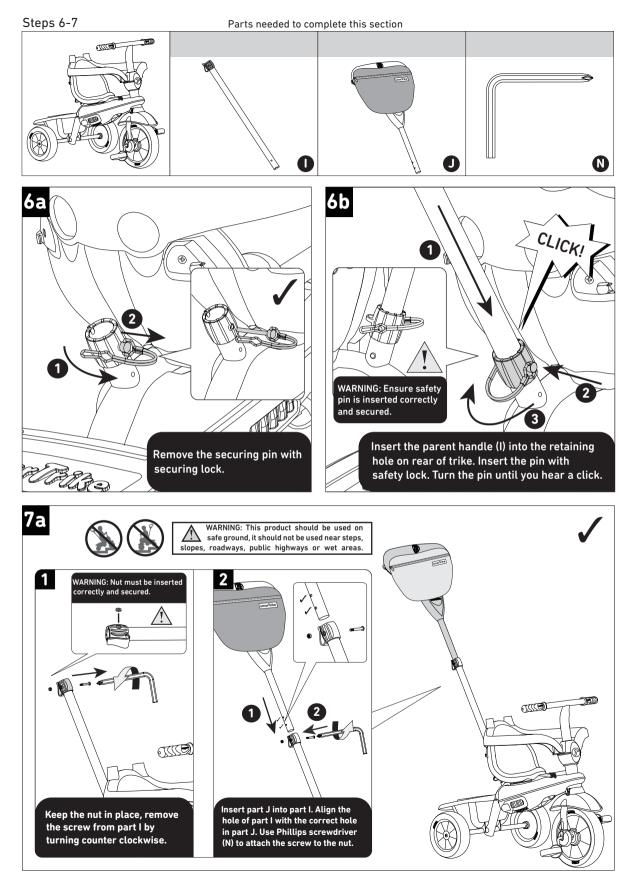


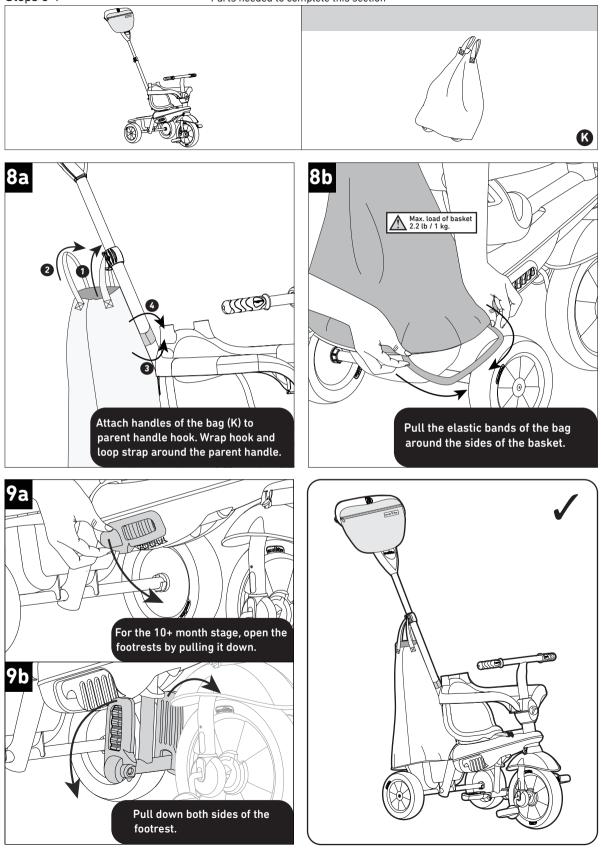

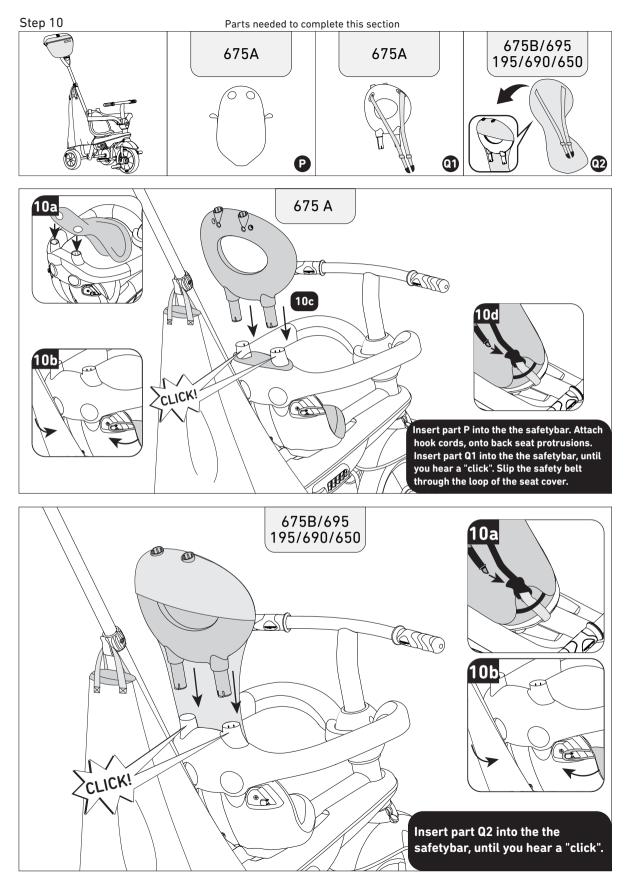


-10-

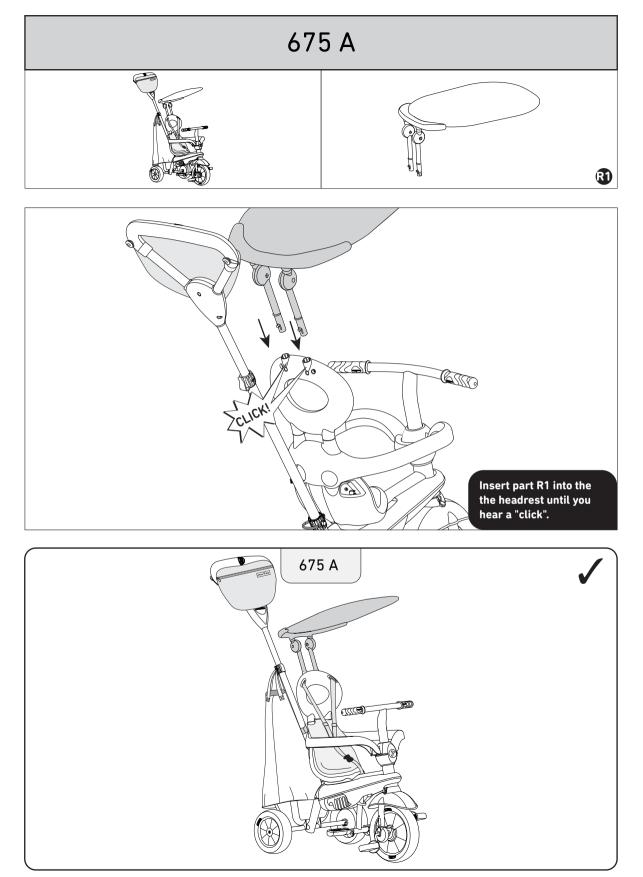


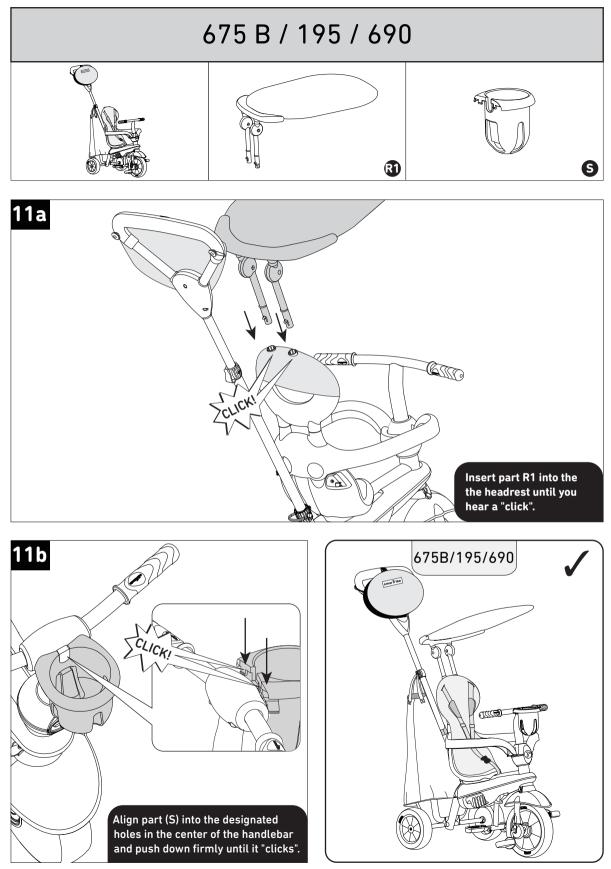

-12-

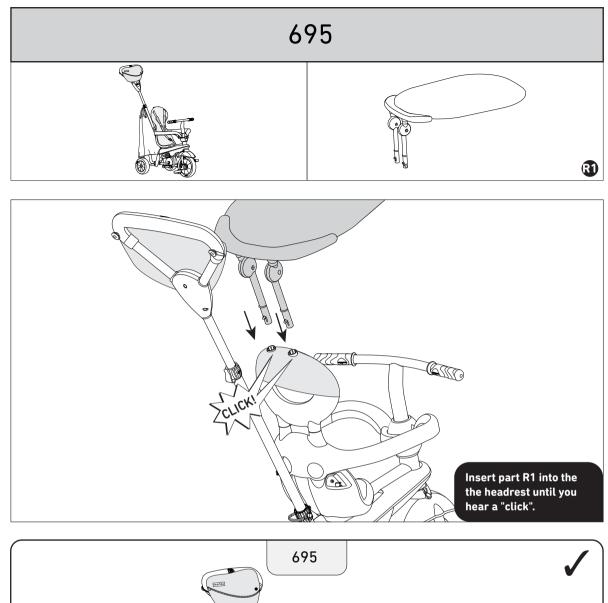



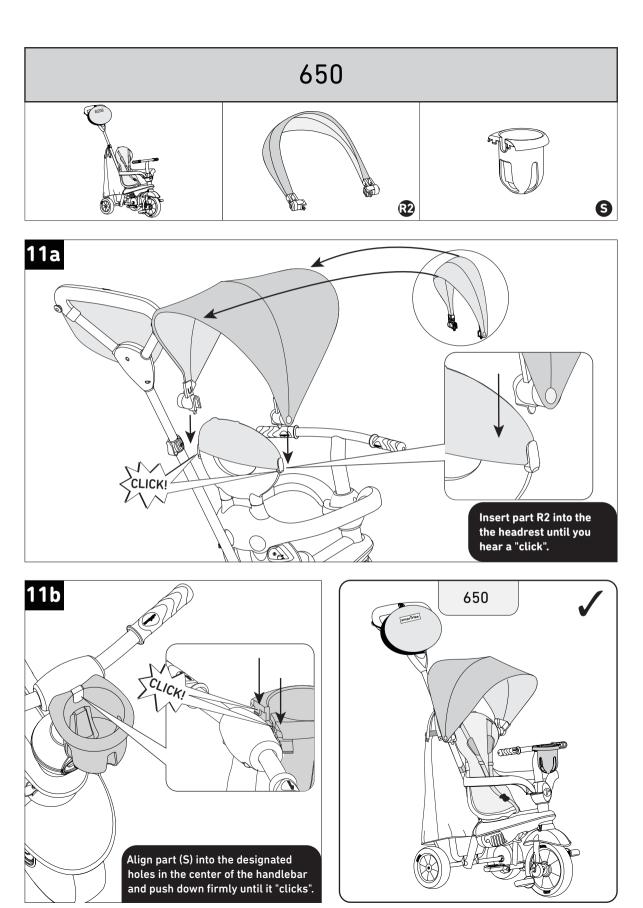



Parent Control





Child Control




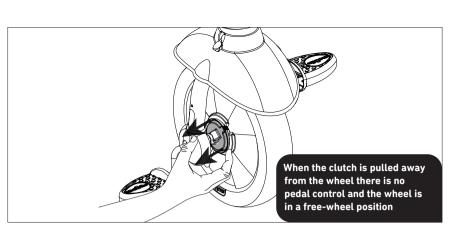


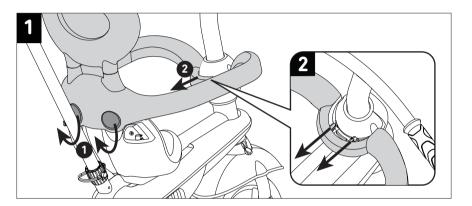


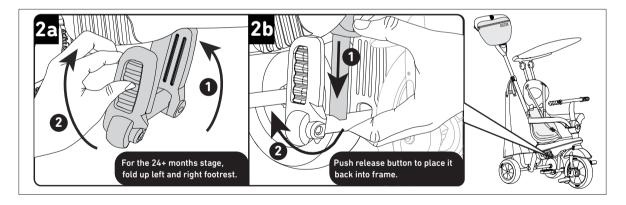

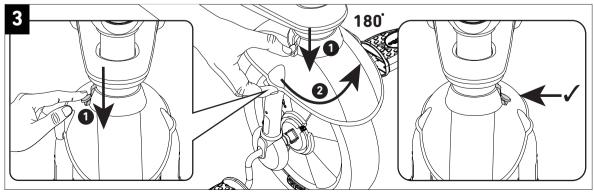

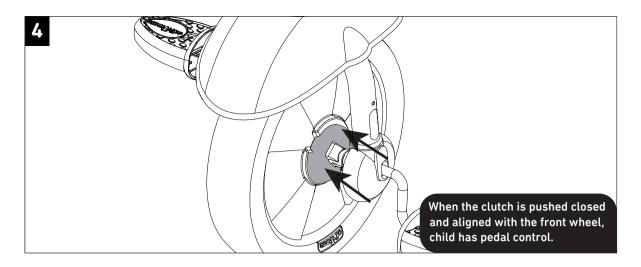

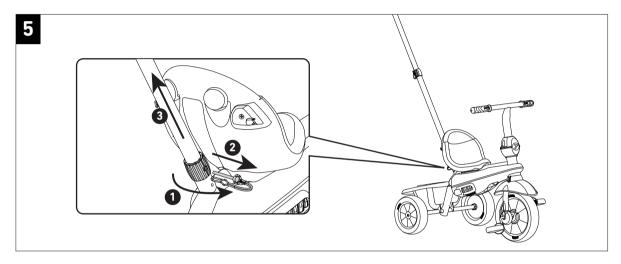

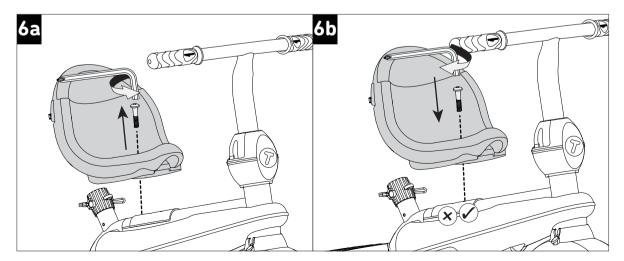

66528057603