

# New Hallingford - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference


274/4917

266/7379

266/4509

258/7693

266/2910

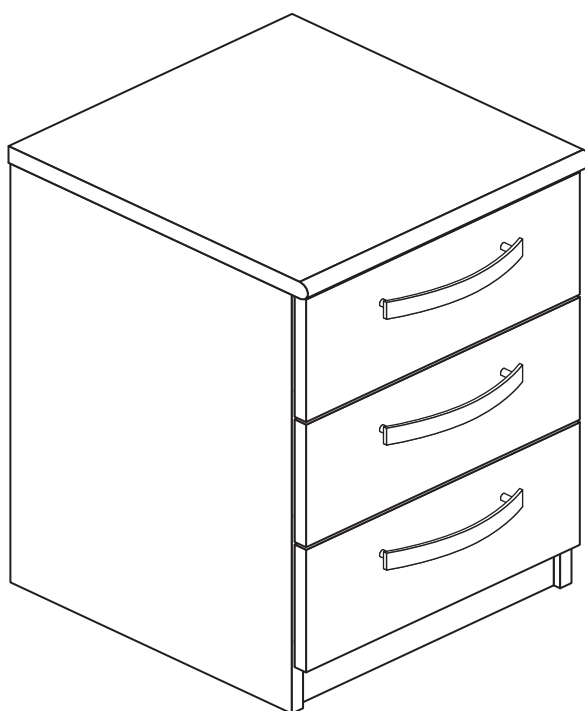

## Dimensions

Width - 37.5cm

Depth - 40cm

Height - 58cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 14kgs. Please lift with care.
  - Check you have all the components and tools listed on pages 2 and 3.
  - Remove all fittings from the plastic bags and separate them into their groups.
  - Keep children and animals away from the work area, small parts could choke if swallowed.
  - Parts of the assembly will be easier with 2 people.
  - Make sure you have enough space to layout the parts before starting.
  - Do not stand or put weight on the product, this could cause damage.
  - Assemble the item as close to its final position (in the same room) as possible.
  - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
  - **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
  - Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
**Customer Helpline: 0870 112 1928** or email:  
**Help@ClickSpares.co.uk** (quoting your original order number  
and the reference numbers below)


Please check you have all the panels listed below

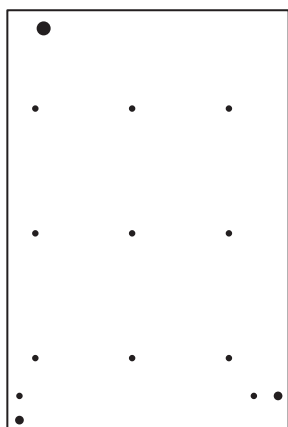


**1** Left Side (D2307A)  
(556 x 372mm)

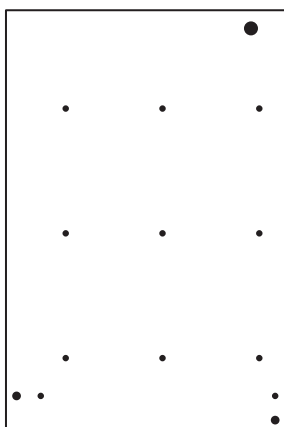


**2** Right Side (D2308A)  
(556 x 372mm)

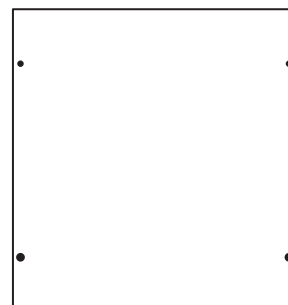


**3** Top (D2306A)  
(375 x 396mm)




**4** Rail (D2310A)  
(340 x 66mm) x 2

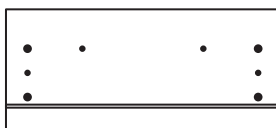


**5** Drawer Front (D2309A)  
(362 x 162mm) x 3




**6** Left Drawer Side (W370-124LH)  
(370 x 124mm) x 3



**7** Right Drawer Side (W370-124RH)  
(370 x 124mm) x 3



**8** Drawer Back (W291-124)  
(291 x 124mm) x 3



**9** Drawer Base (T304-367)  
(304 x 367mm) x 3



**10** Back (X535-366)  
(535 x 366mm)










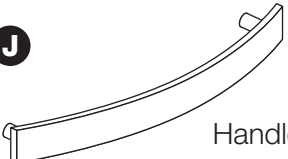









# Components - Fittings

If you have damaged or missing components, call the  
**Customer Helpline: 0870 112 1928** or **email:**  
**Help@ClickSpares.co.uk** (quoting your original order number  
and the reference numbers below)

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b>  Wooden dowel (F22) x 6	<b>B</b>  Metal dowel (F901) x 12	<b>C</b>  Small locking nut (F3) x 6
<b>D</b>  Large locking nut (F900) x 6	<b>E</b>  Knock-in Peg (F171GY) x 12	<b>F</b>  Nail (F51) x 12
<b>G</b>  19mm Screw (F461) x 6	<b>H</b>  13mm Screw (F52) x 18	<b>I</b>  13mm Screw (F63) x 18
<b>J</b>  Handle (F278) x 3	<div data-bbox="582 985 1484 1310"> <b>K a</b>  L Runner (F159) x 3    <b>K b</b>  R Runner (F160) x 3  <b>K c</b>  L Runner (F161) x 3  <b>K d</b>  R Runner (F162) x 3             </div>	
<b>L</b>  Wedgefix (F639) x 6		
<b>M</b>  Plastic Nail (F91) x 4		

## Tools required



Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection  
(when using a  
hammer or drill)



Electric drill  
(do not use for  
fitting screws)

**Ruler** - Use this ruler to help correctly identify the screws

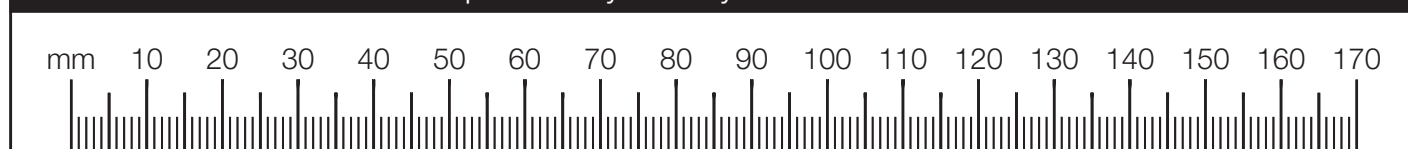

# Assembly Instructions


If you have damaged or missing components, call the Customer Helpline: 0870 112 1928 or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number and the reference numbers below)

## Step 1

### Prepare the 3 drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **5**.

**Note:** Tighten metal dowels up fully against the panels.

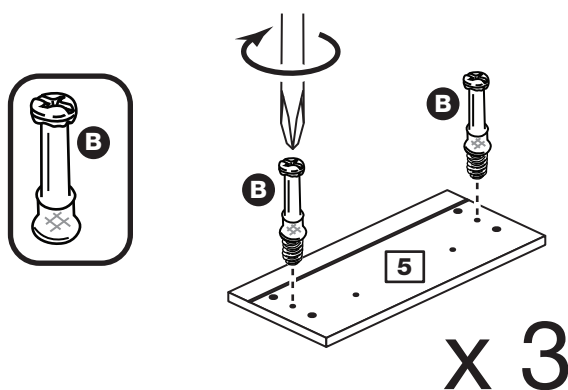


## Step 2

### Prepare the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side **6** and right drawer side **7**.

**Note:** Arrow on locking nut **must** point towards hole in edge of panel.

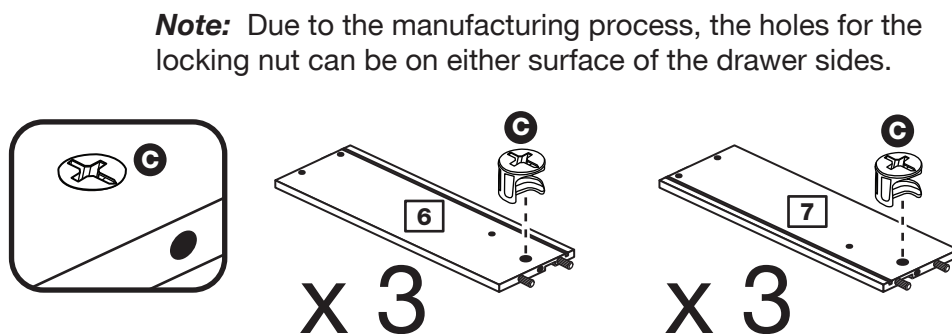


## Step 3

### Attach the drawer sides to the drawer front

Push the left drawer side **6** and right drawer side **7** onto the back of the drawer front **5**.

Turn the small locking nuts **C** on the left drawer side **6** and right drawer side **7**.

**Note:** Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

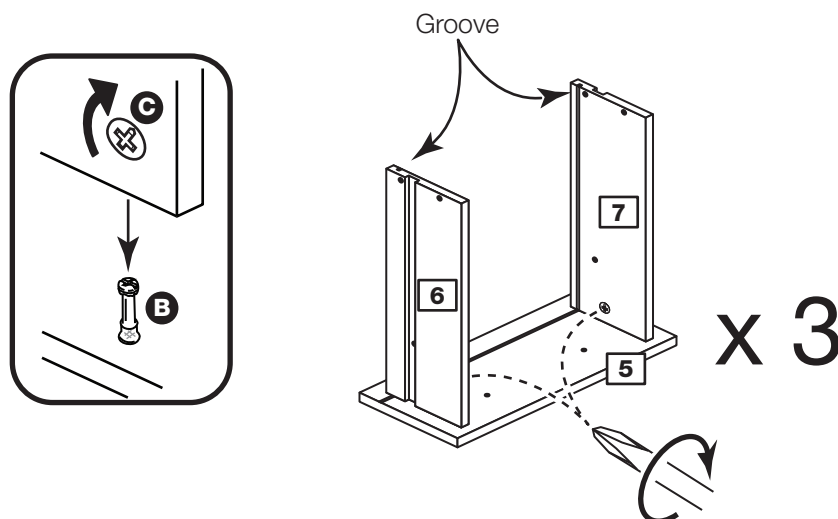


**Note:** The locking nuts can be on either surface of the drawer sides. Make sure that the groove is on the inside, as shown.

# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **9** down the grooves in the drawer sides **6** and **7** and down into the groove in the drawer front **5**.

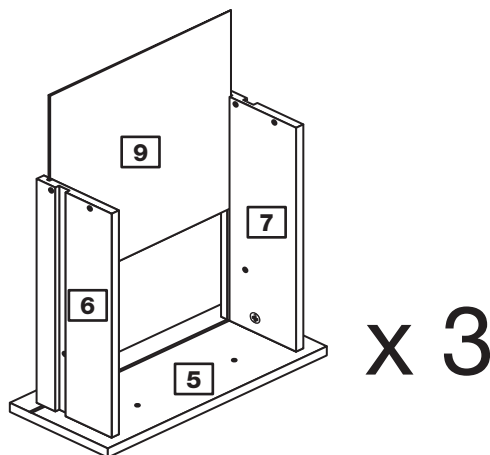


## Step 5

### Fit the drawer back

Fit the drawer back **8** between the drawer sides **6** and **7**.

Make sure that the drawer base **9** fits into the groove in the drawer back **8**.


Hold the drawer back **8** in position and tap the knock-in pegs **E** through the holes in the drawer sides **6** and **7**.

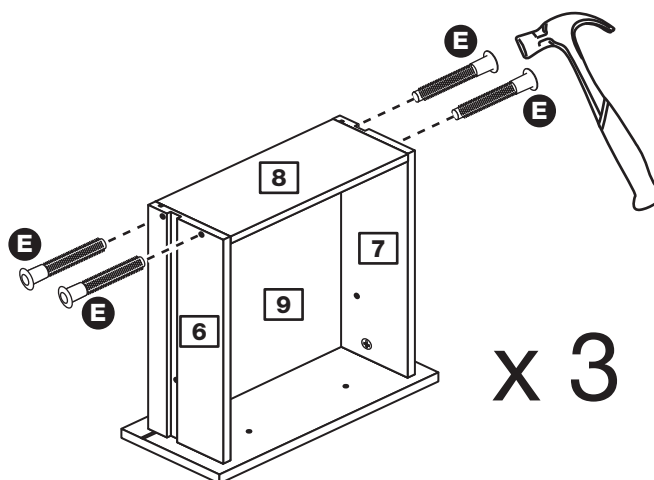

## Step 6

### Attach the handle


Attach a handle **J** to each drawer front **5** using 2 screws **G**.

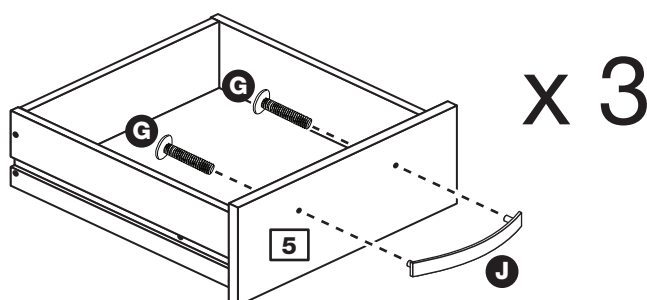

## Step 7

### Fit the wedgefixes

Turn the drawer assemblies over and slide 2 wedgefixes **L** into the front and back grooves, as shown, and tighten up the screws.

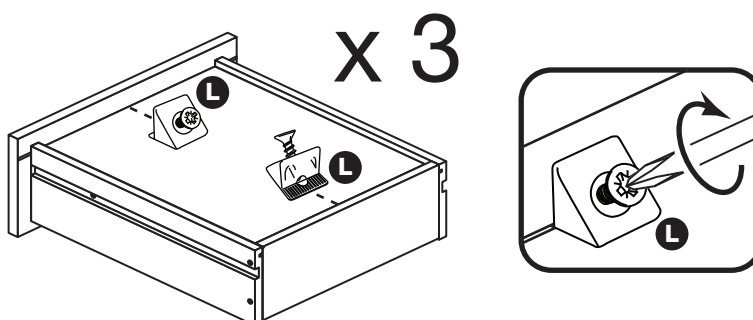

# Assembly Instructions

## Step 8


### Fit runners to the drawers

Turn the 3 drawer assemblies over.

Fit runner **Kd**, marked with 'R', to the bottom edge of the right drawer side **7**, as shown, making sure that it is pushed up against the back of the drawer front **5**.

Use a bradawl to mark the fixing positions, then secure with 2 screws **I**.

Fit runner **Kc**, marked 'L', to the bottom edge of the left drawer side **6** using the same method.

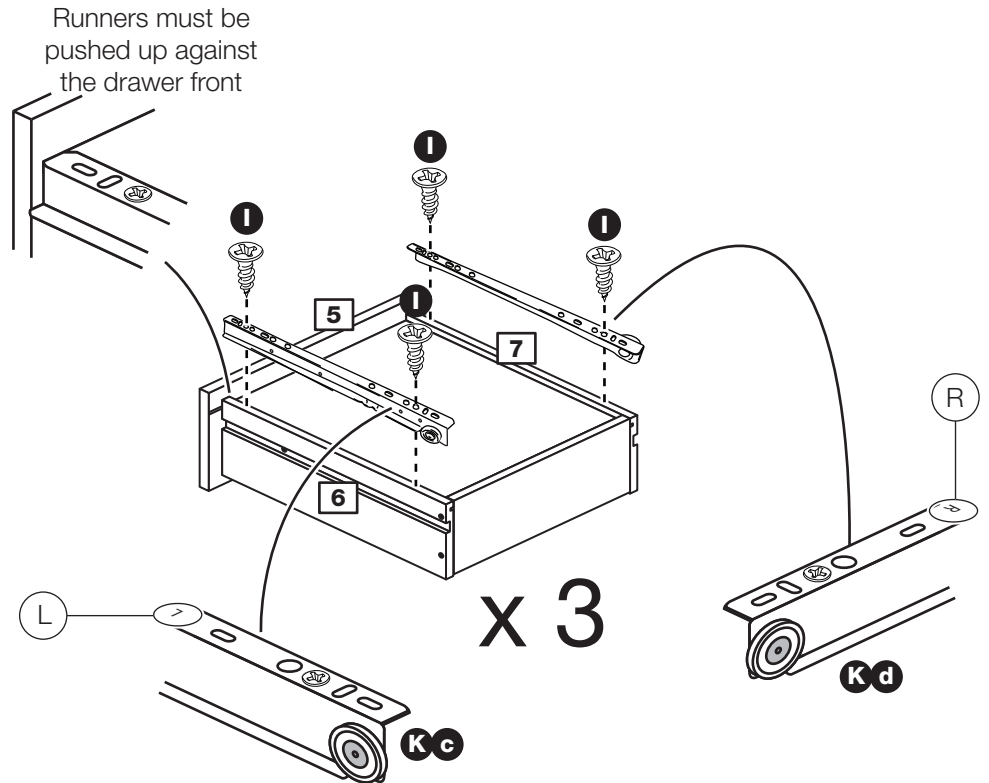

## Step 9


### Prepare the 2 rails

Tap 2 wooden dowels **A** into each rail **4**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts **D** into each rail **4**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

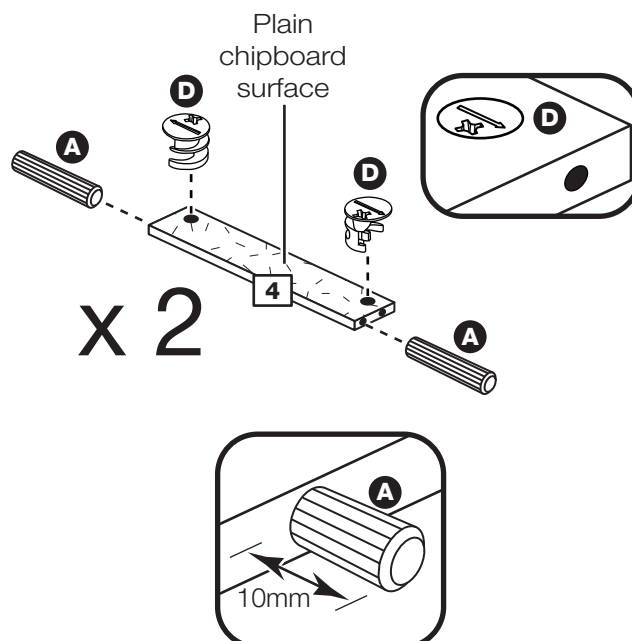

# Assembly Instructions


## Step 10

### Prepare the left side


**a:** Fit 3 runners **K a** to the left side **1**.

The 1st screw **H** uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

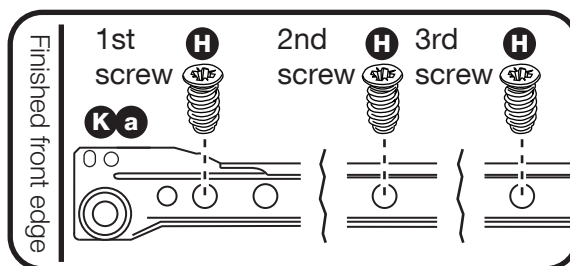

**a:**

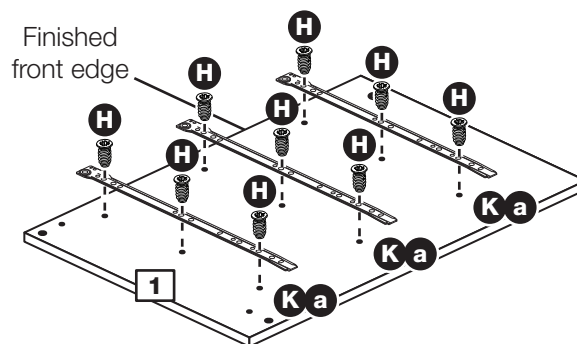


**b:** Fit a screw **I** into the 2nd hole in at the top of the runners **K a**.

Screw 2 metal dowels **B** into the left side **1**.


Insert a large locking nut **D** into the left side **1**.

Tap a wooden dowel **A** into the left side **1**.

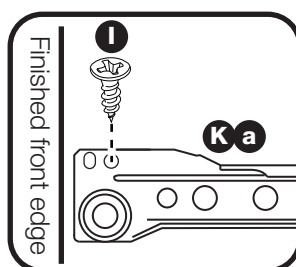

**b:**

Finished front edge

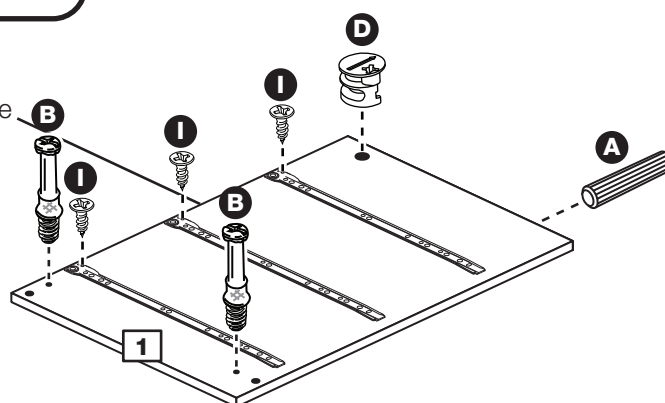



# Assembly Instructions



## Step 11

### Prepare the right side

**a:** Fit 3 runners **Kb** to the right side **2**.

The 1st screw **H** uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws **H** use the holes that line up with the other panel holes.

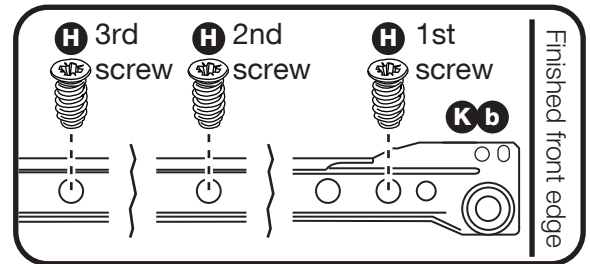
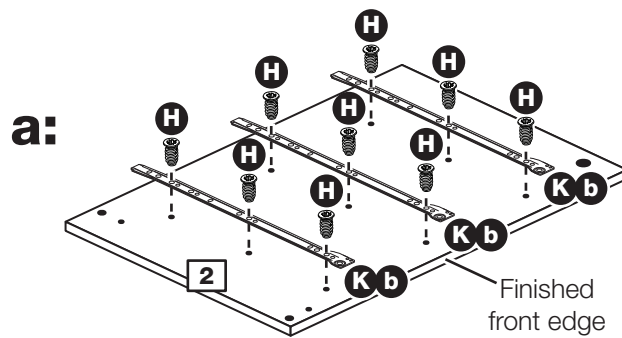


**b:** Fit a screw **I** into the 2nd hole in at the top of the runner **Kb**.

Screw 2 metal dowels **B** into the right side **2**.

Insert a large locking nut **D** into the right side **2**.

Tap a wooden dowel **A** into the right side **2**.

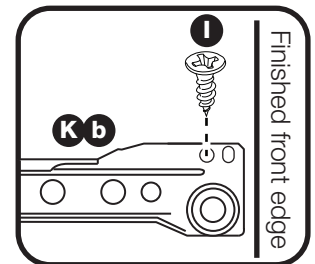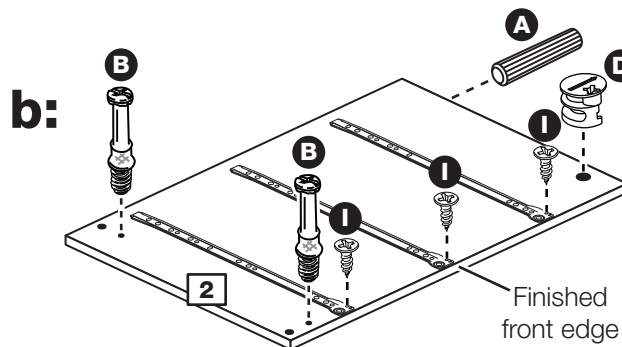



## Step 12

### Join the right side and rails

Push the 2 rails **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the rails **4**.

**Note:** Turn the large locking nuts **D** as far as they will go - more than 1/2 a turn.

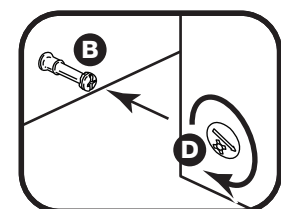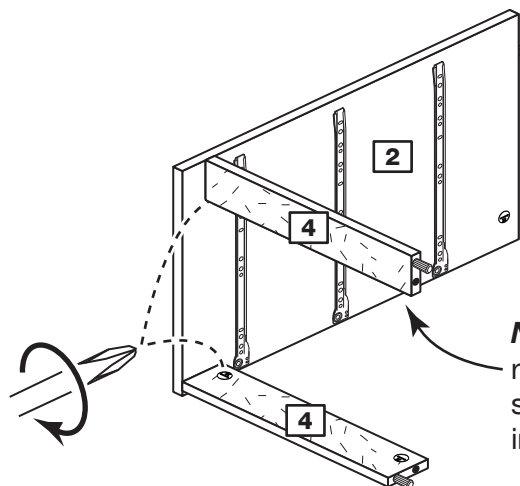

**Note:** Support this rail until the left side has been fitted in the next step.


# Assembly Instructions

## Step 13

### Fit the left side

Push the left side **1** onto the 2 rails **4**.


Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the rails **4**.

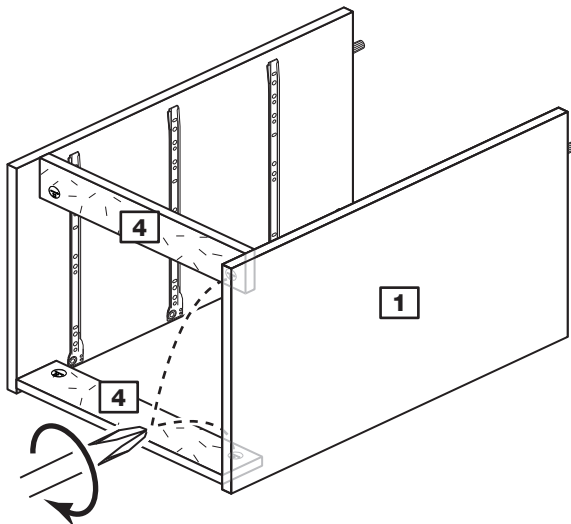

## Step 14

### Prepare the top

Screw 2 metal dowels **B** into the top **3**.

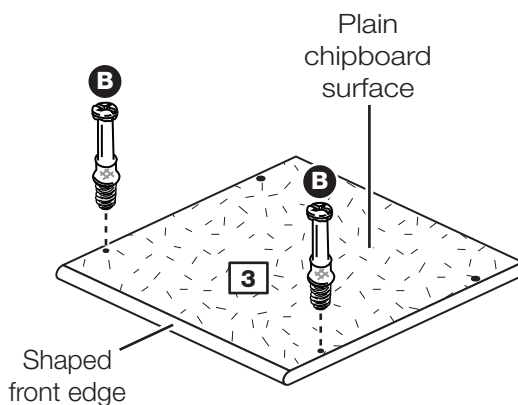


## Step 15

### Fit the top

Push the top **3** onto the 2 sides **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the sides **1** and **2**.

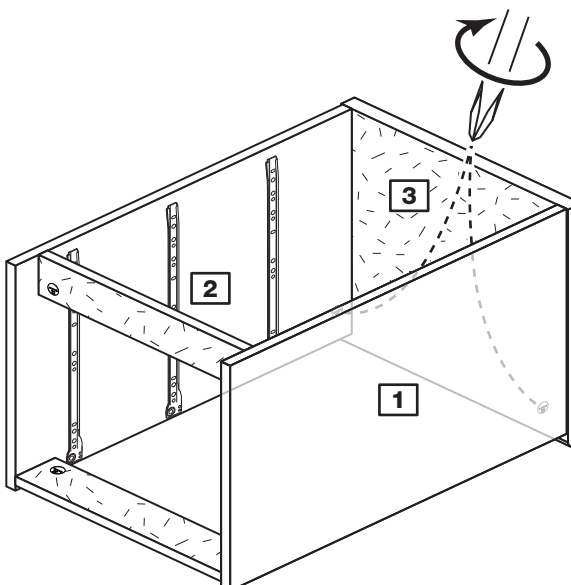

# Assembly Instructions

## Step 16

### Fit the back

**a:** Square up the unit by making sure that measurement **x to x** equals **y to y**.

**b:** Place the back **10** onto the unit.

Nail **F** around the outside edges of the back **10**.


**Note:** Nails should be spaced about 150mm apart.

**Stand the unit up for the next step.**



**Warning:** The unit is heavy. Lift with care.


**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

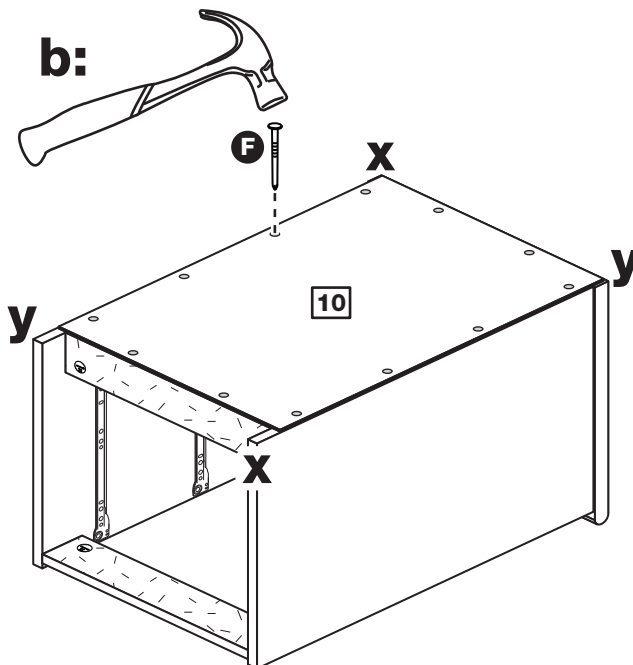

## Step 17

### Fit the 4 plastic nails

Tap 2 plastic nails **M** into the bottom edge of each of the sides **1** and **2**.

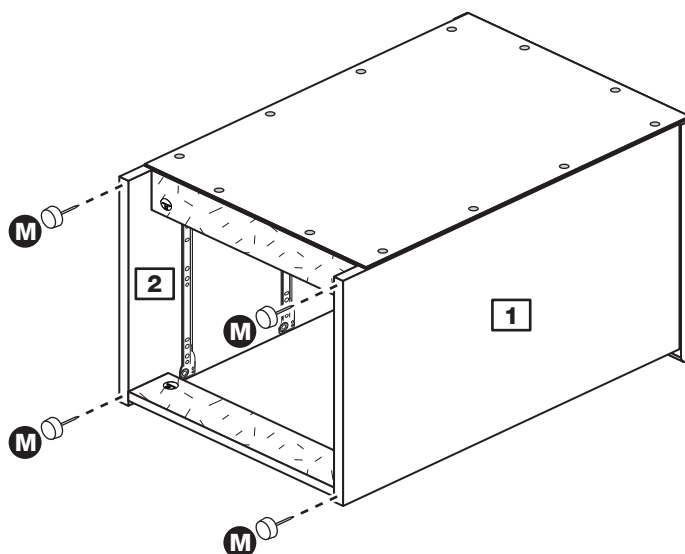



# Assembly Instructions

## Step 18

### Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

**Assembly is complete**

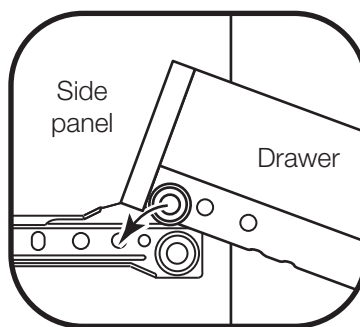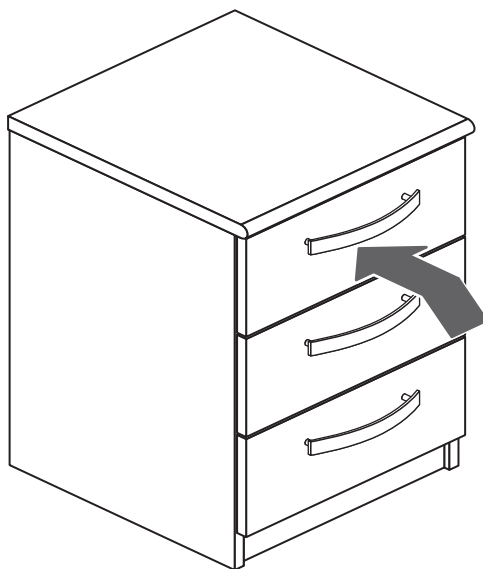

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or email: **Help@ClickSpares.co.uk** (quoting your original order number and the reference numbers on the component pages)  
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW