


# Bergen 2 drawer internal chest 120

Assembly Instructions Please keep for future reference

246/7287

**hygena**

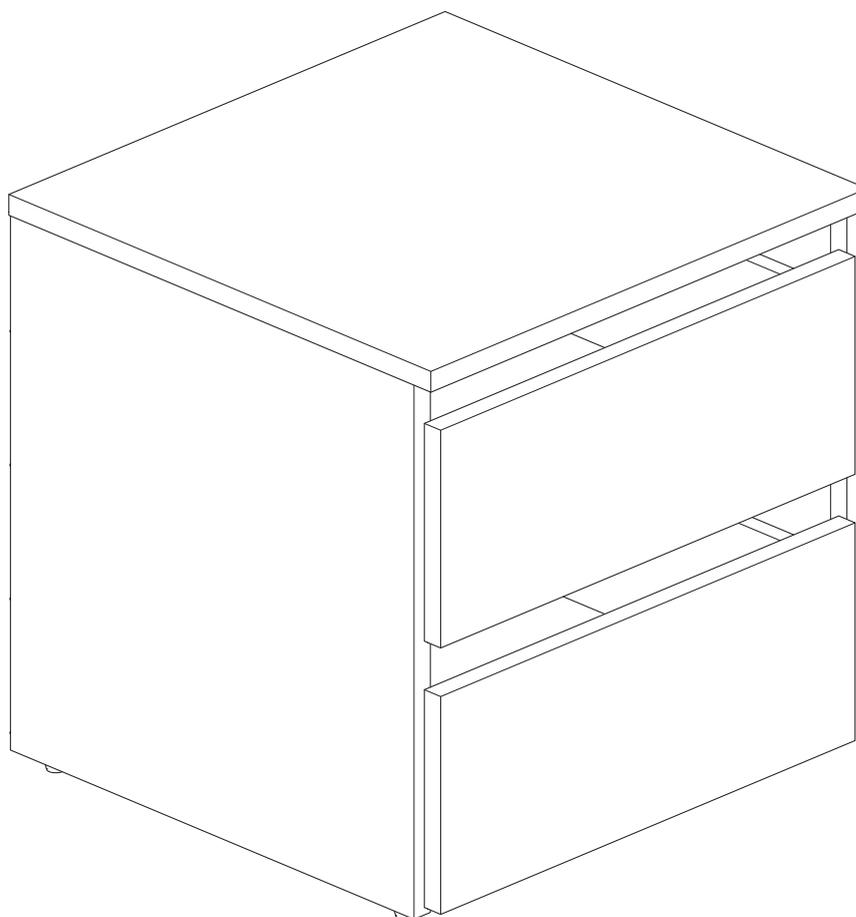

## Dimensions

Width - 40cm  
Depth - 38.7cm  
Height - 40.1cm

**Tip : To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.**

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, please visit: [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk) (quoting your original order number)  
Alternatively, call the Spares Helpline on: **0370 112 1928**  
For any other queries please contact the Customer Helpline on: **0345 640 2020**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

**Glue safety - Take care when using glue, please follow the advice below**

**Skin contact:** Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

**Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

**If swallowed:** Seek medical advice immediately.

**Care and maintenance**

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Handy Hints**

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightend properly.

*Note:* if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

For damaged or missing parts, please visit:  
[www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk)


Please check you have all the panels listed below

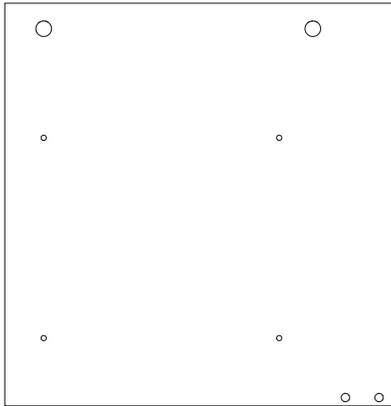


**1** Left side  
(38.6 x 37cm)  
P2878

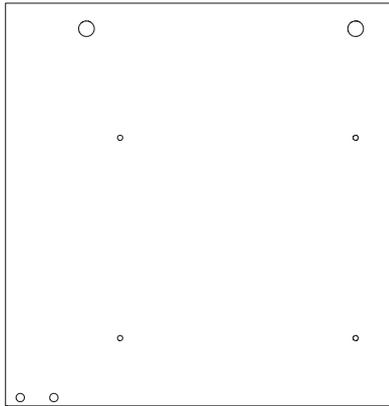

**2** Right side  
(38.6 x 37cm)  
P2877

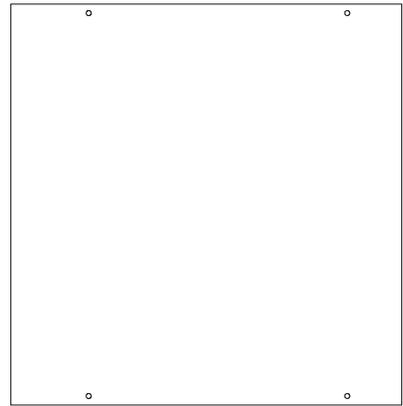


**3** Top  
(40 x 38.7cm)  
P1645

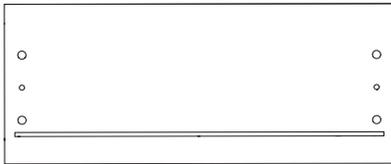


**4** Drawerfront x 2  
(38 x 15.7cm)  
P4469




**5** Plinth  
(36.7 x 6cm)  
P7029

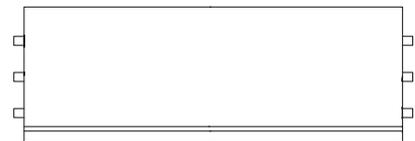


**6** Drawer Back x 2  
(33.3 x 12cm)  
LA163609

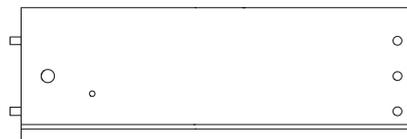


**7** Left Drawer Side x 2  
(35 x 12cm)  
LA163709

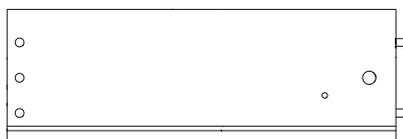

**8** Right Drawer Side x 2  
(35 x 12cm)  
LA163809

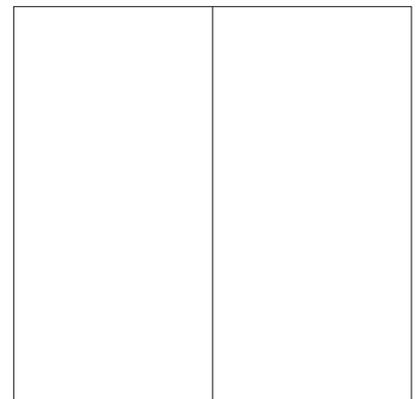

**9** Folded Back  
(39.3 x 39.3cm)  
BO343209



**10** Drawer Base x 2  
(34.3 x 34.3cm)  
BO352909







# Components - Fittings

For damaged or missing parts, please visit: [www.argos-support.co.uk](http://www.argos-support.co.uk) or email: [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


1/1

|  |   |  |
|--|---|--|
| <p><b>A</b>   <small>FK1012</small></p> <p>Large locking nut x 4 (15x12mm)</p> | <p><b>B</b>  <small>FK1011</small></p> <p>Locking screw x 8 (5x24mm)</p> | <p><b>C</b>   <small>FK1010</small></p> <p>Small locking nut x 4 (12x10mm)</p> |
| <p><b>D</b>  <small>FK1301</small></p> <p>10mm Fixing screw drawer x 8</p>  | <p><b>E</b>  <small>FK1411</small></p> <p>Wood dowel x 4 (8x30mm)</p>    | <p><b>F</b>  <small>FK1515</small></p> <p>Nail x 30</p>   |
| <p><b>G</b>  <small>FK198</small></p> <p>9mm Screw x 4</p>  | <p><b>H</b>  <small>FK1415</small></p> <p>Nail holder x 1</p>            | <p><b>I</b>  <small>FK1250</small></p> <p>Drawerbase support x 8</p>  |
| <p><b>J</b>  <small>FA1510</small></p> <p>Glue x 1</p>  | <p><b>K</b>  <small>FK1233</small></p> <p>Furniture glide x 4</p>        | <p><b>L</b>  <small>PM16951</small></p> <p>Runner x 4</p>   |
|  |   |  |
|  |   |  |
|  |   |  |


## Tools required



Phillips screwdriver  
(medium & large)



Flatblade screwdriver  
(medium)




Setsquare



Small hammer



Ruler/tape measure




Scissors



Eye protection  
(when using a hammer or drill)

## Ruler - Use this ruler to help correctly identify the screws



4



The screws length is measured from the head to the point (30mm screw shown).


# Assembly Instructions

## Step 1

### Prepare the locking screws

**a:**  
Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **4**.


*Note:* Tighten metal dowels up fully against the panels.

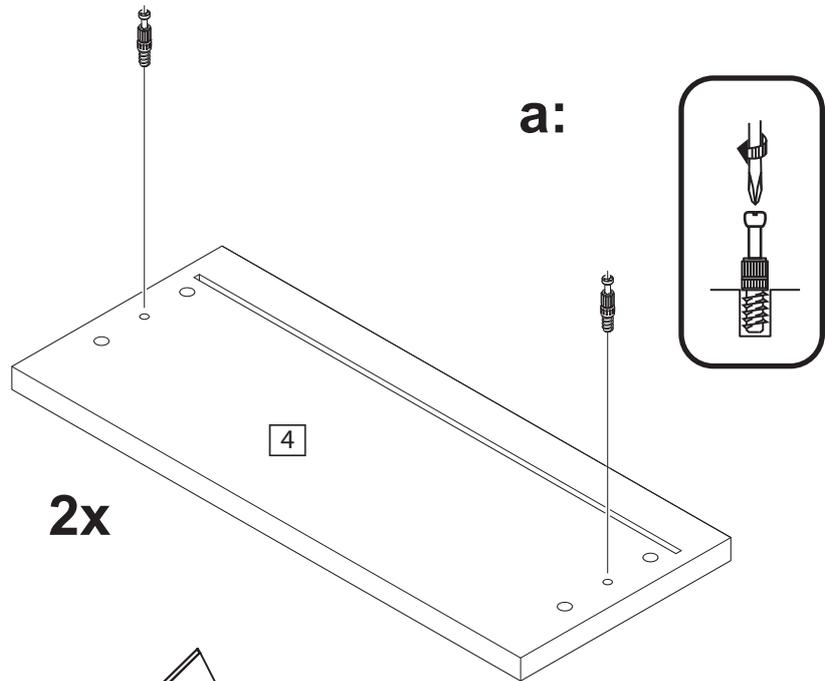


### b: Prepare the drawer sides

Insert a small locking nut **C** into the hole on left drawer side **7** and right drawerside **8**. Make sure the 'arrow' on **C** is pointing towards the hole in the edge of **7** and **8**.

Put drop of glue **J** in the 6 holes of drawersides **7** and **8** before sliding them onto the dowels of drawerback **6**. Slide drawerbase **10** in the grooves of the drawer-unit.

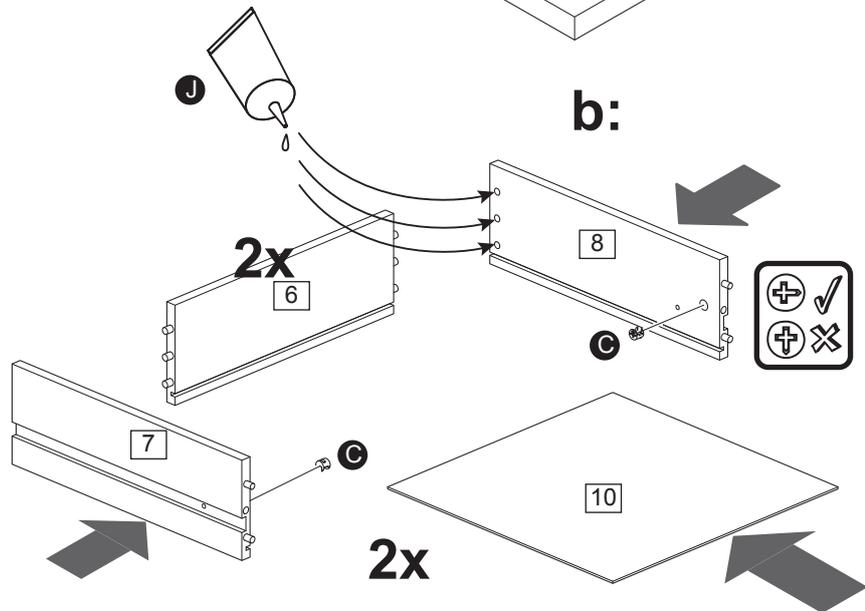

**c:** Turn the drawer wrap assembly over and push onto the drawer front **4**. Use a phillips or flatblade screwdriver, that is a good fit, to turn 24mm locking nut **C** as far as it will go - more than 1/2 turn.

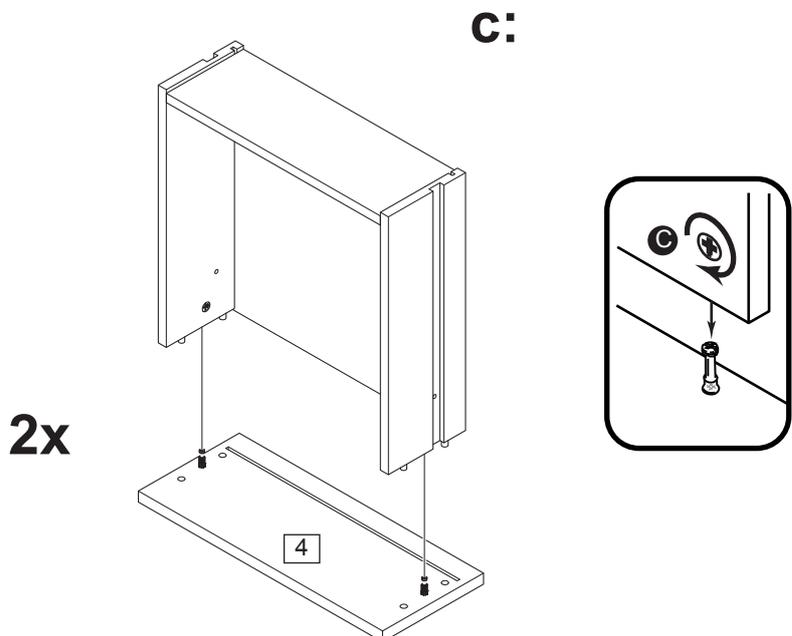


# Assembly Instructions

## Step 1 continued

### finishing the drawers



**d:** Turn over drawer and slide Drawerbase supports **1** in corner as shown and fix them, using the attached screws .

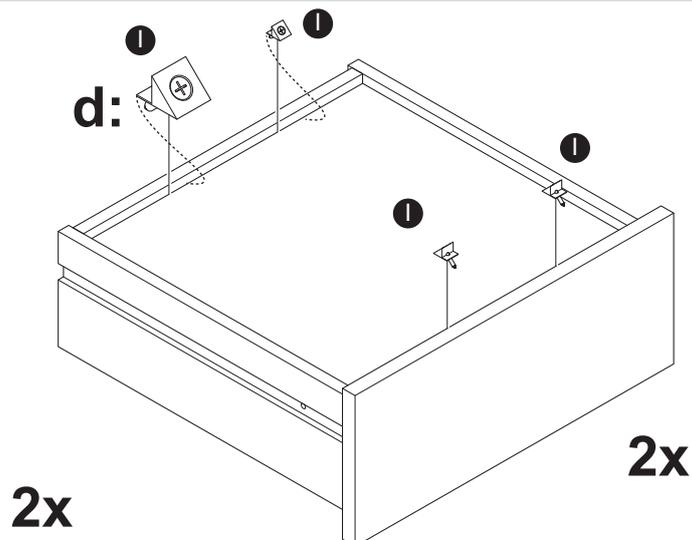



## Step 2

### Attaching runners

**a:** Slide top of runners **L** forward and fix on left side **1** as shown using 10mm fixing screw drawer **D**. Insert 2 Large locking nuts **A** into left side **1** where shown.

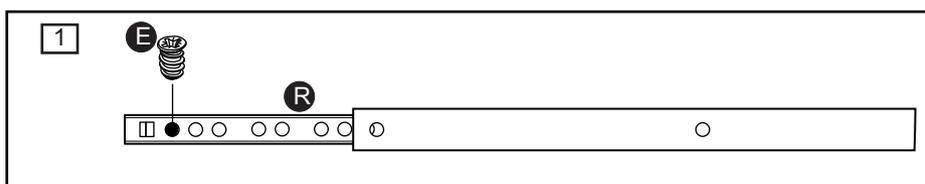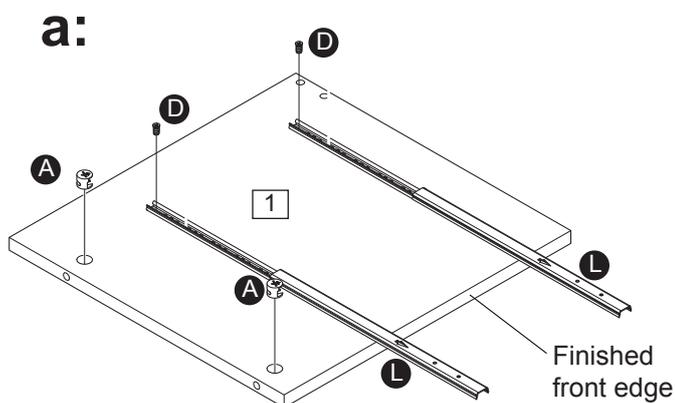

**b:** Slide top of runners back. Fix through 3rd hole of runner **L** and pre-drilled hole of left side **1** using 10mm fixing screw drawer **D**.

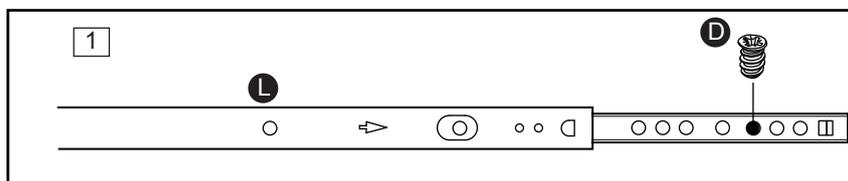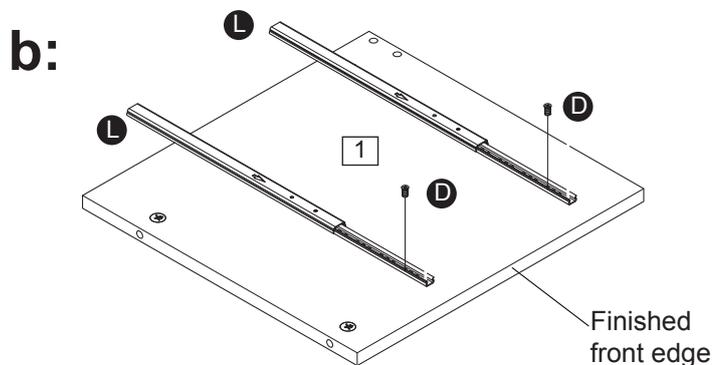

Repeat a and b on right sidepanel **2**

# Assembly Instructions


## Step 3

### Insert fittings on top

Screw 24mm locking screws **B** into top **3**.

*Note:* Insert 24mm locking screw **B** as far as shown.

**Do not over tighten.**

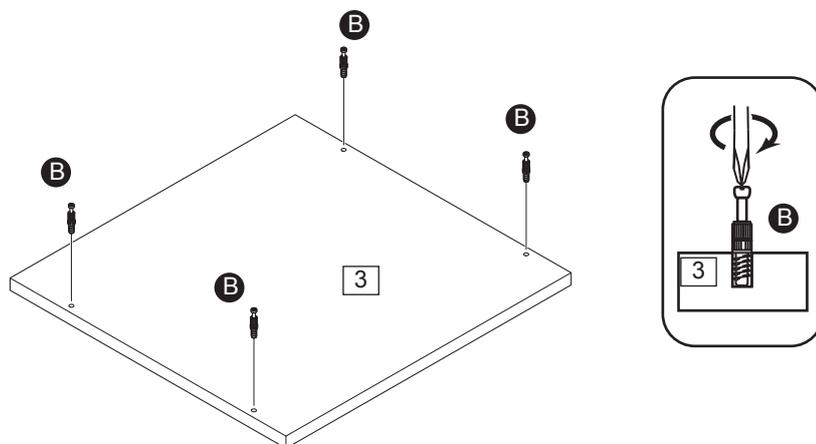


## Step 4

### Insert fittings on plinth

Put drop of glue **J** in the 4 holes of plinth **5**.


Then put dowels **E** into the holes of plinth **5**.

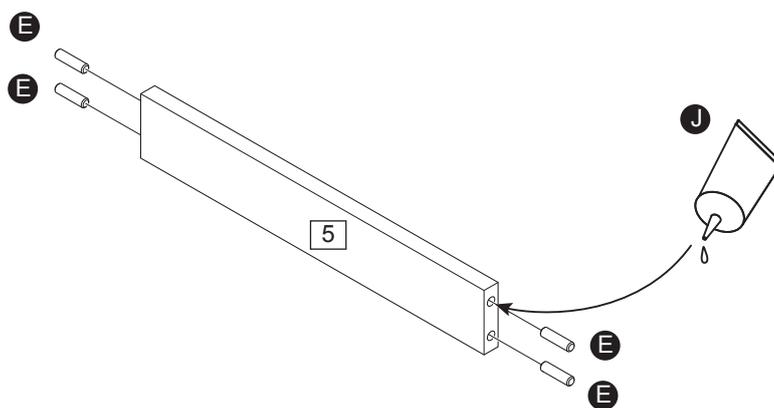

## Step 5

### Assemble the chest

**a:** Put drop of glue **J** into side-holes **1** and **2**.  
Slide the sides onto the plinth **5**.

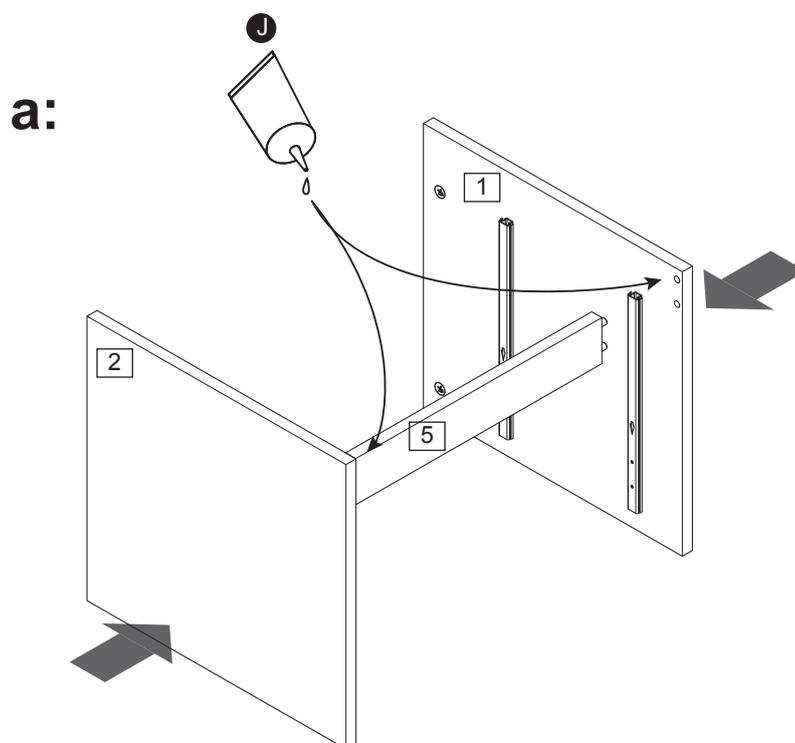

# Assembly Instructions

## Step 5 continued

### b: Attaching top


Position top **3** onto left **1** and right **2** side .

Use a screwdriver to turn locking nuts **A** clockwise to lock.

**b:**

Unfinished back edge

Finished front edge

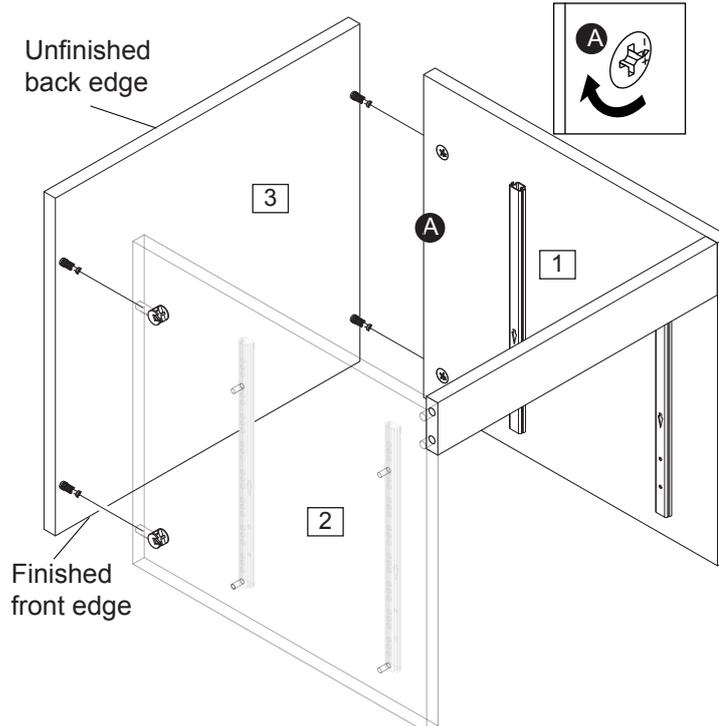

### c: Fitting back panel


Attach foldy back **9** to back of the chest using nails **F** and hammer.

Use nailholder **H** to hold nails **F** vertical and at the correct distance as you secure the foldy back **9**.

Nails **F** should be spaced about 150mm apart.

Place the Furniture glides **K** strategically underneath the sides **2** and **2** with a small hammer.

**c:**

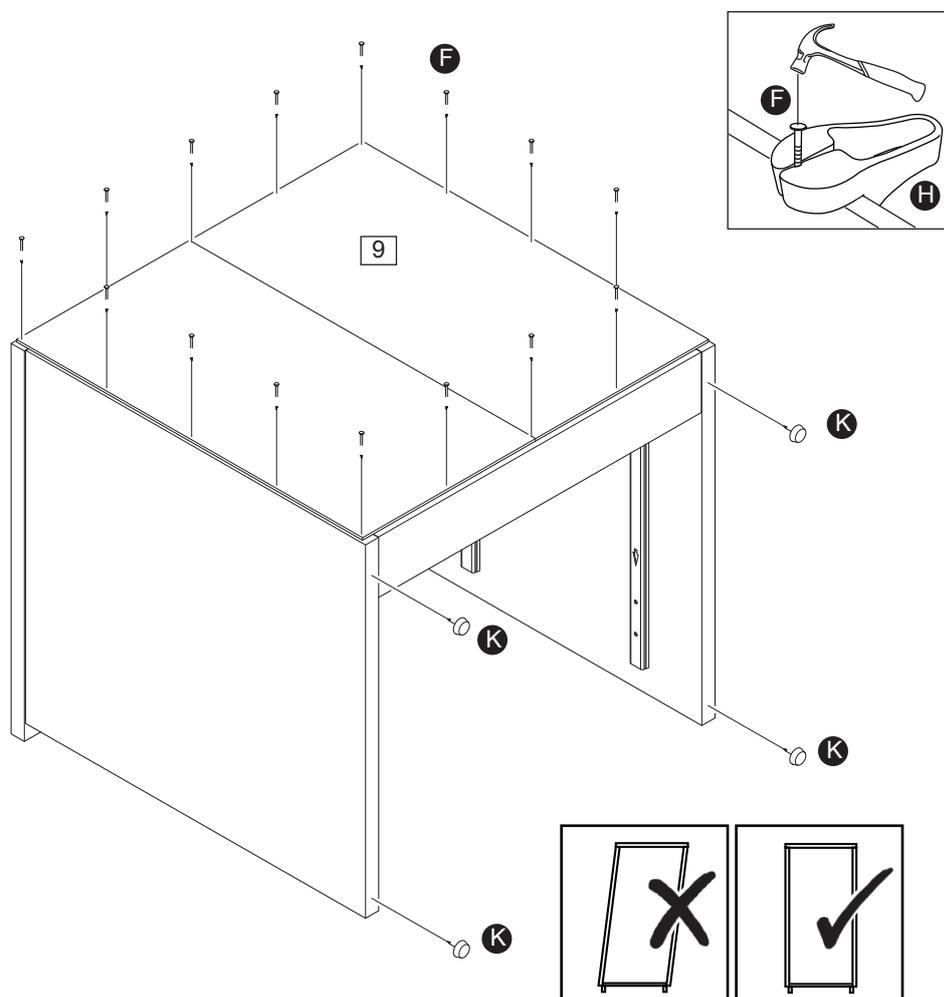

Important:  
Chest MUST  
be 'square'  
when back is  
attached.

# Assembly Instructions

## Step 6

### Inserting drawers


**a:** Pull runners **L** out. Slide drawers onto runners so they butt up against back of the drawerfront **4**.

**b:** Fix through drawersides **7** and **8** into runners **L** using 9mm screws **G**.


**c:** Finish.

Assembly is complete.


**a:**

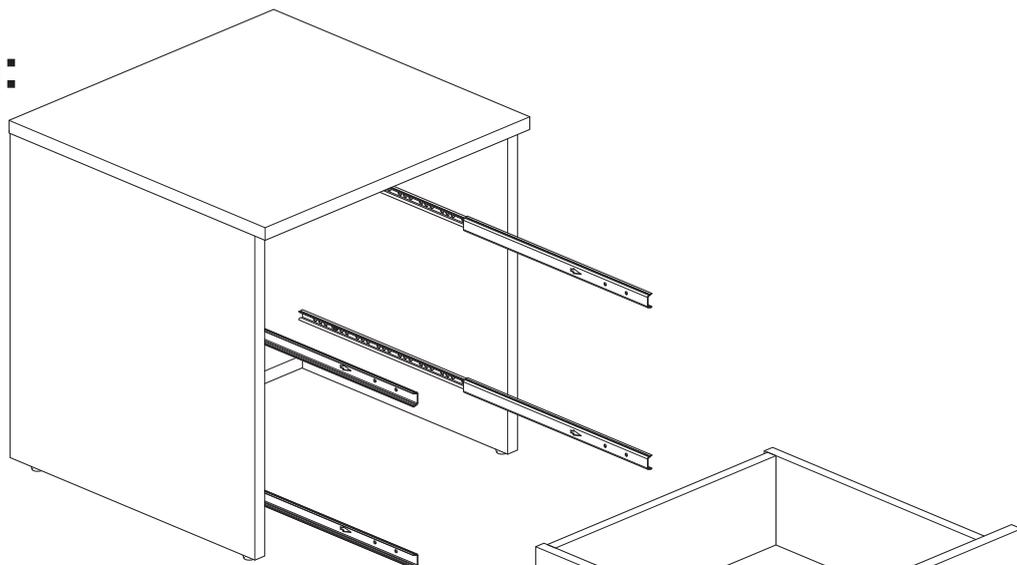

**b:**

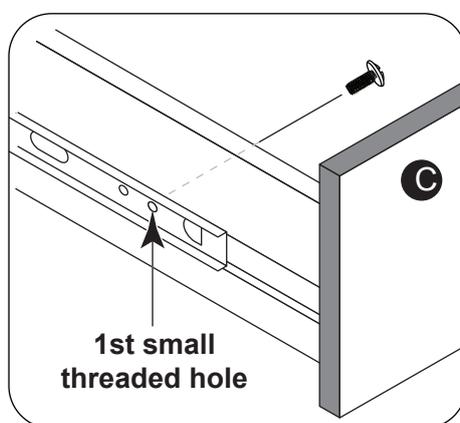

**c:**

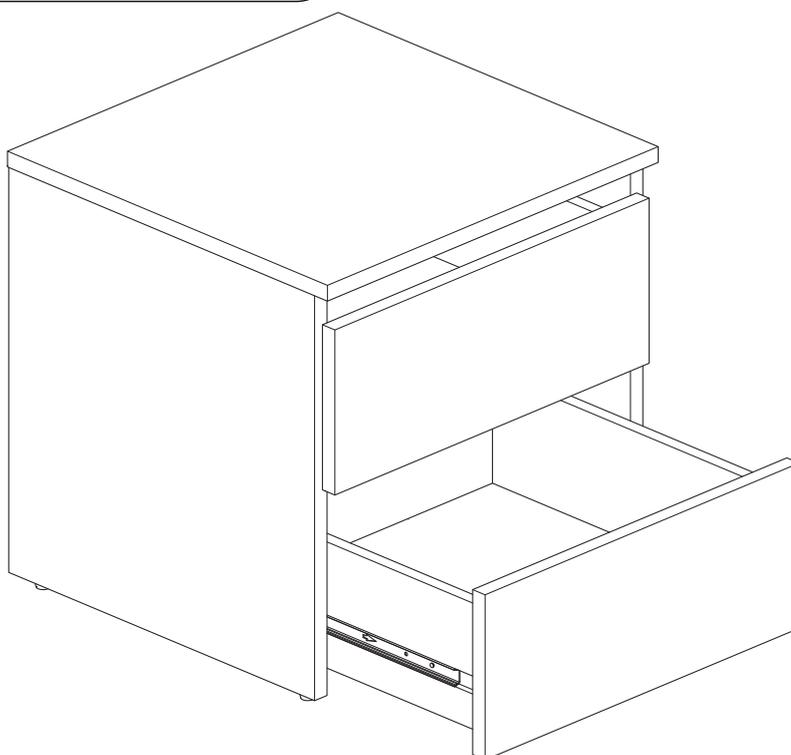

If you need help or have damaged or missing parts, call the **Customer Helpline:**  
**Argos 03456 400 800**