



# HOW TO APPLY STICKY BACK PLASTIC



## Step 1



Tools for the job !

## Step 2



Remove doors and handles.

## Step 3



Clean surface thoroughly to remove grease and dust.

## Step 4



Measure the surface allowing extra for wrapping. Use grid on backing paper to mark and cut to size.

## Step 5



Apply to the surface by peeling away the backing paper 10cm at a time.

## Step 6



**Tips!**


Spray glossy surfaces with water to help the film glide into place.

## Step 7



If you get an air bubble or need to start again, simply lift the vinyl or push the bubble out to the side using your d-c-fix smoother.

## Step 8

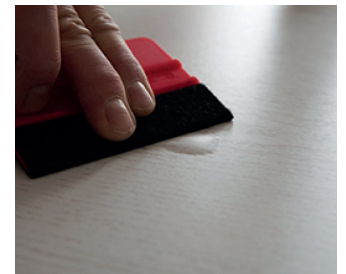

**Tips!**

Small air bubbles can be pricked with a pin to release the air!

## Step 9



For corners, cut diagonally into the corner.

## Step 10




Fold one flap around the corner, then the other.

## Step 11



Trim the excess vinyl using a scalpel.

## Step 12

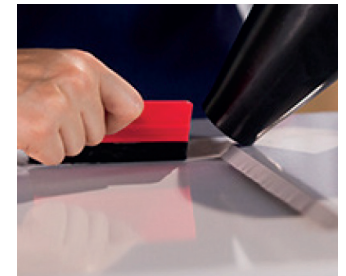

For curved edges or shaker style doors, use a hairdryer to soften the vinyl and gently stretch it into the grooves or over the edge.

Follow us

