


Mia 4 Poster Bed

Assembly Instructions - Please keep for future reference

White 2627436

Pink 2557386

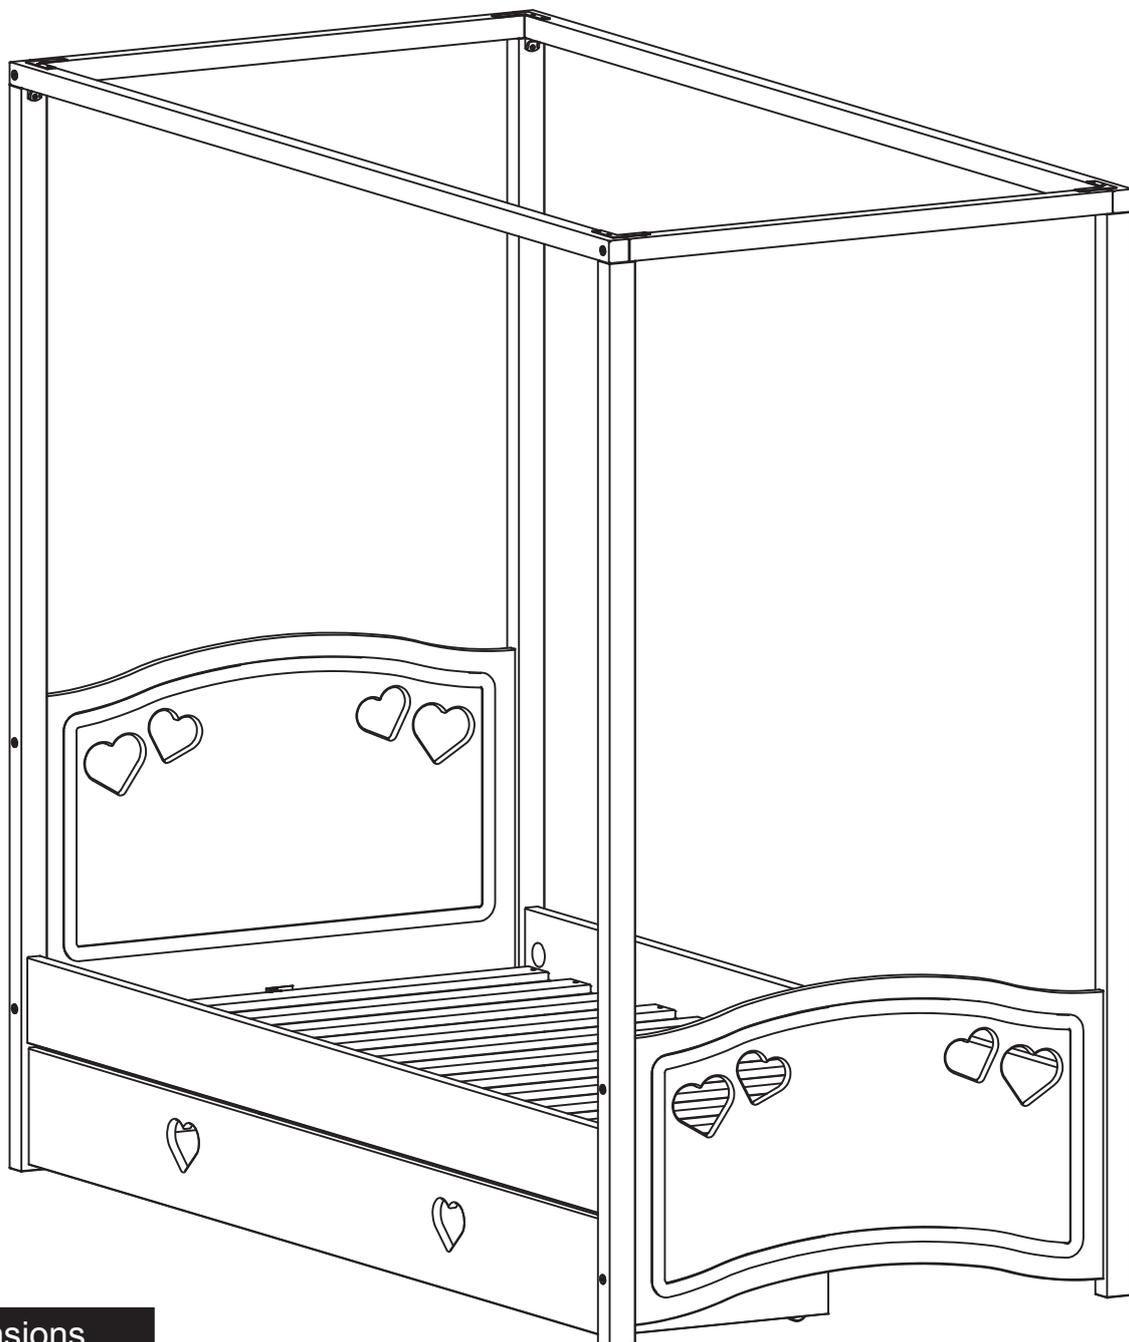

Dimensions

Width : 197.3 cm

Depth : 99.5 cm

Height: 186.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the Argos Customer Helpline: 0845 640 30 30

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note !


- **This child's bed conforms to BS 8509:2008 +A1:2011.**
- **Age recommendation: from 3 year to 12 years.**
- **Mattress in size 90x190 cm to be used with this bed.**
- **Children are likely to play, bounce, jump and climb on beds, therefore the child's bed should not be placed too close to other furniture or windows, and should be placed either tight to any wall or have a gap 300mm between the wall and the side of bed.**
- **Any additional or replacement parts are obtained from the manufacturer or distributor.**

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the Argos Customer Helpline: 0845 640 30 30






Please check you have all the panels listed below

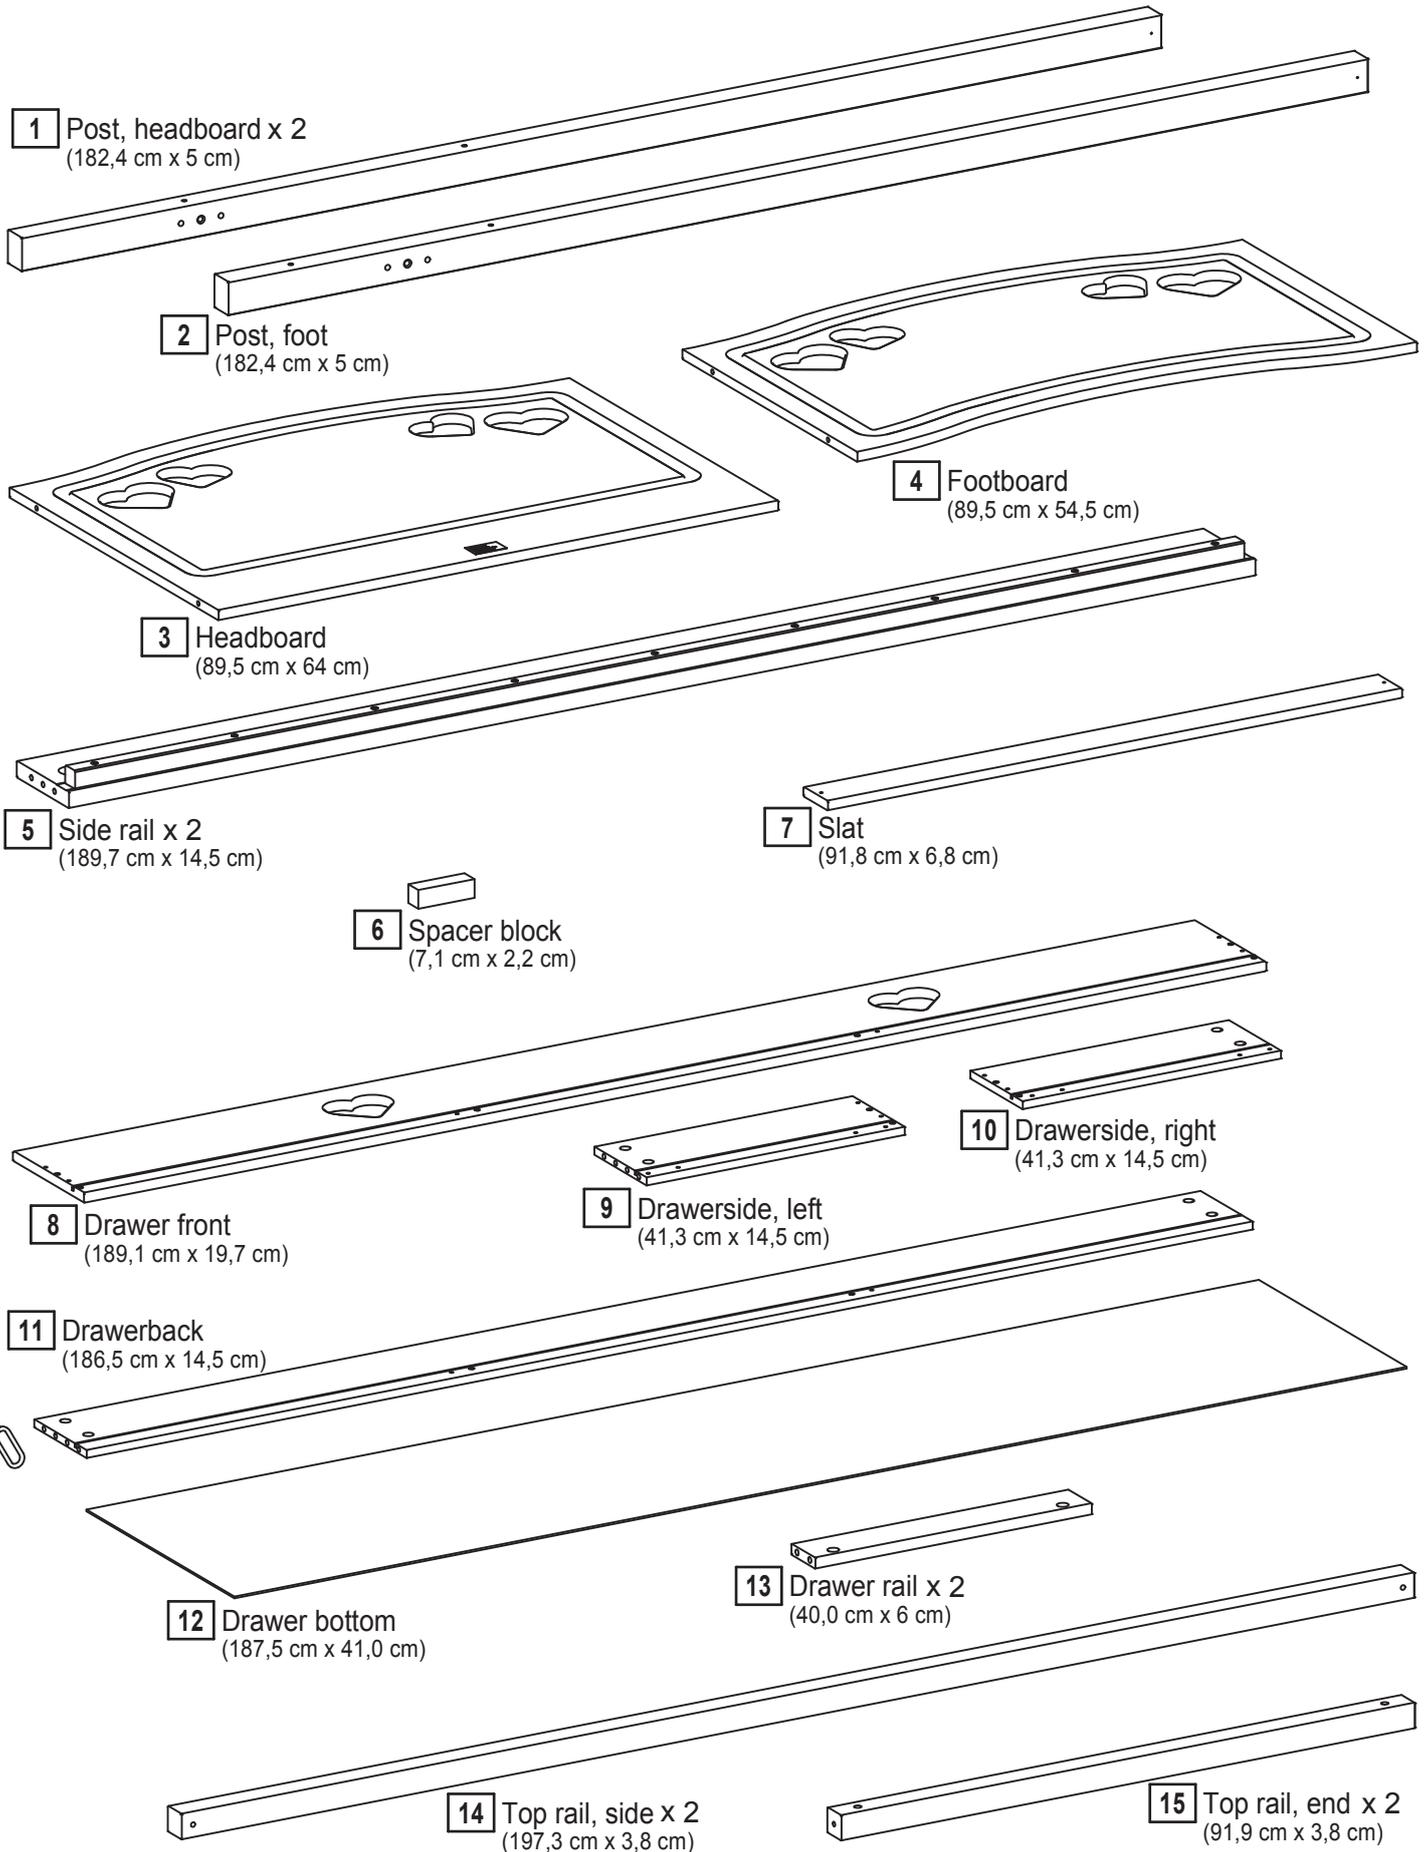

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Aa  ø7.8 x 40mm Wooden dowel x 20	Bo  ø3 x 12mm Screw x 24	Bv  ø3,5 x 30mm Screw x 28
Ca  ø15 x 10.5mm Cam x 12	Cb  ø5 x 8, cc34mm Bolt x 12	Ec  ø35mm Cap x 4
Fm  ø35mm Bracket x 4	Hg  M6 x 70mm Threaded rod x 4	Hw  M6 x 80mm Bolt x 12
Ke  ø6.1 x 11.5mm Screw x 8	Na  M6 x 10mm Nut x 4	Ne  M6 x 20mm Bushing x 4
Nf  M6, ø10 x 12.5mm barrel nut x 12	Ta  ø35mm Wheel x 4	Vn  Angle 23 x 23 x 24mm x 4
Vq  70 x 70 x 16mm Corner angle x 4	Ya  4mm Allen key x 1	Yb  10/13mm Wrench x 1
Yc  6mm Allen key x 1		

Tools required



Phillips screwdriver
(Medium & large)



Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembly of the bed.

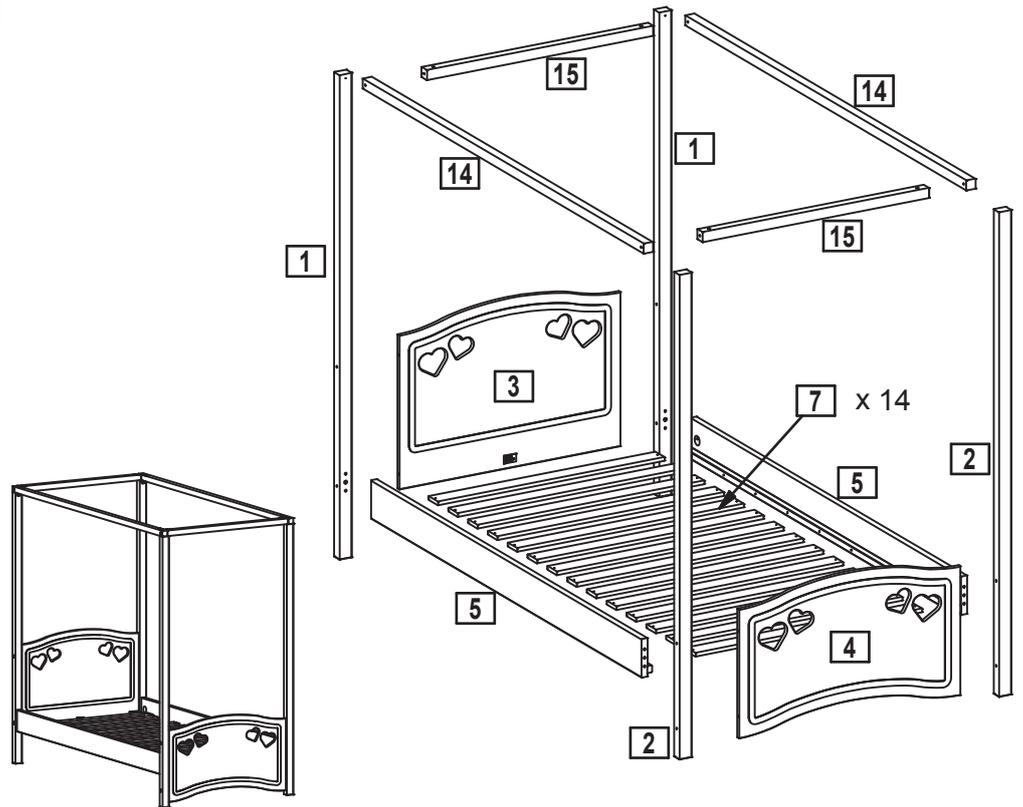


Step 1.1

Knock the dowels **Aa** into the holes indicated on the side rails **5** using a small hammer.

Aa



ø7.8 x 40mm Wooden dowel x 8

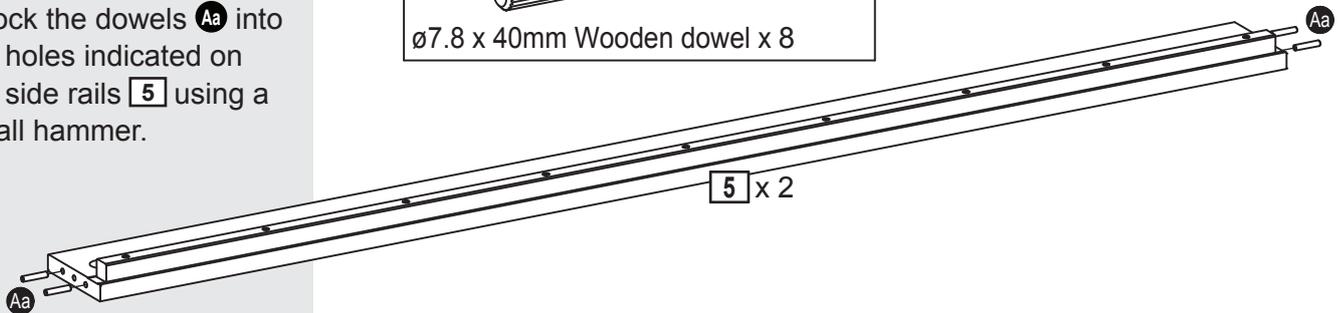

Step 1.2

Screw the bushings **Ne** into the holes indicated on the posts **1** and **2**.


Use the allen key **Yc**.

Ne




M6 x 20mm Bushing x 4

Yc



6mm


Allen key x 1

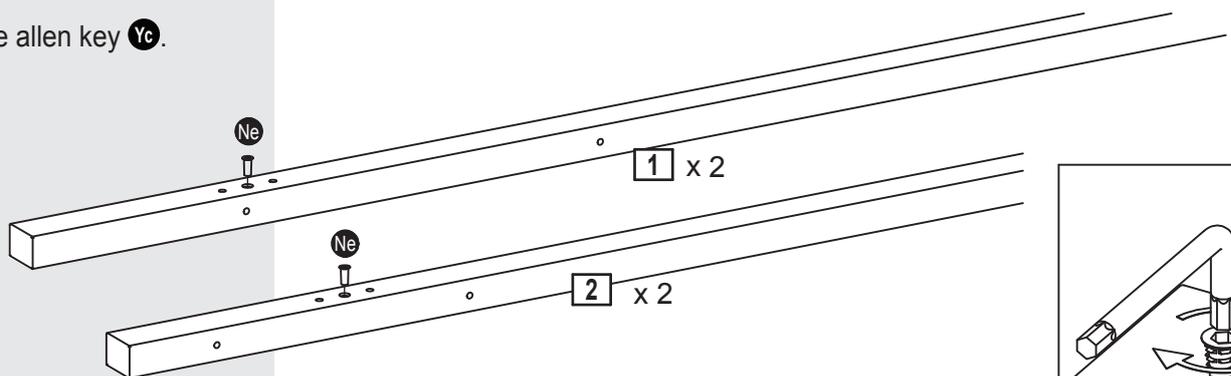

Assembly Instructions

Step 1.3

Fix the posts **1** onto the headboard **3** using bolts **Hw** into the barrel nuts **Nf**.
 Note - the holes in the posts for the siderails must point downwards.

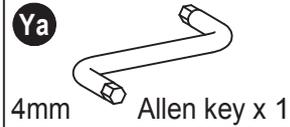


Fix the posts **2** onto the footboard **4** using bolts **Hw** into the barrel nuts **Nf**.



Make sure to place the legs **2** onto the footboard **4** exactly as shown. Note the holes for the siderails must point upwards.

Use the allen key **Ya**.

Note NO holes!
 The holes for the siderails on reverse side!

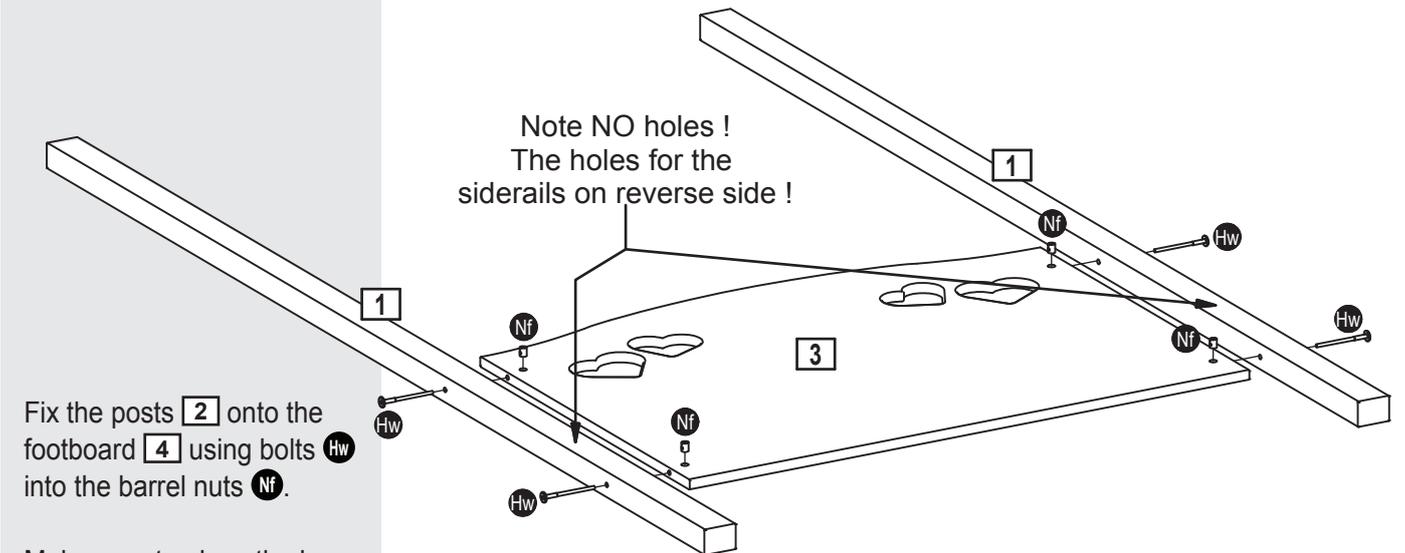

Note the holes for the siderails!

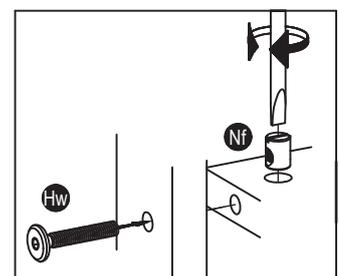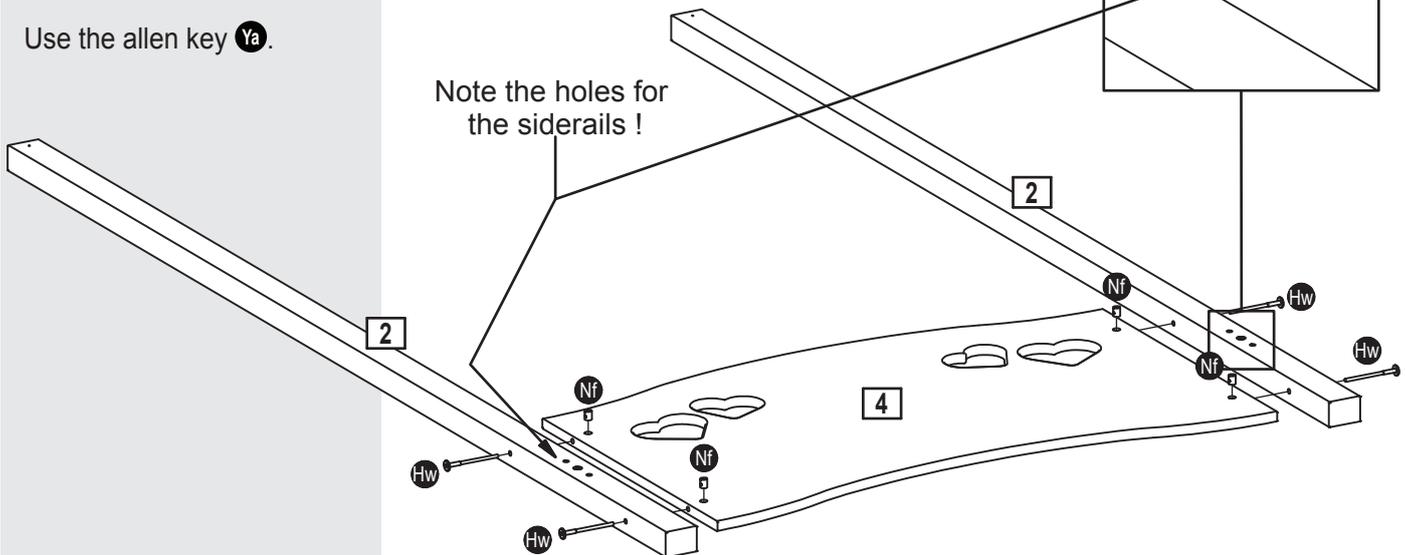

Assembly Instructions

Step 1.4

Screw the threaded rods **Hg** into the bushings **Ne** in the posts **1** and **2**.

Fix the angles **Vn** to the posts **1** and **2** using screws **Bo** into the holes indicated.

Bo



∅3 x 12mm Screw x 4

Hg





M6 x 70mm Threaded rod x 4

Vn



Angle 23 x 23 x 24mm x 4

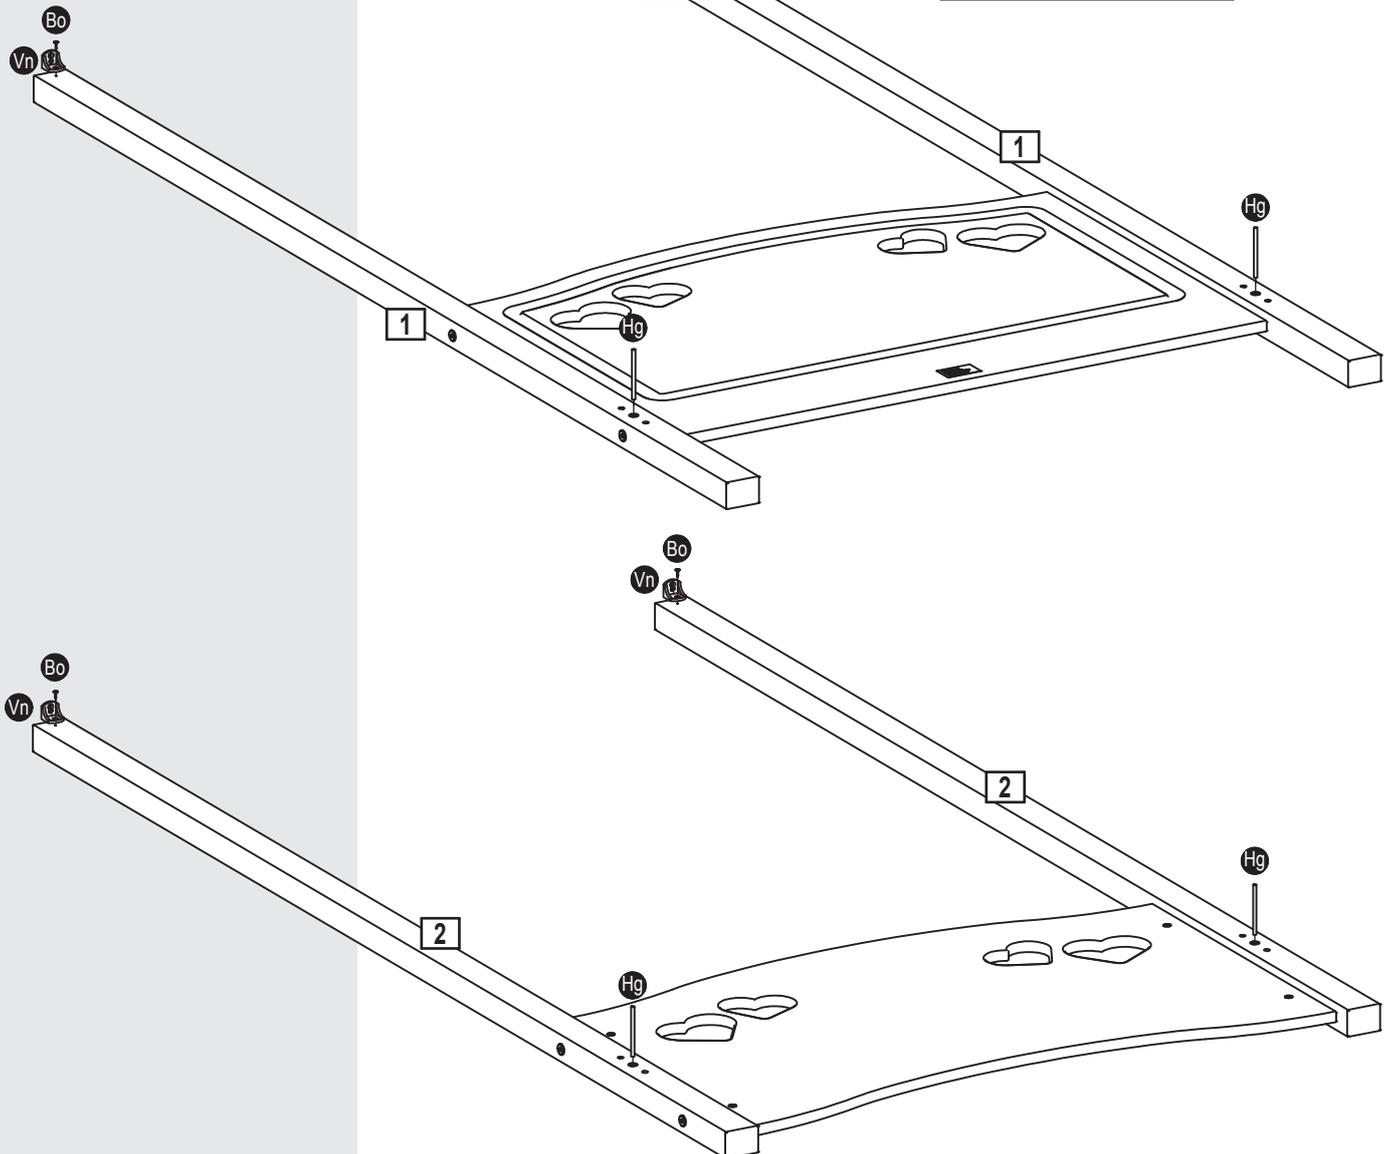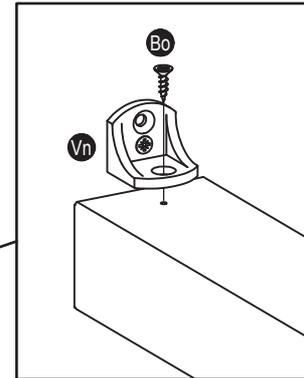



Assembly Instructions

Step 1.5

Place the side rails **5** onto the headboard posts **1**.

Push the brackets **Fm** and the nuts **Na** into the holes indicated on the side rails **5** and onto the threaded rods **Hg**.

Tighten the nuts **Na** using the wrench **Fm**.

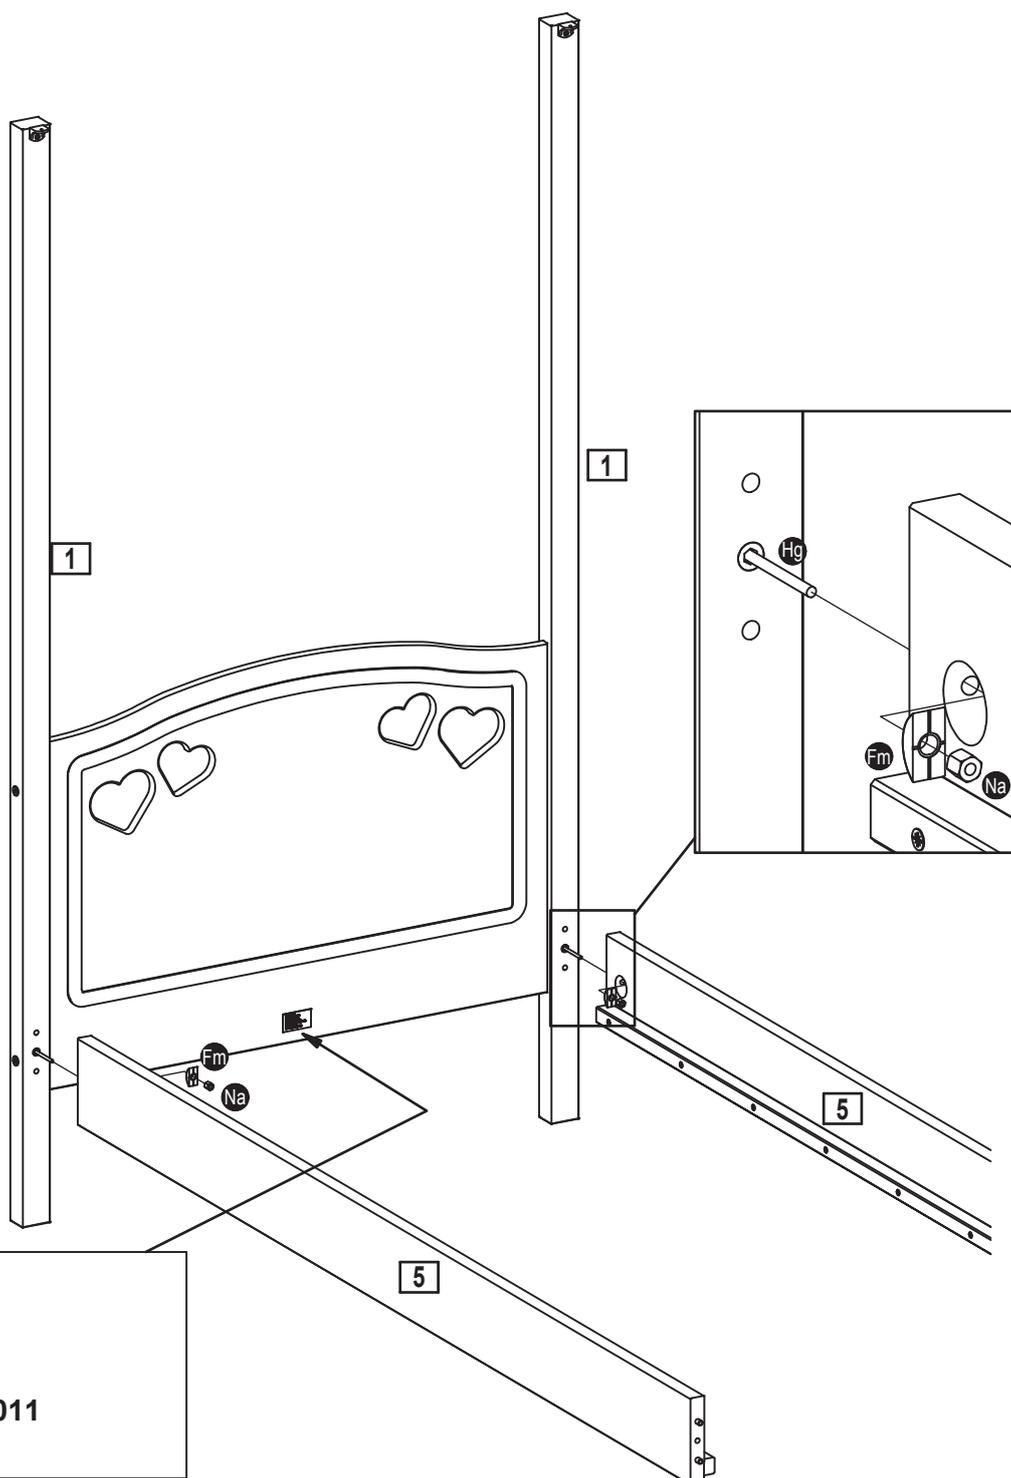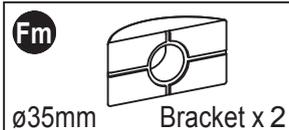

Produced by:
NJA Furniture A/S
DK-7700 Thisted
Safety requirements:
EN BS 8509:2008+A1:2011
Prod. wk/year: xx/201x



Assembly Instructions


Step 1.6

Place the footboard posts **2** onto the side rails **5**.



Push the brackets **Fm** and the nuts **Na** into the holes indicated on the side rails **5** and onto the threaded rods **Hg**.

Tighten the nuts **Na** using the wrench **Fm**.

Ec  ø35mm Cap x 4	Fm  ø35mm Bracket x 2
Na  M6 x 10mm Nut x 2	Yb  10/13mm Wrench x 1

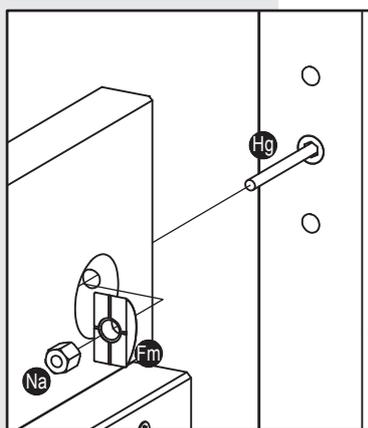

Insert the caps **Ec** into the holes indicated on the side rails **5**.

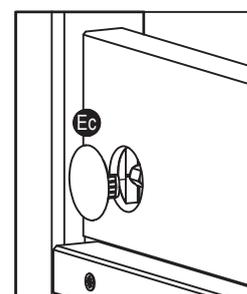
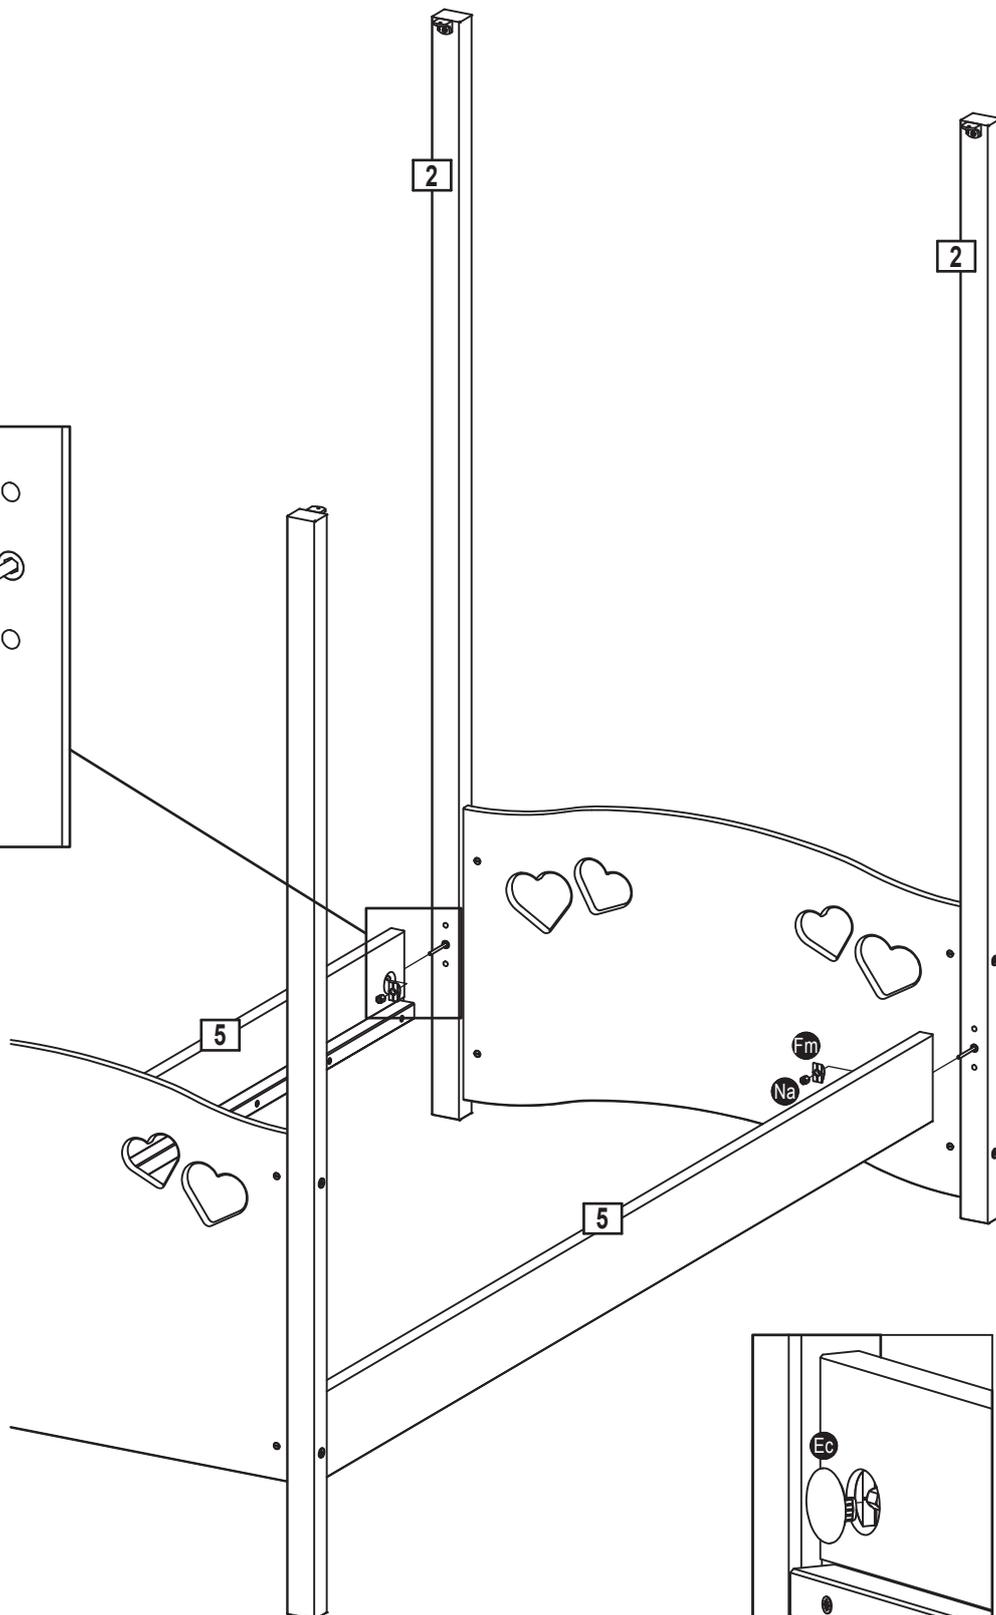


Assembly Instructions

Step 1.7


Fix the top rails (side) **14** to the top rails (end) **15** using bolts **Hw** into the barrel nuts **Nf**.

Use the allen key **Ya**.

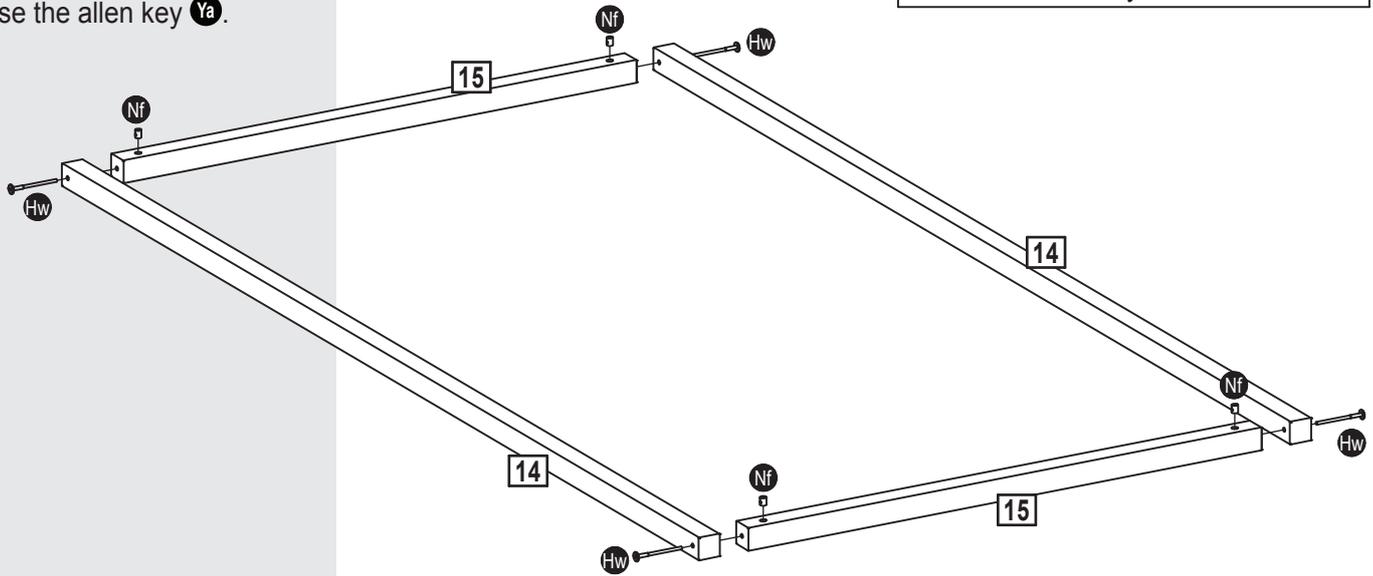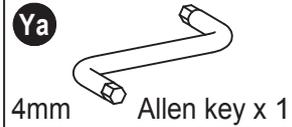



Step 1.8

Fix the corner angles **Vq** to the upper side of the top frame using screws **Bo**.

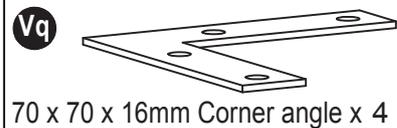

Note !

The holes for the barrel nuts in the end rail **15** must point upwards

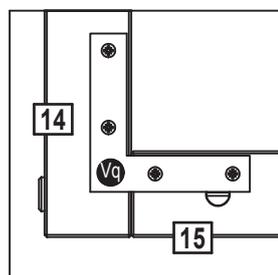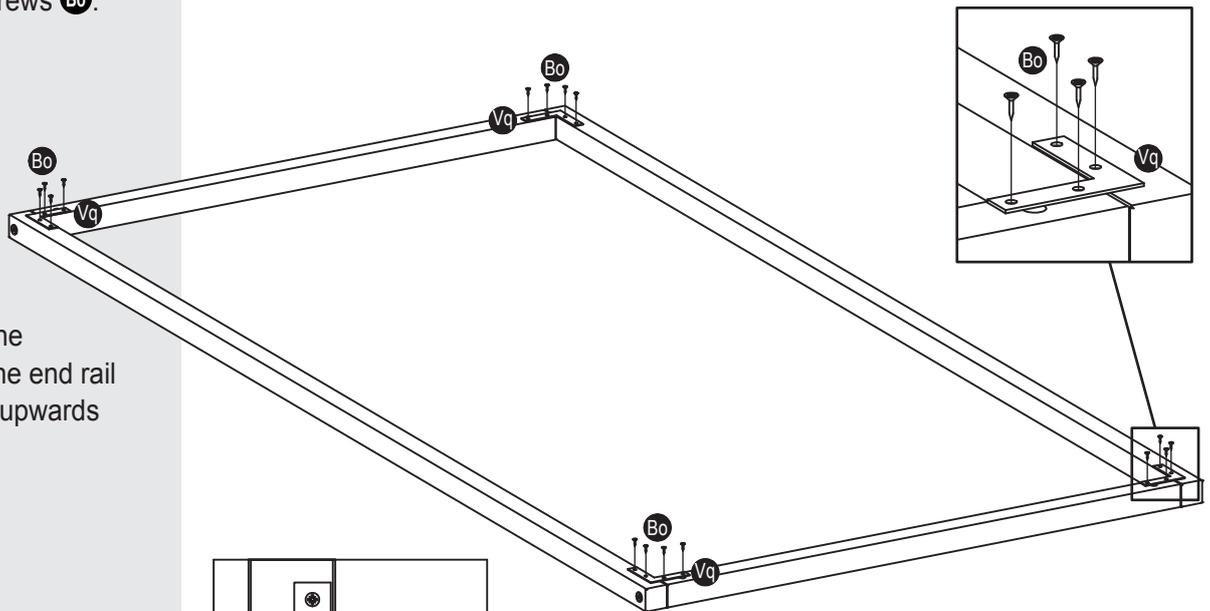

Assembly Instructions

Step 1.9


Place the top frame on the top of the posts.

Fix it using screws **Bo** through the angles **Vn**.

Bo



ø3 x 12mm Screw x 4

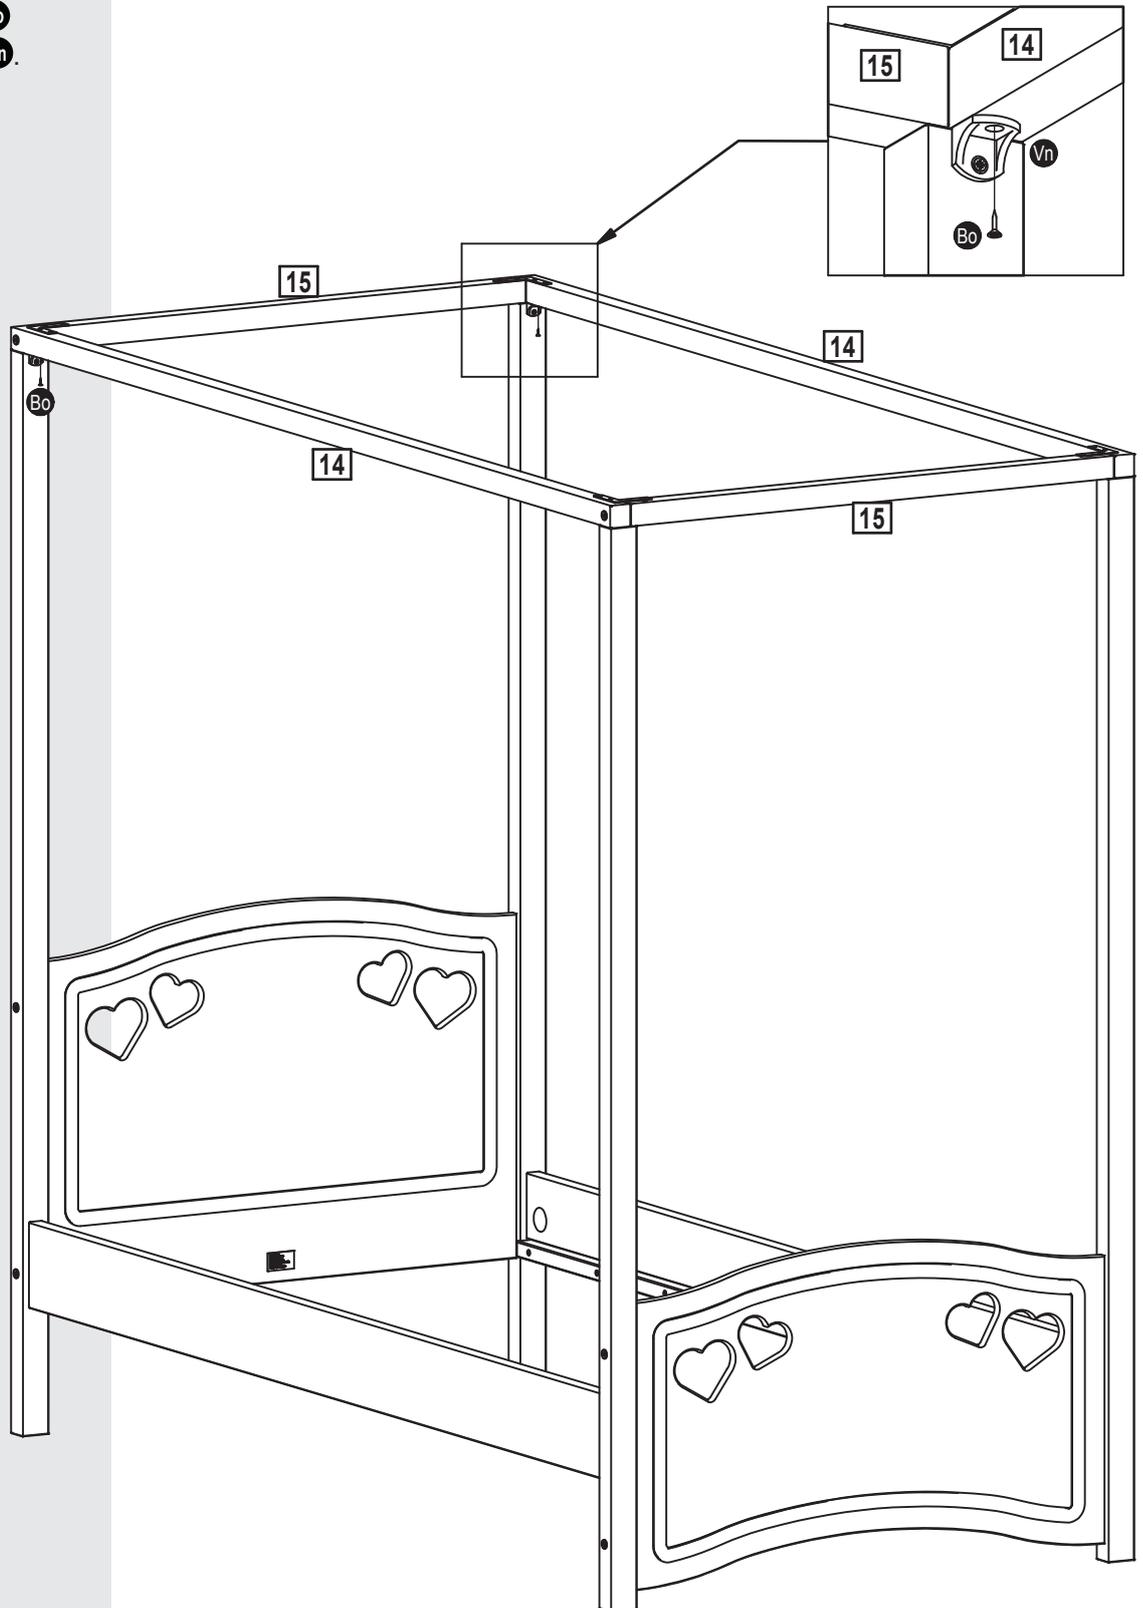


Assembly Instructions

Step 1.10

Fix the first of the slats **7** to the slatholders using screws **Bv**.

The slats **7** must be distributed evenly in the bedframe. To get the distance right use the spacer block **6** as shown.


See detail.

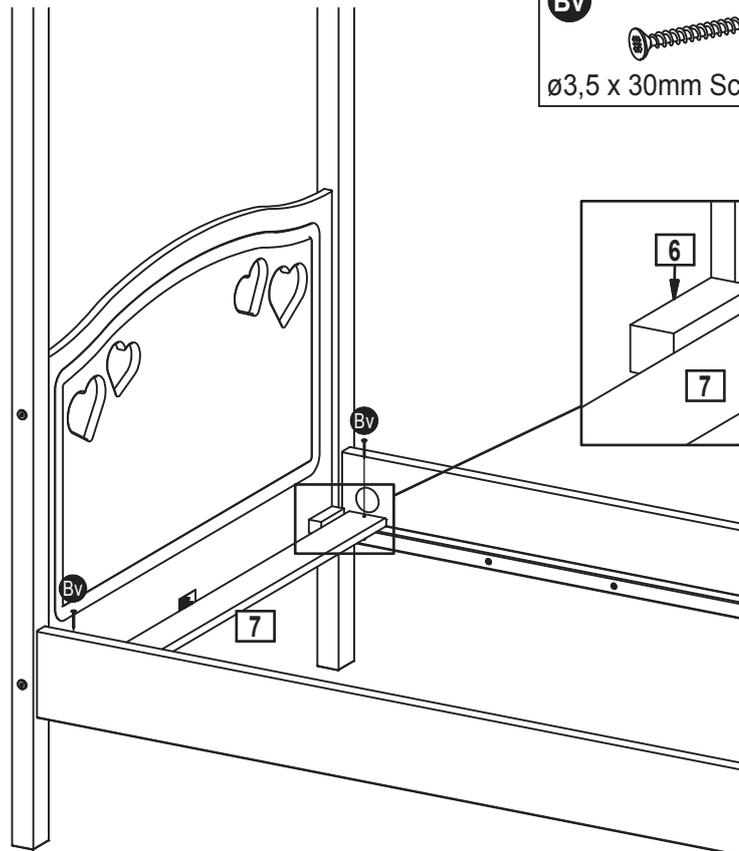

Bv



Ø3,5 x 30mm Screw x 2

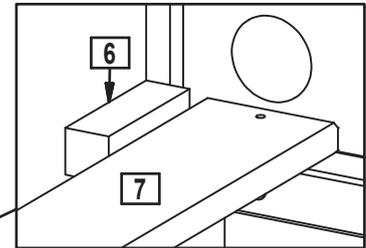


Step 1.11

Fix the second of the slats **7** to the slatholders using screws **Bv**.

To get the distance right use the spacer block **6** as shown.


See detail.

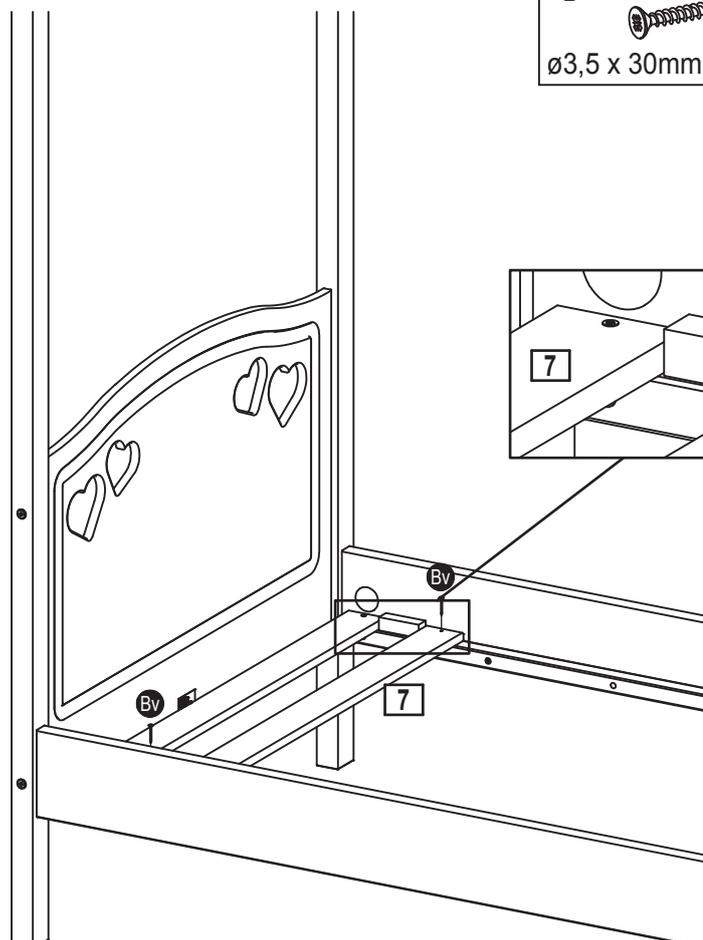

Bv



Ø3,5 x 30mm Screw x 2

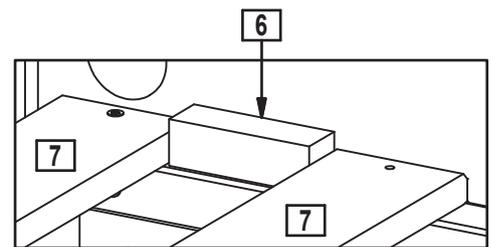

Assembly Instructions

Step 1.12

Fix the rest of the slats **7** using screws **Bv**.



To get the distance right use the spacer block **6** as shown.

See detail.

Bv





ø3,5 x 30mm Screw x 24

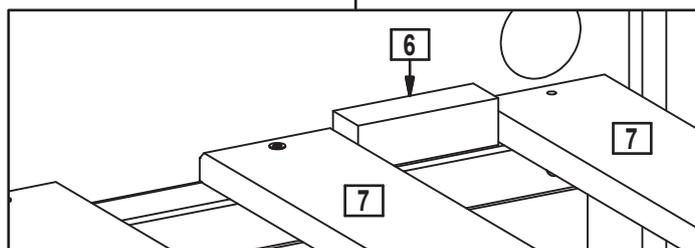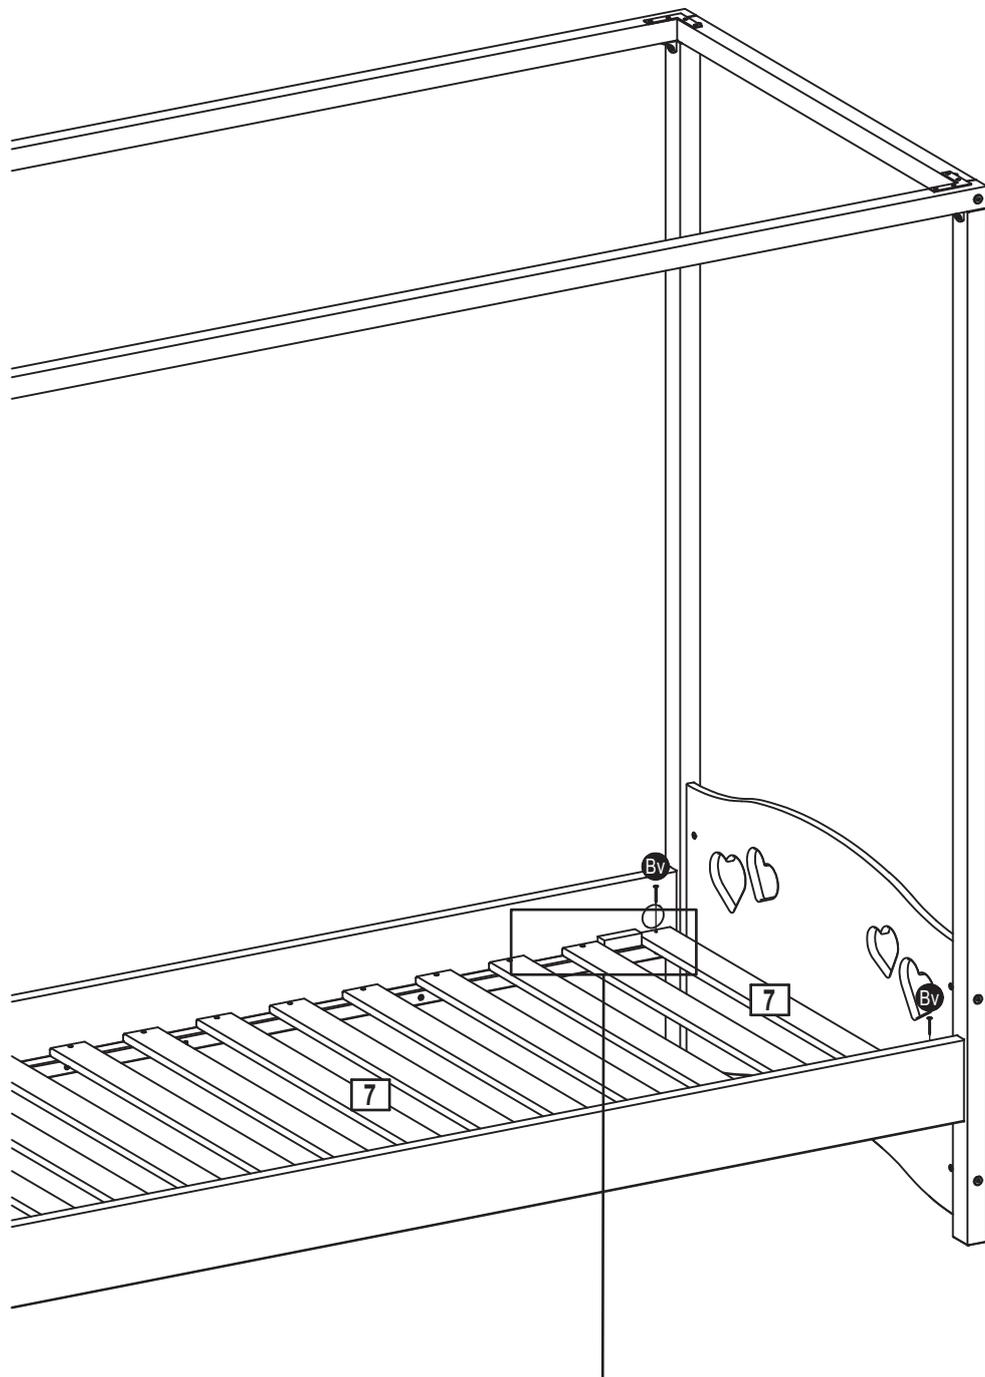

Assembly Instructions

Step 2

Assembly of the drawer.

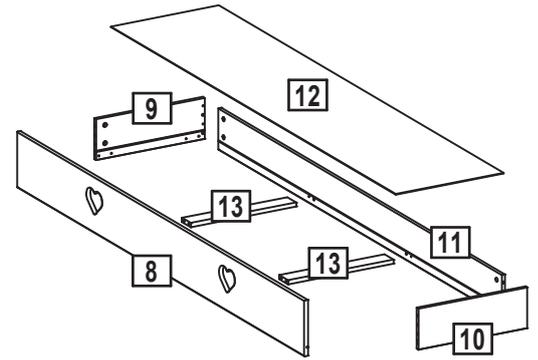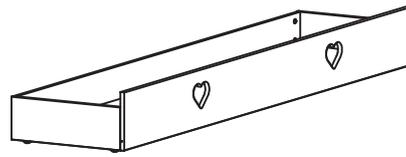

Step 2.1

Screw the bolts **Cb** into the holes indicated on the drawer back **11** and the drawer sides **9** and **10**.

Knock the dowels **Aa** into the holes indicated on the drawer back **11**, the drawer sides **9** and **10** and the


drawer rails **13** using a small hammer.

Aa




∅7.8 x 40mm Wooden dowel x 12

Cb



∅5 x 8, cc34mm Bolt x 6

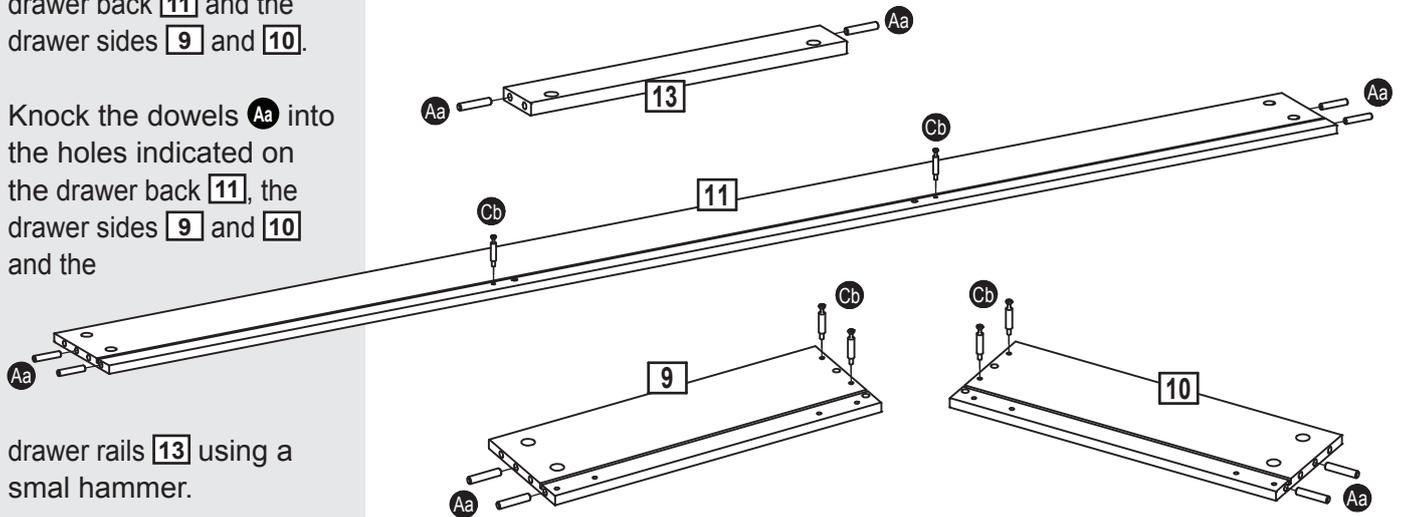

Step 2.2

Fix the wheels **Ta** onto the drawer sides **9** and **10** using screws **Ke**.

See detail.

Ke




∅6.1 x 11.5mm Screw&

Ta





∅35mm Wheel x 4

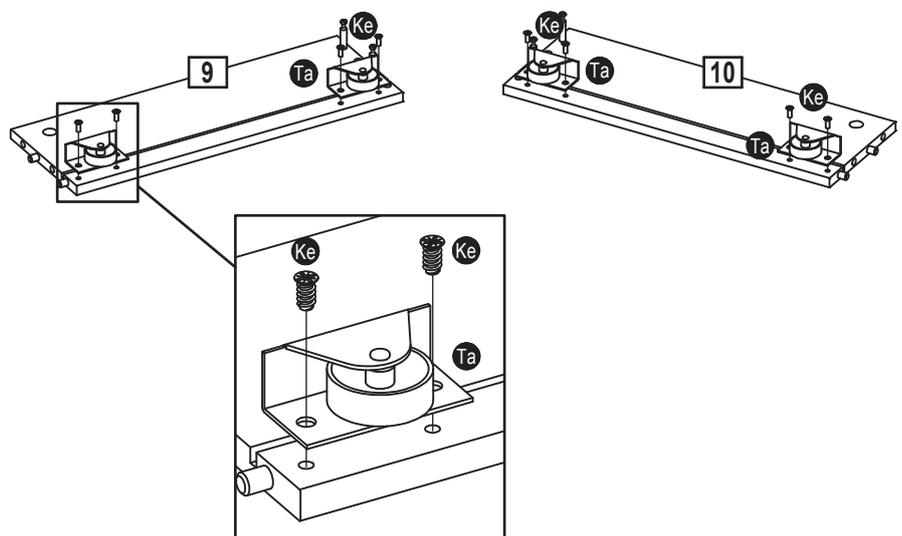

Assembly Instructions

Step 2.3


Screw the bolts **Cb** into the holes indicated on the drawer front **8**.

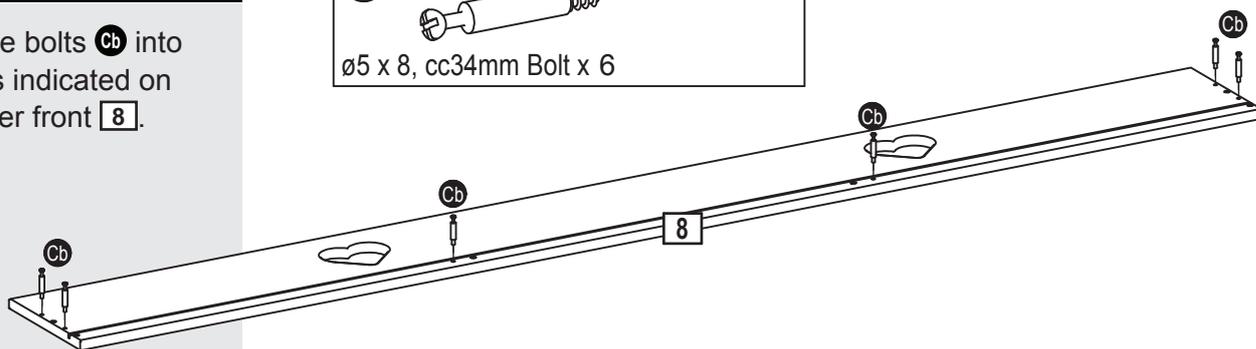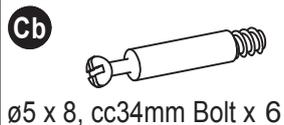

Step 2.4


Push the drawer sides **9** and **10** and the drawer rails **13** onto the drawer back **11**.

Place cams **Ca** into the holes indicated. Arrow pointing towards the front. Turn the cams **Ca** to the right to fix the drawer back.

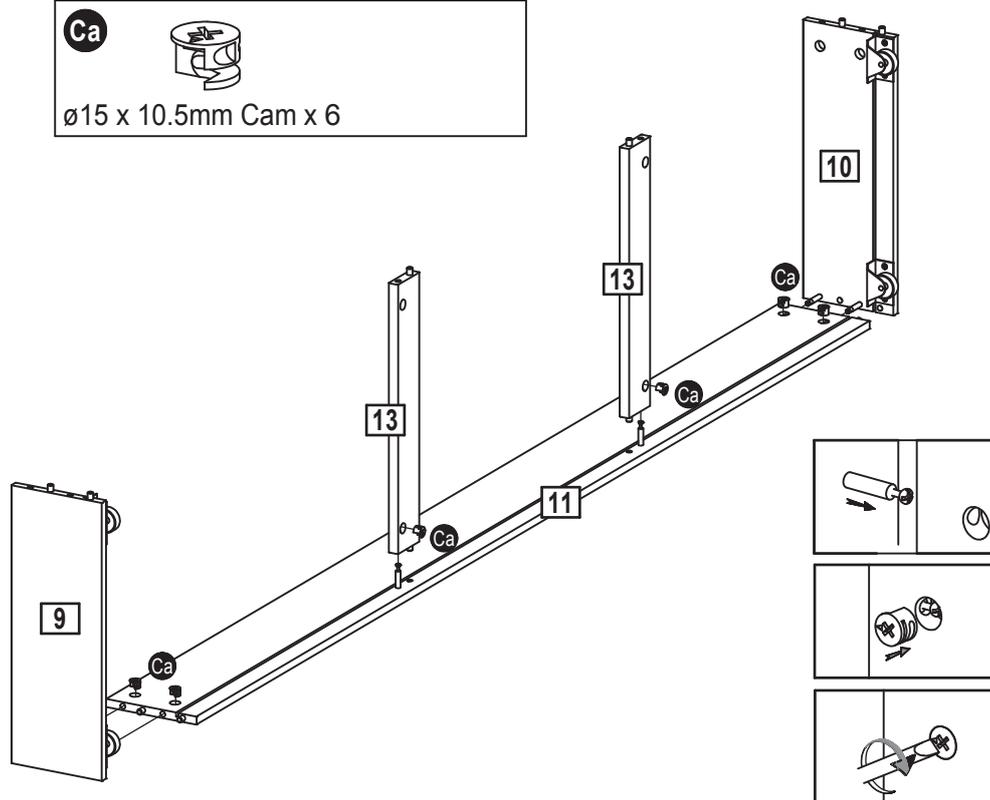

Step 2.5

Slide the drawer bottom **12** into the drawer sides **9** and **10**.

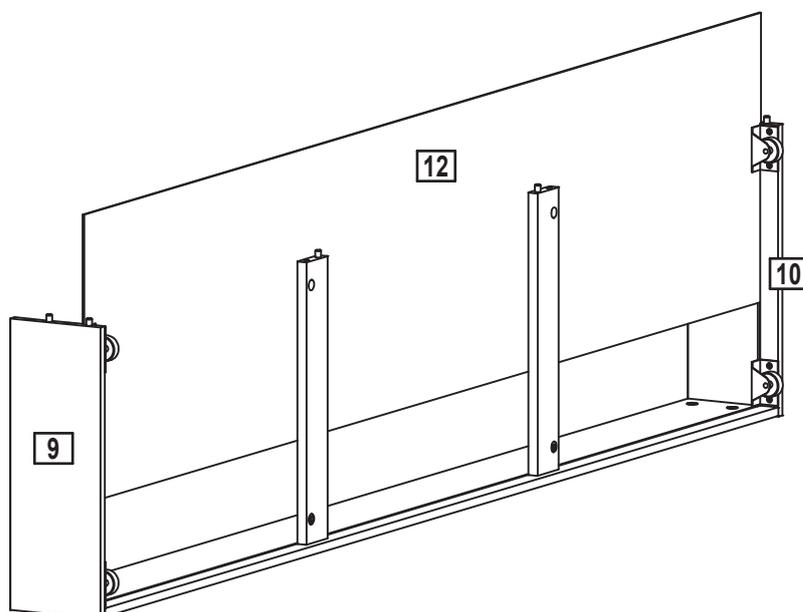

Assembly Instructions

Step 2.6


Push the drawer front **8** onto the drawer sides **9** and **10** and the drawer rails **13**.

Place cams **Ca** into the holes indicated. Arrow pointing towards the front. Turn the cams **Ca** to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 6

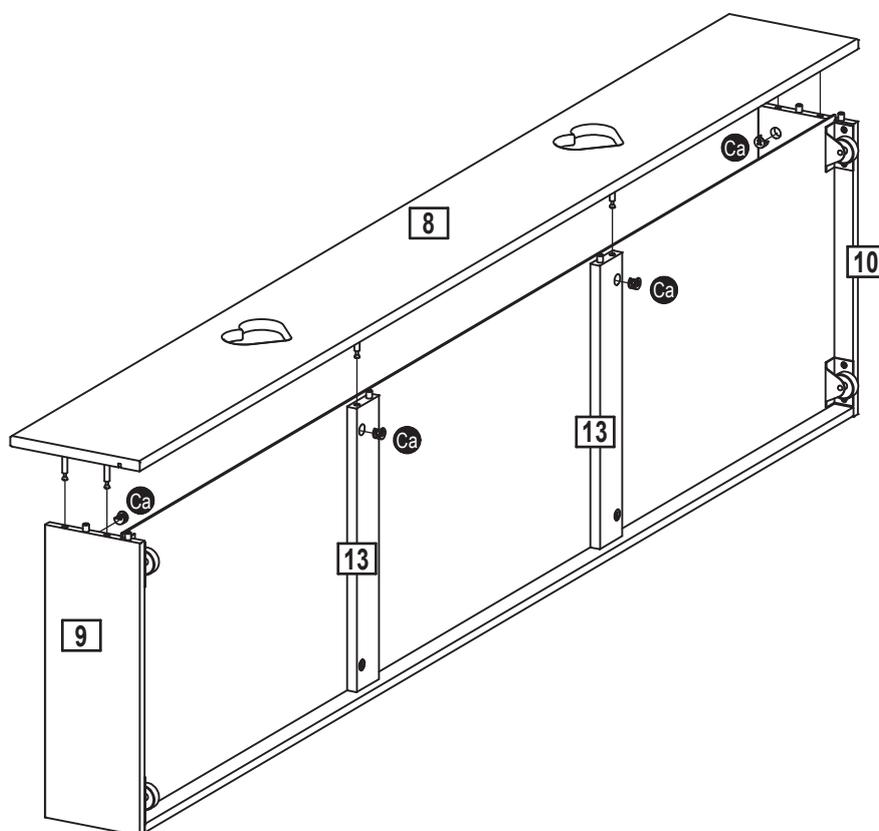

Step 2.7

Place the drawer.

