


# Normandy - Dressing Table and Stool

Assembly Instructions - Please keep for future reference

325/6208

356/1962

331/1837

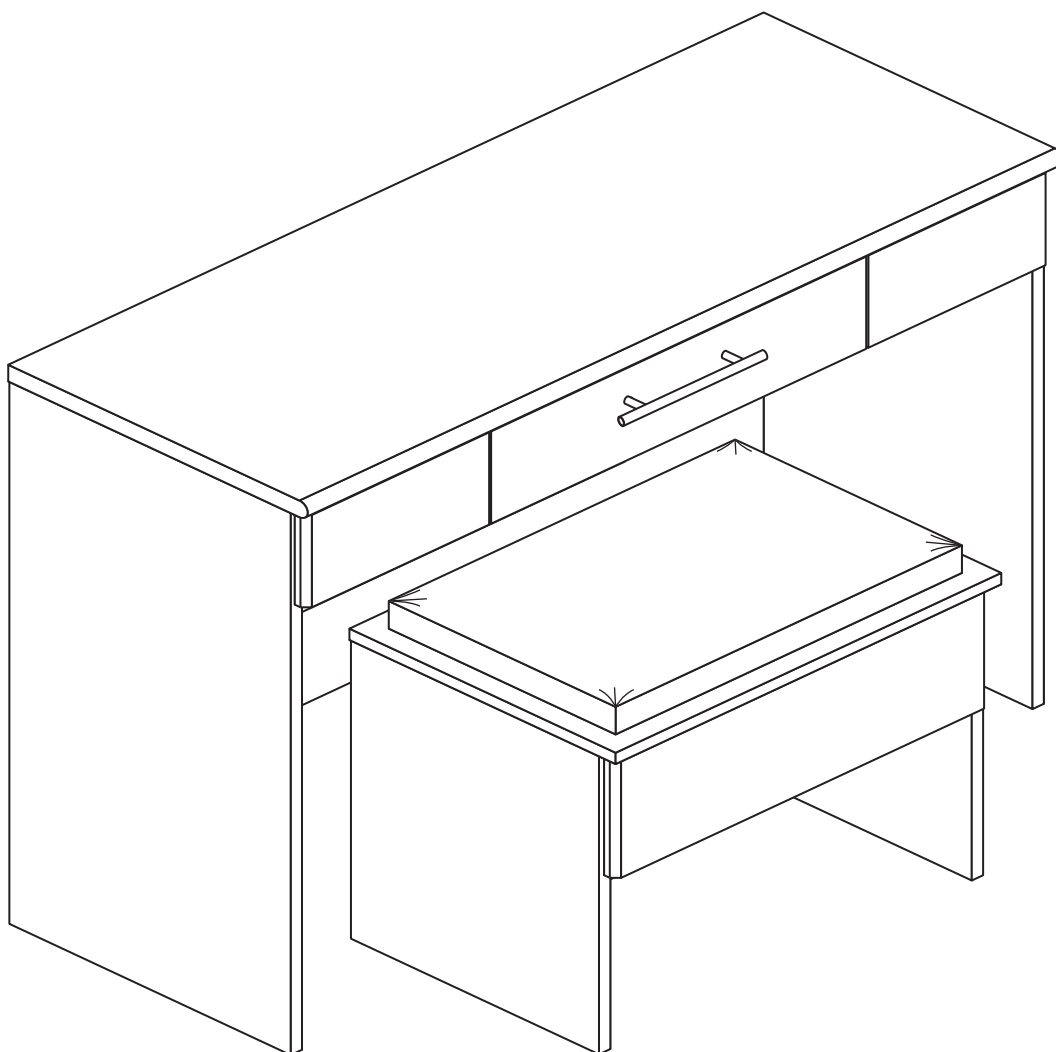

## Dimensions

Width - 100cm

Depth - 40cm

Height - 74cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 31.5kgs. Please lift with care.
  - Check you have all the components and tools listed on pages 2 and 3.
  - Remove all fittings from the plastic bags and separate them into their groups.
  - Keep children and animals away from the work area, small parts could choke if swallowed.
  - Parts of the assembly will be easier with 2 people.
  - Make sure you have enough space to layout the parts before starting.
  - Do not stand or put weight on the product, this could cause damage.
  - Assemble the item as close to its final position (in the same room) as possible.
  - Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- 
- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
  - **Safety note:** It is recommended that this unit is secured to a wall using the overbalance kit supplied.
  - Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels


If you have damaged or missing components, call the  
**Customer Helpline: 08456 400800** quoting the reference  
numbers below

Please check you have all the panels listed below


## Dresser

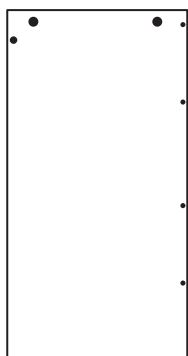

**1** Left Side (DF632)  
(718 x 372mm)

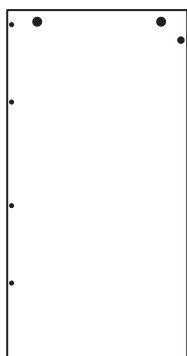


**2** Right Side (DF633)  
(718 x 372mm)



**3** Left Upright (DF635)  
(125 x 356mm)



**4** Right Upright (DF636)  
(125 x 356mm)




**5** Left Blanking Panel (DF638)  
(242 x 125mm)




**6** Right Blanking Panel (DF639)  
(242 x 125mm)




**7** Top (DF631)  
(999 x 396mm)

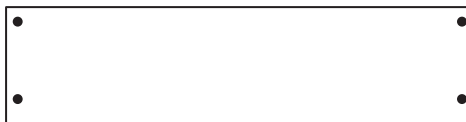

**8** Modesty (DF634)  
(966 x 244mm) x 2



**9** Rail (DF640)  
(503 x 78mm)



**10** Drawer Front (DF637)  
(496 x 122mm)



**11** Left Drawer  
Side (W350-95LH)  
(350 x 95mm)



**12** Right Drawer  
Side (W350-95RH)  
(350 x 95mm)




**13** Drawer Back (W471-95)  
(471 x 95mm)




**14** Drawer Base (T482-347)  
(482 x 347mm)


## Stool

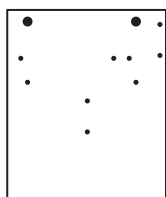


**15** Stool Left Side (DF342A)  
(395 x 328mm)

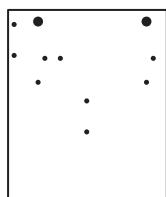

**16** Stool Right Side (DF343A)  
(395 x 328mm)

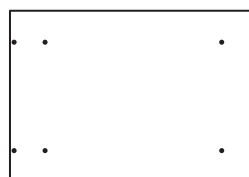

**17** Stool Top (DF344A)  
(510 x 352mm)

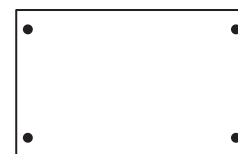


**18** Stool Base (DF347A)  
(478 x 306mm)



**19** Stool Rail (DF346A)  
(478 x 160mm) x 2



**20** Stool Drawer  
Front (DF345A)  
(495 x 157mm)



**21** Stool Left  
Drawer Side  
(W300-124LH)  
(300 x 124mm)




**22** Stool Right  
Drawer Side  
(W300-124RH)  
(300 x 124mm)



**23** Stool Drawer  
Back (W441-124)  
(441 x 124mm)



**24** Stool Seat Pad (FHALPAD)  
(458 x 300mm)



**25** Stool Drawer Base (T452-297)  
(452 x 297mm)


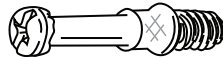



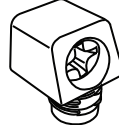







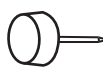
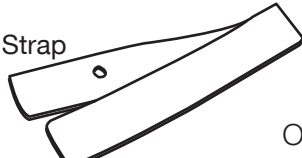

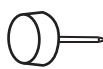


# Components - Fittings


If you have damaged or missing components, call the  
**Customer Helpline: 0870 112 1928** or **email:**  
**Help@ClickSpares.co.uk** (quoting your original order number  
and the reference numbers below)

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
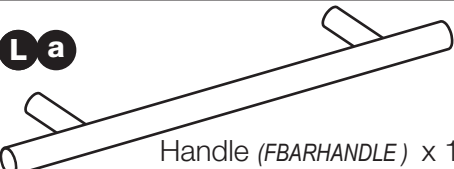
<b>A</b>  Wooden dowel (F22) x 2	<b>B</b>  Metal dowel (F901) x 38	<b>C</b>  Small locking nut (F3) x 4
<b>D</b>  Large locking nut (F900) x 34	<b>E</b>  Knock-in Peg (F171GY) x 8	<b>F</b>  Mini block (F25) x 4
<b>G</b>  9mm Screw (F74) x 4	<b>H</b>  9mm Screw (F73) x 8	<b>I</b>  25mm Screw (F50) x 4
<b>J</b>  Drawer runner (F1004) x 4		<b>K</b>  Wedgefix (F639) x 4
<b>L a</b>  Handle (FBARHANDLE) x 1		<b>L b</b>  19mm Screw (F461) x 2
<b>N</b>    Strap Screw Washer x 2 Overbalance protector kit (F269) x 1		<b>M</b>  Plastic Nail (F91) x 8

**Ruler** - Use this ruler to help correctly identify the screws

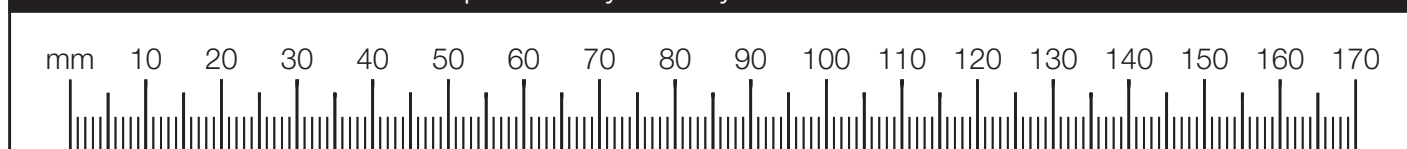

# Assembly Instructions


If you have damaged or missing components, call the  
**Customer Helpline: 08456 400800** quoting the reference  
numbers below

## Step 1

### Prepare the drawer front

Screw 2 metal dowels **B** into the drawer front **10**.

**Note:** Tighten the metal dowels up fully against the panels.

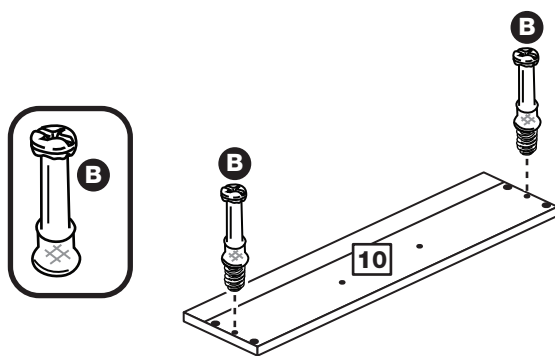


## Step 2

### Prepare the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side **11** and the right drawer side **12**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

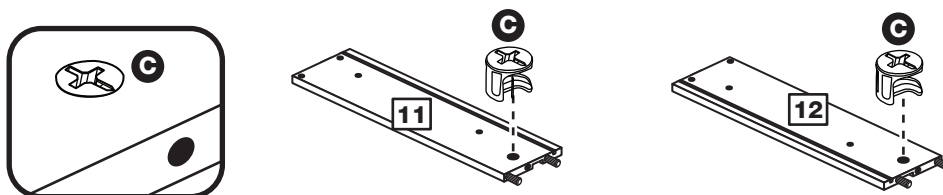



## Step 3

### Attach the drawer sides to the drawer front

Push the left drawer sides **11** and right drawer sides **12** onto the back of the drawer front **10**.

Turn the small locking nuts **C** on the left drawer side **11** and right drawer side **12**.

**Note:** Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

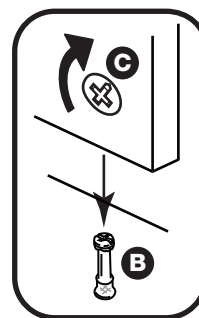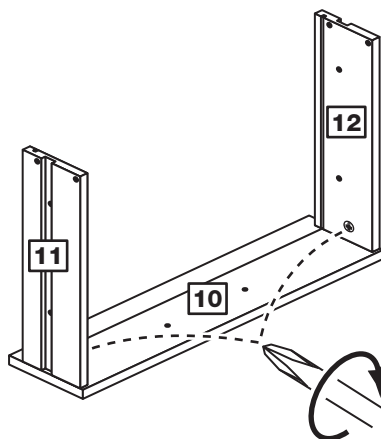


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **14** down the grooves in the drawer sides **11** and **12** and down into the groove in the drawer front **10**.

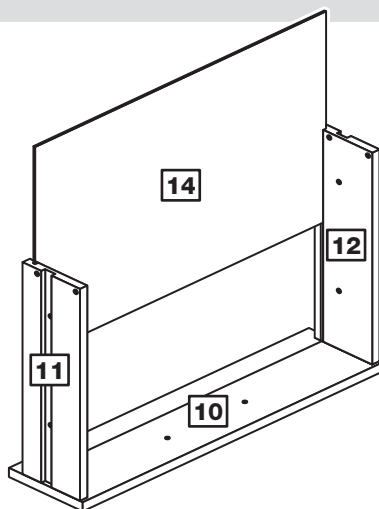


## Step 5

### Fit the drawer back

Fit the drawer back **13** between the drawer sides **11** and **12**. Make sure that the drawer base **14** fits into the groove in the drawer back **13**.


Hold the drawer back **13** in position and tap the knock-in pegs **E** through the holes in the drawer sides **11** and **12**.

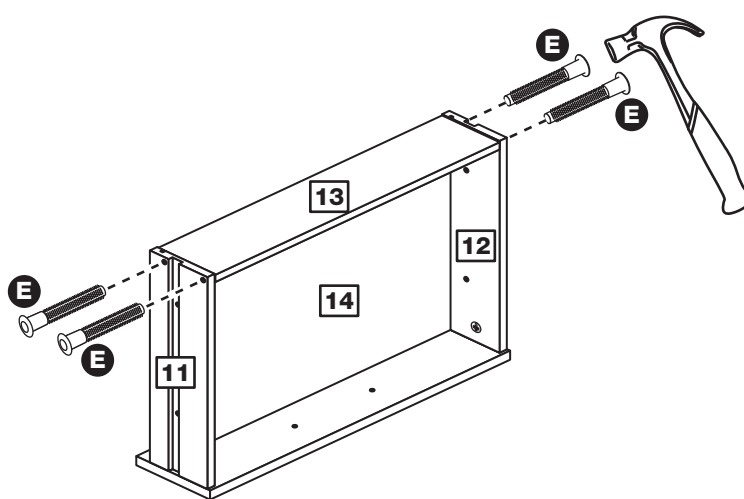

## Step 6

### Attach the handle



Attach the handle **L a** to the drawer front **10** using 2 screws **L b**.

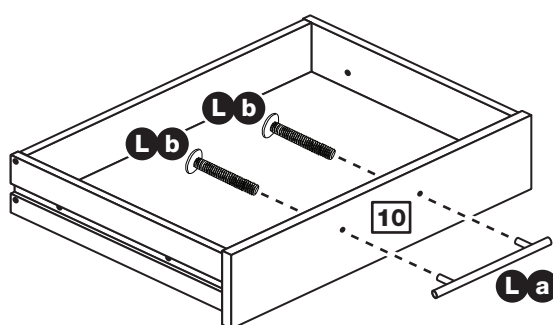

## Step 7

### Fit the wedgifixes

Turn the drawer assembly over and slide 2 wedgifixes **K** into the front and back grooves, as shown, and tighten up the screws.

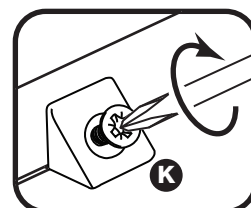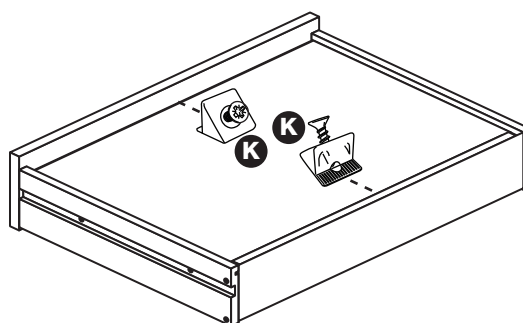

# Assembly Instructions

## Step 8

### Prepare the left side


Screw 4 metal dowels **B** into the left side **1**.

**Note:** Tighten the metal dowels up fully against the panels.

Insert 2 large locking nuts **D** into the left side **1**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Gently tap a mini block **F** into the left side **1**, orientated as shown.

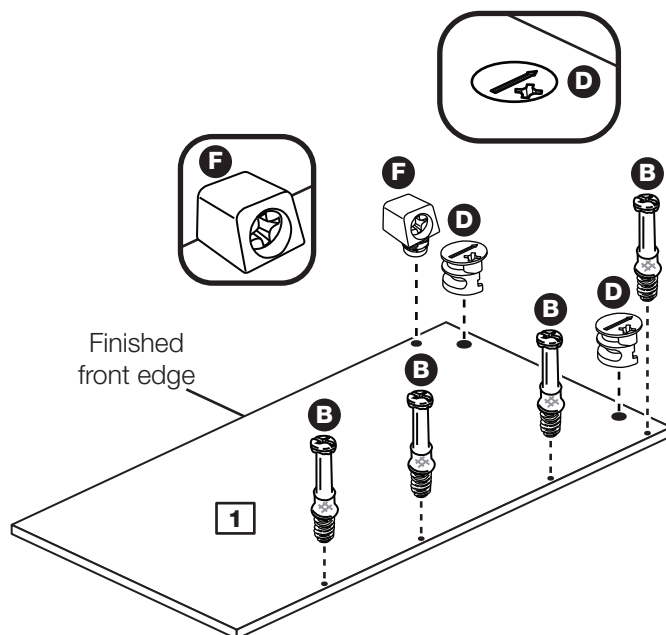


## Step 9

### Prepare the right side

Screw 4 metal dowels **B** into the right side **2**.

Insert 2 large locking nuts **D** into the right side **2**.


Gently tap a mini block **F** into the right side **2**, orientated as shown.

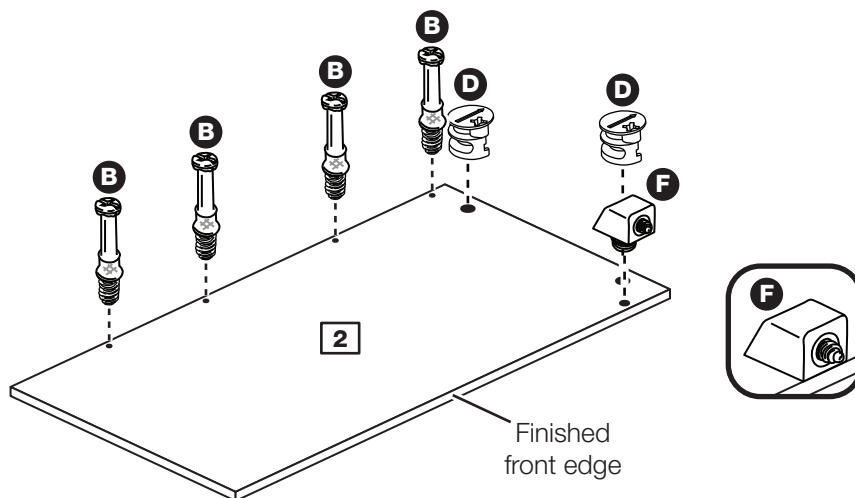

## Step 10

### Prepare the 2 modesty panels

Insert 4 large locking nuts **D** into each of the 2 modesty panels **8**.

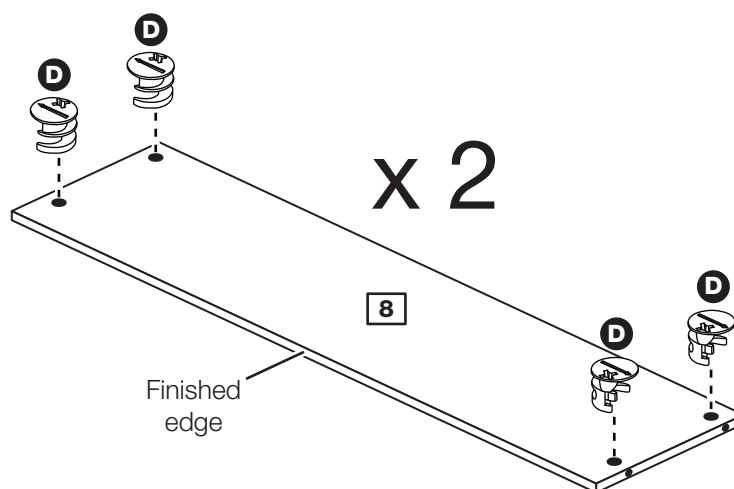

# Assembly Instructions


## Step 11

### Join the 2 modesty panels to the left side

Push the 2 modesty panels **8** onto the left side **1**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to each modesty **8**.

**Note:** Turn the large locking nuts **D** as far as they will go - more than 1/2 a turn.

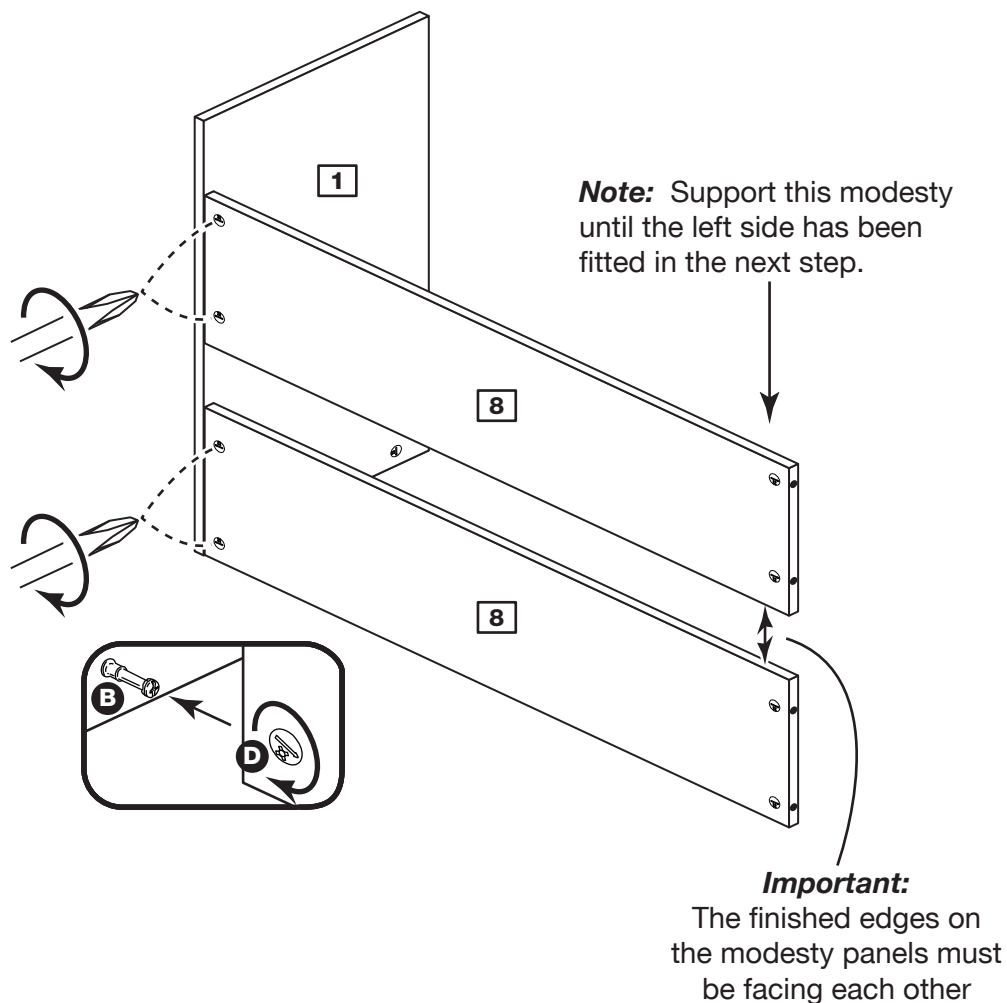


## Step 12

### Fit the right side

Push the right side **2** into the 2 modesty panels **8**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to each modesty **8**.

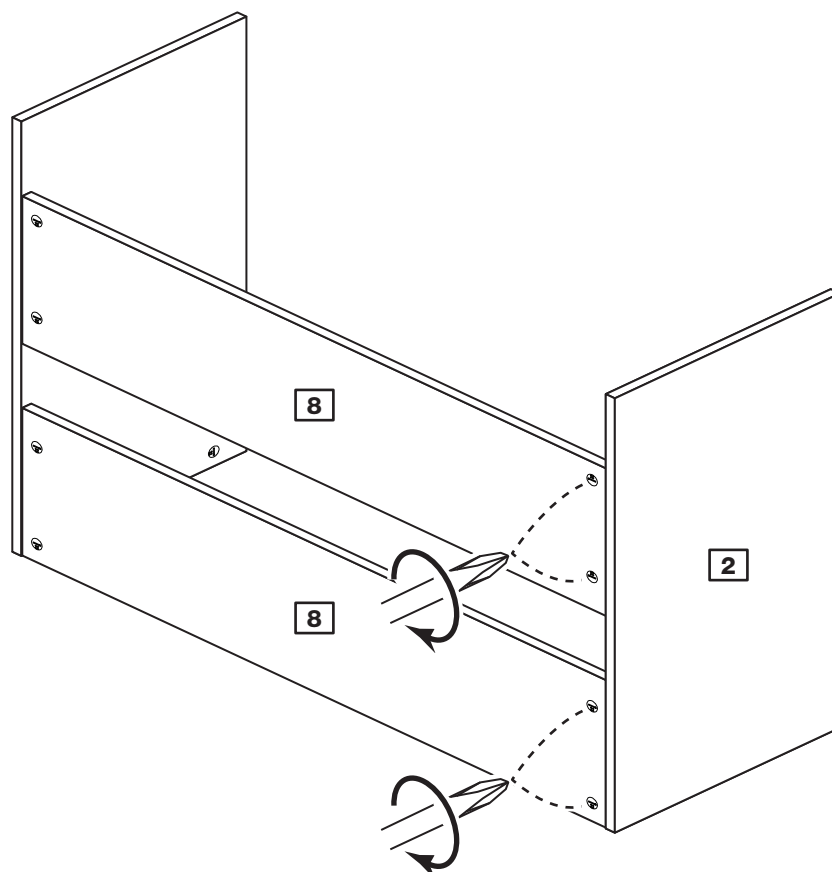



# Assembly Instructions

## Step 13

### Prepare the left upright

**a:** Place a runner **J** on the left upright **3** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **H**.

**b:** Slide the runner **J** back the other way and fit the 2nd screw **H** into the corresponding hole in the left upright **3**.





**c:** Screw a metal dowel **B** into the left upright **3**.

Insert 2 large locking nuts **D** into the left upright **3**.


**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

### Turn the left upright over

**d:** Gently tap a mini block **F** into the left upright **3**, orientated as shown.

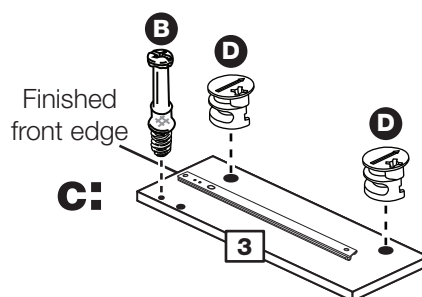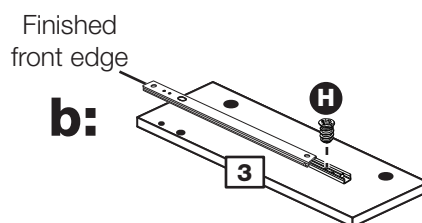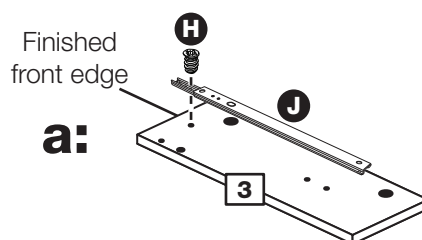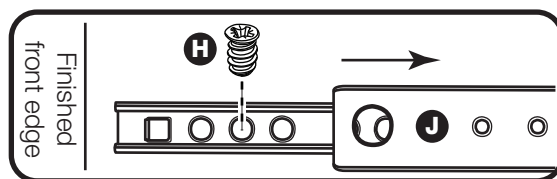

**Turn the left upright over**

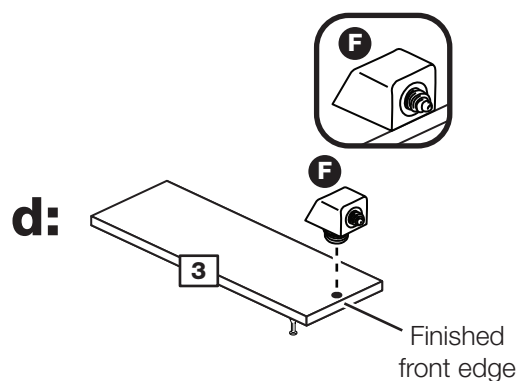

# Assembly Instructions

## Step 14

### Prepare the right upright

**a:** Place a runner **J** on the right upright **4** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **H**.





**b:** Slide the runner **J** back the other way and fit the 2nd screw **H** into the corresponding hole in the right upright **4**.

**c:** Screw a metal dowel **B** into the right upright **4**.


Insert 2 large locking nuts **D** into the right upright **4**.

### Turn the right upright over

**d:** Gently tap a mini block **F** into the left upright **4**, orientated as shown.

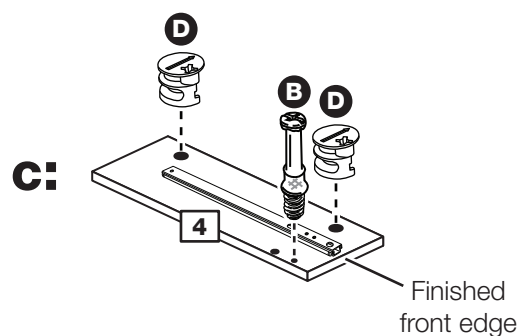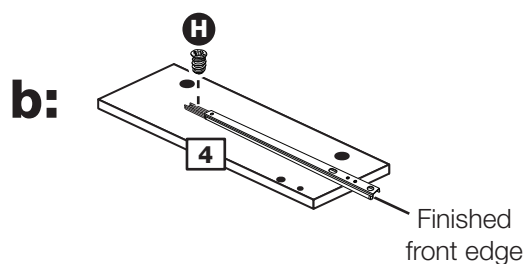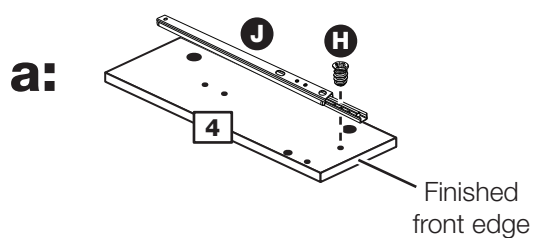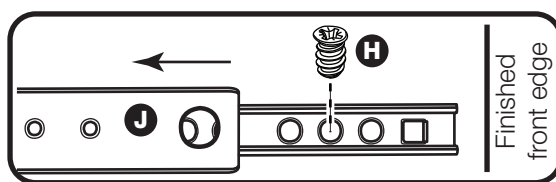

**Turn the right upright over**

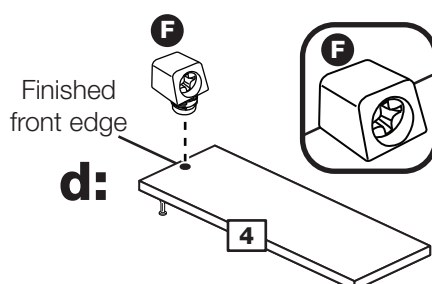

# Assembly Instructions


## Step 15

### Prepare the rail

Insert 2 large locking nuts **D** into the rail **9**.

Tap 2 wooden dowels **A** into the rail **9**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

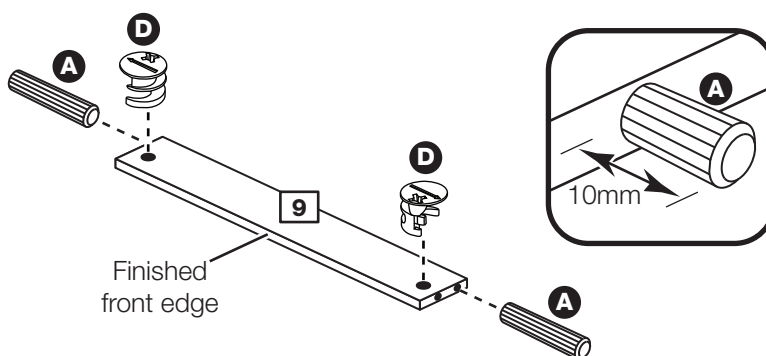


## Step 16

### Join the rail to the uprights

Push the left upright **3** and the right upright **4** into the rail **9**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the rail **9**.

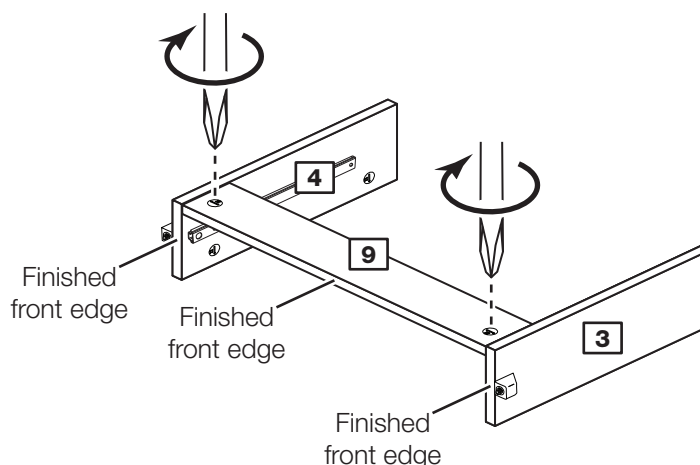


## Step 17

### Prepare the top

Screw 8 metal dowels **B** into the top **7**.

**Note:** Tighten the metal dowels up fully against the panels.

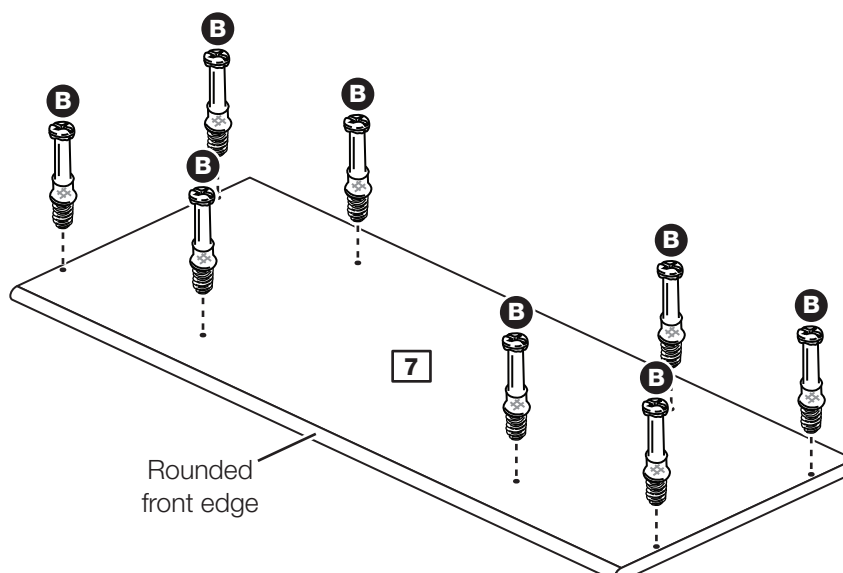


# Assembly Instructions

## Step 18

### Fit the uprights to the top

Lower the left upright **3** and right upright **4** down onto the top **7**.

Use a screwdriver to tighten the 4 large locking nuts **D** fitted to the uprights **3** and **4**.

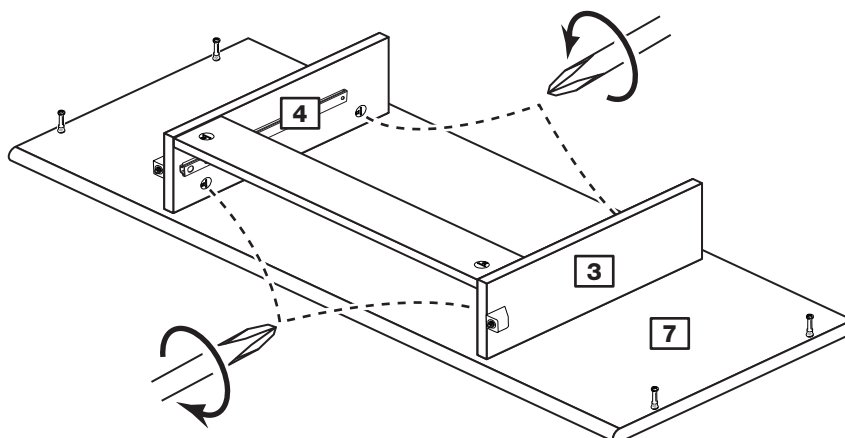


## Step 19

### Fit the sides to the top

Lower the left side **1** and right side **2** down onto the top **7**.

Use a screwdriver to tighten the 4 large locking nuts **D** fitted to the left side **1** and right side **2**.

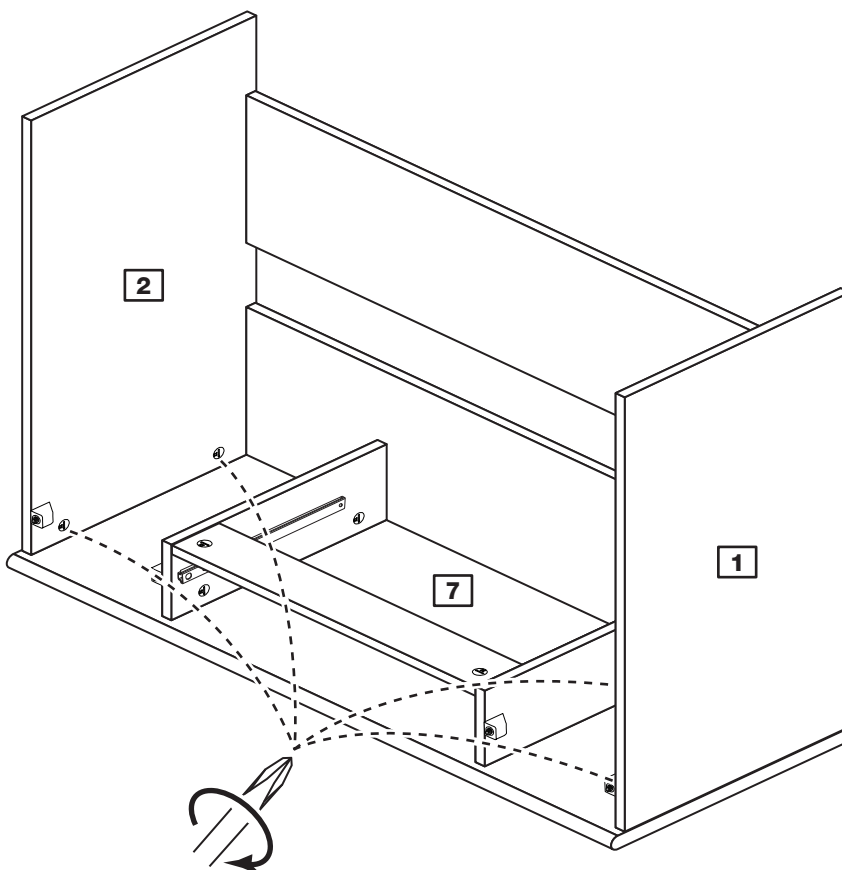


# Assembly Instructions

## Step 20

### Fit the blanking panels

Position the holes on the back surface of each blanking panel **5** and **6** over the screws on the mini blocks **F**.

Tighten up the screws in the 4 mini blocks **F** into the holes in the blanking panels **5** and **6**.

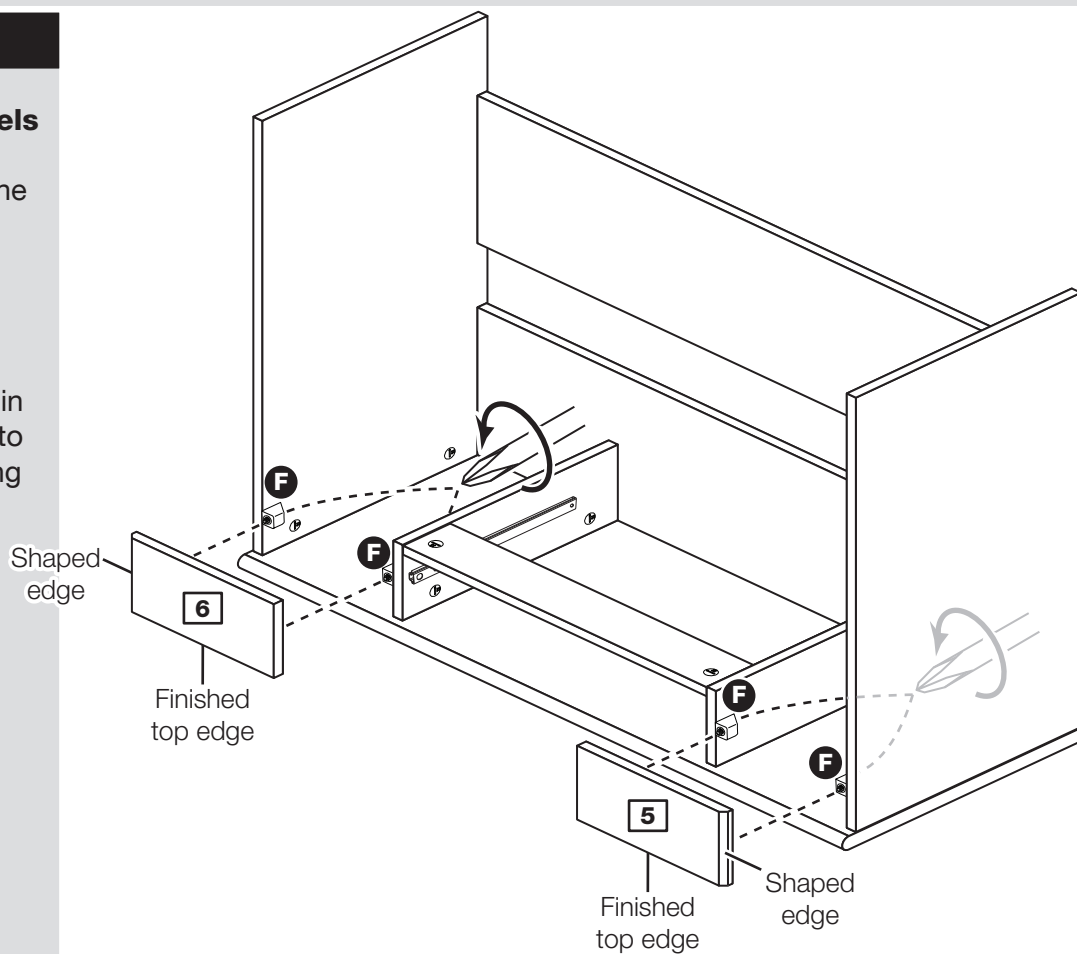

## Step 21


### Fit the 4 plastic nails

Tap 2 plastic nails **M** into the bottom edge of each of the sides **1** and **2**.

**Carefully stand the unit up for the next step.**



**Warning:** The unit is heavy. Lift with care.

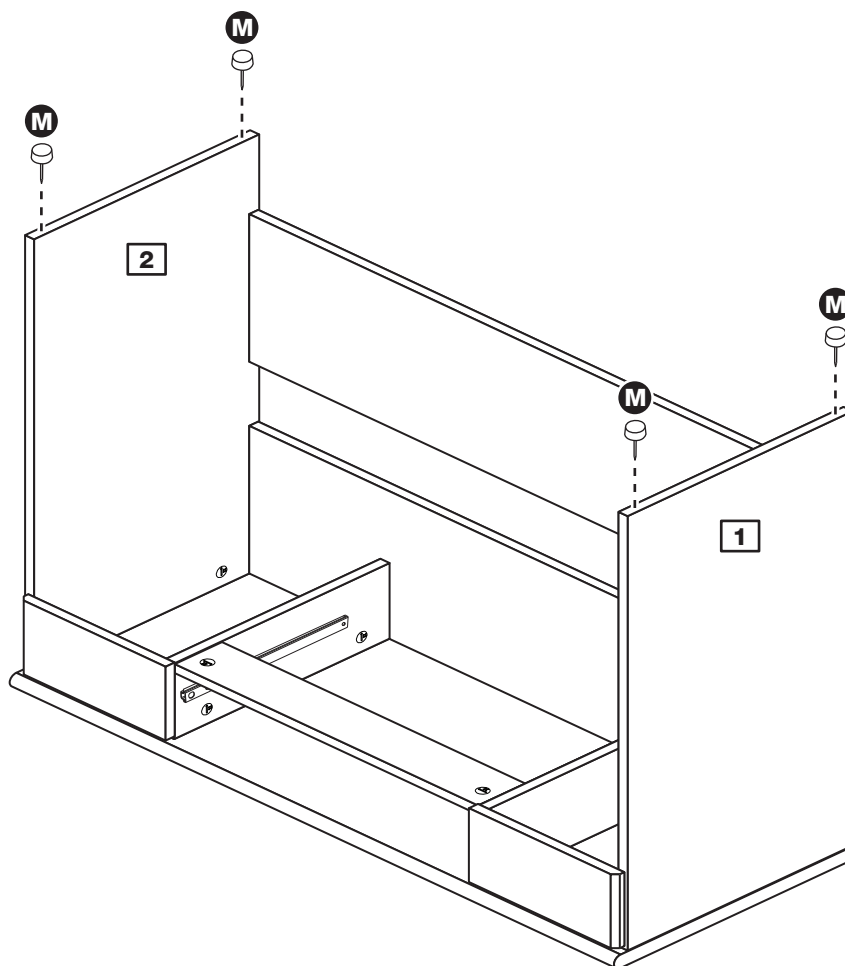

# Assembly Instructions

## Step 22


### Fit the drawers

Starting with the bottom drawer, slide both the runners **J** forward and locate the drawer sides **11** and **12** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **J**.

Working from the inside of the drawer, insert 2 screws **G** through the drawer sides and out into the 2nd threaded hole in the runner.

**Note:** Do not overtighten the screws **G**. If they catch on the runner you may need to loosen them slightly.


**The dressing table assembly is complete**

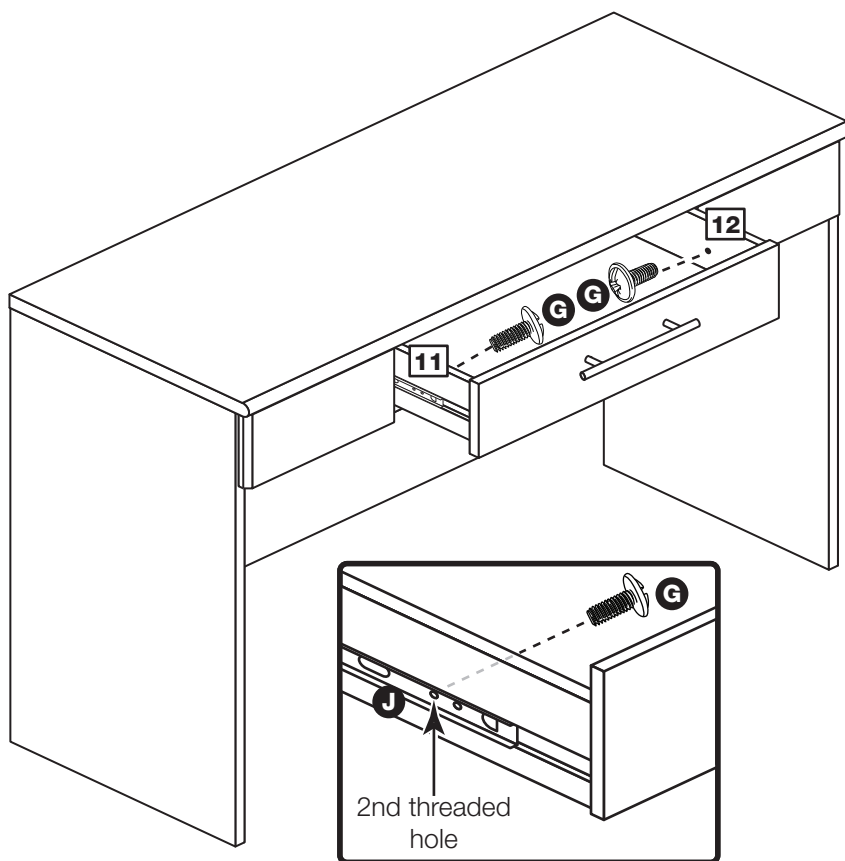

## Step 23

### Prepare the stool drawer front

Screw 2 metal dowels **B** into the stool drawer front **20**.

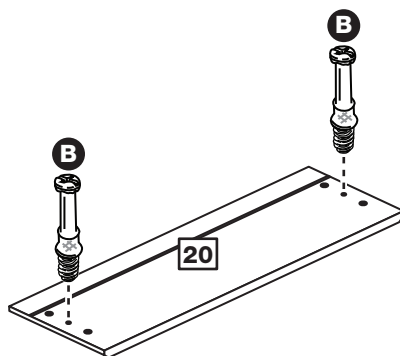


# Assembly Instructions

## Step 24

### Prepare the stool drawer sides

Insert a small locking nut **C** into the hole shown on the stool left drawer side **21** and stool right drawer side **22**.

**Note:** Arrow on locking nut **must** point towards hole in edge of panel.

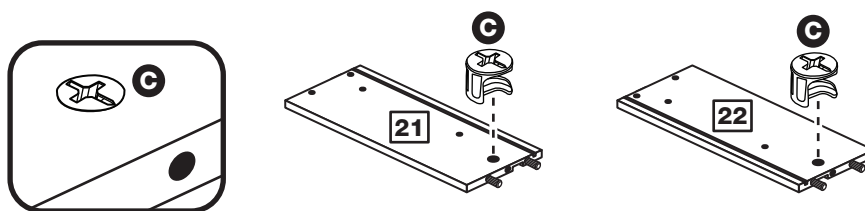


## Step 25

### Attach the stool drawer sides to the stool drawer front

Push the stool left drawer side **21** and stool right drawer side **22** onto the back of the stool drawer front **20**.


Turn the small locking nuts **C** on the stool left drawer side **21** and stool right drawer side **22**.

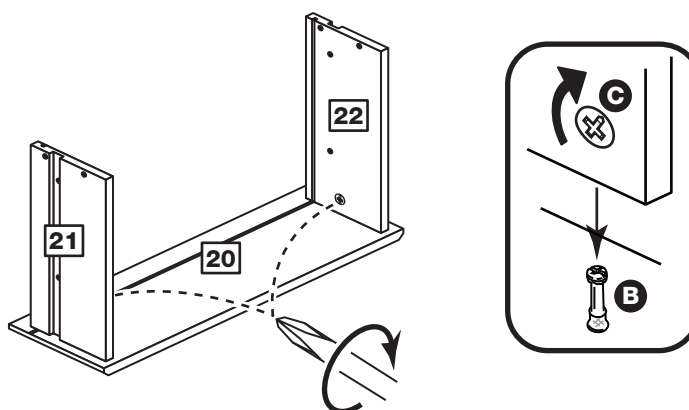

## Step 26

### Fit the stool drawer base

Slide the stool drawer base **25** down the grooves in the stool drawer sides **21** and **22** and down into the groove in the stool drawer front **20**.

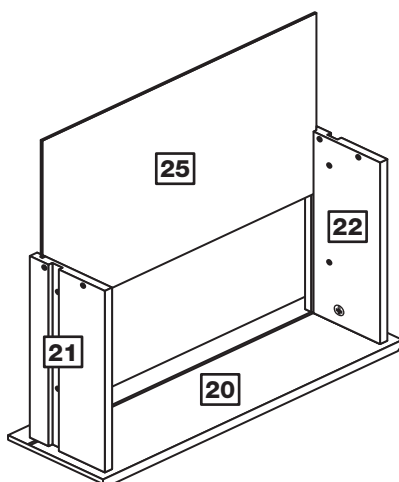

# Assembly Instructions


## Step 27

### Fit the stool drawer back

Fit the stool drawer back **23** down onto the stool drawer base **25**.

Make sure that the stool drawer base **25** fits into the groove in the stool drawer back **23**.



Hold the stool drawer back **23** in position and tap the knock-in pegs **E** through the holes in the stool drawer sides **21** and **22**.

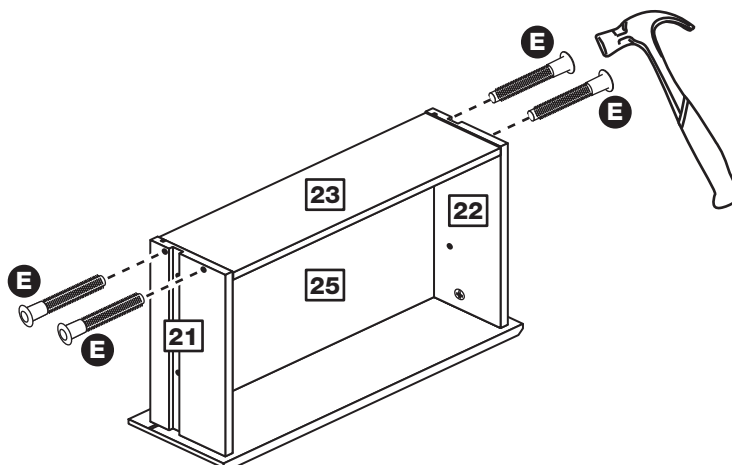

## Step 28

### Fit the wedgexes


Turn the drawer assembly over and slide 2 wedgexes **K** into the front and back grooves, as shown, and tighten up the screws.

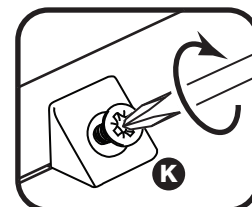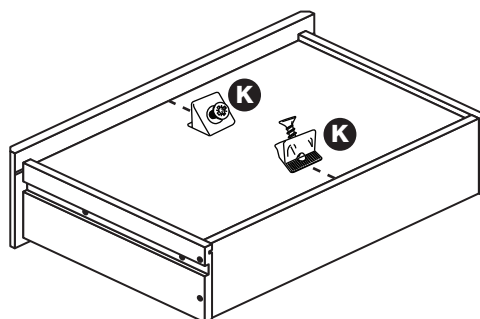

## Step 29

### Prepare the stool rails

Insert 4 large locking nuts **D** into each of the stool rails **19**.

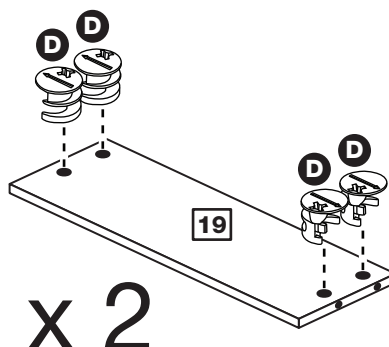



# Assembly Instructions

## Step 30


### Prepare the stool left side

**a:** Place a runner **J** onto the stool left side **15**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **H**.


**b:** Slide the runner **J** back the other way and fit the 2nd screw **H** into the corresponding hole in the stool left side **15**.

**c:** Screw 6 metal dowels **B** into the stool left side **15**.


Insert 2 large locking nuts **D** into the stool left side **15**.

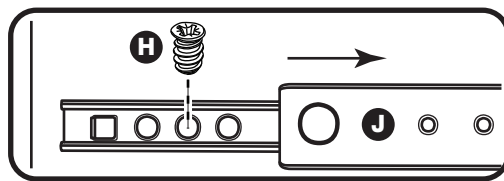


**a:**

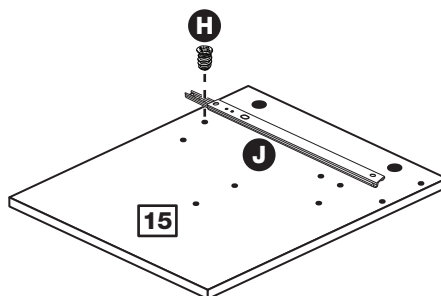


**b:**

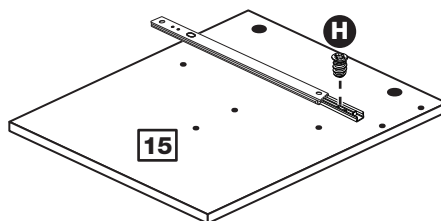

**c:**

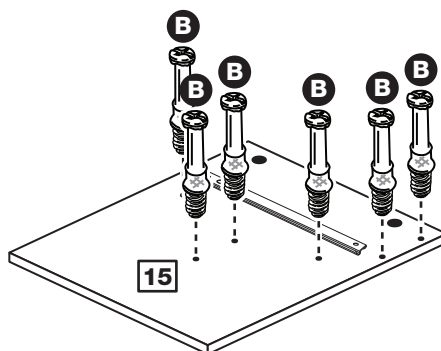

**d:**

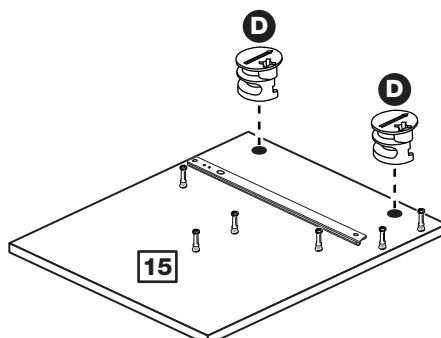

# Assembly Instructions

## Step 31

### Prepare the stool right side



**a:** Place a runner **J** onto the stool right side **16**. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **H**.

**b:** Slide the runner **J** back the other way and fit the 2nd screw **H** into the corresponding hole in the stool right side **16**.



**c:** Screw 6 metal dowels **B** into the stool right side **16**.

Insert 2 large locking nuts **D** into the stool right side **16**.


**a:**

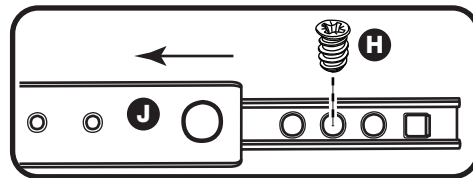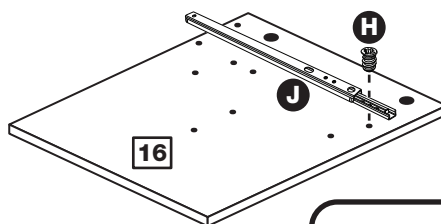


**b:**

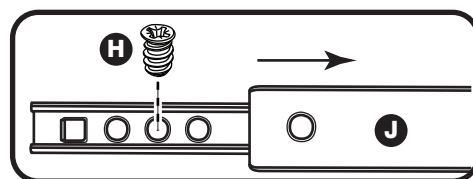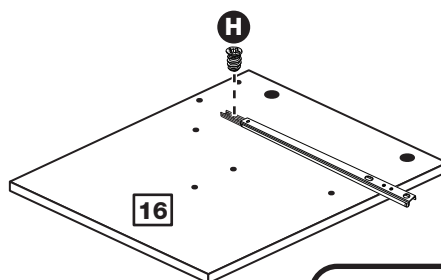

**c:**

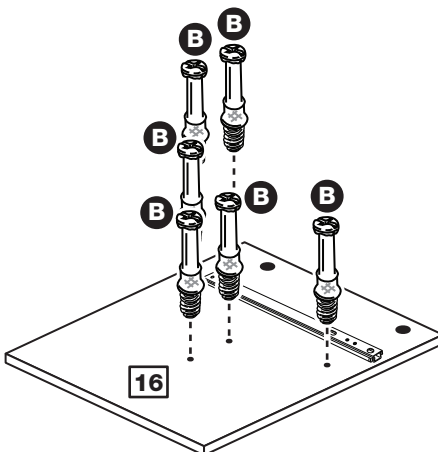

**d:**

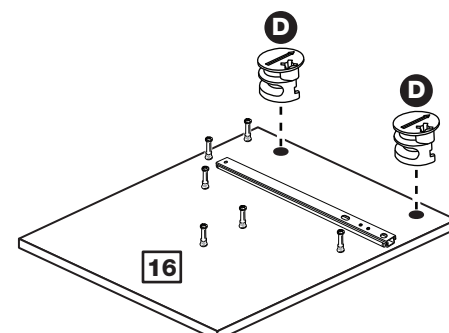


# Assembly Instructions

## Step 32

### Fit a stool rail to the stool left side

Push a stool rail **19** onto the stool left side **15**.


Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the stool rail **19**.

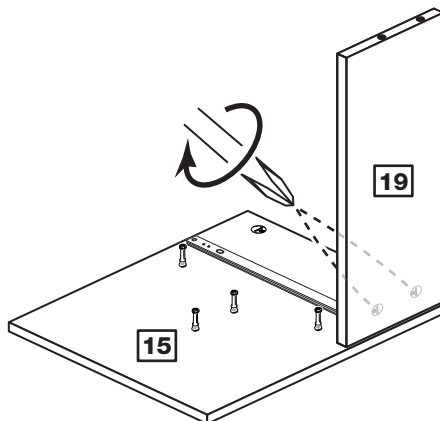

## Step 33

### Prepare the stool base

Insert 4 large locking nuts **D** into the stool base **18**.

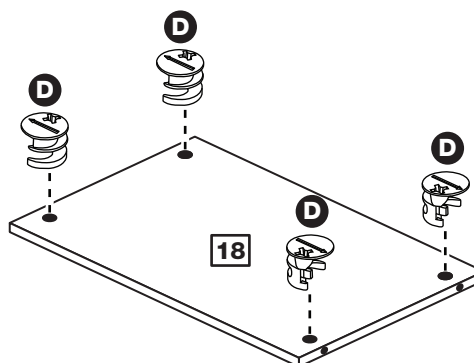


## Step 34

### Fit the stool base

Push the stool base **18** onto the stool left side **15**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the stool base **18**.

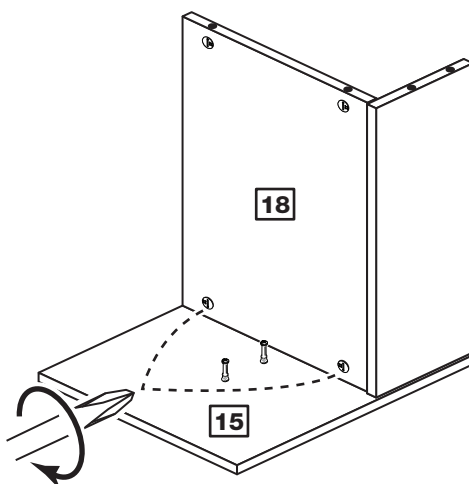


# Assembly Instructions

## Step 35

### Fit the other stool rail

Push the other stool rail **19** onto the stool left side **15**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the stool rail **19**.

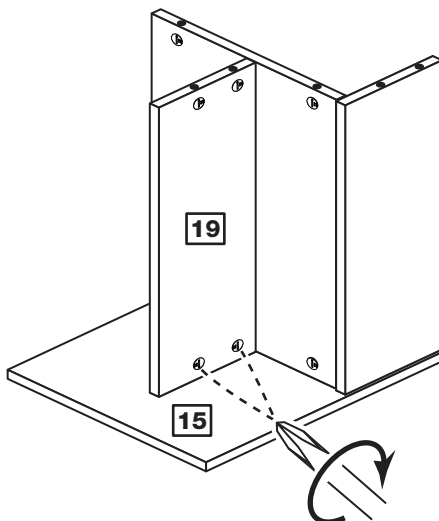


## Step 36

### Fit the stool right side

Push the stool right side **16** onto the stool base **18** and the 2 stool rails **19**.


Use a screwdriver to tighten the 2 large locking nuts **D** fitted to each of the stool rails **19**.

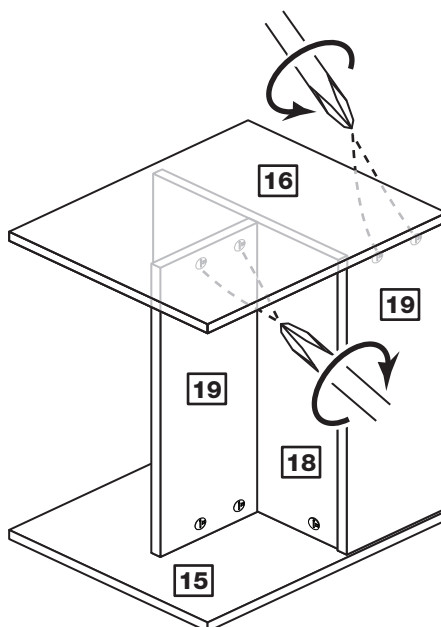

## Step 37

### Secure the stool base

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the stool base **18**.

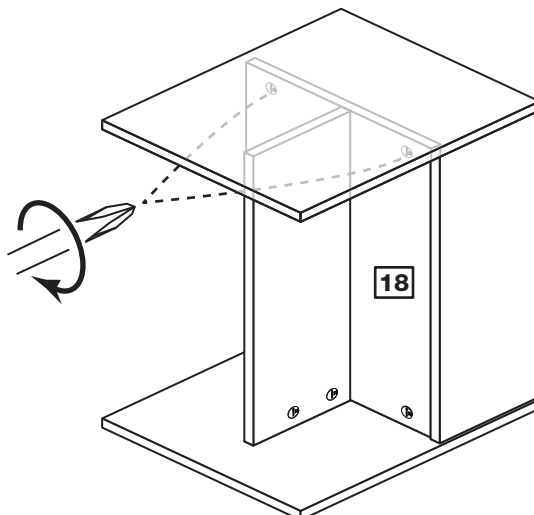


# Assembly Instructions

## Step 38

### Fit the 4 plastic nails

Tap 2 plastic nails **M** into the bottom edge of each of the stool sides **15** and **16**.


**Stand the stool up for the next step.**

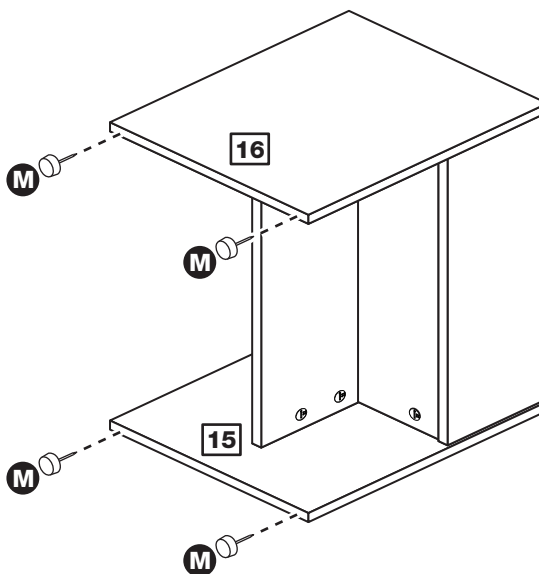

## Step 39

### Prepare the stool top

Screw 4 metal dowels **B** into the stool top **17**.

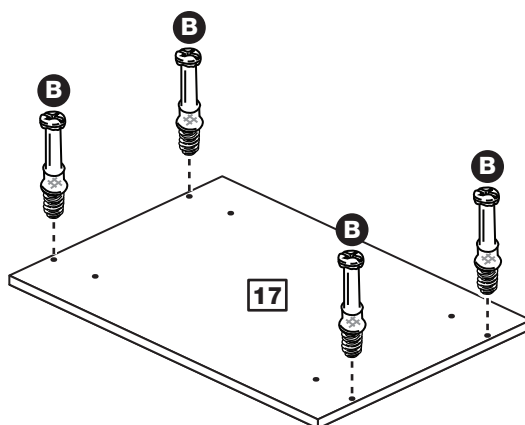


## Step 40

### Fit the stool seat pad

Fit the stool seat pad **24** to the stool top **17** using 4 screws **I**.

**Note:** Make sure that it is fitted centrally and you screw into the hard surface of the stool seat pad.

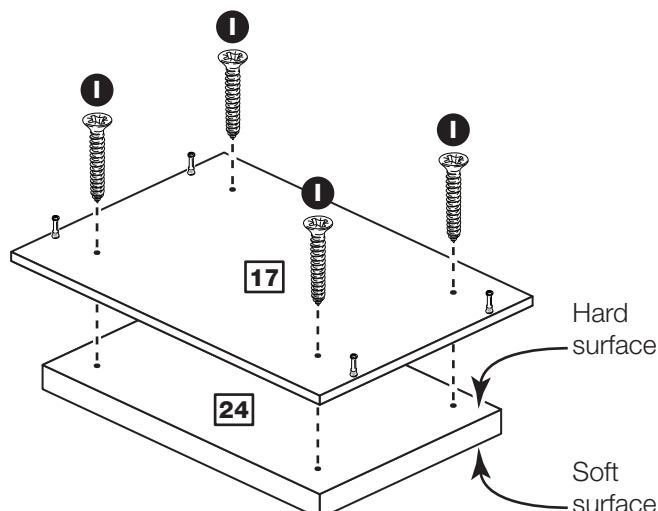


# Assembly Instructions

## Step 41

### Fit the stool top

Lower the stool top **17** down onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts **D** fitted to the stool left side **15** and stool right side **16**.

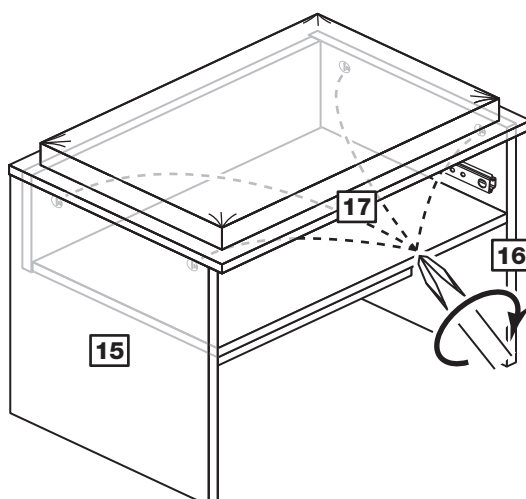



## Step 42

### Fit the stool drawer

Slide both the runners **J** forward and locate the drawer sides **21** and **22** between them, lining up the holes in the drawer sides with the 2nd 'threaded' holes in the runners **J**.

Working from the inside of the drawer, insert 2 screws **G** through the drawer sides and out into the 2nd threaded hole in the runner.

**Note:** Do not overtighten the screws **G**. If they catch on the runner you may need to loosen them slightly.

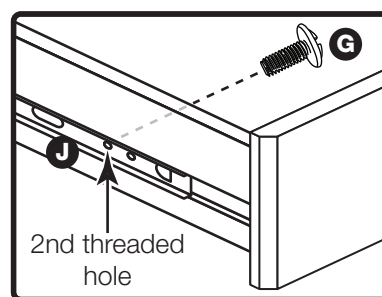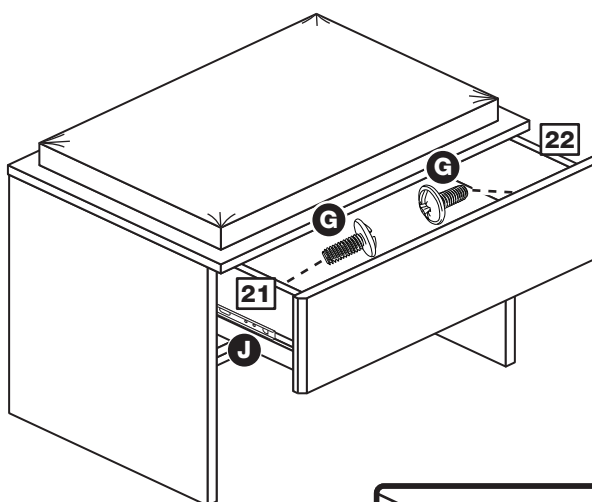

# Assembly Instructions

## Step 43

### Fit the overbalance protector



To prevent possible overbalancing we recommend that the dressing table is secured to a suitable wall by use of the overbalance protector kit **N** fitted to the unit or, an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

**Note:** Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

**Assembly is complete**

### Example

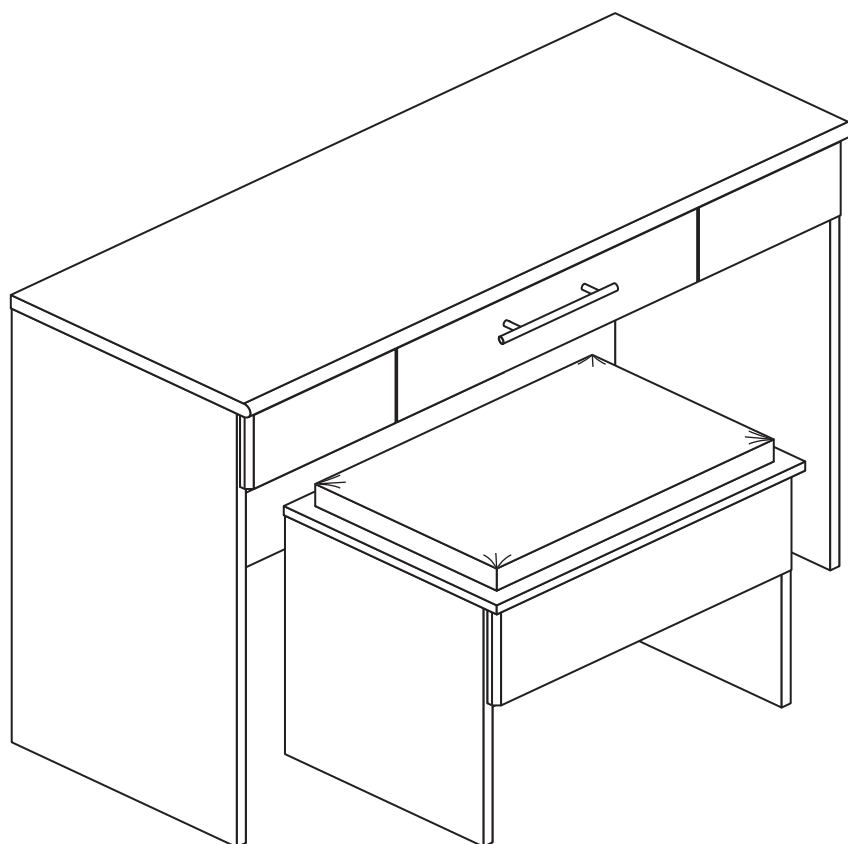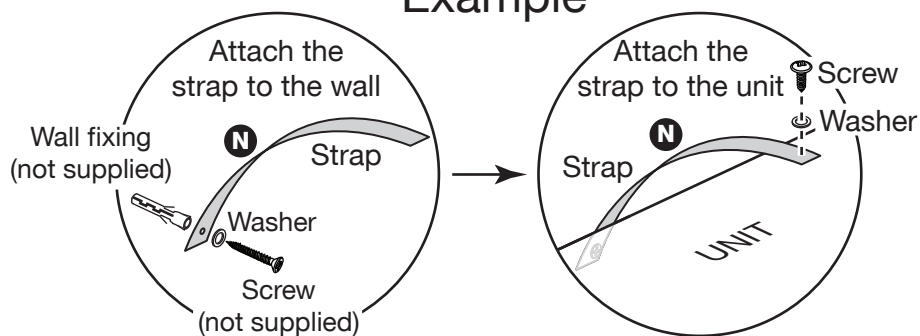

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or email: **Help@ClickSpares.co.uk** (quoting your original order number and the reference numbers on the component pages)  
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

