


# Anderson - 2+2 Sideboard

Assembly Instructions - Please keep for future reference

289/8533

609/5538

412/7714

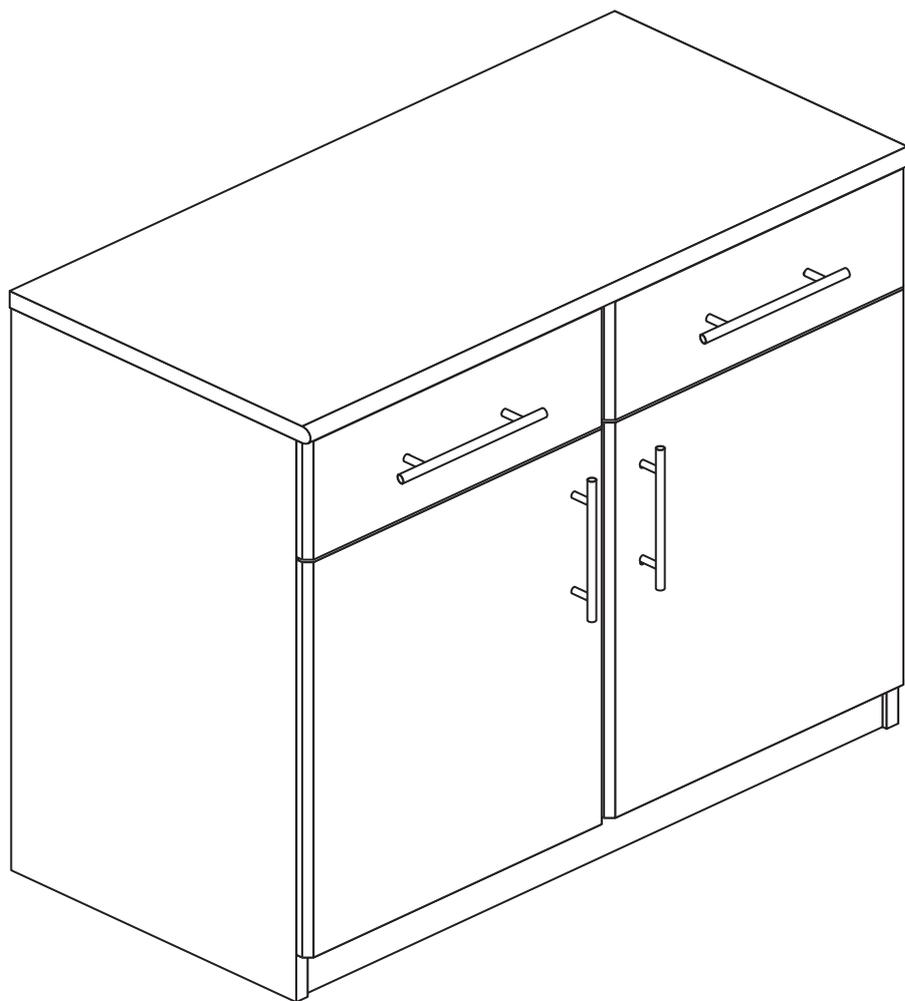

## Dimensions

Width - 80cm

Depth - 40cm

Height - 77.5cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



# Safety and Care Advice

**Important - Please read these instructions fully before starting assembly**

- **Warning:** This unit weighs approximately 28kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).




• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Tools required

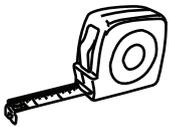

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)




Electric drill (do not use for fitting screws)

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below


Please check you have all the panels listed below

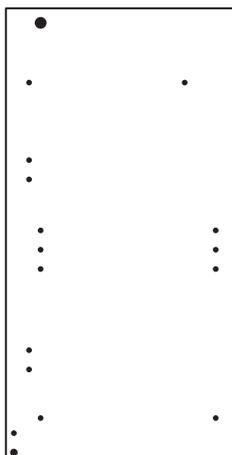


**1** Left Side (D2182A)  
(747 x 375mm)

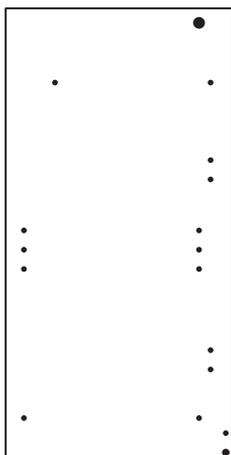


**2** Right Side (D2183A)  
(747 x 375mm)

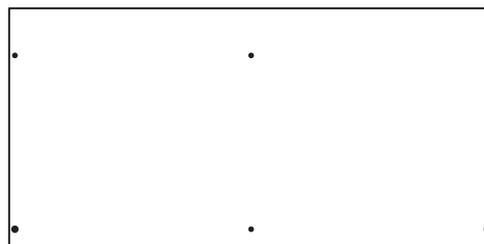

**3** Top (D2184A)  
(796 x 396mm)

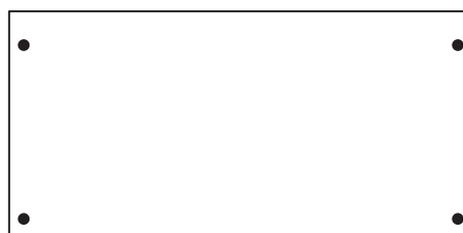

**4** Base (D2185A)  
(762 x 374mm)

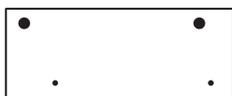


**5** Divider (D2260A)  
(150 x 374mm)



**6** Plinth (D2265A)  
(762 x 60mm)



**7** Shelf (D2261A)  
(762 x 368mm)

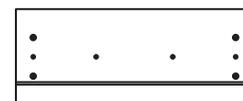

**8** Drawer Front (D2263A)  
(390 x 157mm) x 2




**9** Left Drawer Side (W509LH)  
(330 x 115mm) x 2




**10** Right Drawer Side (W509RH)  
(330 x 115mm) x 2




**11** Drawer Back (W537)  
(321 x 115mm) x 2

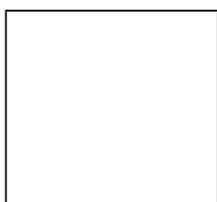

**12** Drawer Base (T603)  
(333 x 327mm) x 2

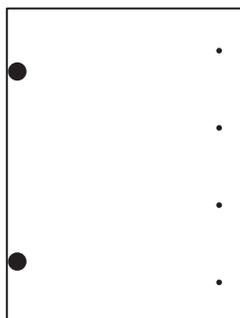

**13** Door (D2262A)  
(524 x 390mm) x 2

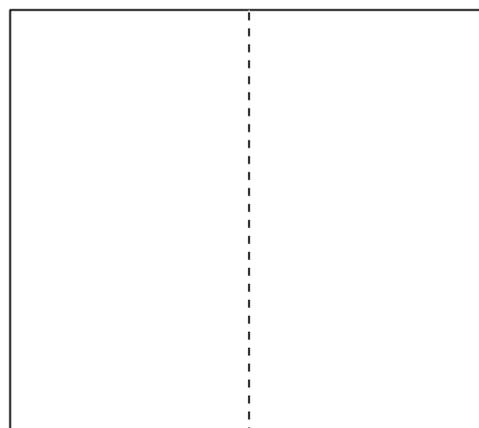

**14** Back (X786-705)  
(786 x 705mm)













# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
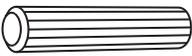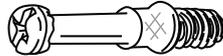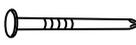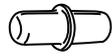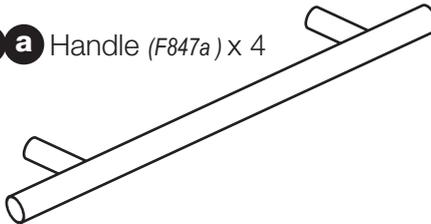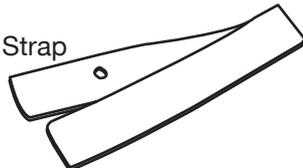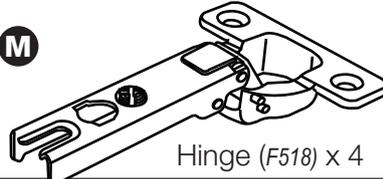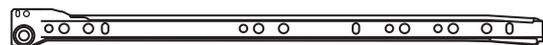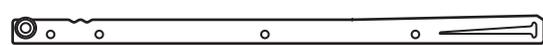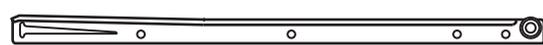
<p><b>A</b> </p> <p>Wooden dowel (F22) x 4</p>	<p><b>B</b> </p> <p>Metal dowel (F901) x 14</p>	<p><b>C</b> </p> <p>Knock-in Peg (F171) x 8</p>
<p><b>D</b> </p> <p>Nail (F51) x 21</p>	<p><b>E</b> </p> <p>Large locking nut (F900) x 10</p>	<p><b>F</b> </p> <p>Small locking nut (F3) x 4</p>
<p><b>G</b> </p> <p>Shelf stud (F110) x 4</p>	<p><b>H</b> </p> <p>13mm Screw (F63) x 16</p>	<p><b>I</b> </p> <p>13mm Screw (F52) x 8</p>
<p><b>J a</b> </p> <p>Handle (F847a) x 4</p>	<p><b>J b</b> </p> <p>Handle Screw (F847b) x 8</p>	<p><b>K</b> </p> <p>Strap</p> <p> Screw  Washer x 2</p>
<p><b>L</b> </p> <p>Hinge plate (F523) x 4</p>	<p><b>M</b> </p> <p>Hinge (F518) x 4</p>	<p>Overbalance protector kit (F269) x 1</p>
<p><b>N a</b>  L Runner (F159) x 2</p> <p><b>N b</b>  R Runner (F160) x 2</p> <p><b>N c</b>  L Runner (F161) x 2</p> <p><b>N d</b>  R Runner (F162) x 2</p>		

Ruler - Use this ruler to help correctly identify the screws

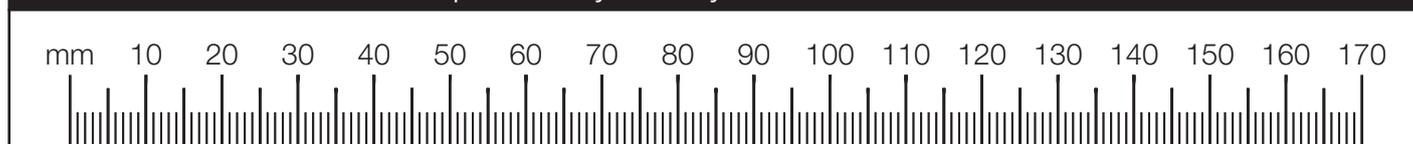

# Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below

## Step 1

### Prepare the drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **8**.

**Note:** Tighten metal dowels up fully against the panels.

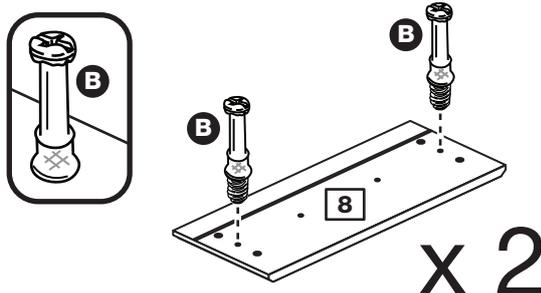


## Step 2

### Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and right drawer side **10**.

**Note:** Arrow on locking nut **must** point towards hole in edge of panel.

**Note:** Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

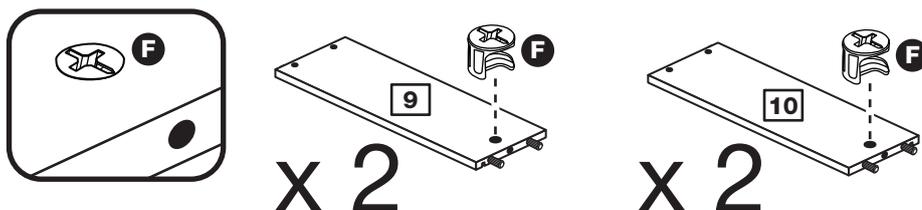

## Step 3


### Attach the drawer sides to the drawer front

Push the left drawer side **9** and right drawer side **10** onto the back of the drawer front **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

**Note:** Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

**Note:** The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

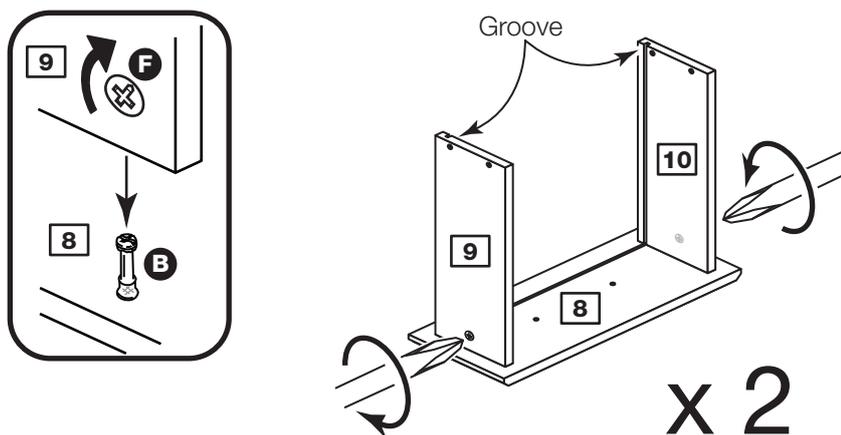


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

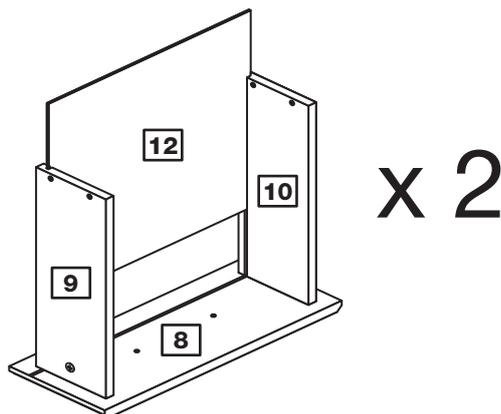


## Step 5

### Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**.

Make sure that the drawer base **12** fits into the groove in the drawer back **11**.


Hold the drawer back **11** in position and tap the knock-in pegs **C** through the holes in the drawer sides **9** and **10**.

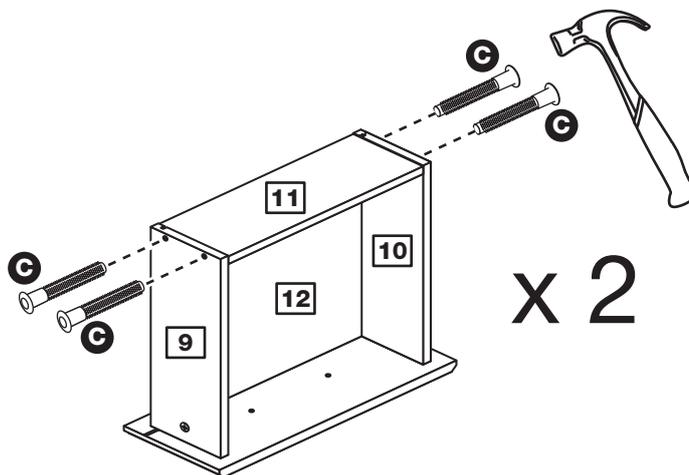

## Step 6

### Attach the handle

Attach a handle **Ja** to each drawer front **8** using 2 screws **Jb**.

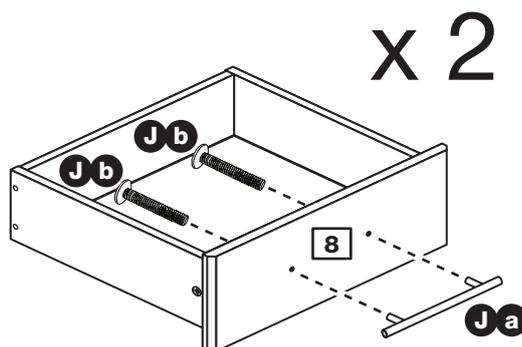

# Assembly Instructions

## Step 7


### Fit runners to the drawers

Fit the runner **Nc** to the bottom edge of the left drawer side **9**, as shown, making sure that it is pushed up against the back of the drawer front **8**. Use a bradawl to mark the fixing positions, then secure with 2 screws **H**.

Fit the runner **Nd** to the bottom edge of the right drawer side **10** using the same method.

Runners must be pushed up against the drawer front

### Turn the drawers over

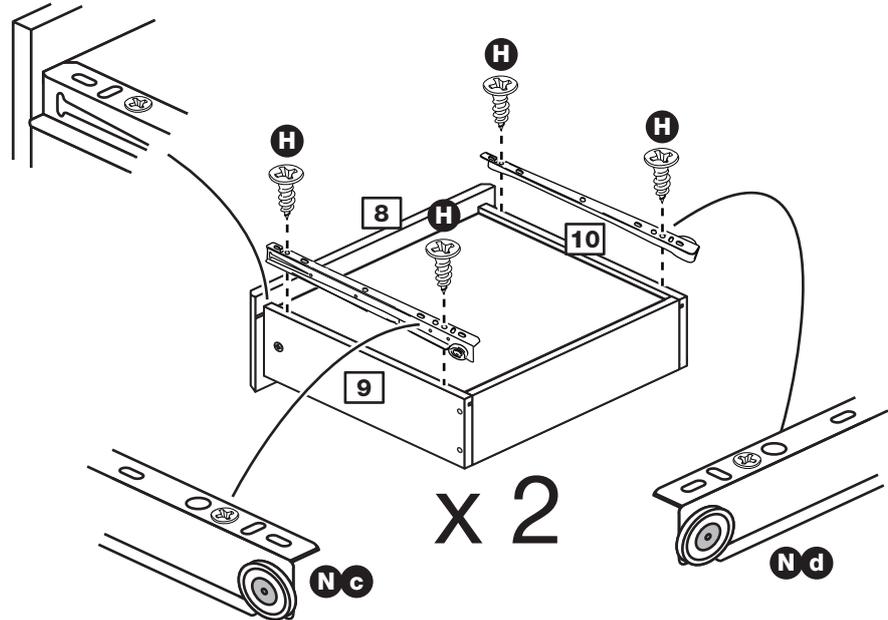

## Step 8

### Prepare the left side

Tap a wooden dowel **A** into the left side **1**.

Screw 3 metal dowels **B** into the left side **1**.


Insert a large locking nut **E** into the left side **1**.

Fit the runner **Na** to the left side **1**.


The 1st screw **I** uses the 2nd hole in from the front of the runner **Na**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.

Fit 2 hinge plates **L** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

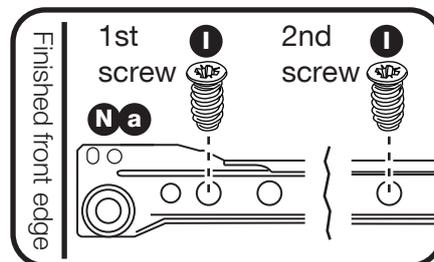

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

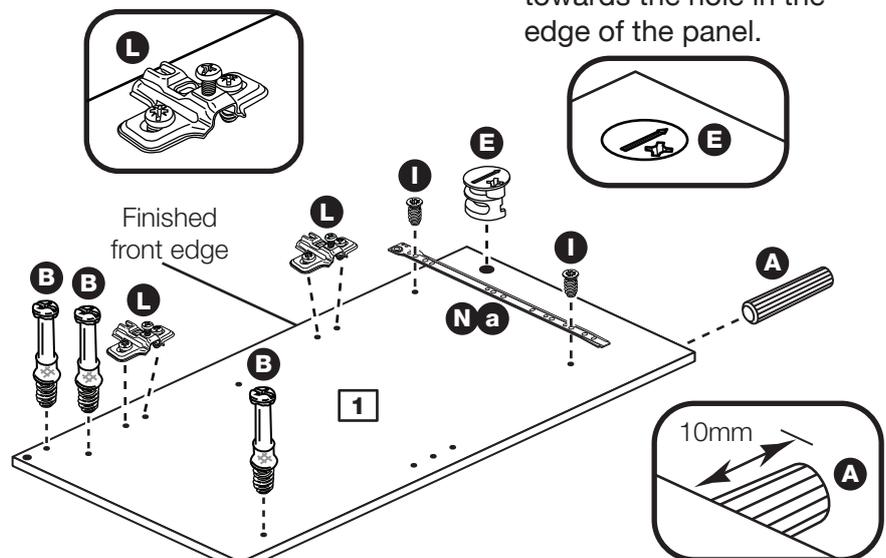

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

# Assembly Instructions

## Step 9

### Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.




Insert a large locking nut **E** into the right side **2**.

Fit the runner **N b** to the right side **2**.

The 1st screw **I** uses the 2nd hole in from the front of the runner **N b**.

The 2nd screw **I** uses the hole that lines up with the other panel hole.


Fit 2 hinge plates **L** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

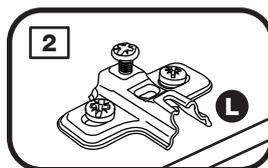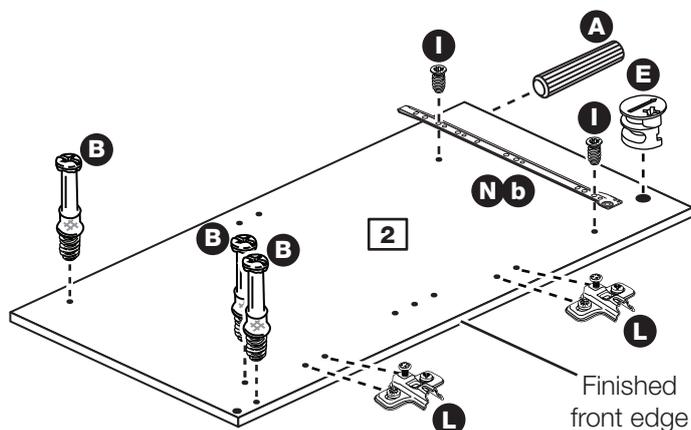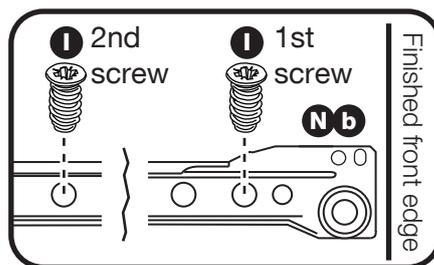

## Step 10

### Prepare the base

Insert 4 large locking nuts **E** into the base **4**.

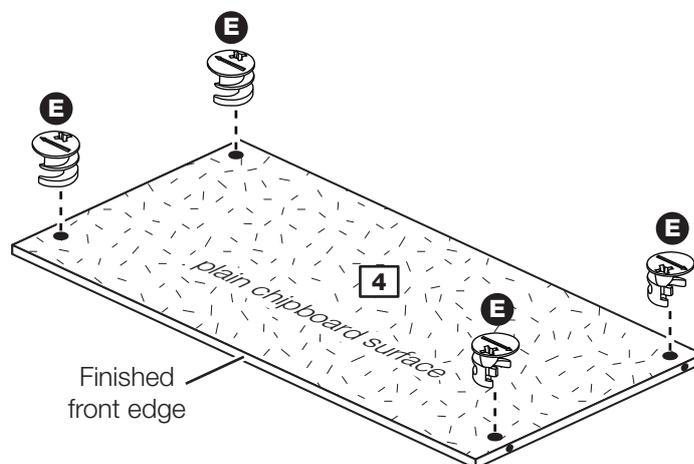

# Assembly Instructions


## Step 11

### Join the right side and base

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the base **4**.

**Note:** Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

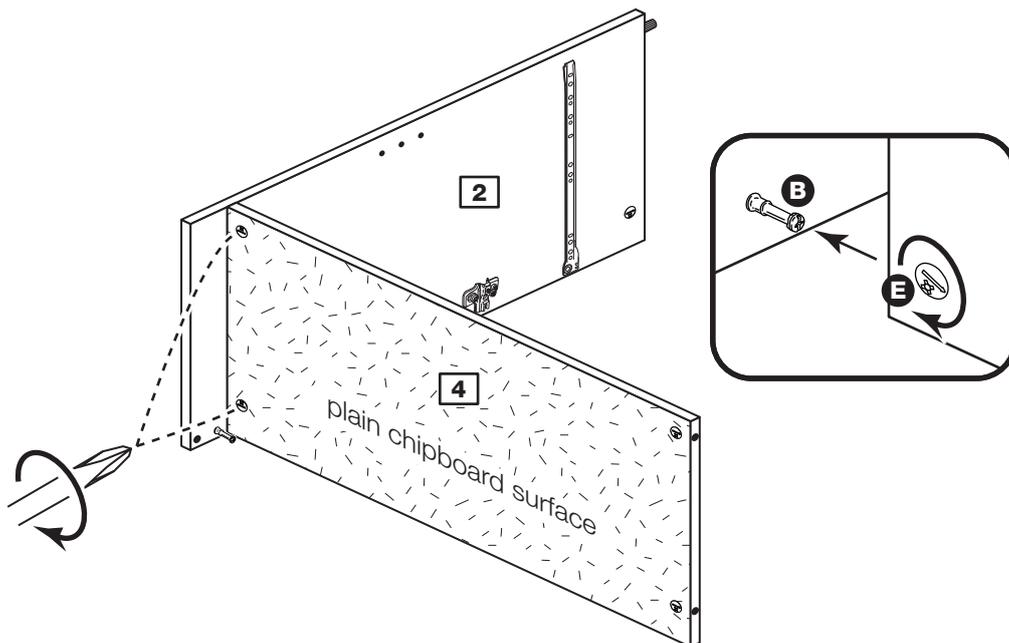


## Step 12

### Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **E** into the plinth **6**.

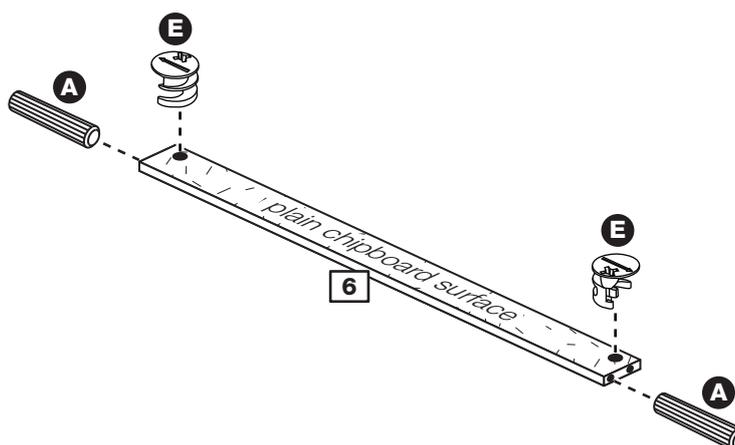


## Step 13

### Fit the plinth

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **E** fitted to the plinth **6**.

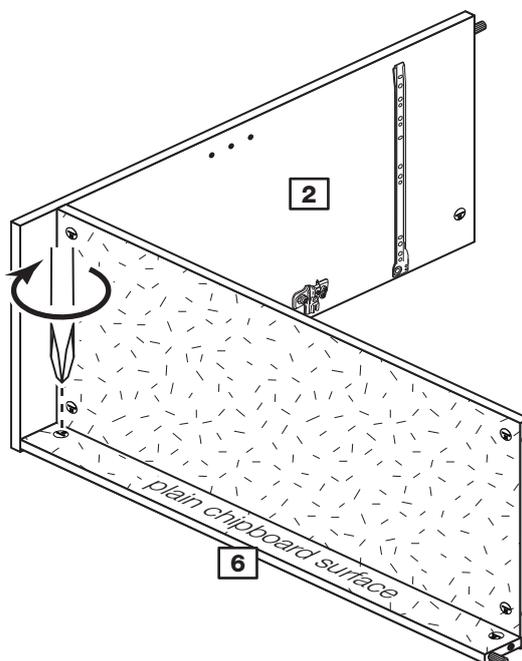


# Assembly Instructions

## Step 14

### Fit the left side

Push the left side **1** onto the assembly.


Use a screwdriver to tighten the 3 large locking nuts **E** fitted to the base **4** and plinth **6**.

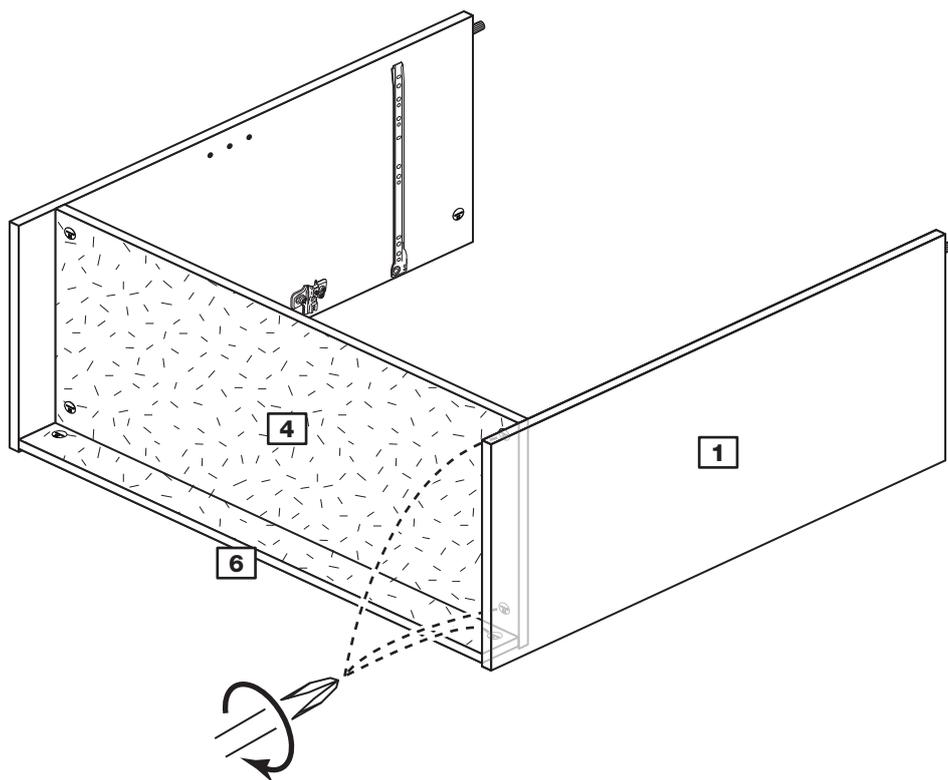

## Step 15

### Prepare the top

Screw 4 metal dowels **B** into the top **3**.

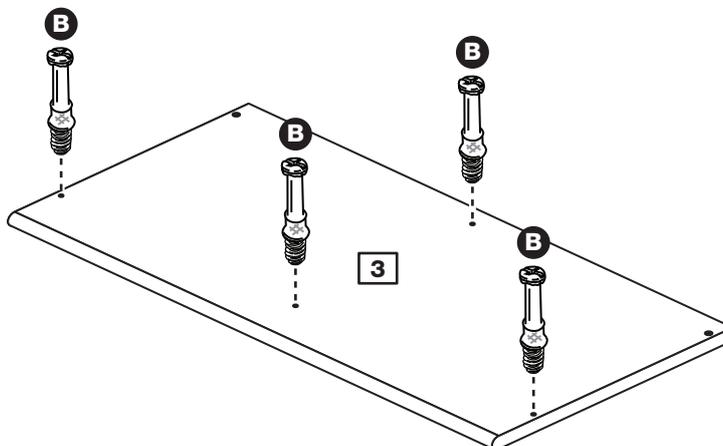

# Assembly Instructions

## Step 16

### Prepare the divider

**a:** Insert 2 large locking nuts **E** into the divider **5**.

**Note:** The 2 holes for the large locking nuts may be drilled in either surface of the divider **5**.

**b:** Fit a runner **N b** to this surface of the divider **5**.


**Note:** Use the finished front edge to identify which runner to fit.

The 1st screw **I** uses the 2nd hole in from the front of the runner.


The 2nd screw **I** uses the hole that lines up with the other panel hole.

**c:** Turn the divider **5** over and fit the runner **N a** to the other surface.

**a:**

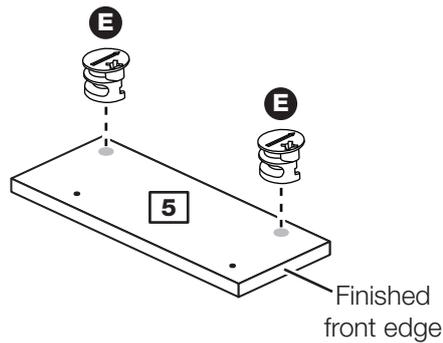


**b:**

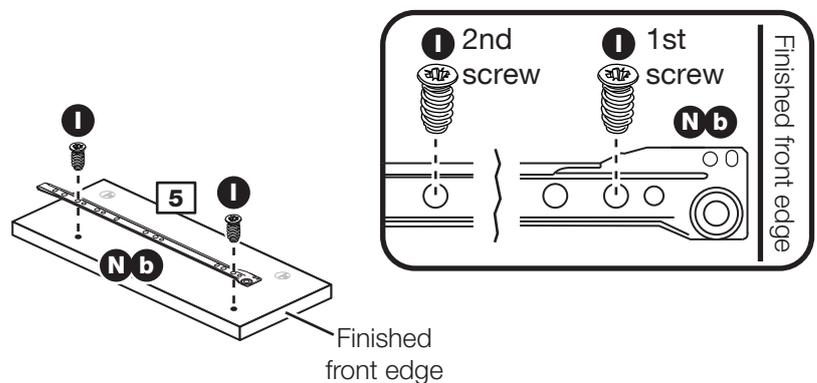

Turn the drawer divider over

**c:**

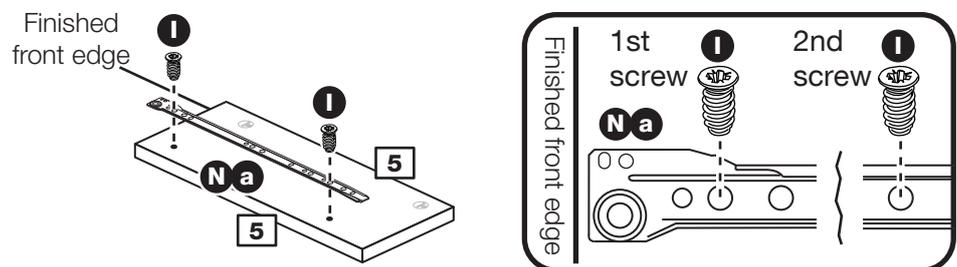

# Assembly Instructions


## Step 17

### Fit the divider

Push the divider **5** onto the top **3**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the divider **5**.

**Note:** The 2 large locking nuts may be on either surface of the divider.

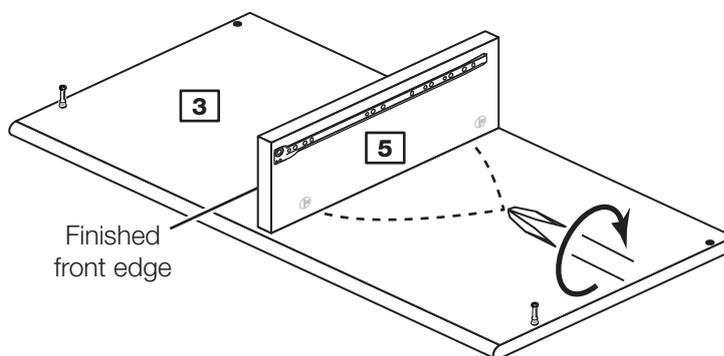


## Step 18

### Fit the top

Push the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **E** fitted to the side panels **1** and **2**.

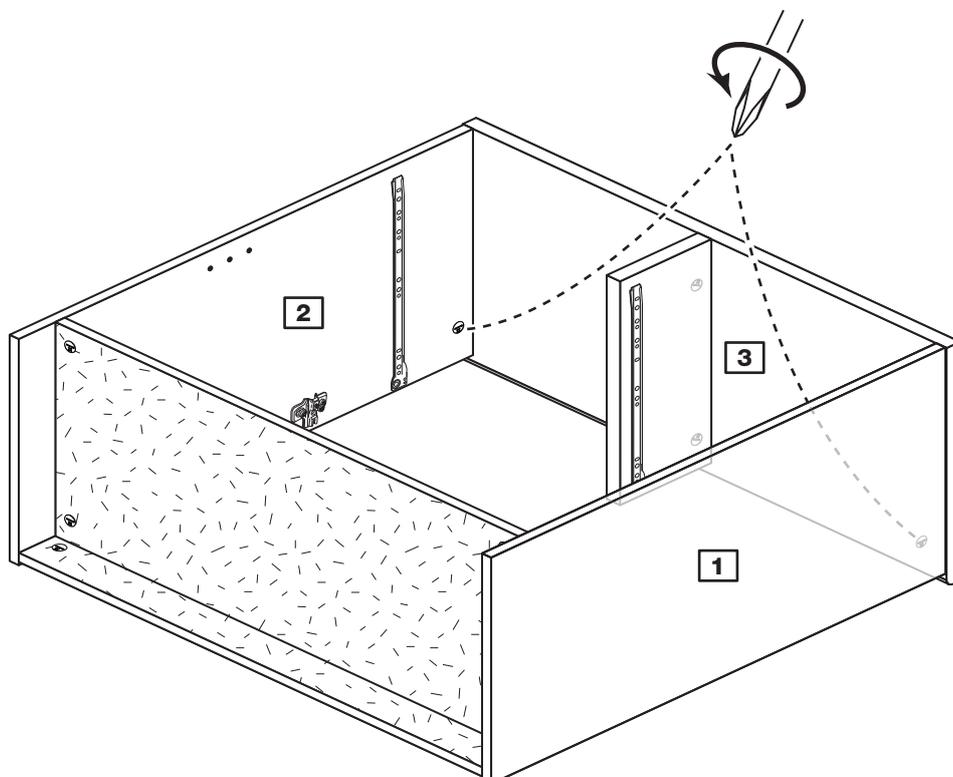

# Assembly Instructions

## Step 19

### Fit back panel

**a:** Square up the unit by making sure that measurement **x to x** equals **y to y**.

**b:** Place the back **14** down onto the unit, as shown.

Nail **D** around the outside edges of the back **14**.


**Note:** Nails should be spaced about 150mm apart.

**Stand the unit up for the next step.**



**Warning:** The unit is heavy. Lift with care.

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

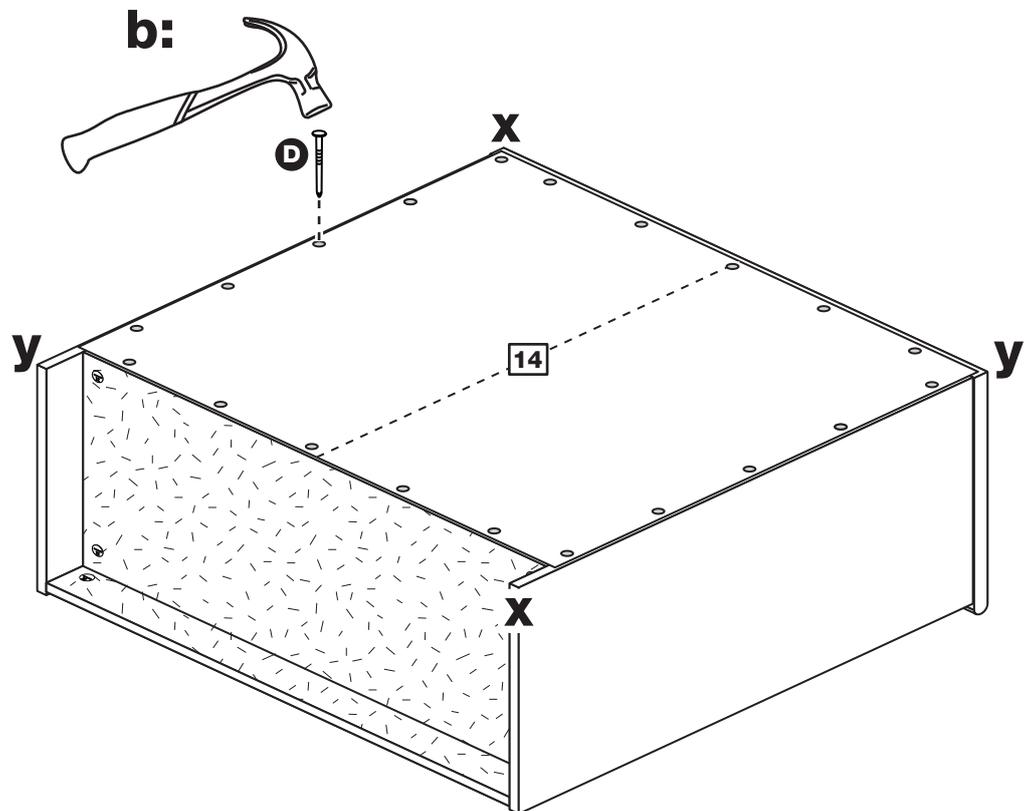


# Assembly Instructions

## Step 20

### Fit the shelf

Insert 4 shelf studs **G** at the required height.

Lower the shelf **7** down onto the shelf studs **G**.

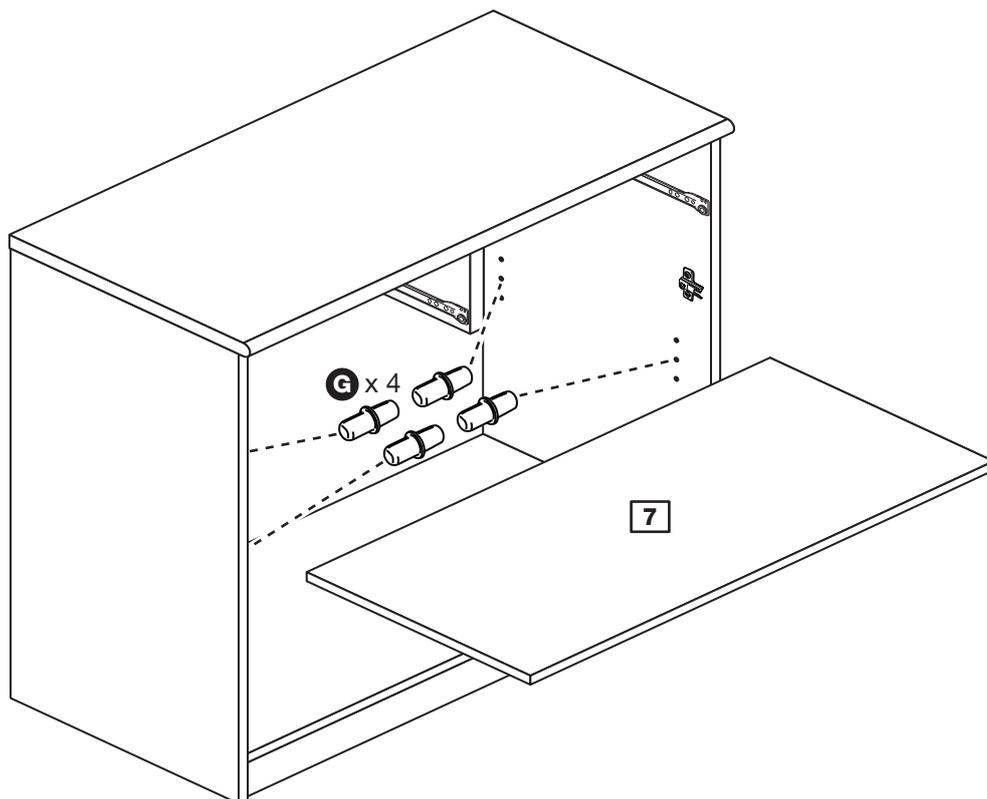


## Step 21

### Prepare the 2 doors

Push fit 2 hinges **M** into each of the doors **13**.

Secure each hinge with 2 screws **H**.

**Note:** Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

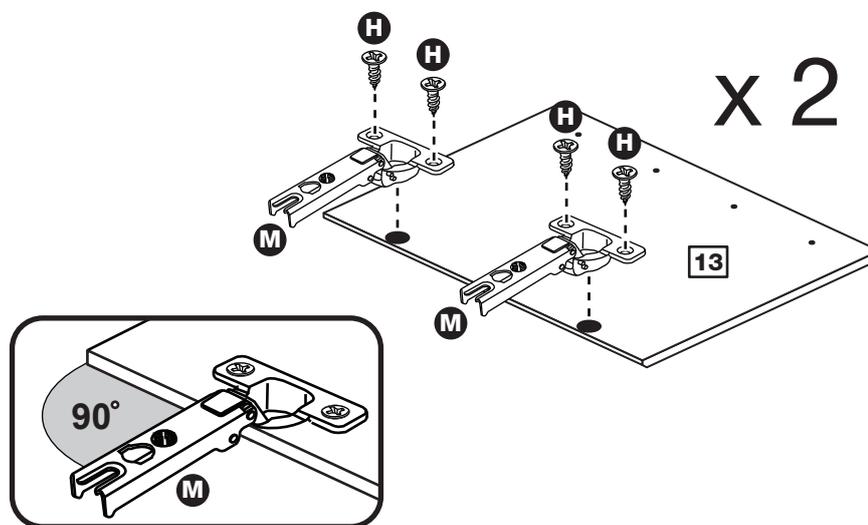

# Assembly Instructions

## Step 22

### Drill the handle holes in the door

**Important:** Please follow these instructions carefully.

Lay the doors **13** down onto a smooth surface.

**Important:** Check that the holes and hinges are in the same place as the diagrams.


**Note:** We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door **13**, drill through the holes indicated opposite, using a 2.5mm diameter drill.


Turn the door **13** over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.

**IMPORTANT**  
You will need to drill the doors to suit the handles supplied

You will need to drill 1 door as shown in this diagram

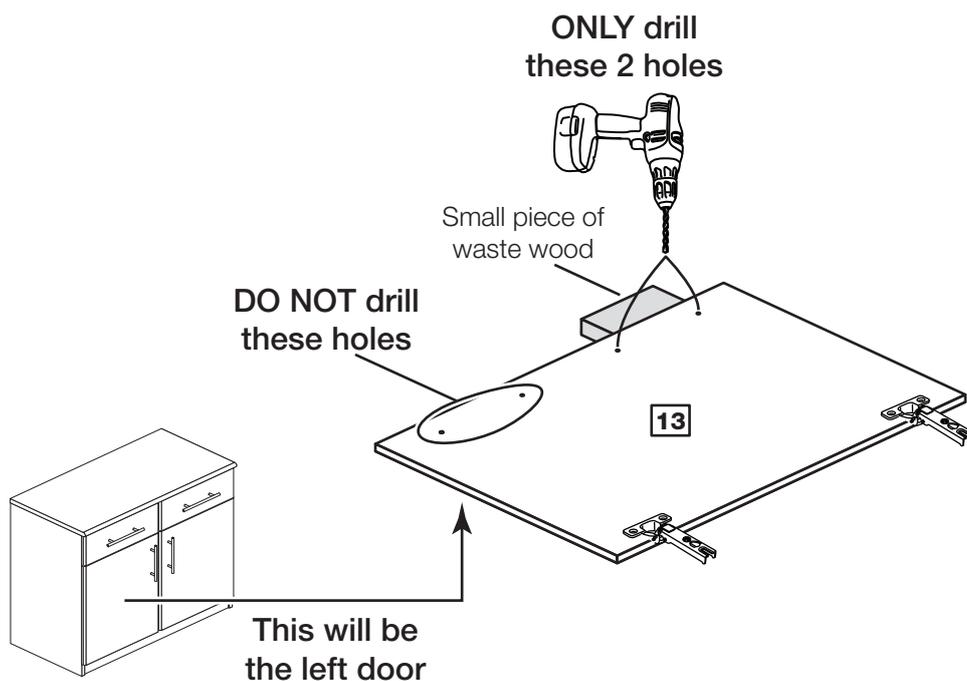

You will need to drill 1 door as shown in this diagram

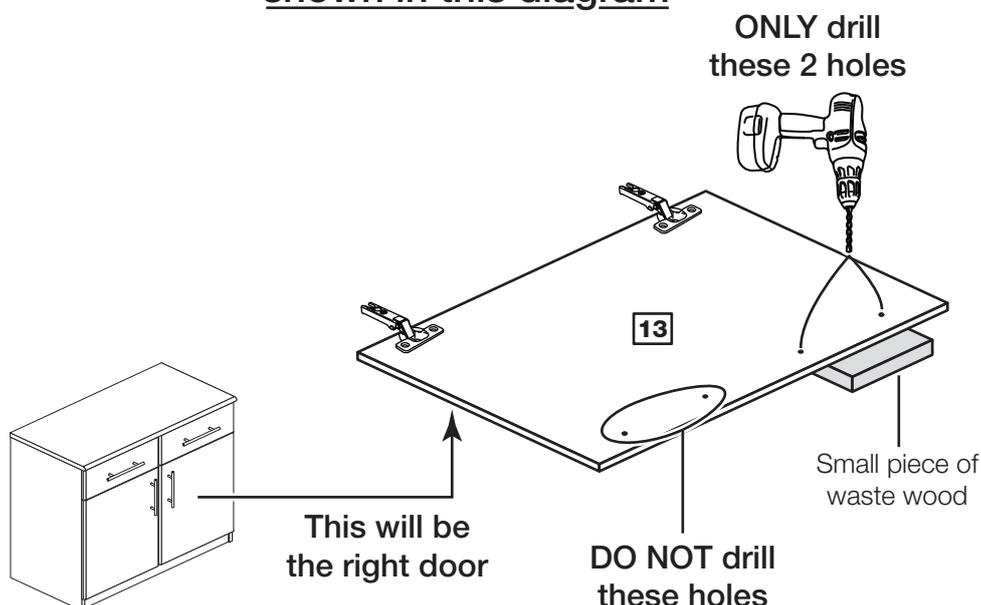

# Assembly Instructions

## Step 23

### Fit doors and handles

**Note:** The easiest way to attach each door **13** is to fit the top hinge first, then align and fit the other hinge.



**a:** Push the hinge **M** onto the front part of the hinge plate **L**. The recess at the bottom of screw B goes into the slot in the hinge plate.

**b:** Keep the hinge **M** FLAT against the hinge plate **L** as you slide it across as far as it will go. Tighten screw A.

**c:** The hinge **M** must be flat against the hinge plate **L** prior to any adjustment.

**d:** The hinge **M** must NOT be AT AN ANGLE to the hinge plate **L** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

**e:** Attach a handle **J a** to each door **13** using 2 screws **J b**.

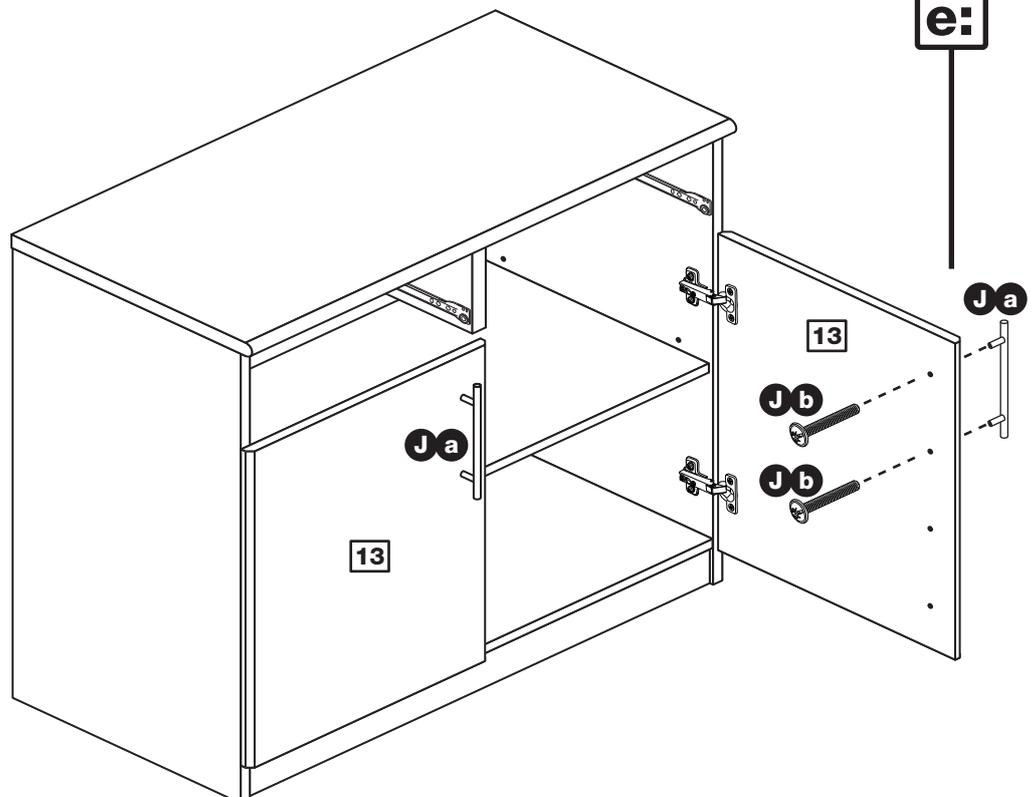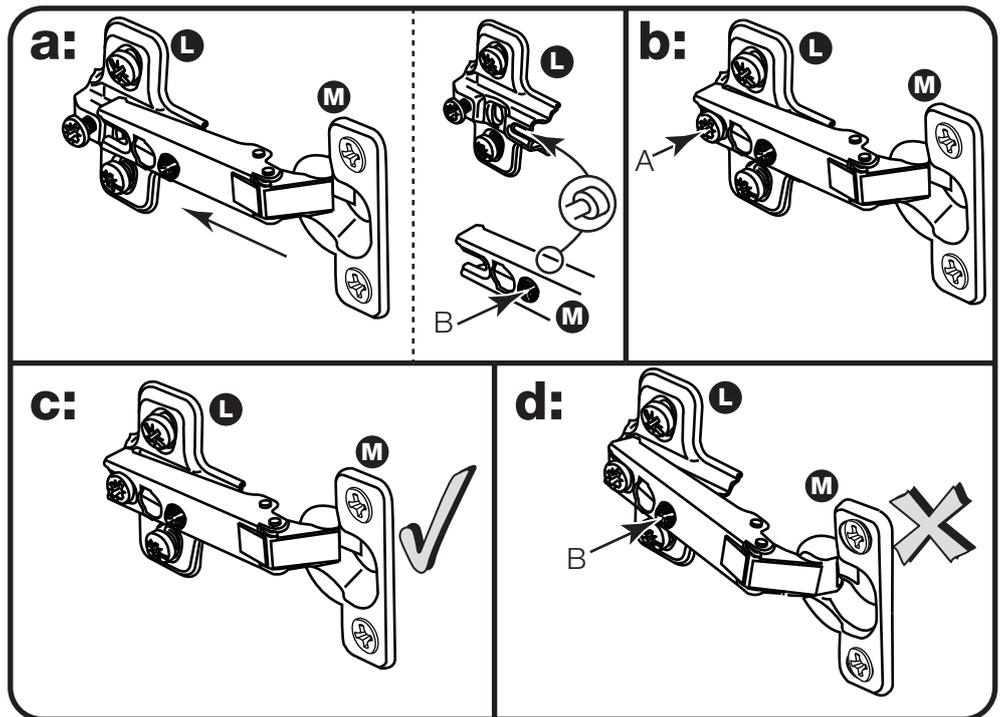

# Assembly Instructions

## Step 24

### Adjust the doors if needed

**a:** Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

### **b:** Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

### **c:** Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

### **d:** Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.


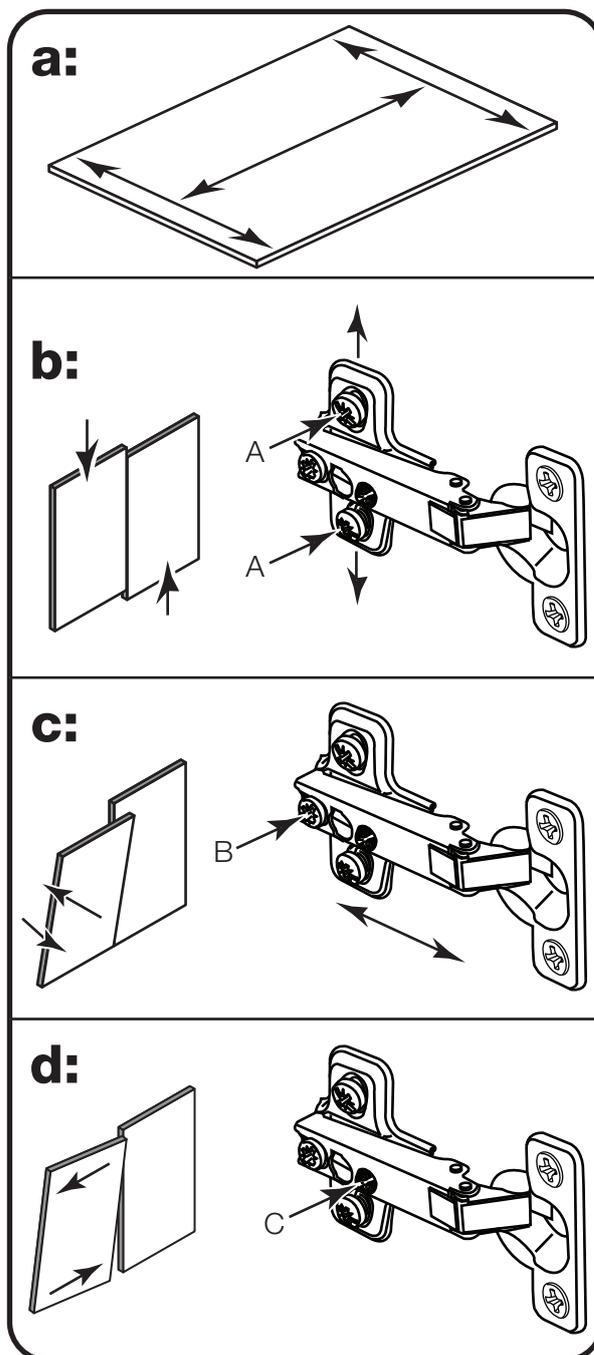


# Assembly Instructions

## Step 25

### Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

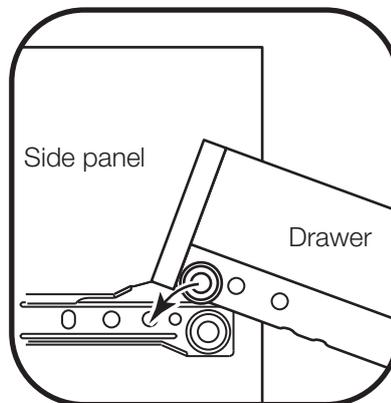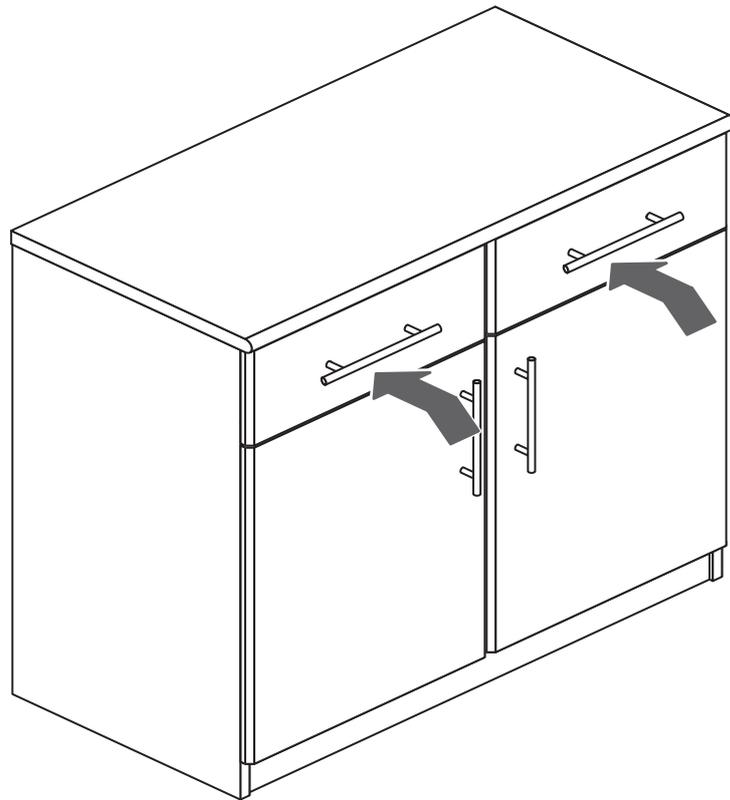

# Assembly Instructions

## Step 26

### Fit the overbalance protector kit



To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit **K** to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

**Note:** Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

**Assembly is complete**

### Example

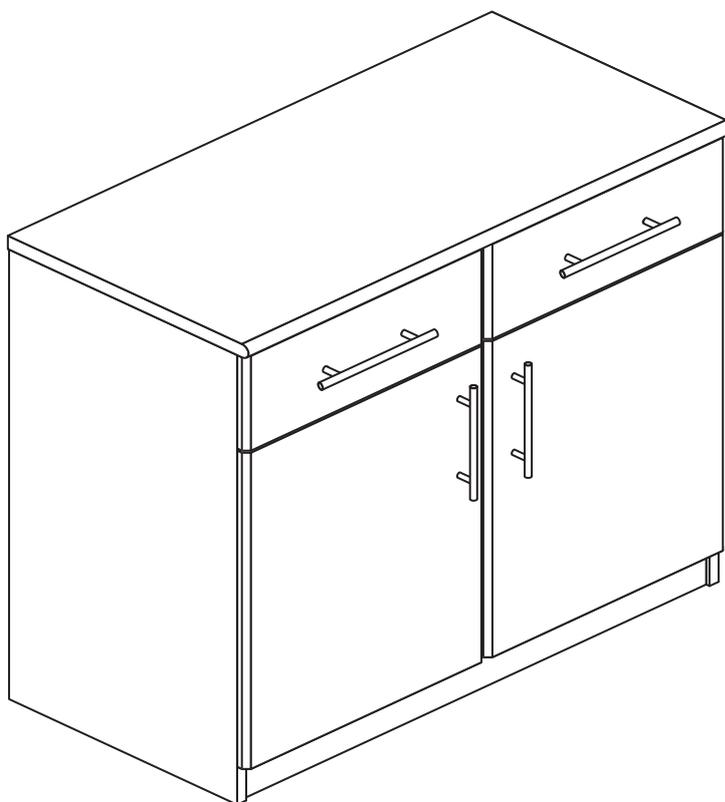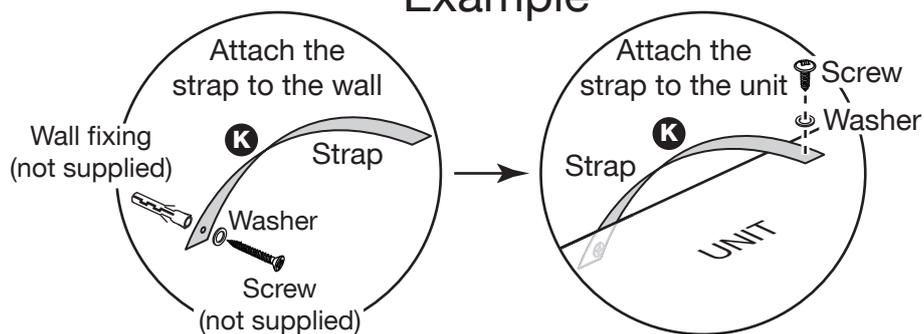

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

