


Normandy - 5 Drawer Chest

Assembly Instructions - Please keep for future reference

428/2611

414/2081

411/7717

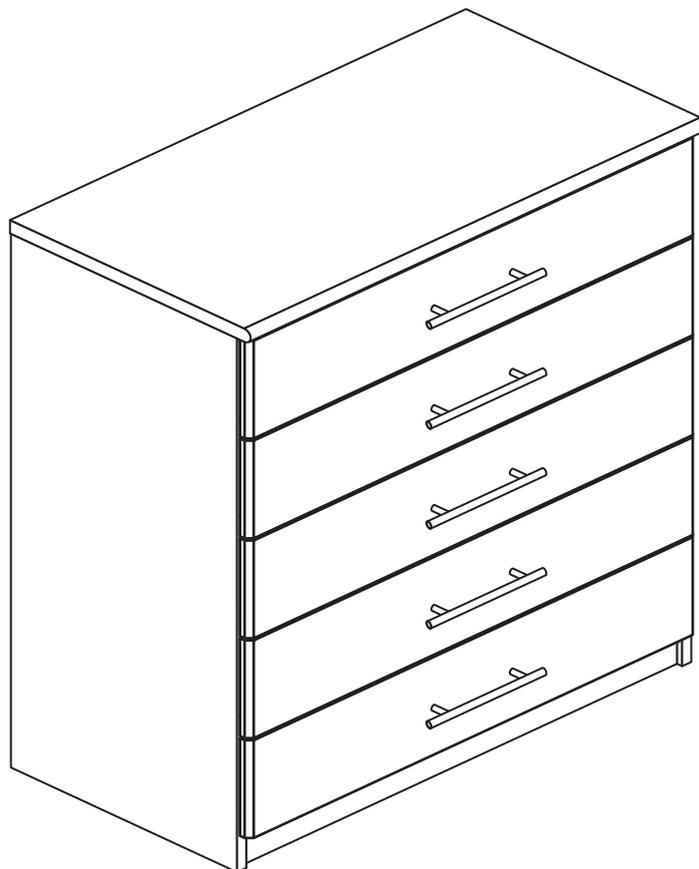

Dimensions

Width - 75cm

Depth - 39.6cm

Height - 90.8cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 33kgs. Please lift with care.

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below


Please check you have all the panels listed below



1 Left Side (DF3875)
(88.6 x 37.2cm)

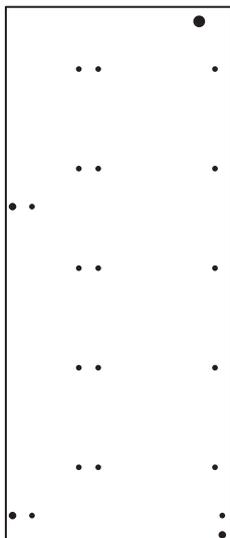


2 Right Side (DF3876)
(88.6 x 37.2cm)

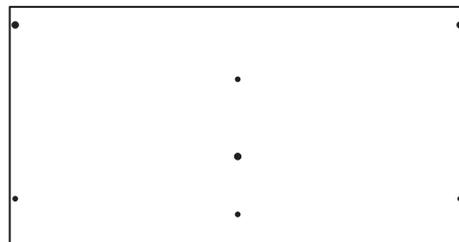

3 Top (D2363A)
(75 x 39.6cm)



4 Rail (D2370A)
(71.7 x 6cm) x 3



5 Drawer Front (D2366A)
(73.7 x 16.2cm) x 5



6 Left Drawer Side (W370-124LH)
(37 x 12.4cm) x 5




7 Right Drawer Side (W370-124RH)
(37 x 12.4cm) x 5



8 Drawer Back (W684-124)
(68.4 x 12.4cm) x 5



9 Drawer Base (T695-367)
(69.5 x 36.7cm) x 5

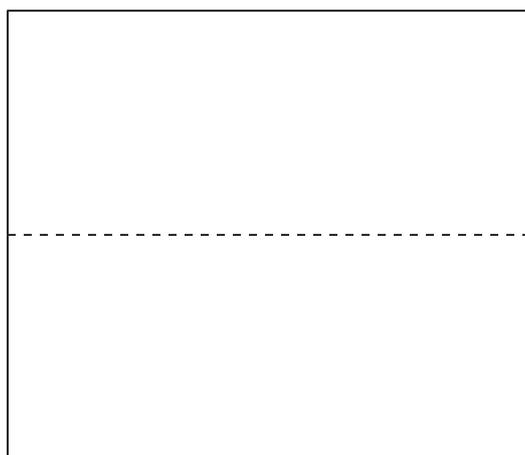






10 Back (X869-743)
(86.9 x 74.3cm)



Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
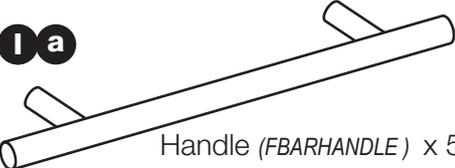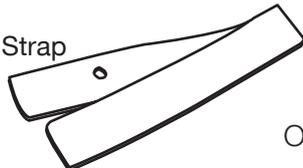
<p>A </p> <p>Wooden dowel (F22) x 8</p>	<p>B </p> <p>Metal dowel (F901) x 18</p>	<p>C </p> <p>Large locking nut (F900) x 8</p>
<p>D </p> <p>Small locking nut (F3) x 10</p>	<p>E </p> <p>Nail (F51) x 25</p>	<p>F </p> <p>9mm Screw (F73) x 20</p>
<p>G </p> <p>9mm Screw (F74) x 10</p>	<p>H </p> <p>Drawer runner (F1004) x 10</p>	
<p>I a </p> <p>Handle (FBARHANDLE) x 5</p>		<p>J </p> <p>Knock-in Peg (F171GY) x 20</p>
<p>K </p> <p>Plastic Nail (F91) x 4</p>	<p>L </p> <p>Wedgefix (F639) x 20</p>	
<p>M   Screw  Washer x 2</p> <p>Overbalance protector kit (F269) x 1</p>		

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)



Electric drill (only use when drilling into walls)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

Step 1

Prepare the 5 drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each drawer front **5**.


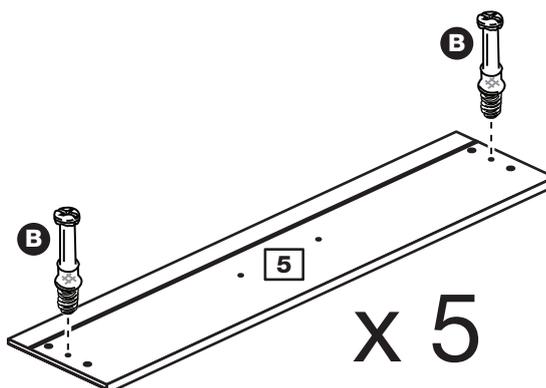


Step 2


Prepare the drawer sides

Insert a small locking nut **D** into the hole shown on the left drawer side **6** and right drawer side **7**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

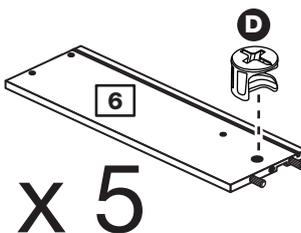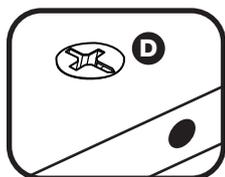

x 5

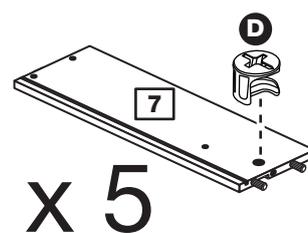

x 5


Step 3

Attach the drawer sides to the drawer fronts


Push the left drawer side **6** and right drawer side **7** onto the back of the drawer fronts **5**.

Turn the small locking nuts **D** on the left drawer side **6** and right drawer side **7**.

Note: Turn the locking nuts **D** clockwise to secure panels - more than 1/2 a turn.

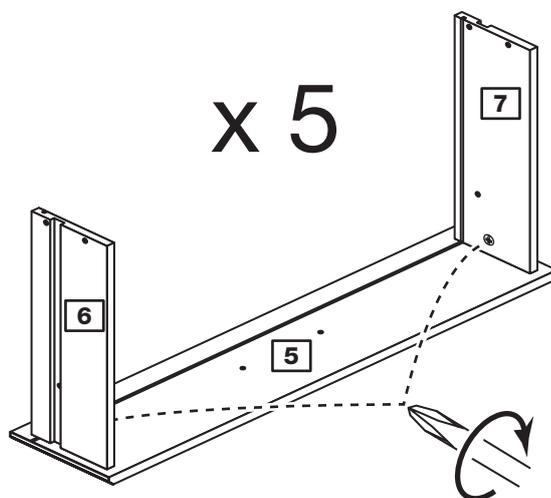

x 5

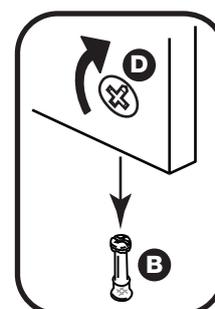


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base **9** down the grooves in the drawer sides **6** and **7** and then down into the groove in the drawer front **5**.

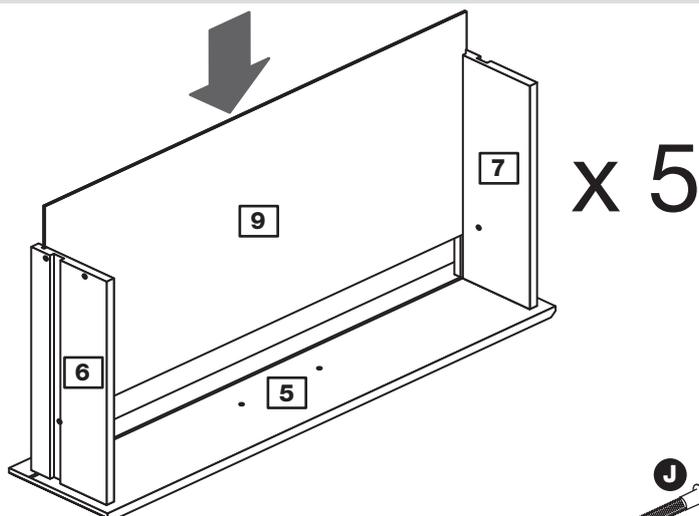


Step 5

Fit the drawer back

Fit the drawer back **8** between the drawer sides **6** and **7**.

Make sure that the drawer base **9** fits into the groove in the drawer back **8**.


Hold the drawer back **8** in position and tap the knock-in pegs **J** through the holes in the drawer sides **6** and **7**.

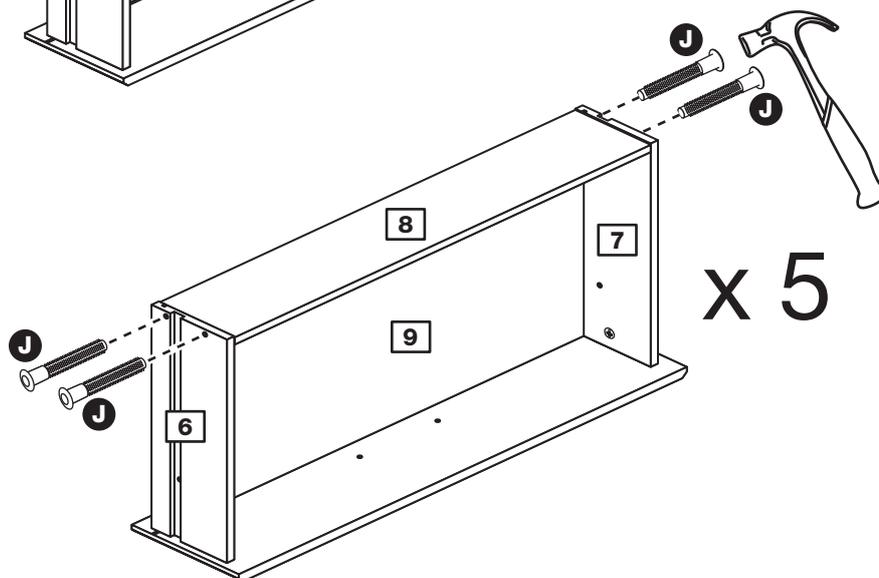

Step 6

Attach the handles


Attach a handle **1a** to each drawer front **5** using 2 screws **1b**.

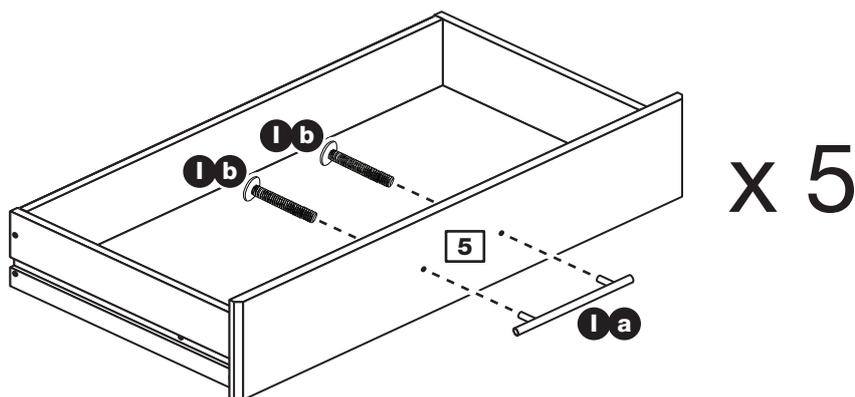

Step 7

Fit the wedgifixes

Turn the drawer assemblies over and slide 4 wedgifixes **L** into the front and back grooves, as shown, and tighten up the screws.

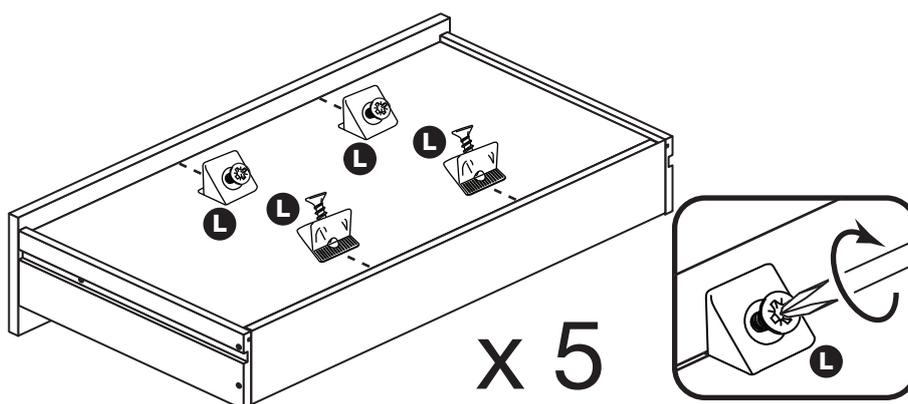

Assembly Instructions

Step 8

Prepare the left side

a: Place 5 runners **H** on left side **1**. Slide back top of runner and use 2nd hole from the front to fit 1st screw **F**.

b: Slide the runner **H** back the other way and fit the 2nd screw **F** into the corresponding hole in the left side **1**.





c: Insert 1 large locking nut **C** into the left side **1**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap a wooden dowel **A** into the left side **1**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Screw 3 metal dowels **B** into the left side **1**.

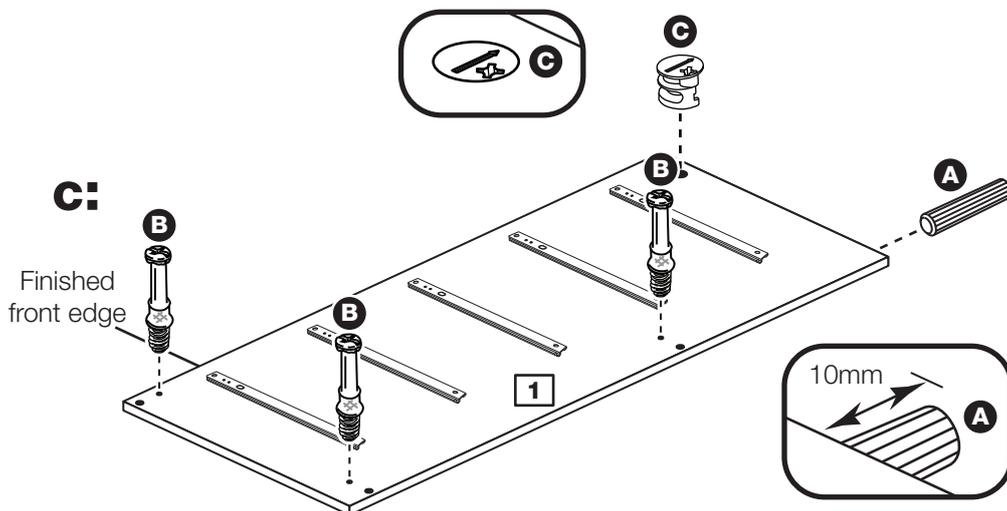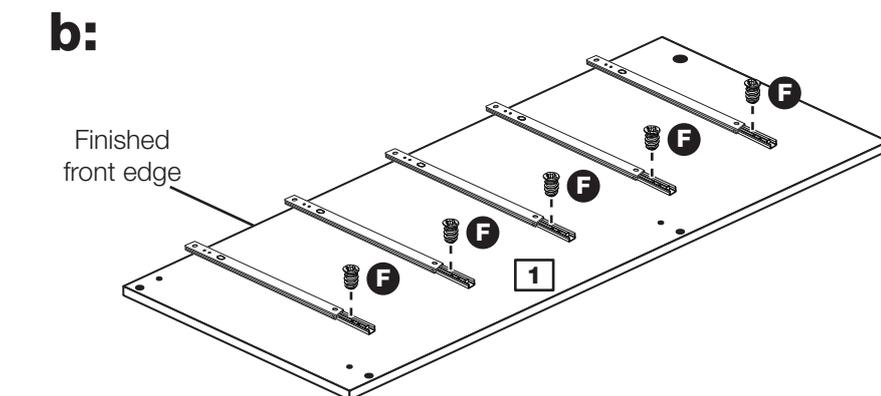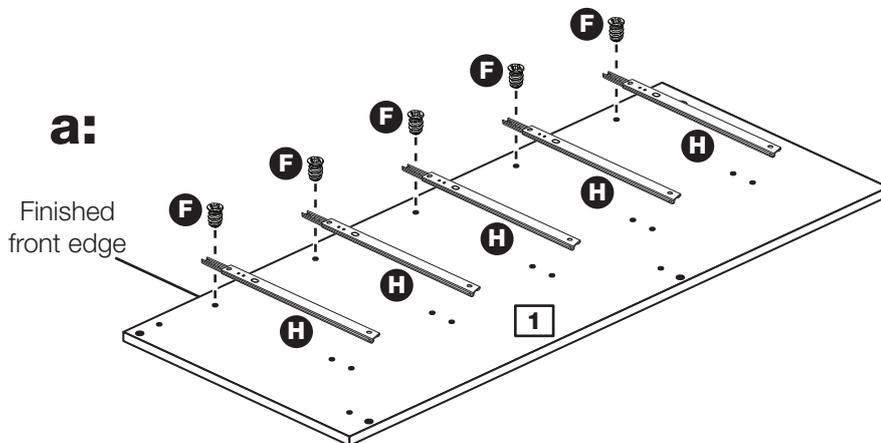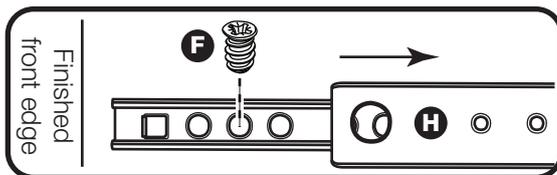

Assembly Instructions

Step 9

Prepare the right side


a: Place 5 runners **H** on right side **2**. Slide back top of runner and use 2nd hole from the front to fit 1st screw **F**.

b: Slide the runner **H** back the other way and fit the 2nd screw **F** into the corresponding hole in the right side **2**.

c: Insert 1 large locking nut **C** into the right side **2**.

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.

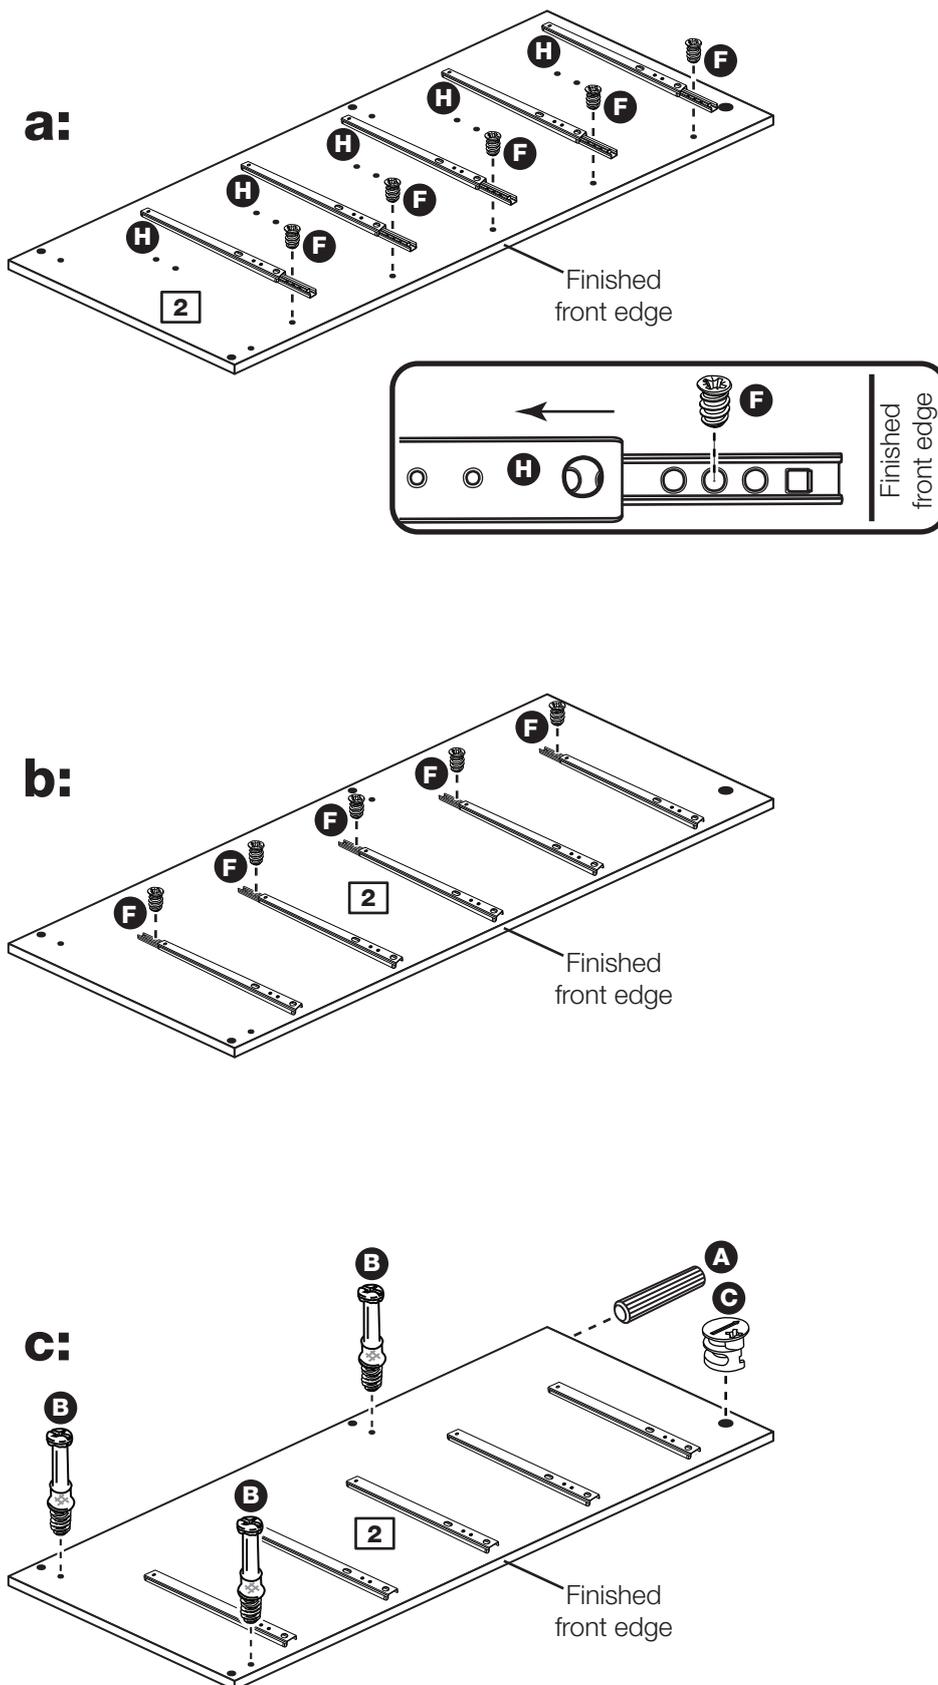


Assembly Instructions

Step 10

Prepare the 3 rails

Insert 2 large locking nuts **C** into each of the rails **4**.

Tap 2 wooden dowels **A** into each of the rails **4**.

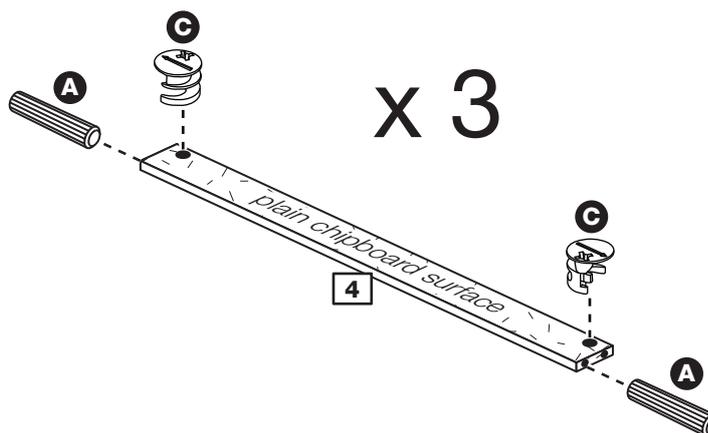


Step 11

Fit the 3 rails

Push the 3 rails **4** onto right side **2** as shown.

Use a screwdriver to tighten the large locking nut **C** fitted to each of the 3 rails **4**.

Note: Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

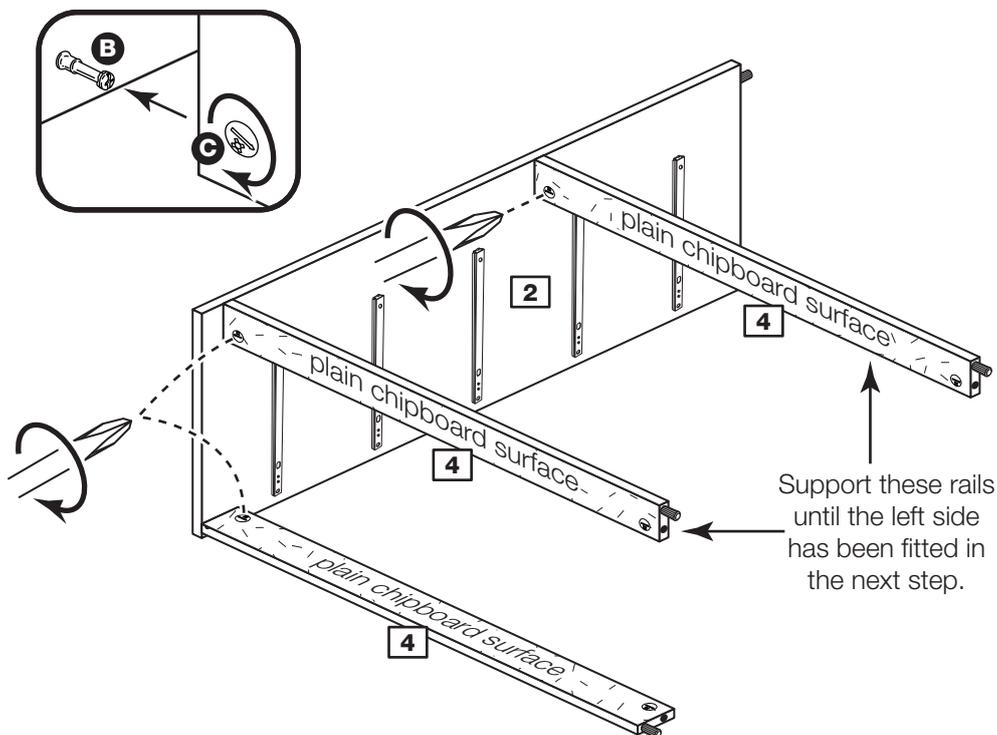

Assembly Instructions

Step 12

Fit the left side


Fit the left side **1** to the 3 rails **4**.

Use a screwdriver to tighten the large locking nut **C** fitted to each of the rails **4**.

Carefully stand the unit up.



Warning: The unit is heavy. Lift with care.

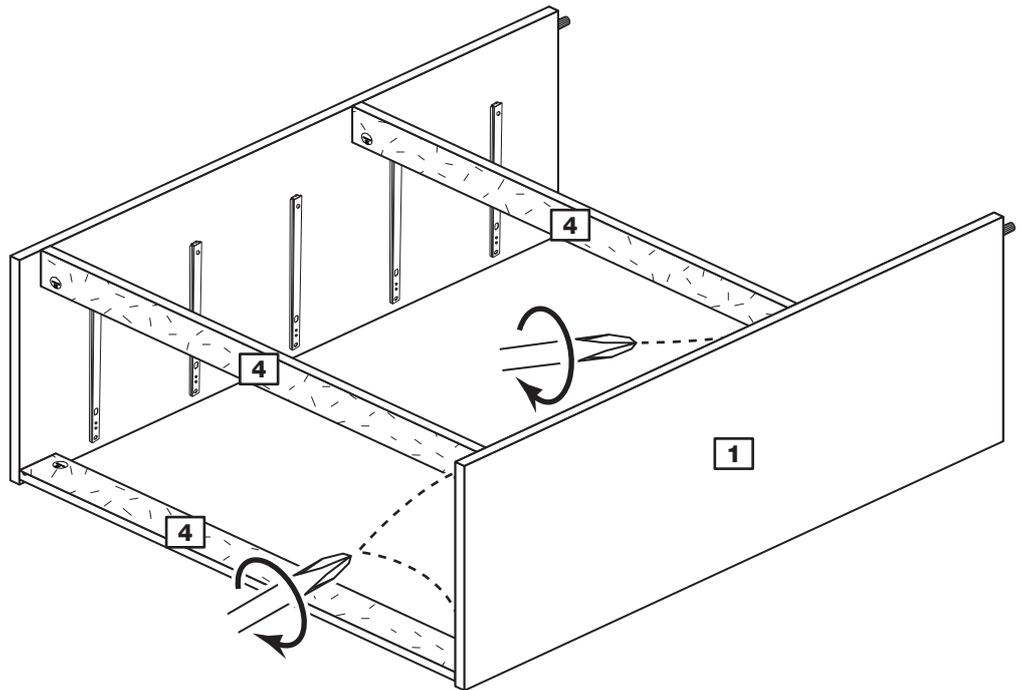


Step 13

Prepare the top

Screw 2 metal dowels **B** into the top **3**.

Note: Tighten metal dowels up fully against the panel.

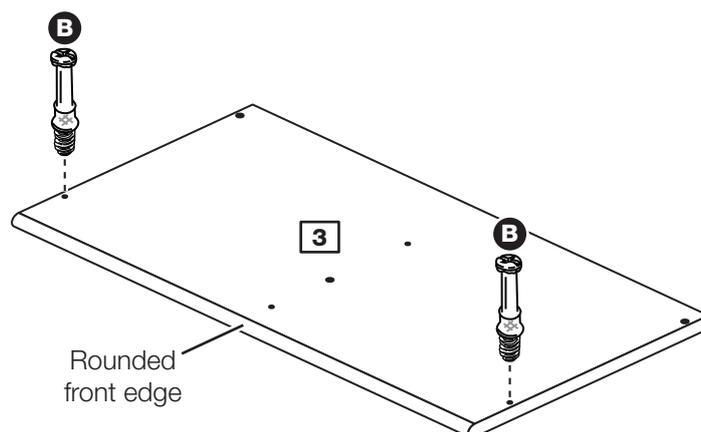

Assembly Instructions

Step 14

Fit the top


Lower the top **3** onto the side panels **1** and **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the inside of the left side **1** and right side **2**.

Carefully lay the unit down onto its front again.



Warning: The unit is heavy. Lift with care.

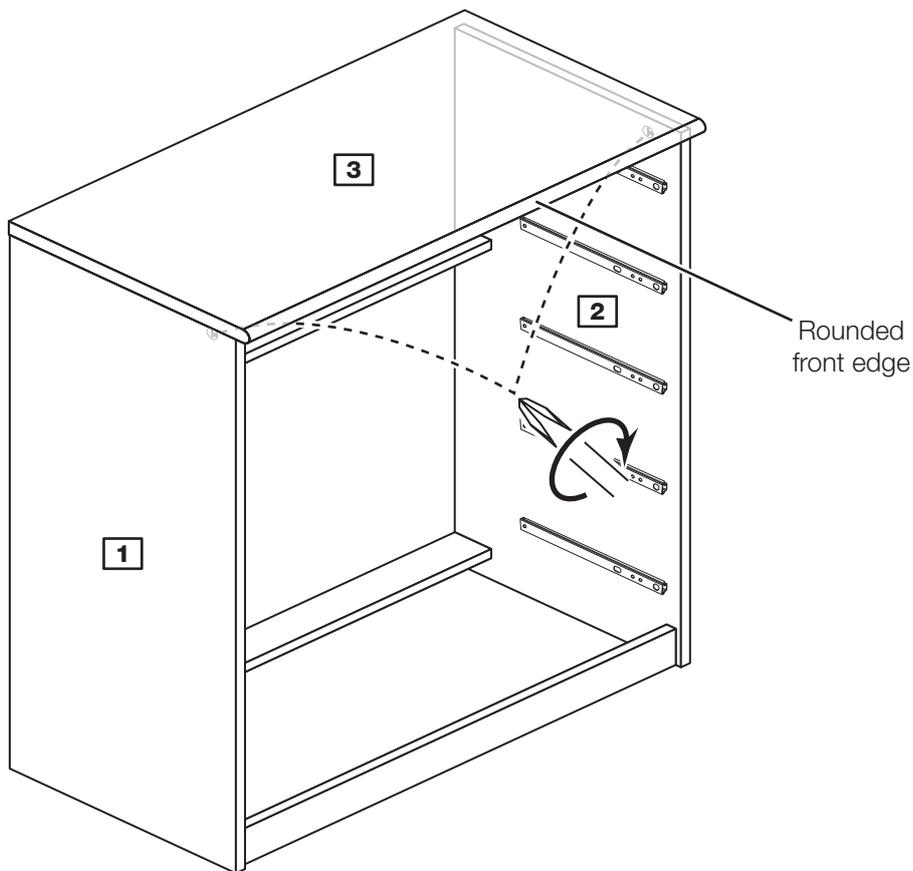

Step 15

Fit the back


a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **10** onto the unit.

Nail **E** around the outside edges of the back **10**.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

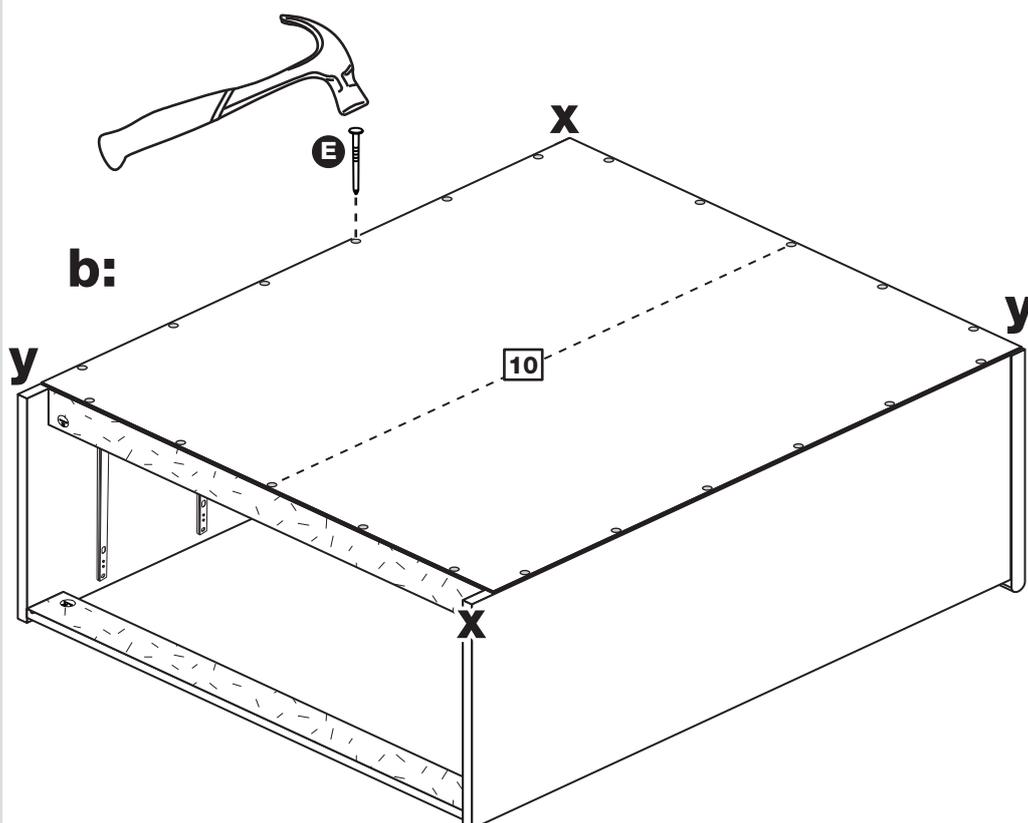


Assembly Instructions

Step 16

Fit the 4 plastic nails

Tap 2 plastic nails **K** into the bottom edge of each of the sides **1** and **2**.

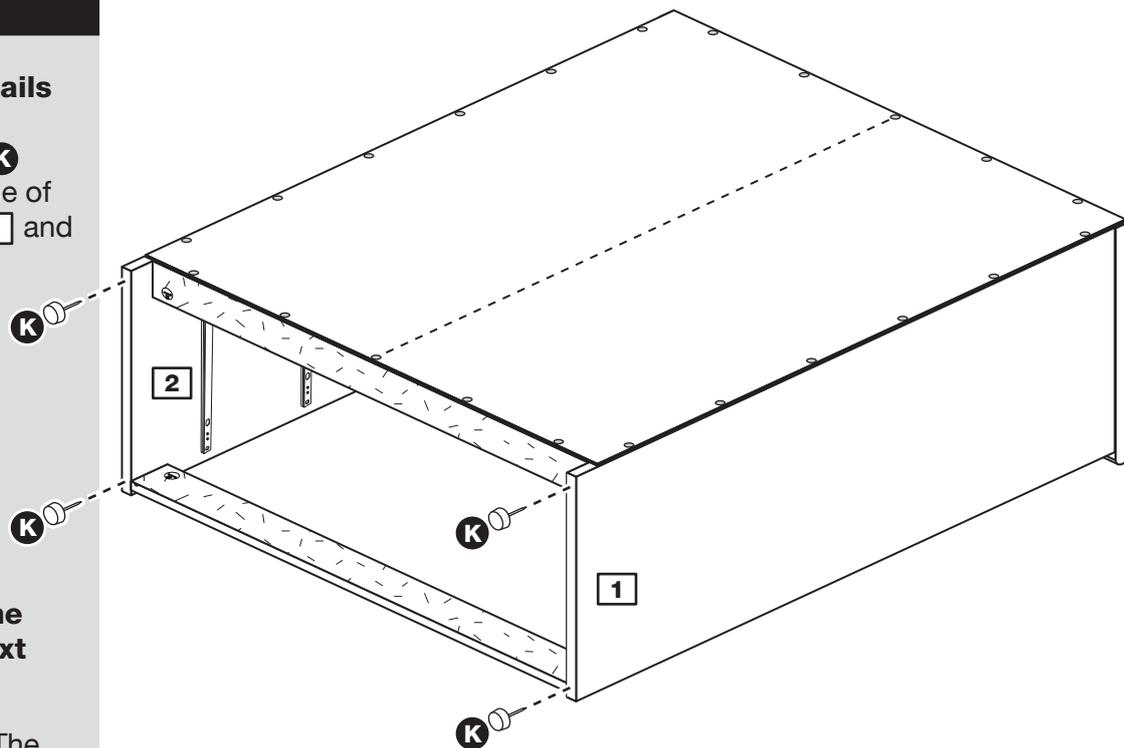

Carefully stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.



Step 17

Fit the drawers

Starting with the bottom drawer, slide both the runners **H** forward and locate the drawer sides **6** and **7** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **H**.

Working from the inside of the drawer, insert 2 screws **G** through the drawer sides and out into the 2nd threaded hole in the runner **H**.

Note: Do not overtighten the screws **G**. If they catch on the runner you may need to loosen them slightly.

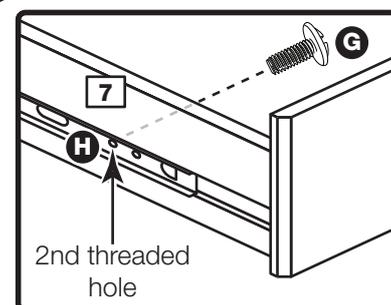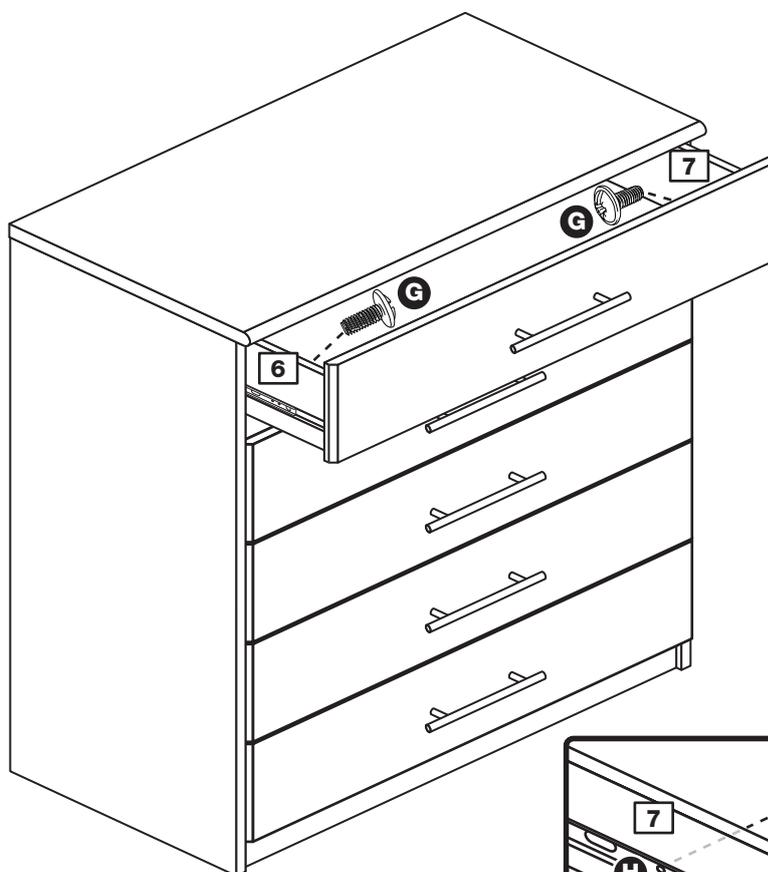

Assembly Instructions

Step 18

Fit the overbalance protector kit



To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit **M** to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

Example

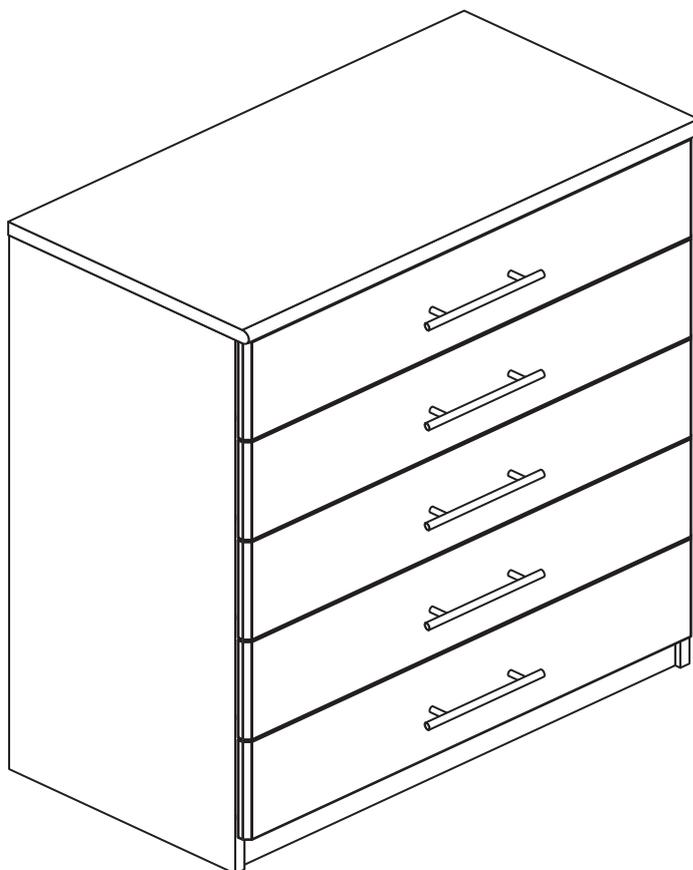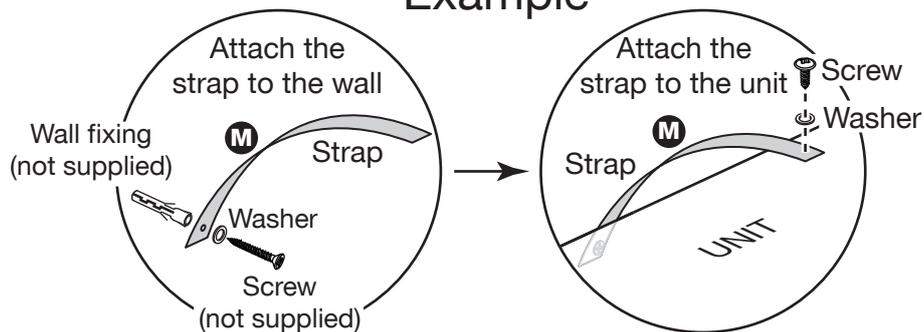

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

